


Installation Quick Reference
VoIP Intercom
 SIP Compliant
010935



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

^a. Default if there is not a DHCP server present.

Typical Intercom System Installation

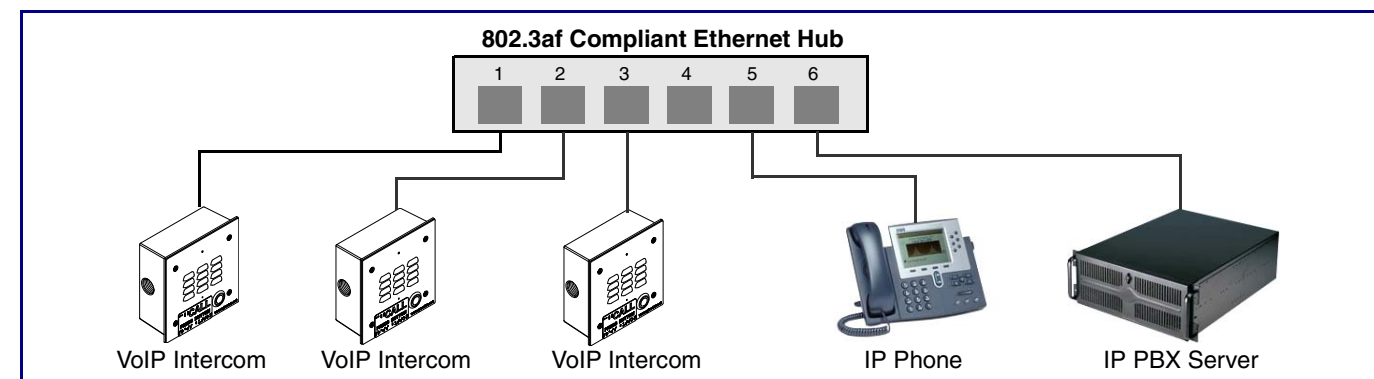

Contacting CyberData

Corporate Headquarters

CyberData Corporation
 2555 Garden Road
 Monterey, CA 93940, USA

Phone: 831-373-2601
 Fax: 831-373-4193
 www.CyberData.net

Sales: (831) 373-2601 ext. 334

Support: 831-373-2601 ext. 333
 Web: <http://www.cyberdata.net/support/contactsupportvoip.html>

RMA Dept: (831) 373-2601 ext. 136
 Email: RMA@CyberData.net
 RMA Status: <http://www.cyberdata.net/support/rmastatus.html>

Warranty

CyberData warrants its product against defects in material or workmanship for a period of two years from the date of purchase. Should the product fail within the warranty period, CyberData will repair or replace the product free of charge. This warranty includes all parts and labor.

Should the product fail out-of-warranty, a flat rate repair charge of one half of the purchase price of the product will be assessed. Repairs that are in warranty but are damaged by improper modifications or abuse, will be charged at the out-of-warranty rate. Products shipped to CyberData, both in and out-of-warranty, are shipped at the expense of the customer. Shipping charges for repaired products shipped back to the customer by CyberData, will be paid by CyberData.

CyberData shall not under any circumstances be liable to any person for any special, incidental, indirect or consequential damages, including without limitation, damages resulting from use or malfunction of the products, loss of profits or revenues or costs of replacement goods, even if CyberData is informed in advance of the possibility of such damages.

For product service, contact the Returned Materials Authorization (RMA) department. A product will not be accepted for return without an approved RMA number. Send the product, in its original package, to: CyberData Corporation, 2555 Garden Road, Monterey, CA 93940, Attention: RMA "your RMA number"

The most recent warranty information is available at:
 Web: <http://www.cyberdata.net/support/warranty/index.html>

Getting Started


- Download the *VoIP Intercom Operations Guide* PDF file, from the VoIP Intercom product page at: <http://www.cyberdata.net/support/voip/index.html>
- Create a plan for the locations of your Intercoms.
- Prior to installation, consult local building and electrical code requirements.
- **WARNING: This enclosure is not rated for any AC voltages!**

Intercom Parts


(1) Intercom Assembly	(1) Wall Mounting Kit		(2) 8-32 x 1/4" Flat head phillips machine screw	
	(2) Outlet box plugs		(1) 10-24 x 5/16" Pan head phillips machine screw	
	(2) Flush mounting plate			

Intercom Assembly

To mount the intercom, use methods compliant with local electrical codes.

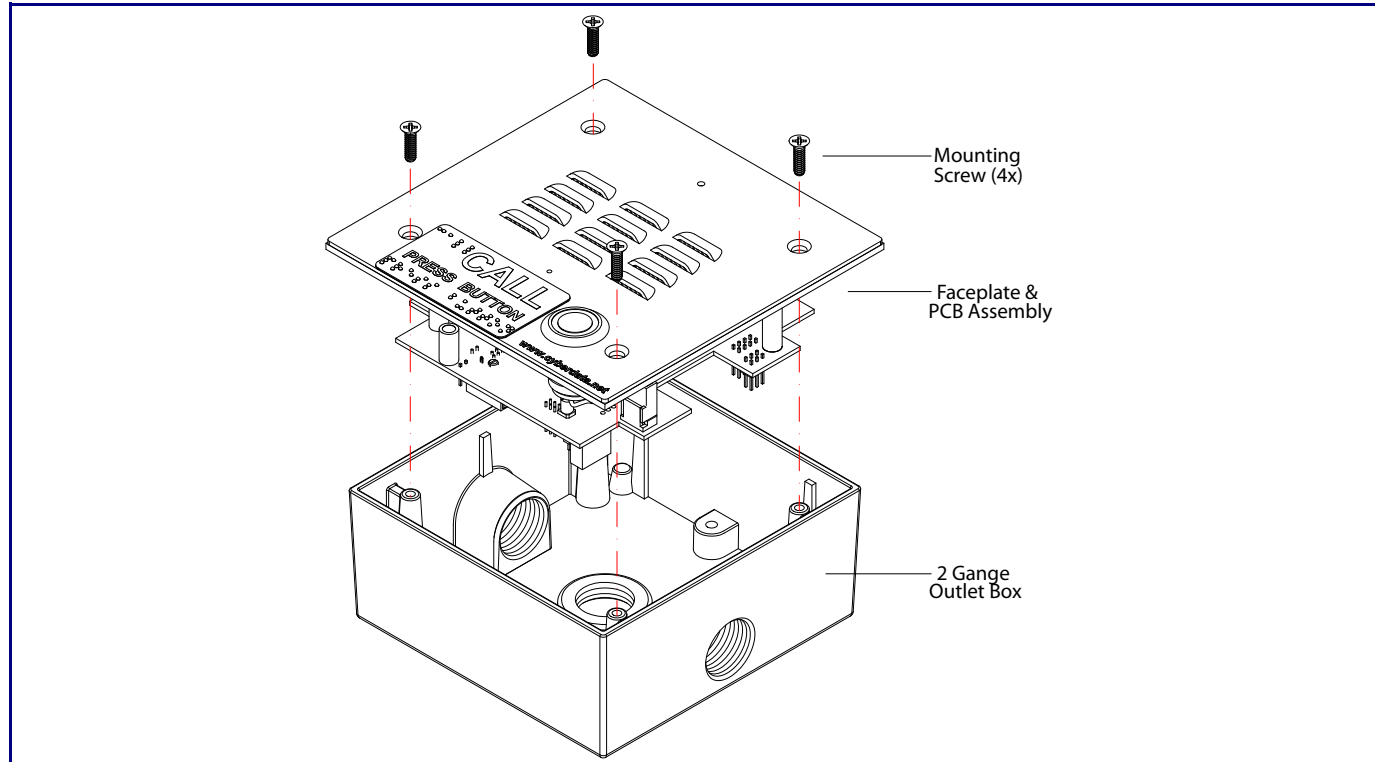


Intercom Dimensions

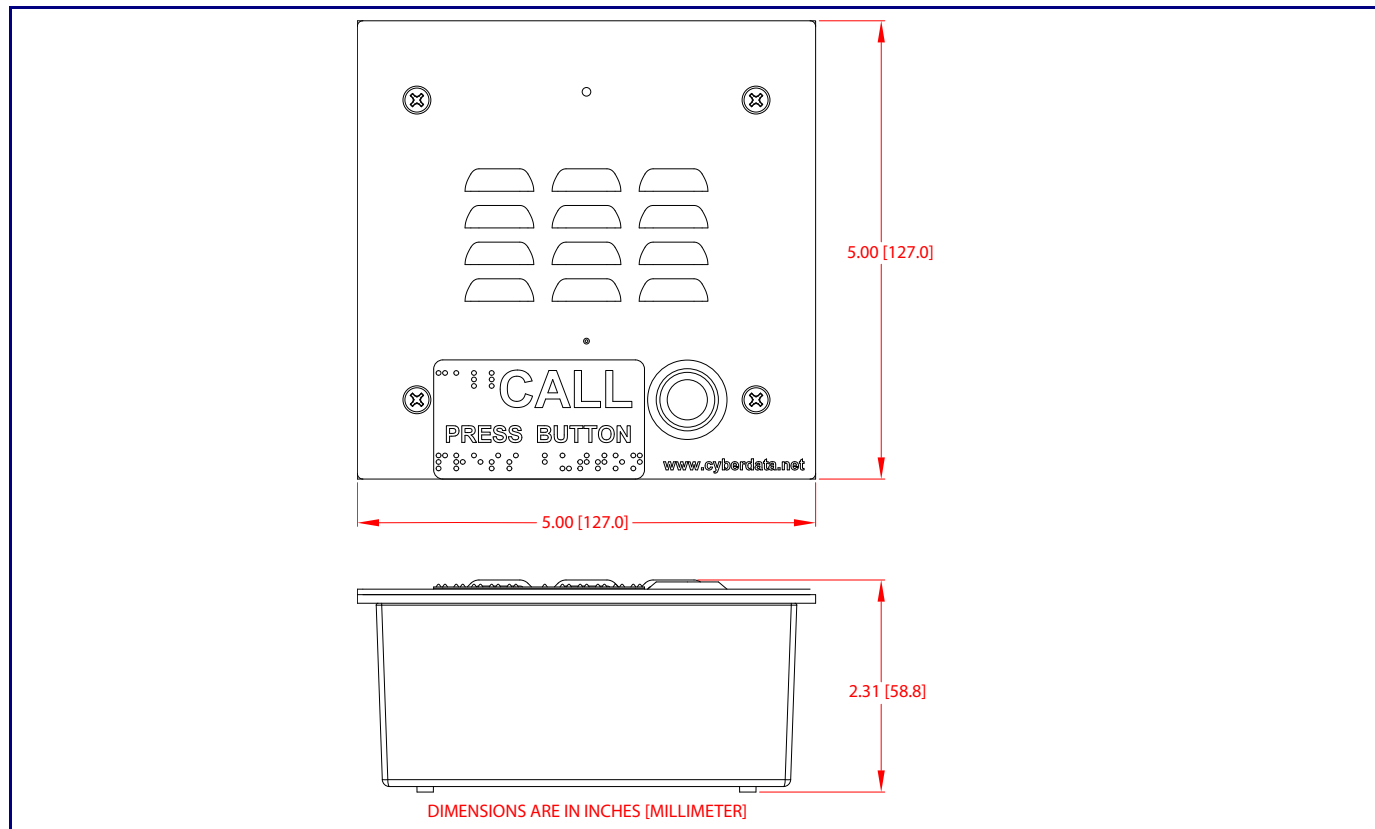

Cable Entries and Conduit Restrictions

The VoIP Intercom has three possible cable entries. If you are using the center entry, refer to the drawing on the right that shows the entry restrictions.

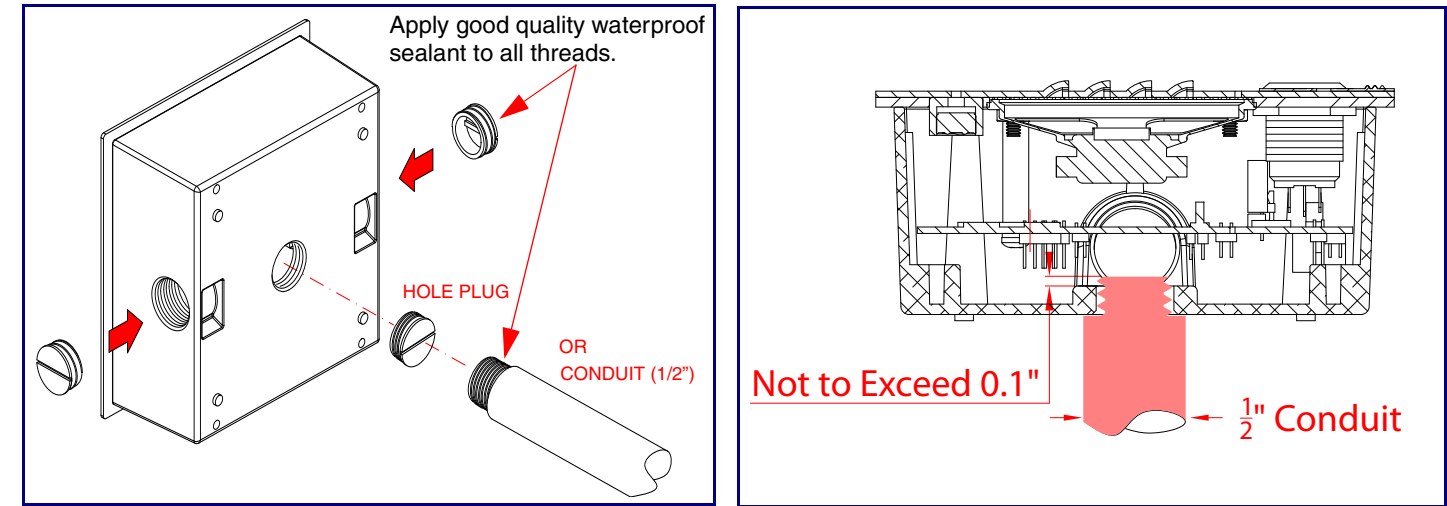

Mounting and Screws

