

Dimensions

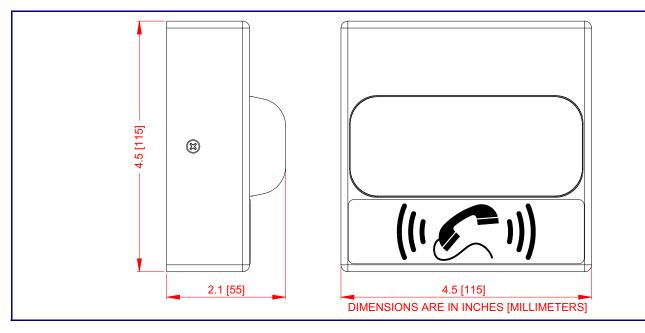

Maximum Recommended Wall Cutout Dimensions

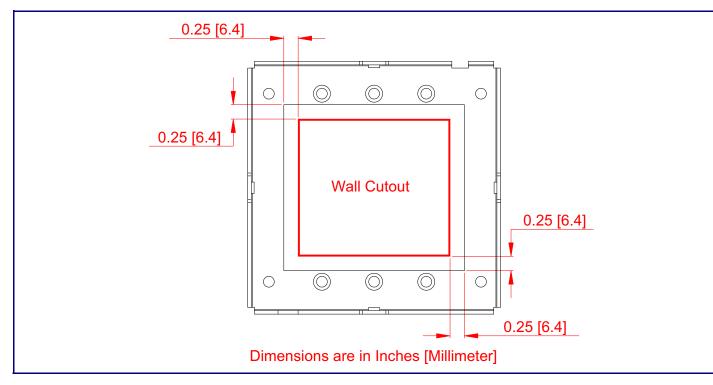

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA


Phone: 831-373-2601 Fax: 831-373-4193 http://www.cyberdata.net/ Sales: (831) 373-2601 ext. 334 Support: 831-373-2601 ext. 333 Support Website: http://support.cyberdata.net/ RMA Department: (831) 373-2601 ext. 136 RMA Email: RMA@CyberData.net RMA Status: http://support.cyberdata.net/ Warranty Information: http://support.cyberdata.net/



Web Access Username Web Access Password Subnet Mask^a Default Gateway^a

a. Default if there is not a DHCP server present.


Typical System Installation

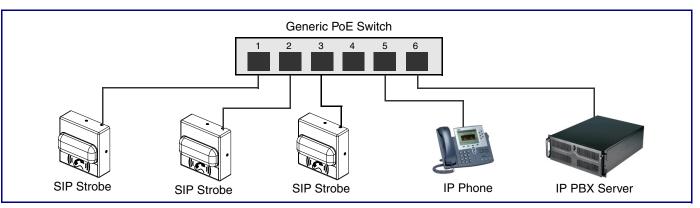

Getting Started

- Download the V3 SIP Strobe Operations Guide PDF file, from the V3 SIP Strobe product page at: http://www.cyberdata.net/products/voip/digitalanalog/strobe/docs.html
- Create a plan for the locations of your SIP Strobes.
- instructions.
- WARNING: This enclosure is not rated for any AC voltages!

SIP Strobe Parts

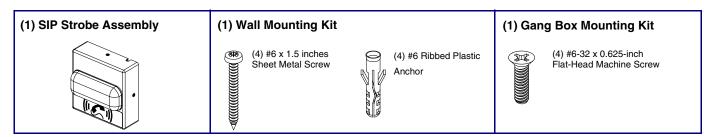



Factory Default Setting
DHCP
10.10.10.10
admin
admin
255.0.0.0
10.0.0.1

 WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes. • WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation

WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.

Wall Mounting Options

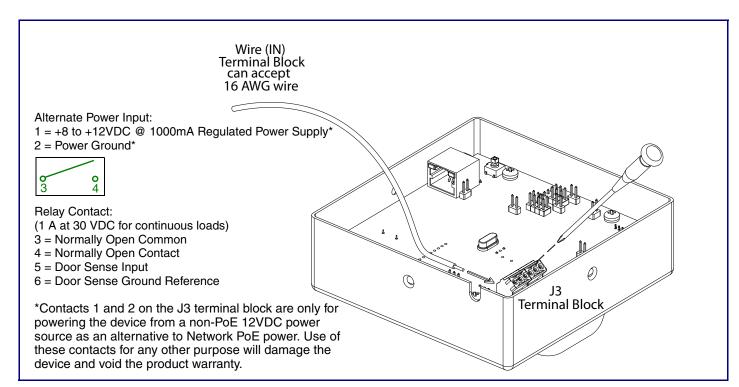

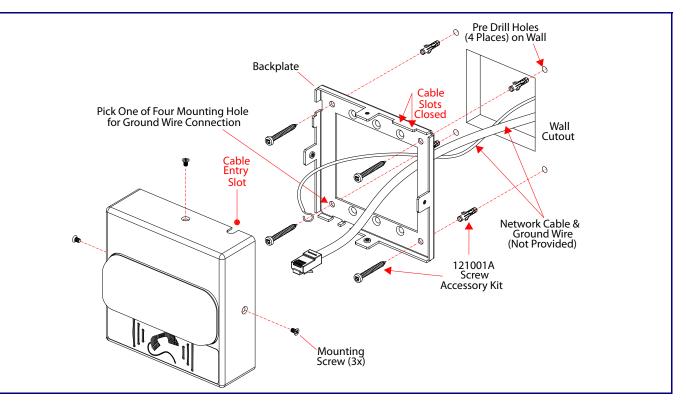

Maximum Recommended Wall Cutout Dimensions

RTFM Button

