



CyberData The IP Endpoint Company Installation Quick Reference Singlewire-enabled VoIP Ceiling Speaker

011102*, RAL 9002, Gray White, Standard 011103, RAL 9003, Signal White, Optional *Replaces the 011065 number.


The Singlewire-enabled VoIP Ceiling Speaker is compatible with InformaCast Version 4.0 and higher.



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

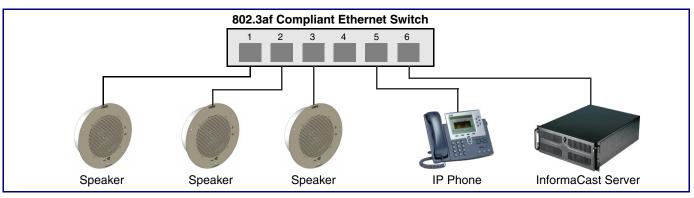

Getting Started


• Download the Singlewire-enabled VoIP Ceiling Speaker Operations Guide PDF file from the Singlewire Speaker **Documentation** page at:

http://www.cyberdata.net/products/voip/digitalanalog/singlewirespeaker/docs.html


- · Create a plan for the locations of your speakers.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- . WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: The device enclosure is not rated for any AC voltages!

Parts


Quick Reference

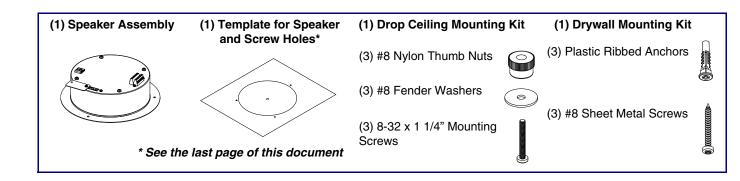


Dimensions and Connections

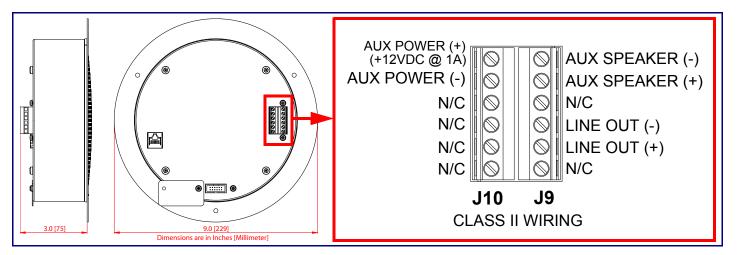


Connecting Power

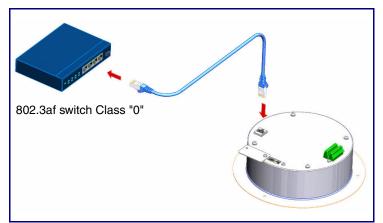


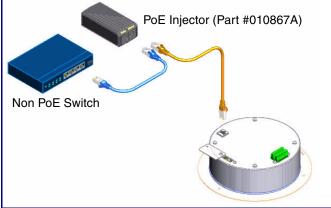

Features

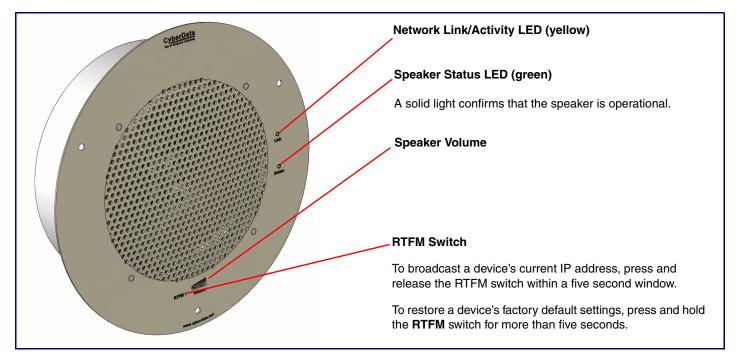

Mounting

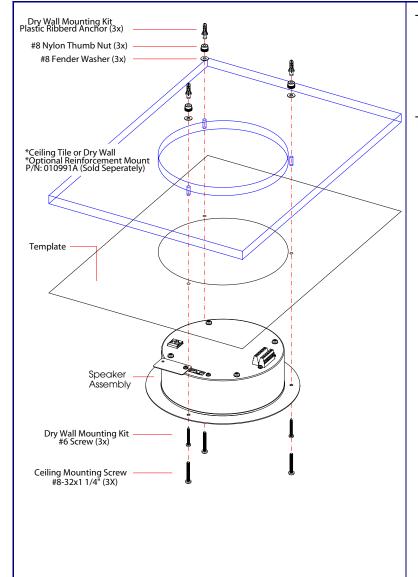

Tools Required for Installation:

- (1) Sheetrock saw or
- (1) Drywall cutter
- (1) #2 Phillips Screwdriver or
 - (1) #2 Phillips Screwdriver Hex Bit

To mount a speaker:

- 1. Use the **TEMPLATE** on the back of this document to cut a hole in the wall or ceiling, and prepare holes for the screws.
- 2. Plug the Ethernet cable into the speaker assembly. The yellow light verifies the network connection.
- For drop ceiling mounting, position the IP SPEAKER ASSEMBLY in the ceiling so that its screw holes align with those you prepared.
- 4. For drywall mounting, place the three PLASTIC RIBBED ANCHORS in the holes you prepared, and position the IP SPEAKER ASSEMBLY over them, aligning the screw holes in the assembly with the anchors.
- For drop ceiling mounting*, use the three
 8-32 x 1 1/4" MOUNTING SCREWS, #8
 NYLON THUMB NUTS, and #8 FENDER
 WASHERS to secure the speaker.

For drywall mounting, use the three #8 SHEET METAL SCREWS to secure the speaker.

* For weak ceiling tile, CyberData offers a reinforcing mount (CyberData part number 010991A).

Contacting CyberData

Corporate Headquarters

CyberData Corporation 3 Justin Court

Monterey, CA 93940, USA

Phone: 831-373-2601 Fax: 831-373-4193 http://www.cyberdata.net/

Quick Reference

Sales: (831) 373-2601 ext. 334 Support: 831-373-2601 ext. 333

Support Website: http://support.cyberdata.net/ RMA Department: (831) 373-2601 ext. 136

RMA Email: RMA@CyberData.net
RMA Status: http://support.cyberdata.net/

Warranty Information: http://support.cyberdata.net/