



## Wall Mounting Options

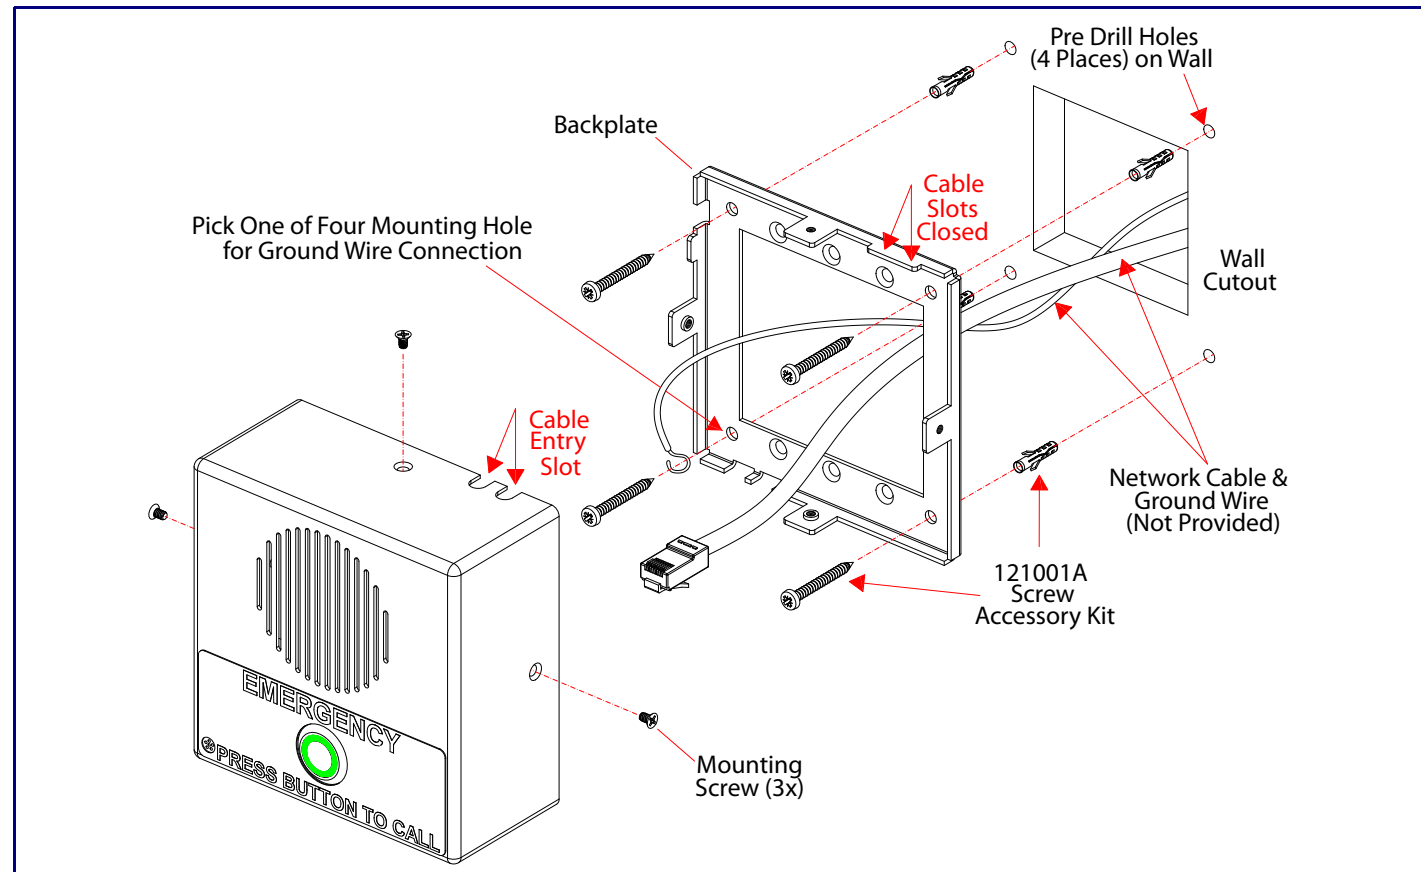

## Gang Box Mounting Options

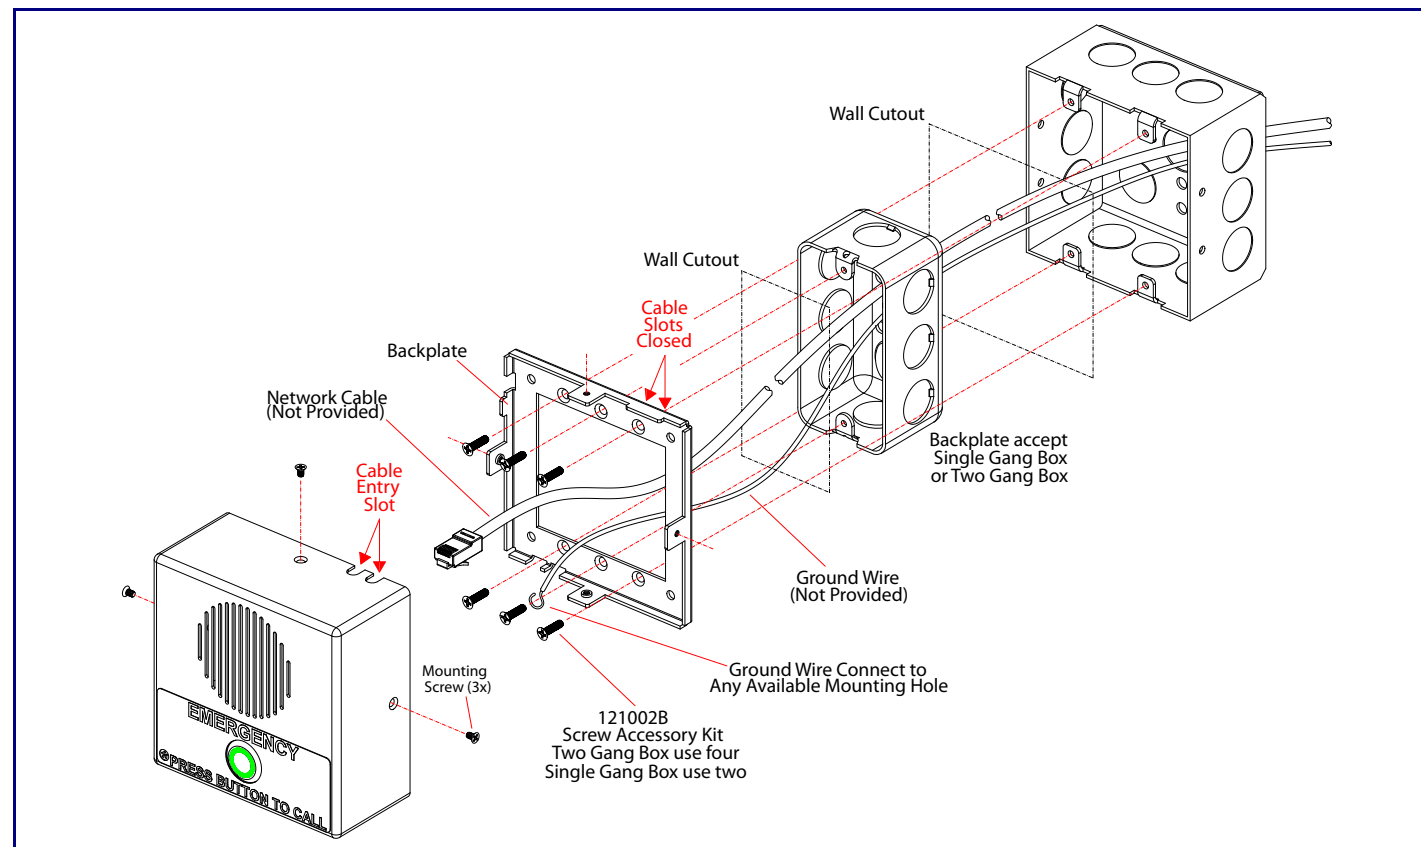


# VoIP V3 Indoor Emergency Intercom

SIP Compliant

**011209\***

\*Replaces the 011035 number.

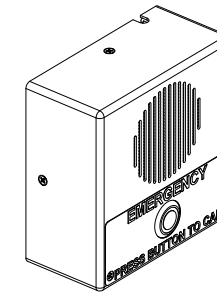

Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

## Getting Started

- Download the *VoIP V3 Indoor Emergency Intercom Operations Guide* PDF file from the following web page:  
<http://www.cyberdata.net/products/voip/digitalanalog/intercomemergencyv3/docs.html>
- Create a plan for the locations of your Intercoms.
- WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING:** The Intercom enclosure is not rated for any AC voltages!

## Parts

(1) Intercom Assembly	(1) Wall Mounting Kit	(1) Gang Box Mounting Kit
	(4) Sheet Metal Screw 	(4) #6-32 FlatHead Countersunk Machine Screw 
	(4) Plastic Ribbed Anchor 	

## Contacting CyberData


### Corporate Headquarters

CyberData Corporation  
3 Justin Court  
Monterey, CA 93940, USA

Phone: 831-373-2601  
Fax: 831-373-4193  
<http://www.cyberdata.net/>


Sales: (831) 373-2601 ext. 334  
Support: 831-373-2601 ext. 333  
Support Website: <http://support.cyberdata.net/>  
RMA Department: (831) 373-2601 ext. 136  
RMA Email: [RMA@CyberData.net](mailto:RMA@CyberData.net)  
RMA Status: <http://support.cyberdata.net/>  
Warranty Information: <http://support.cyberdata.net/>

## Cable Connections

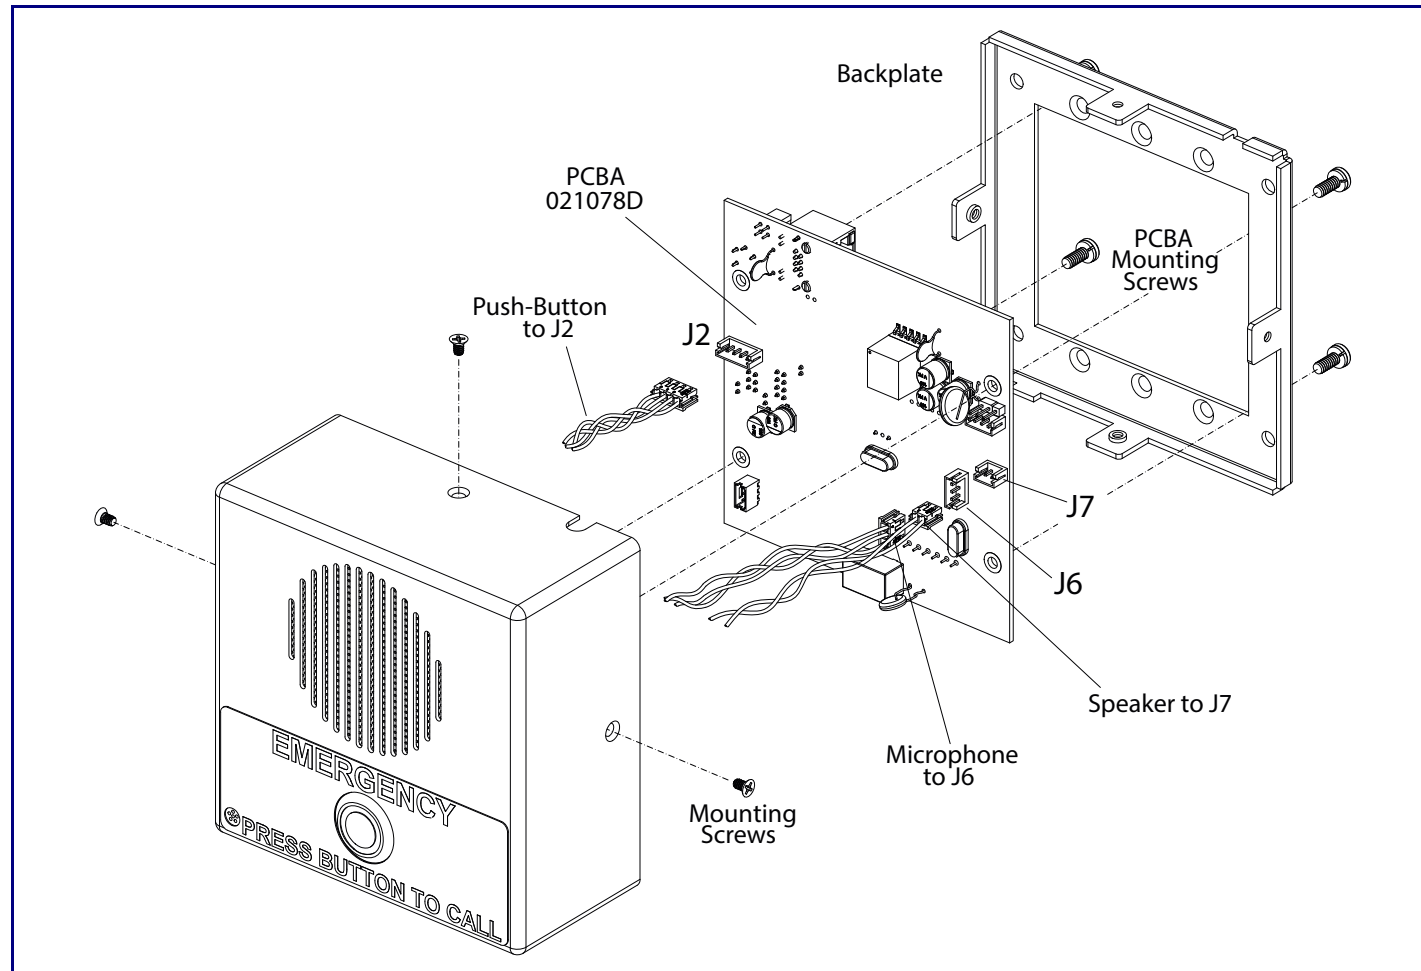


## Terminal Block Connections

 Alternate Power Input:  
 1 = +8 to +12VDC @ 100mA Regulated Power Supply\*  
 2 = Power Ground\*




Relay Contact:  
 (1 A at 30 VDC for continuous loads)  
 3 = Normally Open Common  
 4 = Normally Open Contact  
 5 = Door Sense Input  
 6 = Door Sense Ground Reference

\*Contacts 1 and 2 on the J3 terminal block are only for powering the device from a non-PoE 12VDC power source as an alternative to Network PoE power. Use of these contacts for any other purpose will damage the device and void the product warranty.

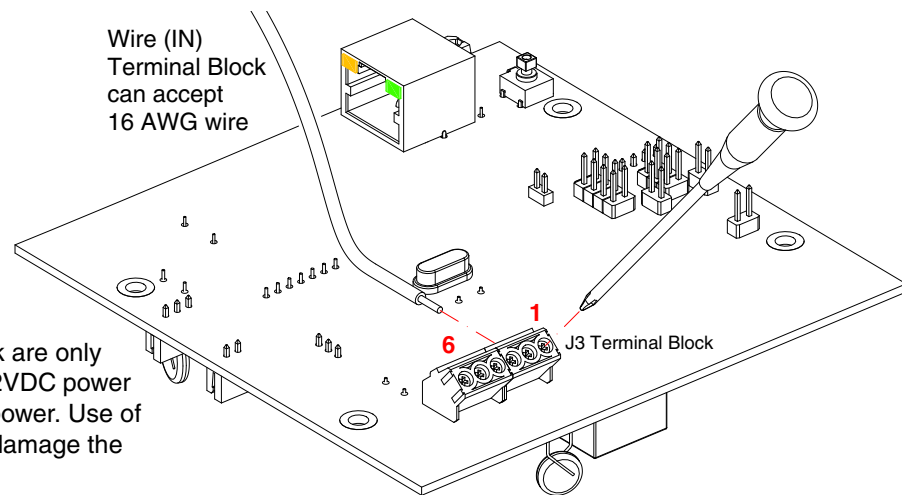

## RTFM Button

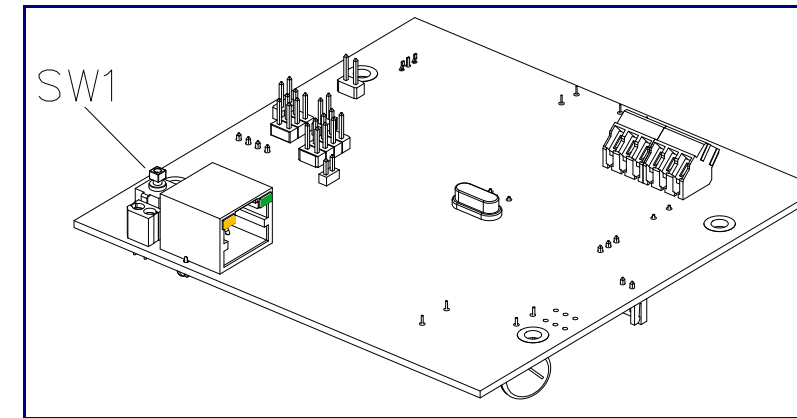

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory default settings.

To announce the device's current IP address:


- Press and release the RTFM button within a five second window.

**Note** The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

To restore the device to factory default settings:

- Press and hold the RTFM button for longer than five seconds until you hear the device announce that it is restoring the factory default settings.

## Dimensions

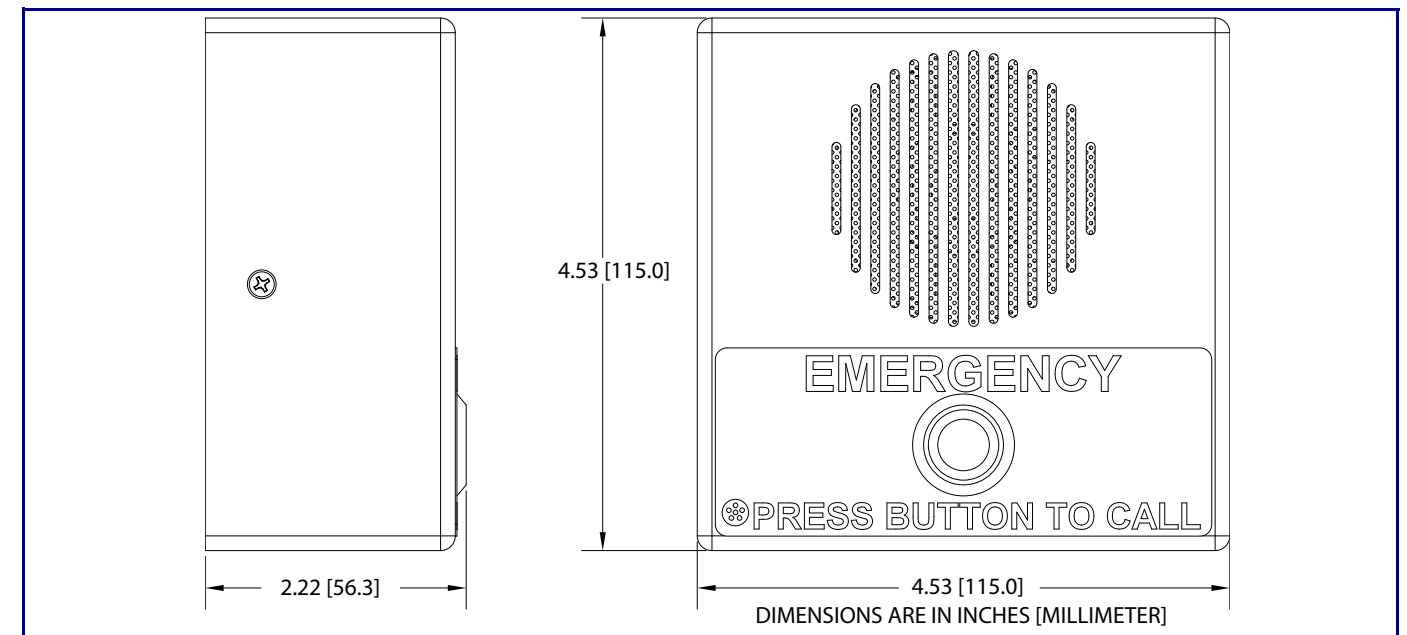

## Maximum Recommended Wall Cutout Dimensions

