


Quick Reference

# CyberData Installation Quick Reference

	Factory Default Setting
	DHCP
	10.10.10.10
	admin
	admin
	255.0.0.0
	10.0.0.1
_	


# Dimensions and Connections

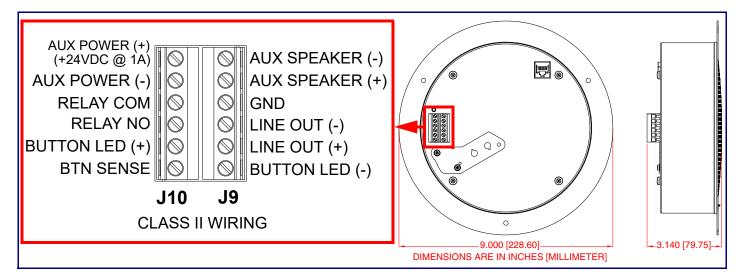


## **Connecting Power**



### Features

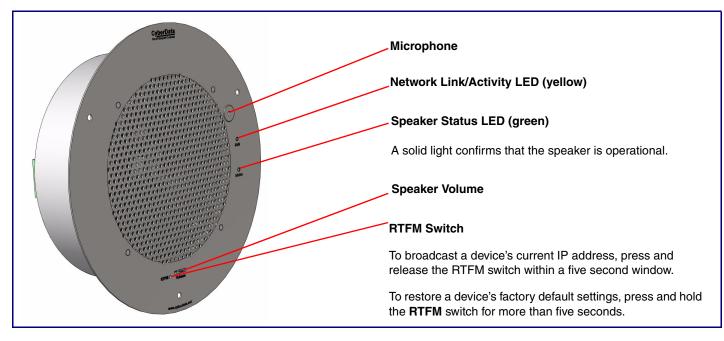

### Mounting

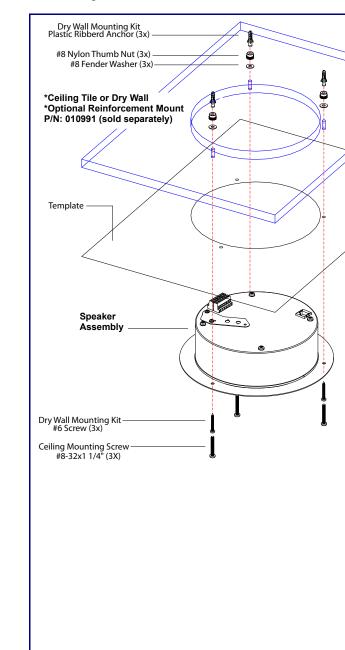

# Contacting CyberData

Corporate Headquarters	
CyberData Corporation 3 Justin Court Monterey, CA 93940, USA	Sales: (831) 3 Support: 831-3 Support Webs
	RMA Departm
Phone: 831-373-2601	RMA Email: R
Fax: 831-373-4193	RMA Status: h
http://www.cyberdata.net/	Warranty Infor

Tools Required for Installation:
<ul> <li>(1) Sheetrock saw or</li> <li>(1) Drywall cutter</li> </ul>
<ul> <li>(1) #2 Phillips Screwdriver or</li> <li>(1) #2 Phillips Screwdriver Hex Bit</li> </ul>
To mount a speaker:
 1. Use the <b>TEMPLATE</b> on the back of this document to cut a hole in the wall or ceiling, and prepare holes for the screws.
<ol> <li>Plug the Ethernet cable into the speaker assembly. The yellow light verifies the network connection.</li> </ol>
3. For drop ceiling mounting, position the <b>IP</b> <b>SPEAKER ASSEMBLY</b> in the ceiling so that its screw holes align with those you prepared.
4. For drywall mounting, place the three <b>PLASTIC RIBBED ANCHORS</b> in the holes you prepared, and position the <b>IP SPEAKER ASSEMBLY</b> over them, aligning the screw holes in the assembly with the anchors.
<ol> <li>For drop ceiling mounting*, use the three 8-32 x 1 1/4" MOUNTING SCREWS, #8 NYLON THUMB NUTS, and #8 FENDER WASHERS to secure the speaker.</li> </ol>
For drywall mounting, use the three <b>#8</b> SHEET METAL SCREWS to secure the speaker.
* For weak ceiling tile, CyberData offers a reinforcing mount (CyberData part number 010991).

373-2601 ext. 334 -373-2601 ext. 333 site: <u>http://support.cyberdata.net/</u> nent: (831) 373-2601 ext. 136 RMA@CyberData.net <u>http://support.cyberdata.net/</u> prmation: <u>http://support.cyberdata.net/</u>