



Installation Quick Reference InformaCast Enabled /SIP Ceiling Tile Drop-In Speaker

011402

Parts

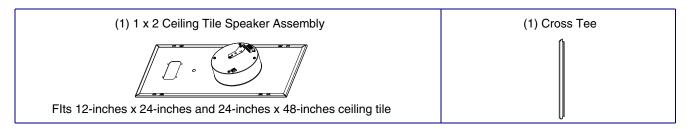

Dimensions

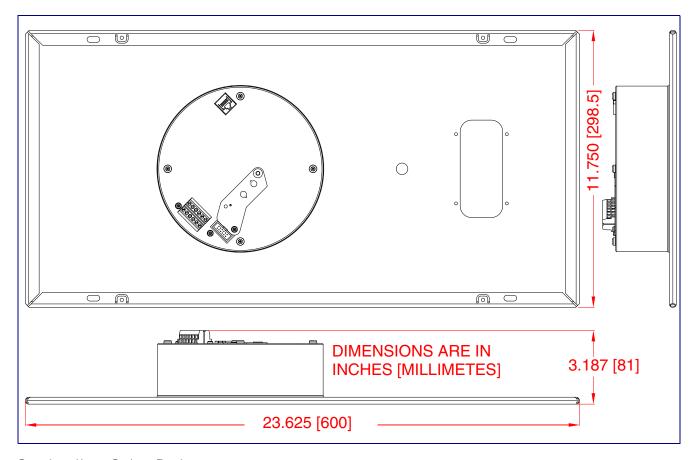

Contacting CyberData

Corporate Headquarters

CyberData Corporation

3 Justin Court

Monterey, CA 93940, USA

Phone: 831-373-2601 Fax: 831-373-4193 http://www.cyberdata.net/ Sales: (831) 373-2601 ext. 334 Support: 831-373-2601 ext. 333

Support Website: http://support.cyberdata.net/

RMA Department: (831) 373-2601 ext. 136 RMA Email: RMA@CyberData.net

RMA Status: http://support.cyberdata.net/

Warranty Information: http://support.cyberdata.net/

Installation Procedure

To install the InformaCast Enabled /SIP Ceiling Tile Drop-In Speaker, complete the following steps while referencing the figure below:

- 1. Remove the Ceiling Tile (Showing a 2 x 2 Grid) from the Ceiling Grid then Cut it in Half.
- 2. Place the Cross T in the Middle to Support the Weak Side of the Ceiling Tile.
- 3. Replace the Ceiling Tile on to the Ceiling Grid.
- 4. Use a Flat Blade Screwdriver to Pry Up the Seismic Tether Bracket(s) on the 1 x 2 Ceiling Tile Speaker Assembly.
- 5. Install Eyebolt(s) or Nail(s) to the Joist.
- 6. Connect the Network Cable to the Network Port and Wire(s) to the Terminal Block, etc. to the 1 x 2 Ceiling Tile Speaker Assembly.
- 7. Use Steel Wire(s) to Connect Seismic Tether Bracket(s) to the Eyebolt(s) or Nail(s). Place the 1 x 2 Ceiling Tile Speaker Assembly on to the Ceiling Grid and the Cross T.

Installing the InformaCast Enabled /SIP Ceiling Tile Drop-In Speaker

