

To mount the enclosure:

1. Prepare holes for the screws.
2. Plug in the power adapter and use the **Power (PWR)** LED to verify that the power is on.
3. Plug the ethernet cable into the device. The **Link/Activity (Link/Act.)** LED verifies the network connection.
4. For wall mounting, use the three #8 x 1-1/4-inch Pan Head Phillips Self-Tapping Screws.

Syn-Apps enabled Loudspeaker Amplifier (AC-Powered)

011412



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Wiring the 125V AC Plug

The green wire with the yellow stripe is a ground connection for electrostatic discharge (ESD) protection, and should not be removed.

To wire the 125V AC plug, consult a licensed electrician and the local building codes in your area.


Parts

<p>(1) Assembly</p>	<p>(1) Wall Mounting Kit</p> <p>(3) #8 Plastic Anchors (3) #8 x 1-1/4" Pan Head Phillips Self-Tapping Screws</p>	
<p>(1) Enclosure</p>	<p>Additional Parts</p> <p>(1) CAT 5e/CAT6 cable (1) PoE Power Injector</p>	

Contacting Syn-Apps

Corporate Headquarters	
Syn-Apps LLC 2812 N Norwalk Suite 112 Mesa, AZ 85215	Website: www.syn-apps.com
Phone: 480-664-6071 / 866-664-6071 Fax: 480-659-8999 / 866-659-8999	Sales: sales@syn-apps.net
	Support: http://www.syn-apps.com/resources/support Email: http://www.syn-apps.com/contact-us

Features

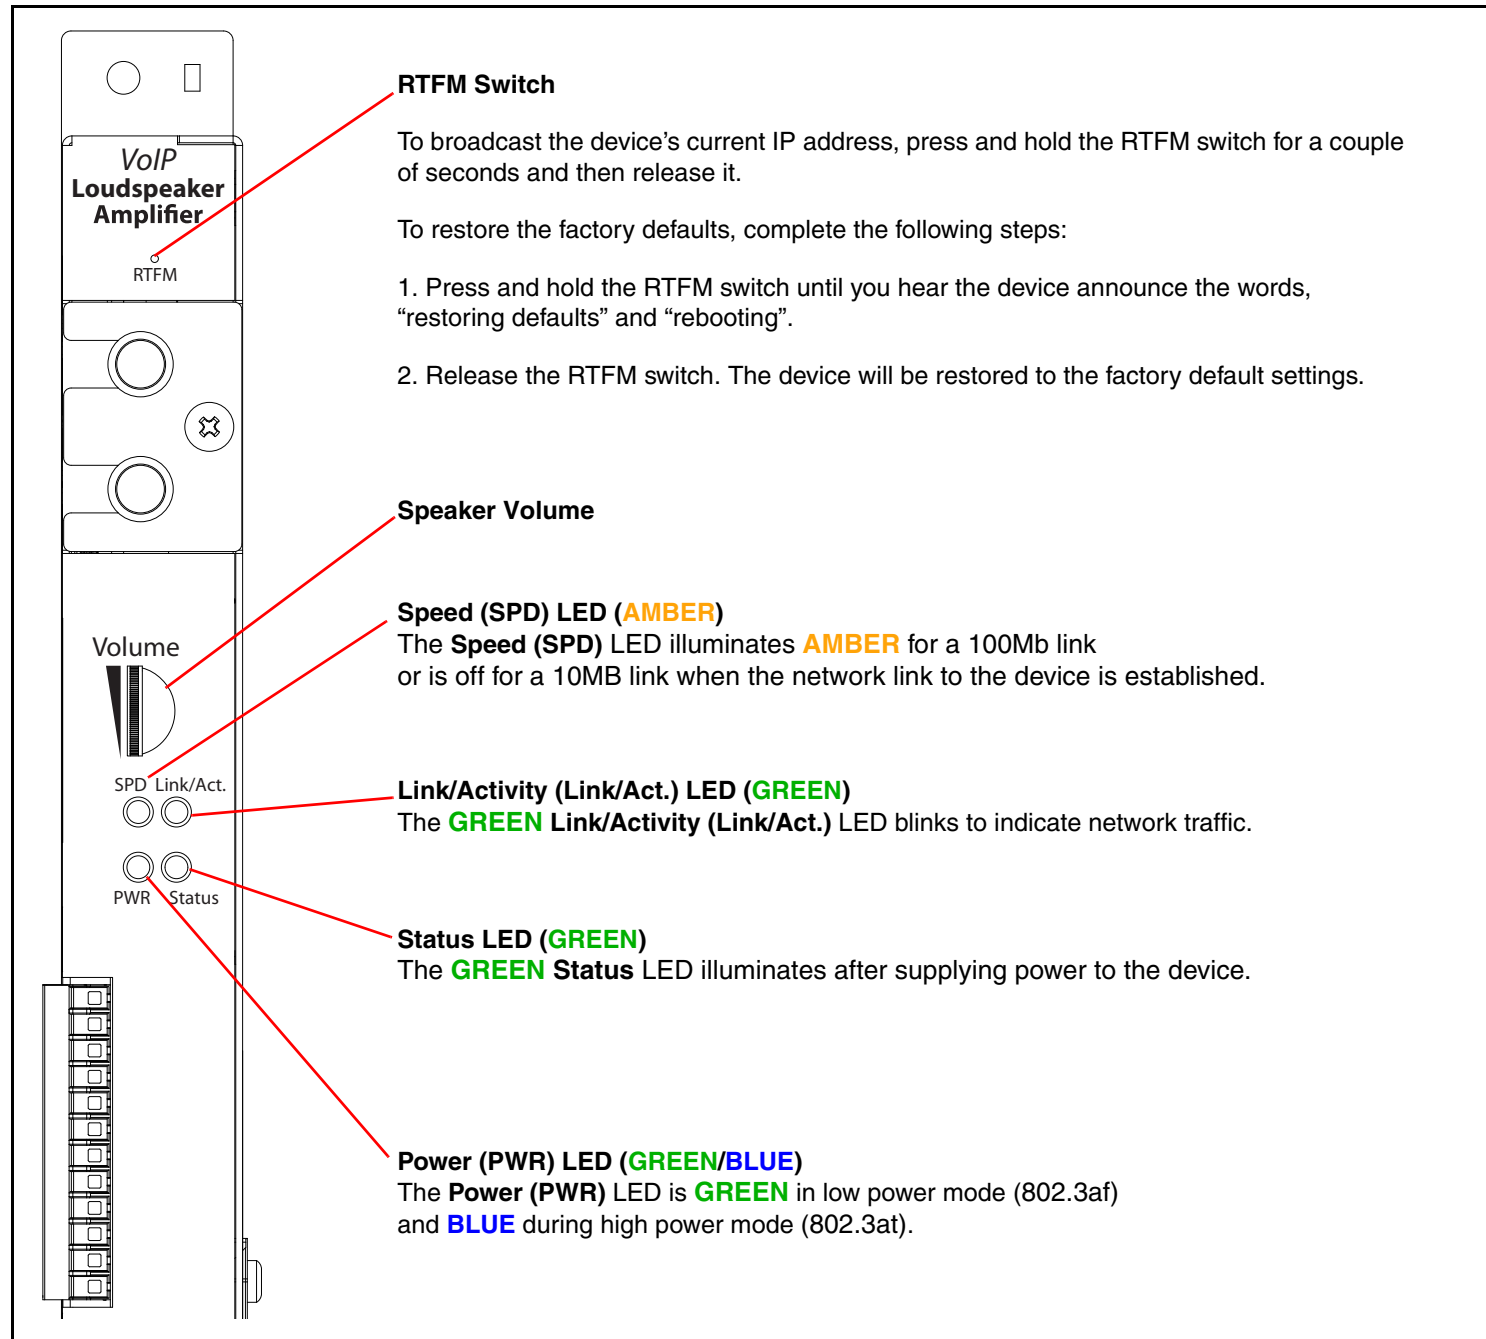

Dimensions and Mounting Template

