



### Lucent 35W/100W Amplifier

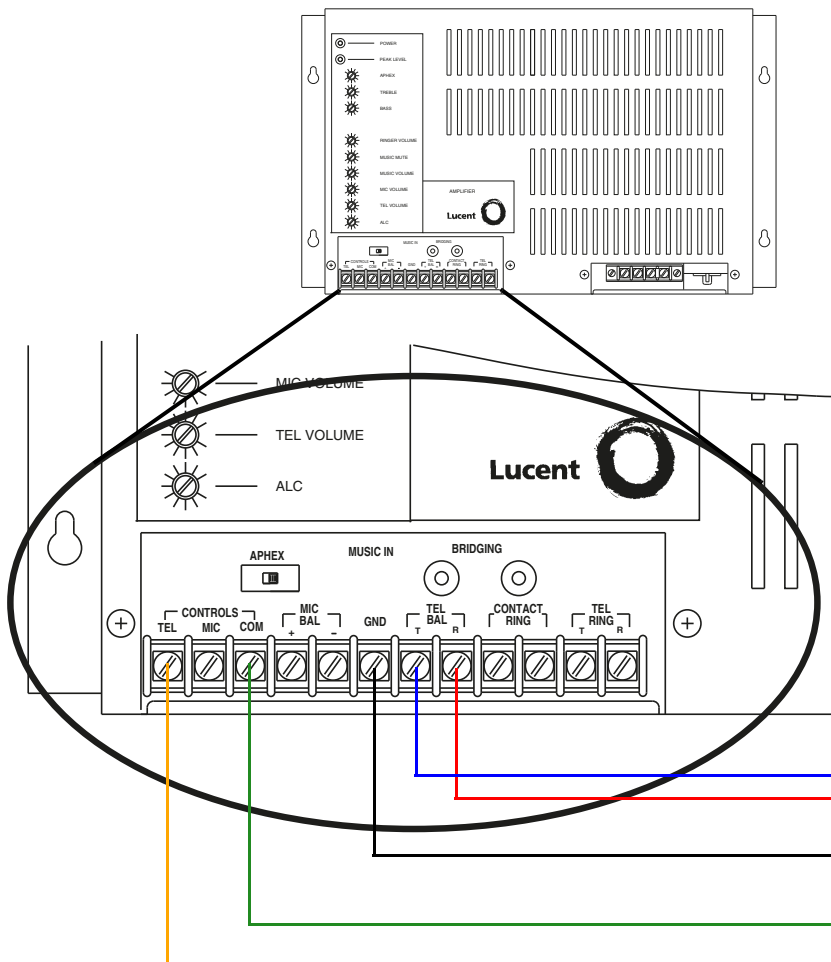

### SIP Paging Adapter Connections

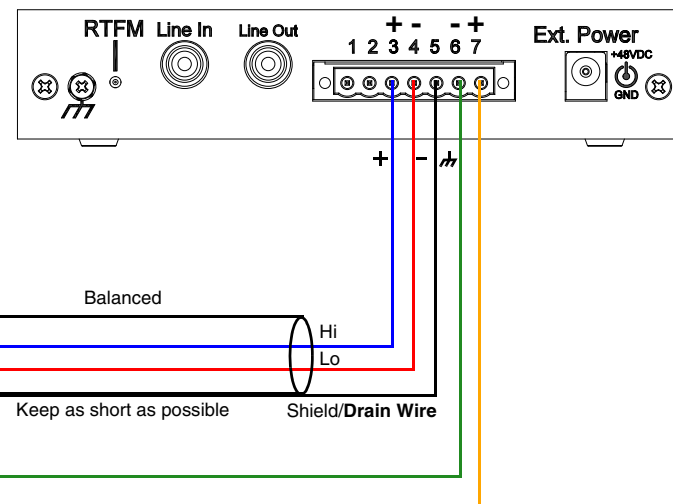

### Page Port Output Connections

Pin	Description
1	Fault Sense Input (Common).
2	Fault Sense Input (Sense).
3	Positive 600-Ohm Audio Output <sup>a</sup>
4	Negative 600-Ohm Audio Output <sup>a</sup>
5	Audio Ground Reference.
6	Relay Contact - Common <sup>b</sup>
7	Relay Contact - Normally Open <sup>b</sup>

a. The 600-Ohm audio output of the page port is also suited for interfaces with lower input impedances.

b. 1 Amp at 30 VDC for continuous loads.

### Notes

The SIP Paging Adapter's 600 Ohm Page Port output connects to the balanced TEL input on the Lucent 35W/100W Amplifier.

Connect the SIP Paging Adapter's relay contact terminals to TEL and COM CONTROLS terminals for background music muting. When using contact closure, check the box to "Enable relay on local audio" on the Device Configuration page of the web interface.

2 conductor, shielded speaker wire is recommended. Connect drain wire to GND, if necessary.