


## CyberData Nuvo NV-A4 Amplifier to SIP Paging Adapter Connections

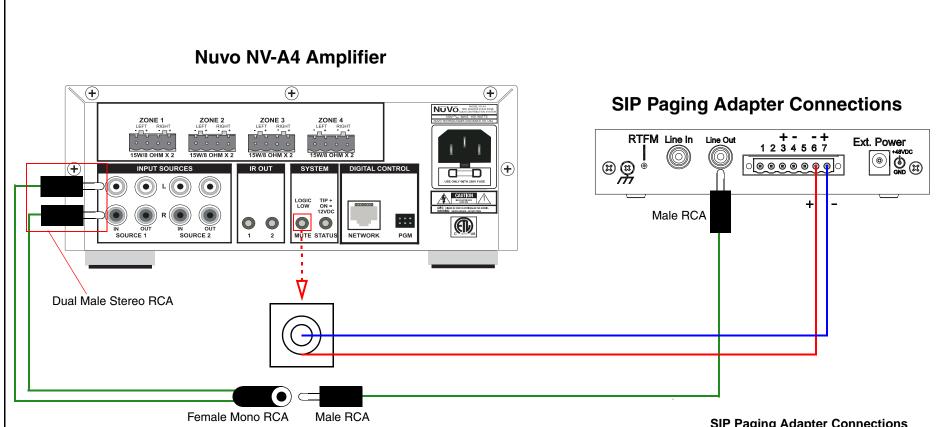

## **Notes**

CyberData SIP Paging Adapter's RCA line level output can connect to either Source 1 or Source 2 INPUT sources on the NuVo NV-A4 Amplifier using a male RCA to male RCA cable and female mono RCA to dual male stereo RCA cable.

Connect the SIP Paging Adapter's dry relay contacts, terminal pins 6 and 7, to the NV-A4 SYSTEM MUTE terminal to mute active channels per the above diagram.

## **SIP Paging Adapter Connections**

Pin	Description
1	Fault Sense Input (Common).
2	Fault Sense Input (Sense).
3	Positive 600-Ohm Audio Output <sup>a</sup>
4	Negative 600-Ohm Audio Output <sup>a</sup>
5	Audio Ground Reference.
6	Relay Contact - Common <sup>b</sup>
7	Relay Contact - Normally Open <sup>b</sup>
a.The	e 600-Ohm audio output of the page port is

also suited for interfaces with lower input impedances.

b.1 Amp at 30 VDC for continuous loads.