



Nuvo NV-A4 Amplifier

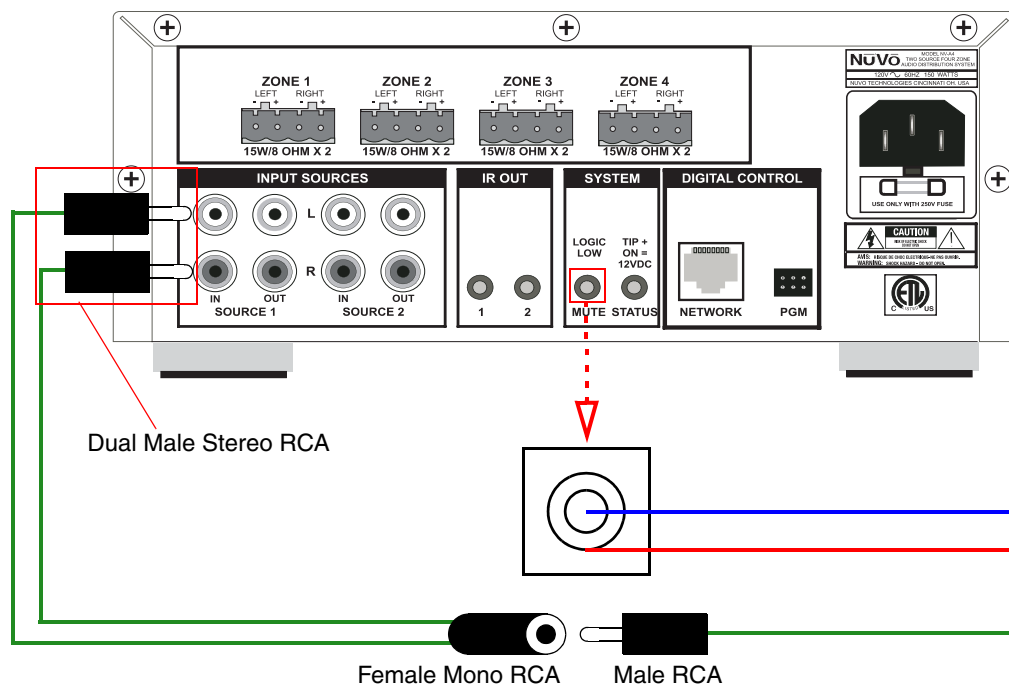

V3 Paging Server Connections

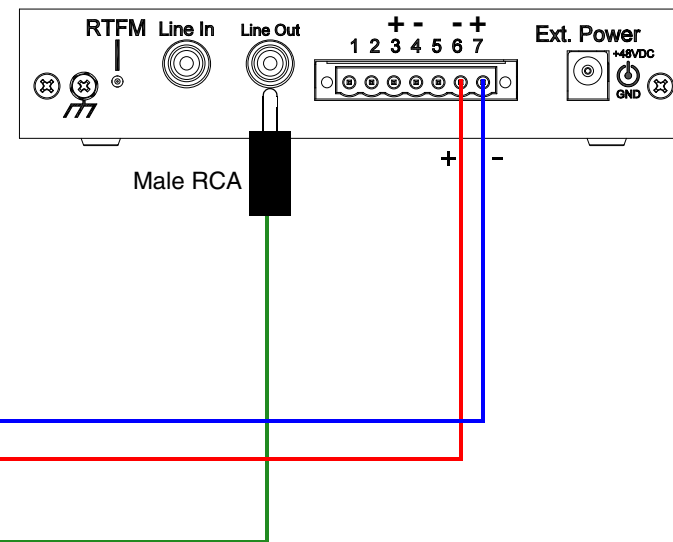

V3 Paging Server Connections

Pin	Description
1	Fault Sense Input (Common).
2	Fault Sense Input (Sense).
3	Positive 600-Ohm Audio Output ^a
4	Negative 600-Ohm Audio Output ^a
5	Audio Ground Reference.
6	Relay Contact - Common ^b
7	Relay Contact - Normally Open ^b

a. The 600-Ohm audio output of the page port is also suited for interfaces with lower input impedances.

b. 1 Amp at 30 VDC for continuous loads.

Notes

CyberData V3 Paging Server's RCA line level output can connect to either Source 1 or Source 2 INPUT sources on the NuVo NV-A4 Amplifier using a male RCA to male RCA cable and female mono RCA to dual male stereo RCA cable.

Connect the V3 Paging Server's dry relay contacts, terminal pins 6 and 7, to the NV-A4 SYSTEM MUTE terminal to mute active channels per the above diagram.

When using contact closure, check the box to **Enable relay on local audio** on the **Device Configuration** page of the web interface.