
Panasonic WA-740A Amplifier

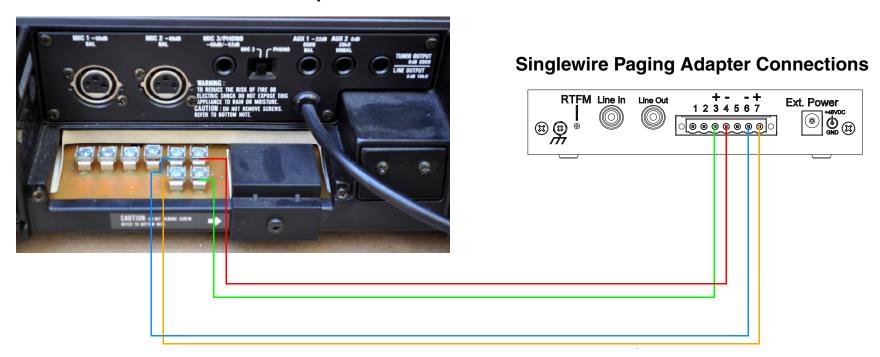

Notes

The CyberData Singlewire Paging Adapter's Page Port output connects to the AUX-1 Telephone Paging input screw terminals under the removable panel of the Panasonic WA-740A Amplifier.

Connect pins 3 and 4 of the Singlewire Paging Adapter's terminal block to the TEL T and TEL R terminals, respectively.

It may be necessary to use the dry relay contacts to trigger the page by connecting pins 6 and 7 to the CONT and CONT (-) terminals of the WA-740A Amplifier, respectively.

When using the relay, check the box to Enable Relay on Local Audio on the Device Configuration page of the web interface.

2-conductor, shielded speaker wire is recommended.

Page Port Connections

Pin	Description
1	Fault Sense Input (Common).
2	Fault Sense Input (Sense).
3	Positive 600-Ohm Audio Output ^a
4	Negative 600-Ohm Audio Output ^a
5	Audio Ground Reference.
6	Relay Contact - Common ^b
7	Relay Contact - Normally Open ^b
	e 600-Ohm audio output of the page port is suited for interfaces with lower input

b.1 Amp at 30 VDC for continuous loads.

impedances.