


CyberData TOA 700 Amplifier to SIP Paging Adapter Connections

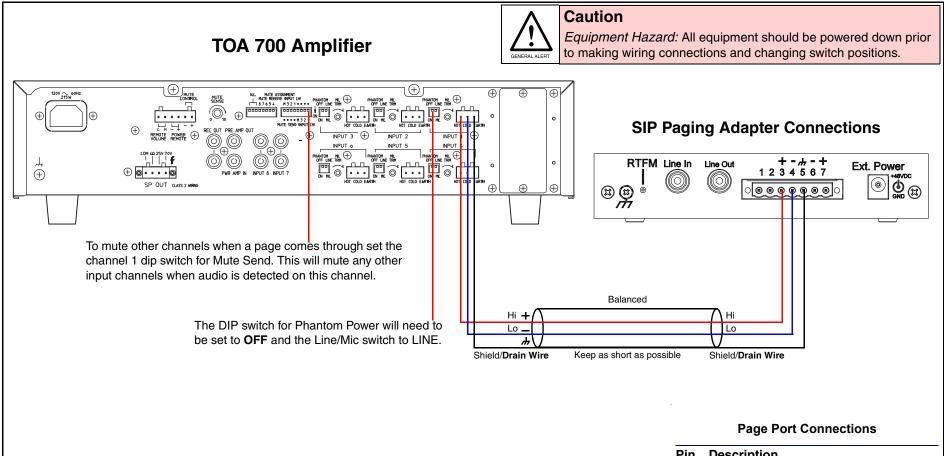

Notes

The DIP switch for Phantom Power will need to be set to **OFF** and the Line/Mic switch to LINE. To mute other channels when a page comes through set the channel 1 dip switch for Mute Send. This will mute any other input channels when audio is detected on this channel.

2-conductor, shielded speaker wire is recommended.

Pin	Description
1	Fault Sense Input (Common).
2	Fault Sense Input (Sense).
3	Positive 600-Ohm Audio Output ^a
4	Negative 600-Ohm Audio Output ^a
5	Audio Ground Reference.
6	Relay Contact - Common ^b
7	Relay Contact - Normally Open ^b
also	e 600-Ohm audio output of the page port is suited for interfaces with lower input dances.

b.1 Amp at 30 VDC for continuous loads.