


Mounting the Enclosure

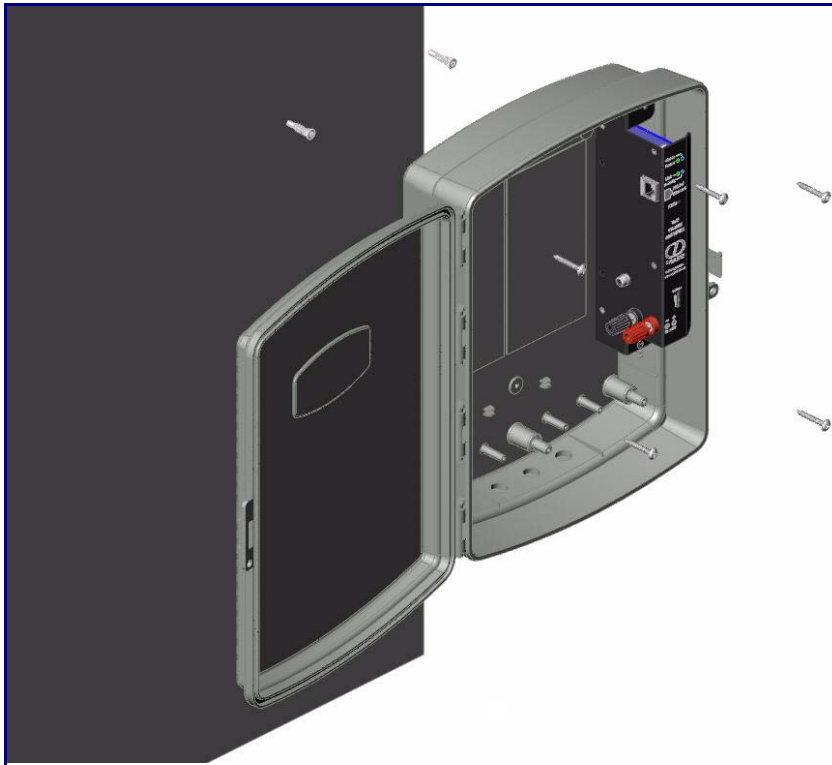

To mount the enclosure:

1. Prepare holes for the screws.
2. Plug in the power adapter and use the blue power light to verify that the power is on.
3. Plug the Ethernet cable into the loudspeaker amplifier. The yellow light verifies the network connection.
4. For wall mounting, use the three **#8 SHEET METAL SCREWS** to secure the speaker.

Contacting CyberData

Corporate Headquarters

CyberData Corporation
2555 Garden Road
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
www.CyberData.net

Sales: (831) 373-2601 ext. 334

Support: 831-373-2601 ext. 333
Web: <http://www.cyberdata.net/support/contactsupportvoip.html>

RMA Dept: (831) 373-2601 ext. 136
Email: RMA@CyberData.net
RMA Status: <http://www.cyberdata.net/support/rmastatus.html>

Warranty information is available at:
Web: <http://www.cyberdata.net/support/warranty/index.html>

Warranty

CyberData warrants its product against defects in material or workmanship for a period of two years from the date of purchase. Should the product fail within the warranty period, CyberData will repair or replace the product free of charge. This warranty includes all parts and labor.

Should the product fail out-of-warranty, a flat rate repair charge of one half of the purchase price of the product will be assessed. Repairs that are in warranty but are damaged by improper modifications or abuse, will be charged at the out-of-warranty rate. Products shipped to CyberData, both in and out-of-warranty, are shipped at the expense of the customer. Shipping charges for repaired products shipped back to the customer by CyberData, will be paid by CyberData.

CyberData shall not under any circumstances be liable to any person for any special, incidental, indirect or consequential damages, including without limitation, damages resulting from use or malfunction of the products, loss of profits or revenues or costs of replacement goods, even if CyberData is informed in advance of the possibility of such damages.

For product service, contact the Returned Materials Authorization (RMA) department. A product will not be accepted for return without an approved RMA number. Send the product, in its original package, to: CyberData Corporation, 2555 Garden Road, Monterey, CA 93940, Attention: RMA "your RMA number"

The most recent warranty information is available at:
Web: <http://www.cyberdata.net/support/warranty/index.html>



Installation Quick Reference

VoIP Loudspeaker Amplifier

(Wireless, AC powered)

SIP Compliant


010860

The Loudspeaker Amplifier (Wireless, AC powered) is a Voice-over-IP public address speaker that uses a single cable to connect to existing LANs.



Parameter	Factory Default Setting
IP Addressing	static
IP Address	192.168.3.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask	255.255.255.0
Default Gateway	192.168.3.1


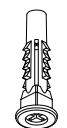
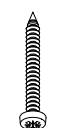
Typical Loudspeaker Amplifier System Installation

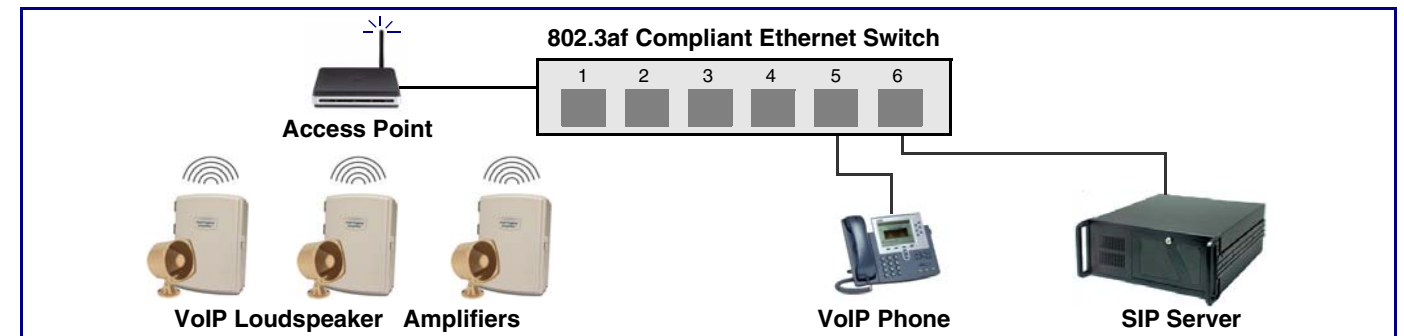


Getting Started

- Download the *VoIP Loudspeaker Amplifier (Wireless, AC powered) Operations Guide* PDF file at the VoIP Loudspeaker Amplifier product page at: <http://www.cyberdata.net/support/voip/index.html>
- Follow all instructions in the guide.
- Create a plan for the locations of your loudspeaker amplifiers.
- Prior to installation, consult local building and electrical code requirements.


Loudspeaker Amplifier Parts

<p>(1) Enclosure Assembly</p> 	<p>(1) Wall Mounting Kit</p> <p>(3) Plastic Ribbed Anchors </p> <p>(3) #8 Sheet Metal Screws </p>
--	--

Connecting Power to the Loudspeaker Amplifier

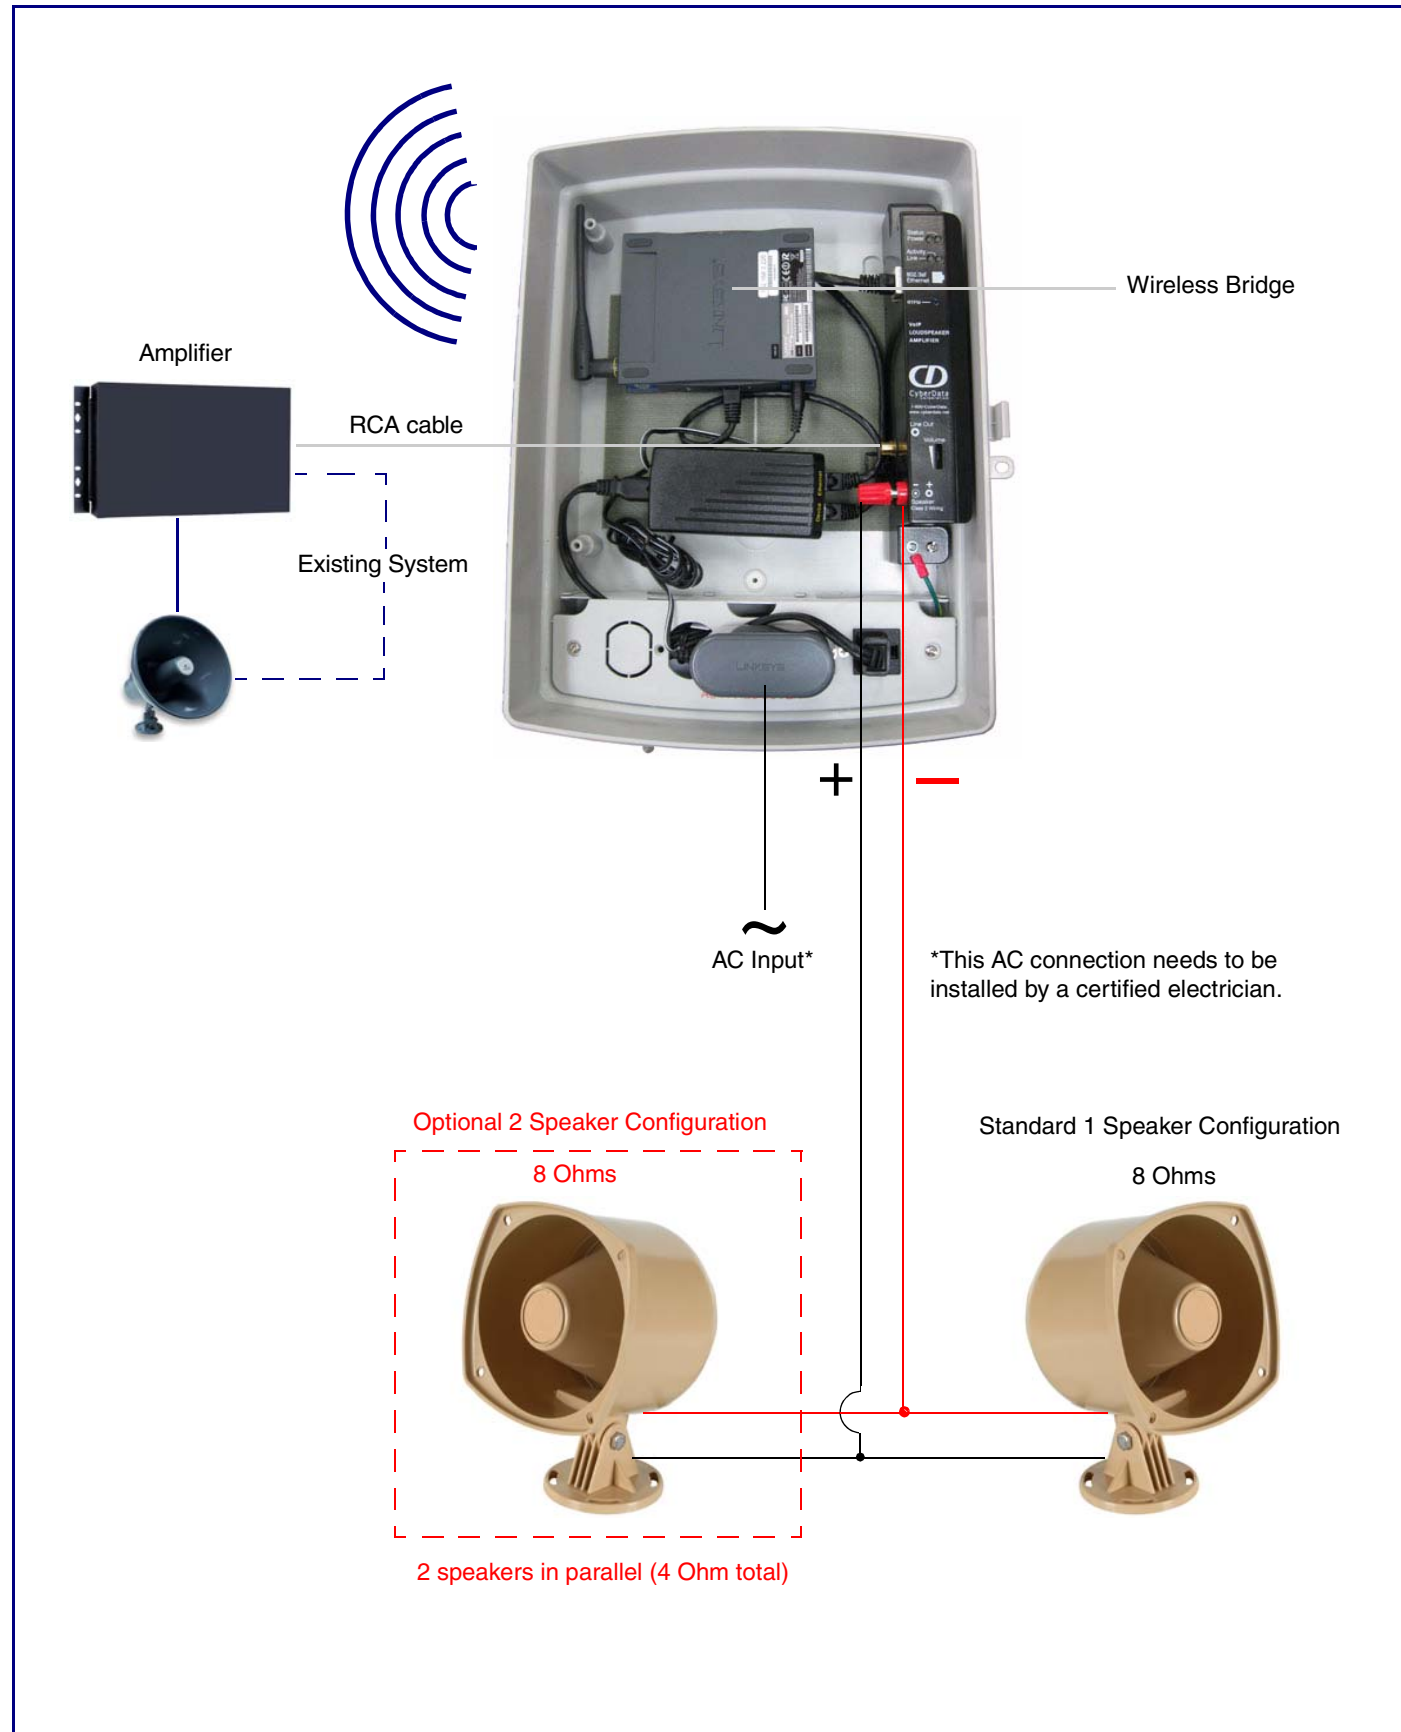

Loudspeaker Amplifier Features

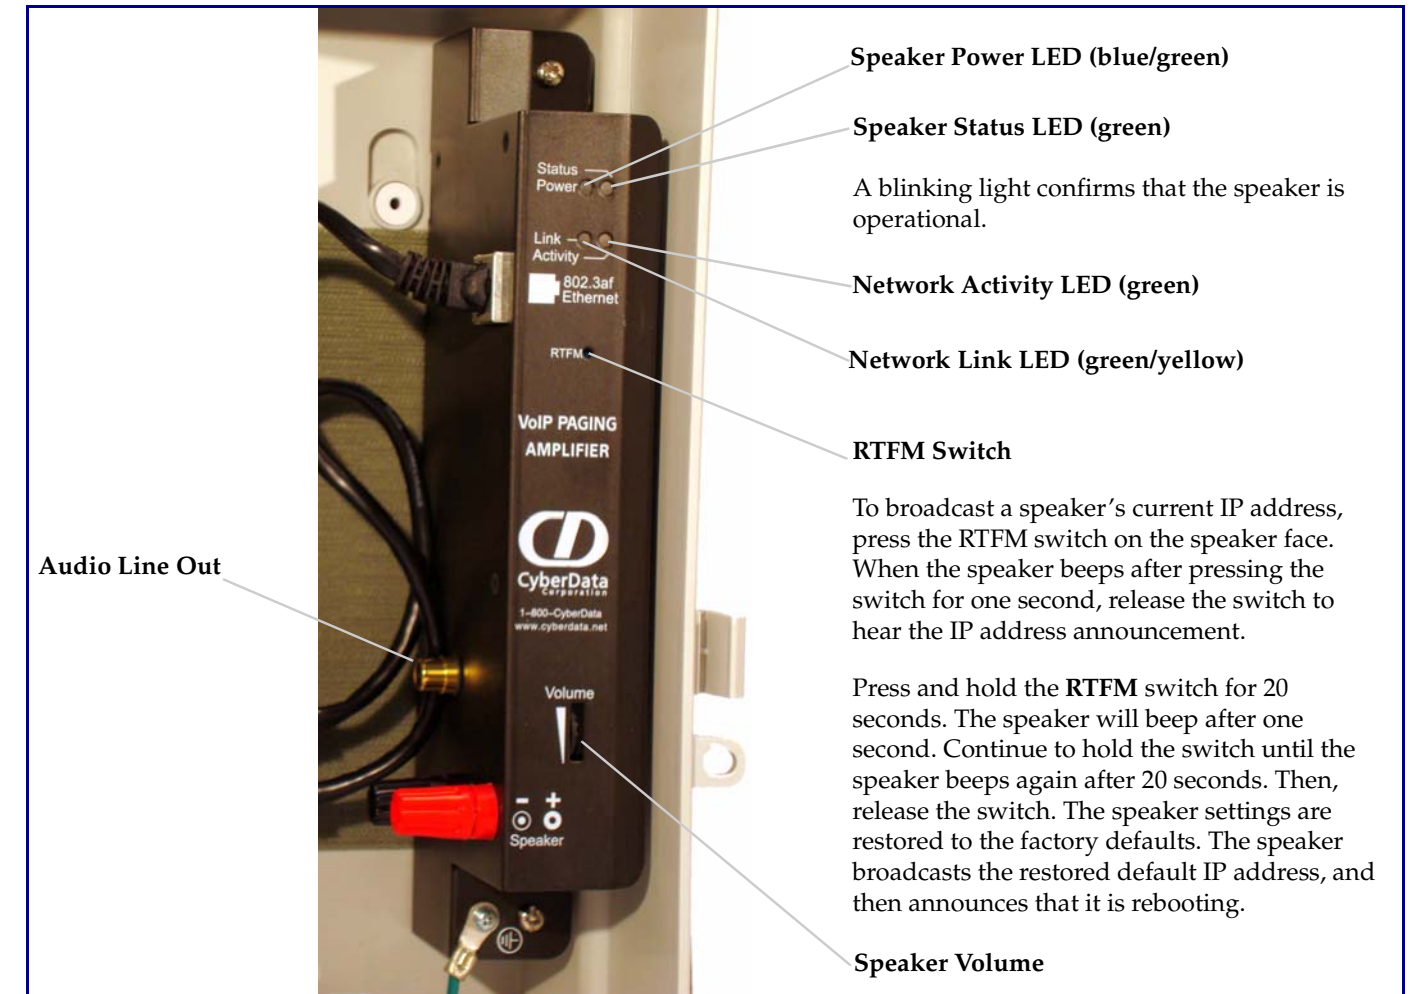

Setting Up the Wireless Bridge

To set up the wireless bridge for access to the loudspeaker amplifier web configuration access:

1. Set up the host PC ethernet IP address to **192.168.3.xxx** where **xxx** is anything but **226** (default wireless bridge address) or **010** (default loudspeaker amplifier IP address).
2. Connect an access point to the pc and set the ip address of the access point to **192.168.3.xxx** where **xxx** is not 226, 010, or the ip address of the PC.
3. Set the access point ssid to **linksys**.
4. Power up the loudspeaker amplifier.
5. Open a web browser and enter the url: **http://192.168.3.10**. The amplifier speaker configuration page login page should come up.
6. Follow the configuration instructions in the manual to configure the ip address and parameters for your network.
7. After configuration is complete, use the Bridge Setup Utility supplied with the amplifier to configure the wireless bridge to the desired network configuration.