



# *VoIP V2 Loudspeaker Amplifier (PoE) Operations Guide*

Part #011097  
Document Part #930362H  
for Firmware Version 6.0.2

**CyberData Corporation**  
3 Justin Court  
Monterey, CA 93940  
(831) 373-2601

---

**VoIP V2 Paging Amplifier Operations Guide 930362H**  
**Part # 011097**

**COPYRIGHT NOTICE:**

© 2011, CyberData Corporation, ALL RIGHTS RESERVED.

This manual and related materials are the copyrighted property of CyberData Corporation. No part of this manual or related materials may be reproduced or transmitted, in any form or by any means (except for internal use by licensed customers), without prior express written permission of CyberData Corporation. This manual, and the products, software, firmware, and/or hardware described in this manual are the property of CyberData Corporation, provided under the terms of an agreement between CyberData Corporation and recipient of this manual, and their use is subject to that agreement and its terms.

**DISCLAIMER:** Except as expressly and specifically stated in a written agreement executed by CyberData Corporation, CyberData Corporation makes no representation or warranty, express or implied, including any warranty or merchantability or fitness for any purpose, with respect to this manual or the products, software, firmware, and/or hardware described herein, and CyberData Corporation assumes no liability for damages or claims resulting from any use of this manual or such products, software, firmware, and/or hardware. CyberData Corporation reserves the right to make changes, without notice, to this manual and to any such product, software, firmware, and/or hardware.

**OPEN SOURCE STATEMENT:** Certain software components included in CyberData products are subject to the GNU General Public License (GPL) and Lesser GNU General Public License (LGPL) "open source" or "free software" licenses. Some of this Open Source Software may be owned by third parties. Open Source Software is not subject to the terms and conditions of the CyberData COPYRIGHT NOTICE or software licenses. Your right to copy, modify, and distribute any Open Source Software is determined by the terms of the GPL, LGPL, or third party, according to who licenses that software.

Software or firmware developed by CyberData that is unrelated to Open Source Software is copyrighted by CyberData, subject to the terms of CyberData licenses, and may not be copied, modified, reverse-engineered, or otherwise altered without explicit written permission from CyberData Corporation.

**TRADEMARK NOTICE:** CyberData Corporation and the CyberData Corporation logos are trademarks of CyberData Corporation. Other product names, trademarks, and service marks may be the trademarks or registered trademarks of their respective owners.



**Technical Support**

The fastest way to get technical support for your VoIP product is to submit a VoIP Technical Support form at the following website:  
<http://www.cyberdata.net/support/contactsupportvoip.html>

We have several technical support staff monitoring this form and they will contact you within 12 hours after receiving a submission.

Phone: (831) 373-2601, Ext. 333

Email: [support@cyberdata.net](mailto:support@cyberdata.net)

Fax: (831) 373-4193

Company and product information is at [www.cyberdata.net](http://www.cyberdata.net).

---

## Revision Information



Revision 930362H, released on August 12, 2011, corresponds to firmware version 6.0.2 and has the following changes:

- Adds [Section 2.2.3.1, "Using the Amplified Outputs"](#).
- Adds [Figure 2-6, "Using the Amplified Outputs—Low Power Mode"](#).
- Adds [Figure 2-7, "Using the Amplified Outputs—High Power Mode"](#).

---



# Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Prior to installation, consult local building and electrical code requirements.

 GENERAL ALERT	<p><b>Warning</b></p> <p><i>Electrical Hazard:</i> This product should be installed by a licensed electrician according to all local electrical and building codes.</p>
 GENERAL ALERT	<p><b>Warning</b></p> <p><i>Electrical Hazard:</i> To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.</p>

---

## Pictorial Alert Icons

	<p><b>General Alert</b></p> <p><i>This pictorial alert indicates a potentially hazardous situation. This alert will be followed by a hazard level heading and more specific information about the hazard.</i></p>
	<p><b>Ground</b></p> <p><i>This pictorial alert indicates the Earth grounding connection point.</i></p>

---

## Hazard Levels

**Danger:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This is limited to the most extreme situations.

**Warning:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**Caution:** Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It may also alert users against unsafe practices.

**Notice:** Indicates a statement of company policy (that is, a safety policy or protection of property).

The safety guidelines for the equipment in this manual do not purport to address all the safety issues of the equipment. It is the responsibility of the user to establish appropriate safety, ergonomic, and health practices and determine the applicability of regulatory limitations prior to use. Potential safety hazards are identified in this manual through the use of words Danger, Warning, and Caution, the specific hazard type, and pictorial alert icons.

---

## Abbreviations and Terms

Abbreviation or Term	Definition
A-law	A standard companding algorithm, used in European digital communications systems to optimize, i.e., modify, the dynamic range of an analog signal for digitizing.
AVP	Audio Video Profile
Cat 5	TIA/EIA-568-B Category 5
DHCP	Dynamic Host Configuration Protocol
LAN	Local Area Network
LED	Light Emitting Diode
Mbps	Megabits per Second.
NTP	Network Time Protocol
PBX	Private Branch Exchange
PoE	Power over Ethernet (as per IEEE 802.3af standard)
RTFM	Reset Test Function Management
SIP	Session Initiated Protocol
u-law	A companding algorithm, primarily used in the digital telecommunication
UC	Unified Communications
VoIP	Voice over Internet Protocol

---

<b>Chapter 1 Product Overview</b>	<b>1</b>
1.1 How to Identify This Product .....	1
1.2 Typical System Installation .....	2
1.3 Product Features .....	2
1.4 Supported Protocols .....	3
1.5 Supported SIP Servers .....	3
1.6 Product Specifications .....	4
1.7 Dimensions .....	5
 <b>Chapter 2 Installing the VoIP V2 Loudspeaker Amplifier</b>	 <b>6</b>
2.1 Parts List .....	6
2.2 Loudspeaker Amplifier Setup .....	6
2.2.1 Loudspeaker Amplifier Components .....	8
2.2.2 Loudspeaker Amplifier NEMA Box Components .....	9
2.2.3 Connecting the Loudspeaker Amplifier .....	10
2.2.4 Loudspeaker Amplifier DIP Switches .....	12
2.2.5 VoIP V2 Loudspeaker Amplifier System Installation and Connection Options .....	13
2.2.6 Loudspeaker Amplifier Jumpers .....	15
2.2.7 Confirm Operation .....	17
2.2.8 Confirm the IP Address and Test the Audio .....	18
2.2.9 Adjust the Volume .....	18
2.3 Configure the Loudspeaker Amplifier Parameters .....	20
2.3.1 Loudspeaker Amplifier Web Page Navigation .....	21
2.3.2 Log in to the Configuration Home Page .....	22
2.3.3 Configure the Device Parameters .....	25
2.3.4 Configure the Network Parameters .....	28
2.3.5 Configure the SIP Parameters .....	30
2.3.6 Configure the Night Ringer Parameters .....	32
2.3.7 Configure the Sensor Configuration Parameters .....	34
2.3.8 Configure the Multicast Configuration Parameters .....	36
2.3.9 Configure the Audio Parameters .....	40
2.3.10 User-created Audio Files .....	45
2.3.11 Configure the Event Parameters .....	47
2.3.12 Configure the Autoprovisioning Parameters .....	52
2.3.13 Upgrade the Firmware and Reboot the Loudspeaker Amplifier .....	57
2.3.14 Reboot the Loudspeaker Amplifier .....	60
 <b>Appendix A Mounting the Amplifier</b>	 <b>61</b>
A.1 Mount the Loudspeaker Amplifier .....	61
 <b>Appendix B Setting up a TFTP Server</b>	 <b>63</b>
B.1 Set up a TFTP Server .....	63
B.1.1 In a LINUX Environment .....	63
B.1.2 In a Windows Environment .....	63
 <b>Appendix C Troubleshooting/Technical Support</b>	 <b>64</b>
C.1 Frequently Asked Questions (FAQ) .....	64
C.2 Documentation .....	64
C.3 Contact Information .....	65
C.4 Warranty .....	66
C.4.1 Warranty & RMA Returns within the United States .....	66
C.4.2 Warranty & RMA Returns Outside of the United States .....	66
C.4.3 Spare in the Air Policy .....	66
C.4.4 Return and Restocking Policy .....	67
C.4.5 Warranty and RMA Returns Page .....	67
 <b>Index</b>	 <b>68</b>

---

# 1 Product Overview

---

The CyberData SIP-enabled VoIP V2 Loudspeaker Amplifier (PoE) provides an easy method for implementing an IP-based overhead paging system for both new and legacy installations.


With up to 25 watts of driving power (802.3at), the Amplifier provides direct drive of a standard Horn speaker and supports a line-out connector for connection to an external amplifier. The interface is compatible with most SIP-based IP PBX servers that comply with the SIP RFC 3261. For non-SIP environments, the Loudspeaker Amplifier can be configured to listen to multicast address and port number combinations to form paging zones.

---

## 1.1 How to Identify This Product

To identify the VoIP V2 Loudspeaker Amplifier (PoE), look for a model number label similar to the one shown in [Figure 1-1](#). The model number on the label should be **011097**.

**Figure 1-1. Model Number Label**

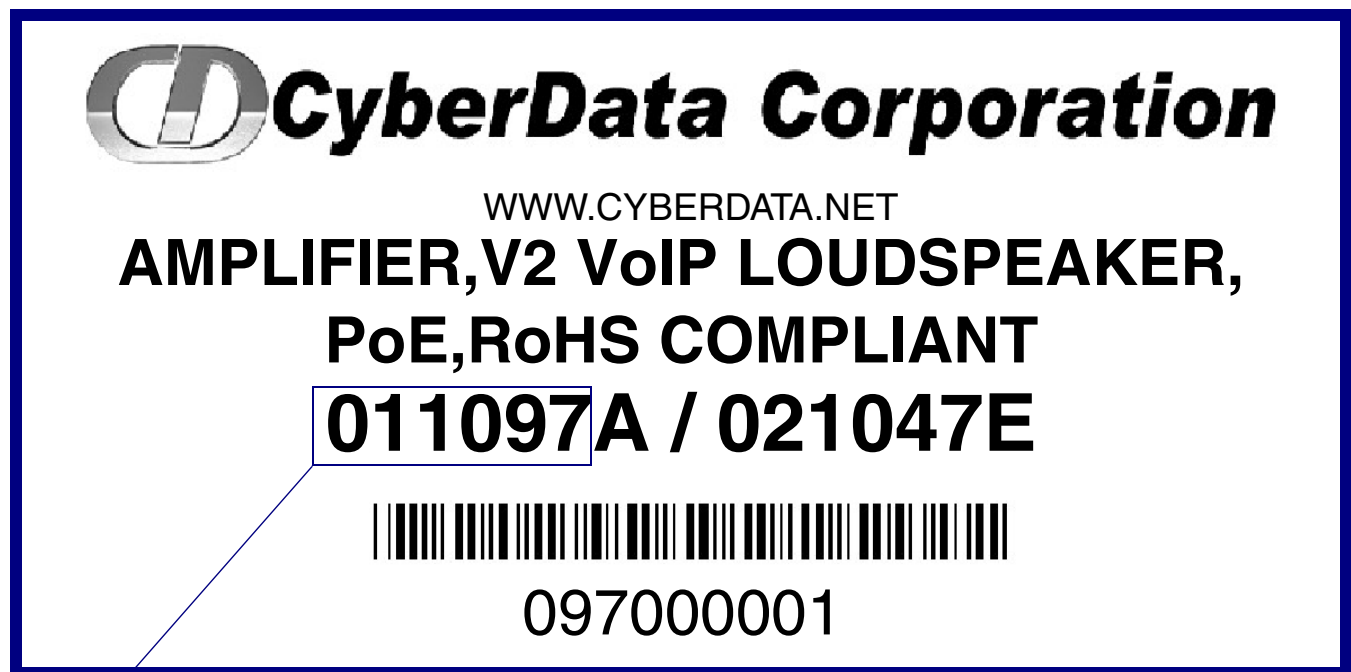

Model number





---

## 1.4 Supported Protocols

The Loudspeaker Amplifier supports:

- SIP
- Multicast
- HTTP Web-based configuration  
Provides an intuitive user interface for easy system configuration and verification of Loudspeaker Amplifier operations.
- DHCP Client  
Dynamically assigns IP addresses in addition to the option to use static addressing.
- TFTP Client  
Facilitates Web-based firmware upgrades of the latest Loudspeaker Amplifier capabilities.
- RTP
- RTP/AVP - Audio Video Profile
- SPEEX
- Audio Encodings  
PCMU (G.711 mu-law)  
PCMA (G.711 A-law)  
Packet Time 20 ms

---

## 1.5 Supported SIP Servers

The following link contains information on how to configure the Loudspeaker Amplifier for the supported SIP servers:

<http://www.cyberdata.net/support/server/index.html>


## 1.6 Product Specifications

**Table 1. Product Specifications**

Category	Specification
Ethernet I/F	10/100 Mbps
Power Input	PoE 802.3at or 802.3af
Operating Temperature	-30 to 55 C (-22 to 131 F)
Protocol	SIP RFC 3261
Payload Types	G711, SPEEX
Warranty	2 Years Limited
Dimensions	14" x 10" x 4"
Audio Output	802.3af - up to 10 Watts (default, 50% duty cycle [one second on and one second off]). 802.3at - up to 22 Watts (default, 50% duty cycle [one second on and one second off])
Line In:	
Input Signal Amplitudes	2.0 VPP maximum
Input Impedance	10k Ohm
Line Out:	
Output Signal Amplitudes	2.0 VPP maximum
Output Level	+2dBm nominal
Total Harmonic Distortion	0.5% maximum
Output Impedance	10k Ohm
Part Number	011097

## 1.7 Dimensions

Figure 1-3. Dimensions


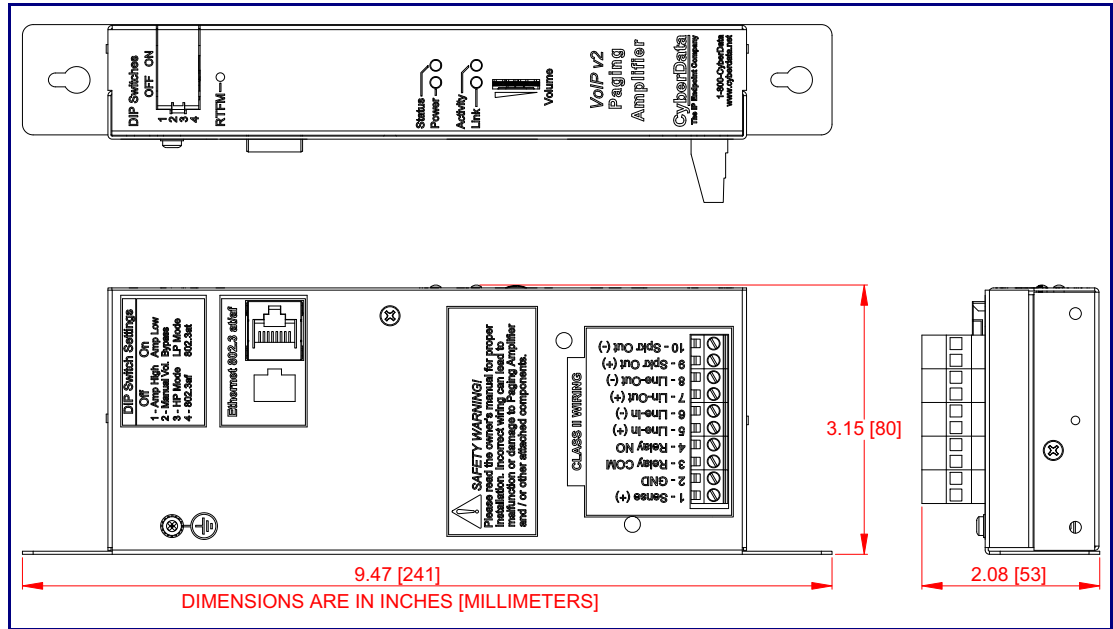




## 2 Installing the VoIP V2 Loudspeaker Amplifier

### 2.1 Parts List

Table 2-1 illustrates the parts for each Loudspeaker Amplifier and includes a kit for mounting.

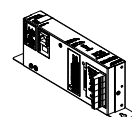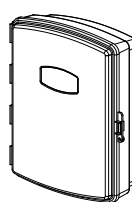**Table 2-1. Parts List**

Quantity	Part Name	Illustration
1	Loudspeaker Amplifier Assembly	
1	Enclosure	
1	Installation Quick Reference Guide	
1	Loudspeaker Amplifier Mounting Accessory Kit, RoHS (part #071057A) which includes: (3) Plastic Ribbed Anchors (3) #6 Sheet Metal Screws	

### 2.2 Loudspeaker Amplifier Setup

Set up and configure each Loudspeaker Amplifier *before* you mount it.

CyberData delivers each Loudspeaker Amplifier with the factory default values indicated in [Table 2-2](#):

**Table 2-2. Factory Default Settings—Default of Network**


Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

## 2.2.1 Loudspeaker Amplifier Components

Figure 2-4 shows the components of the Loudspeaker Amplifier .


**Figure 2-4. Loudspeaker Amplifier Components**

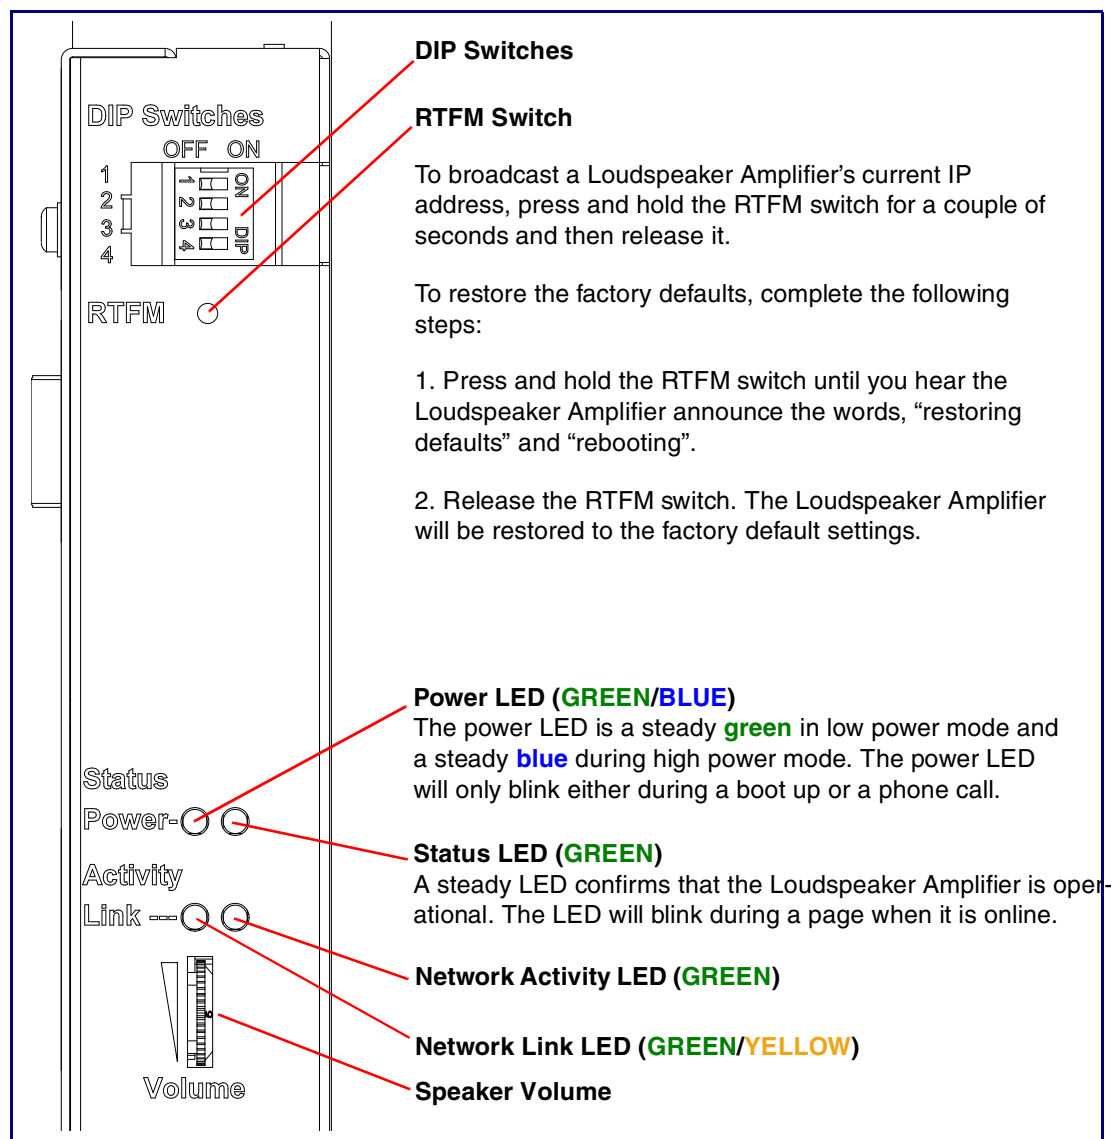

## 2.2.2 Loudspeaker Amplifier NEMA Box Components

Figure 2-5 shows all of the NEMA box components of the loudspeaker amplifier.

**Figure 2-5. Loudspeaker Amplifier Components—AC powered**

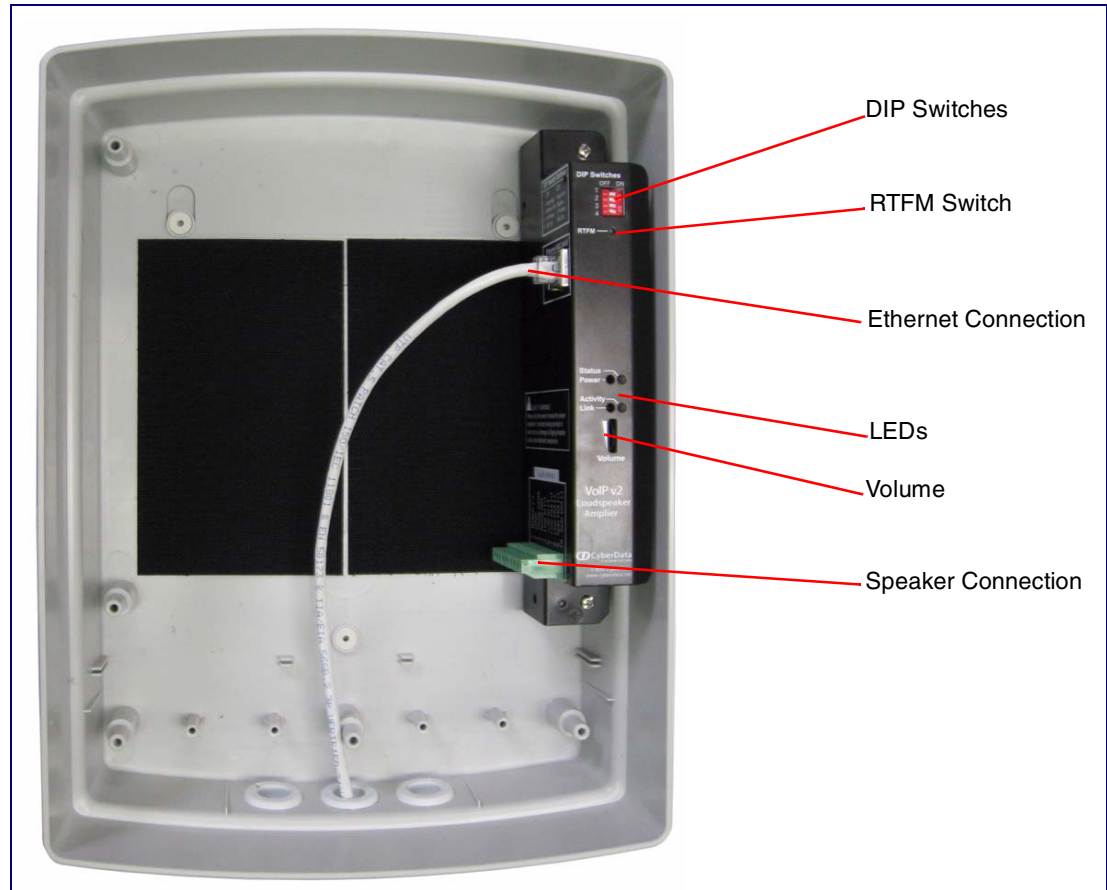




## 2.2.3 Connecting the Loudspeaker Amplifier

### 2.2.3.1 Using the Amplified Outputs

Figure 2-6 and Figure 2-7 illustrates how to connect the VoIP V2 Loudspeaker Amplifier and use the amplified outputs in low and high power mode.


Low Power Mode

**Figure 2-6. Using the Amplified Outputs—Low Power Mode**

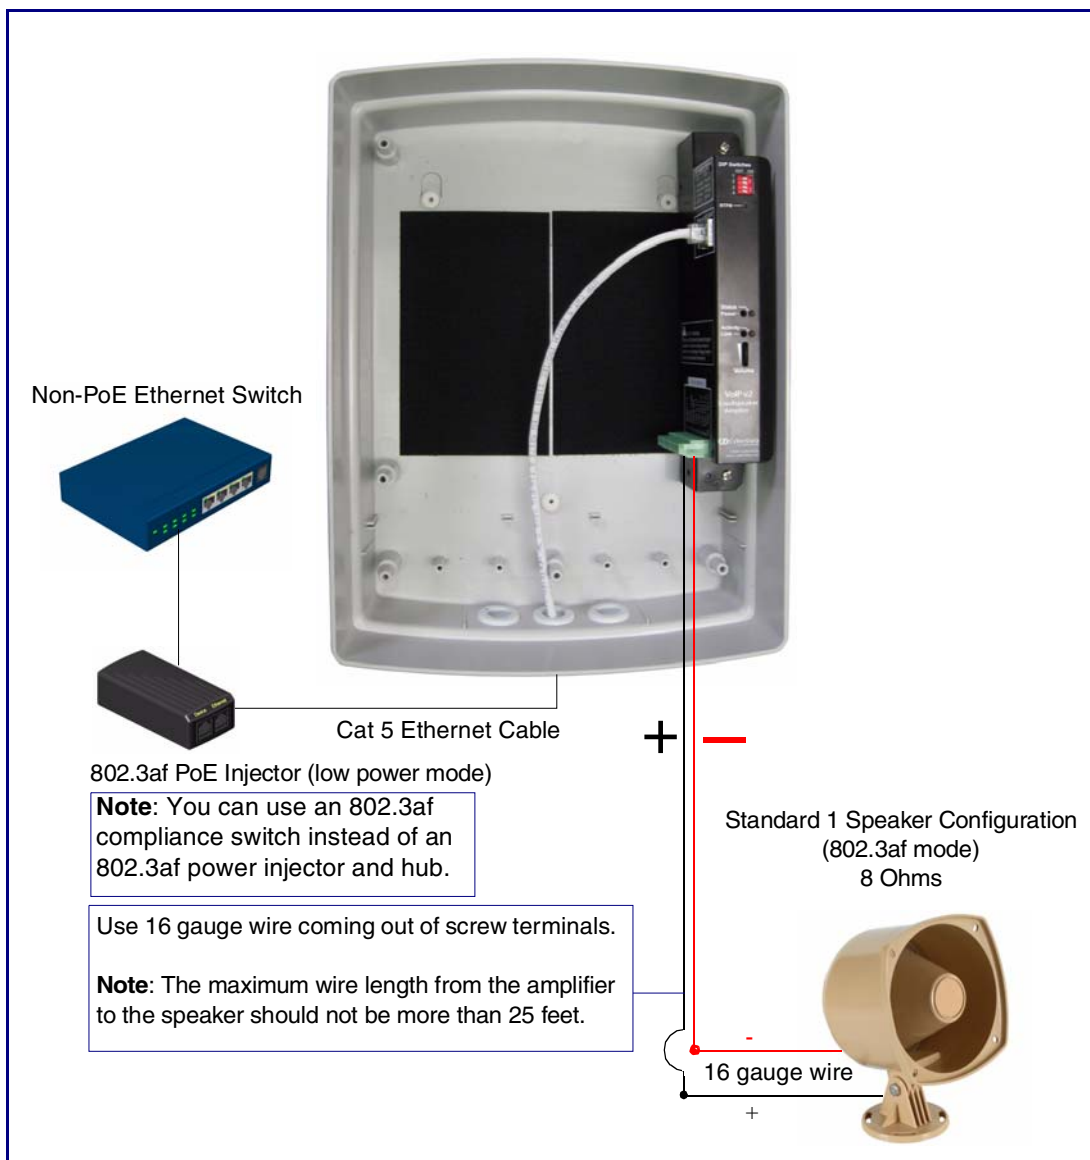

## High Power Mode


**Figure 2-7. Using the Amplified Outputs—High Power Mode**

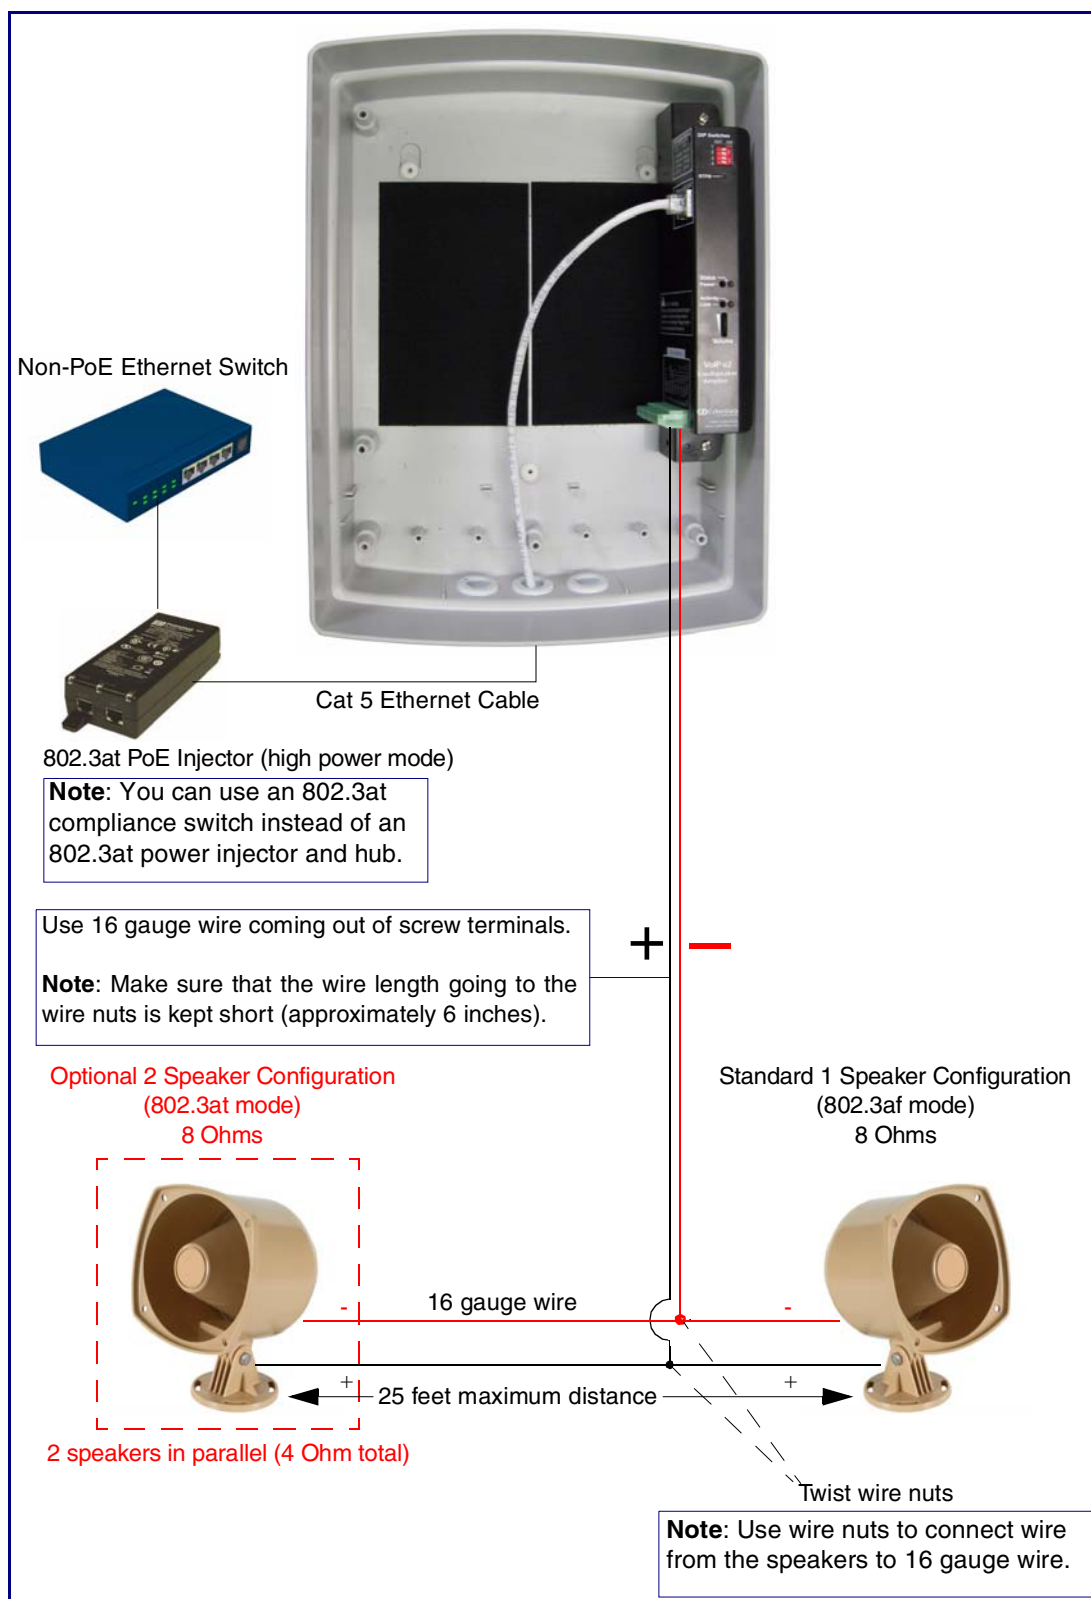

## 2.2.4 Loudspeaker Amplifier DIP Switches

See [Figure 2-8](#) to identify the DIP Switches.

**Figure 2-8. DIP Switches**

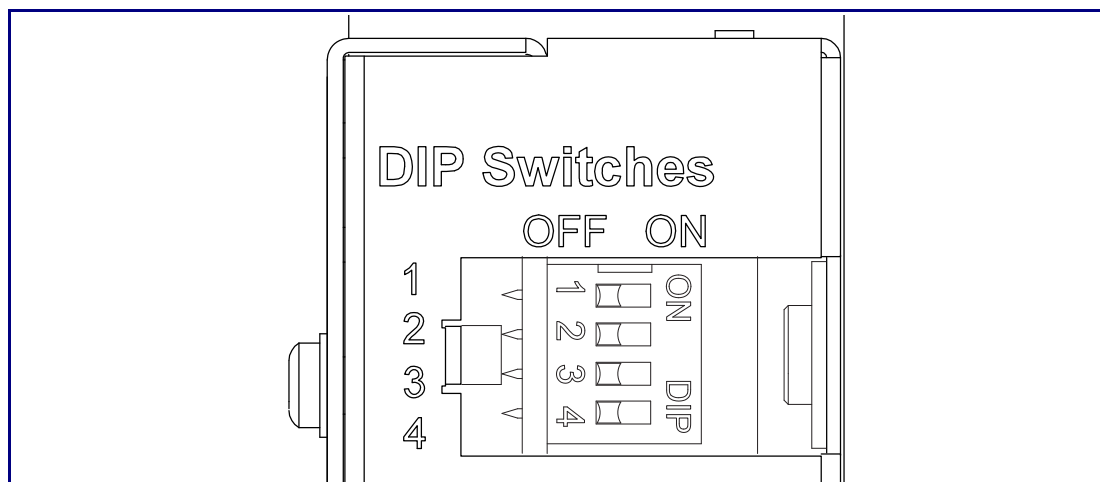

See [Table 2-3](#) and [Table 2-4](#) for the DIP Switch settings for the revision B (or later) board.

**Table 2-3. DIP Switch Settings—Low Power—802.3af Compliant (Default)**

DIP Switch	Setting	Description
1	OFF	Sets PoE for 802.3af class.
2	N/A	Not applicable for power setting.
3	ON	Switch mode current set to <b>LOW</b> .
4	OFF	Low gain amplifier setting.

**Table 2-4. DIP Switch Settings—High Power—Non-PoE Compliant<sup>a</sup>**

DIP Switch	Setting	Description
1	ON	Sets PoE for 802.3af class.
2	N/A	Not applicable for power setting.
3	OFF	Switch mode current set to <b>HIGH</b> .
4	ON	Force high gain amplifier.

a. If set to high power, the unit will not power ON with 802.3af compliant switch. You must use a power injector in this mode (CyberData part number 010867A).


**Table 2-5. DIP Switch 2 Settings**

DIP Switch	Setting	Description
2	OFF	<b>Manual Vol.</b> The speaker volume is set manually by the analog volume trimmer.
2	ON	<b>Bypass.</b> Bypasses the manual volume control of the analog volume trimmer and uses the web page volume settings.


## 2.2.5 VoIP V2 Loudspeaker Amplifier System Installation and Connection Options

The following figures show the connection options for the VoIP V2 Loudspeaker Amplifier.


**Figure 2-9. Loudspeaker Amplifier Connections**

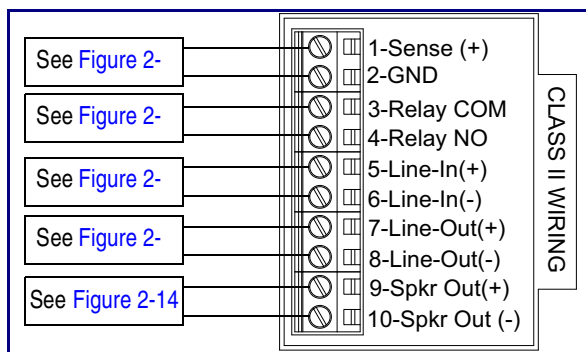

**Figure 2-10. Sensor Connection**

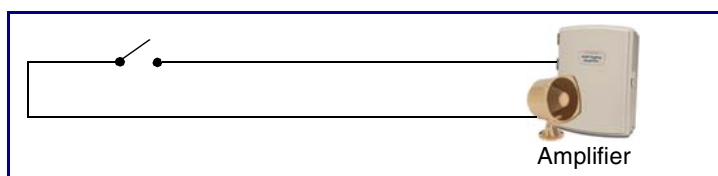

**Figure 2-11. Relay or Strobe Alert Connection**

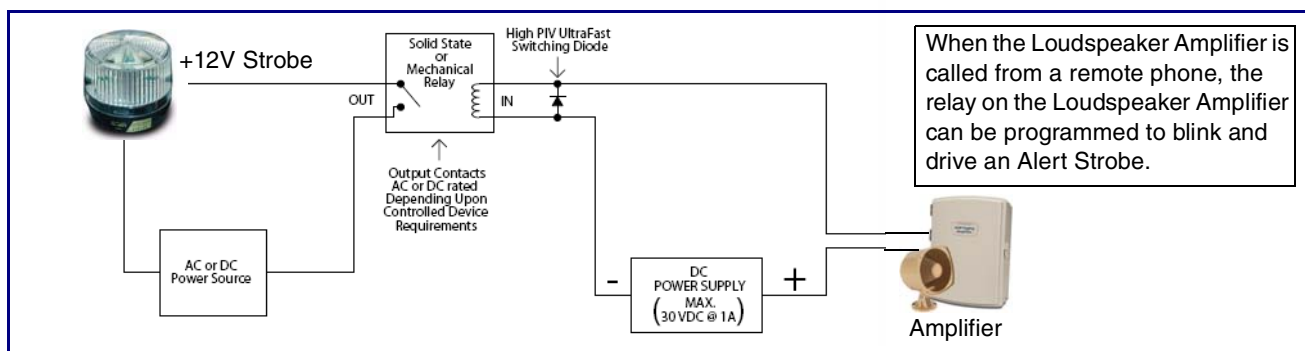

**Figure 2-12. Line-In Connection**

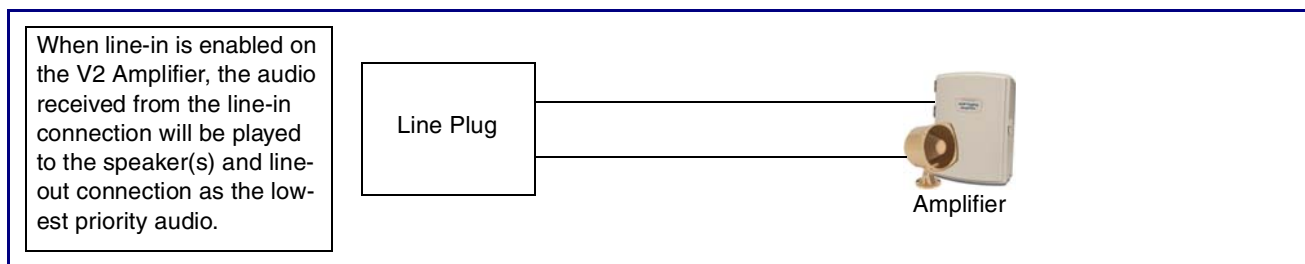


Figure 2-13. Line Out Connection


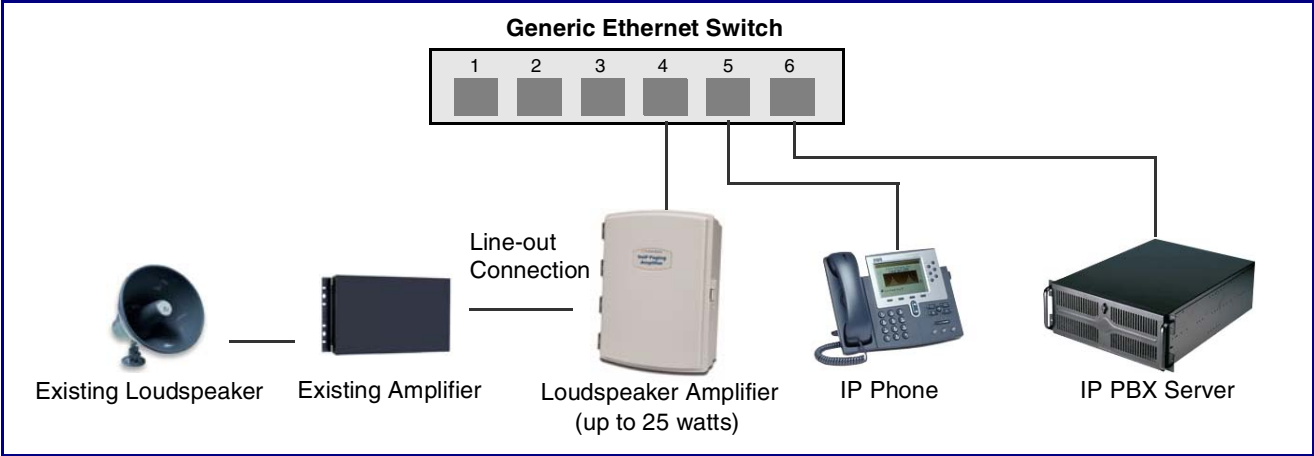



Figure 2-14. Speaker Out Connection

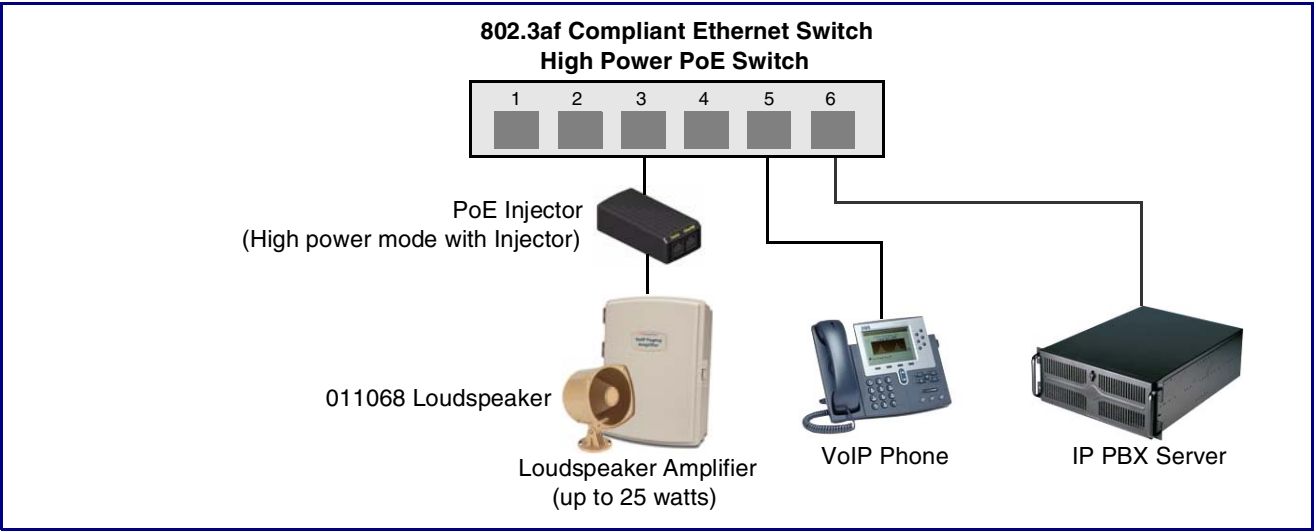

## 2.2.6 Loudspeaker Amplifier Jumpers

See [Figure 2-15](#) for the jumper locations.

**Figure 2-15. Jumper Locations**

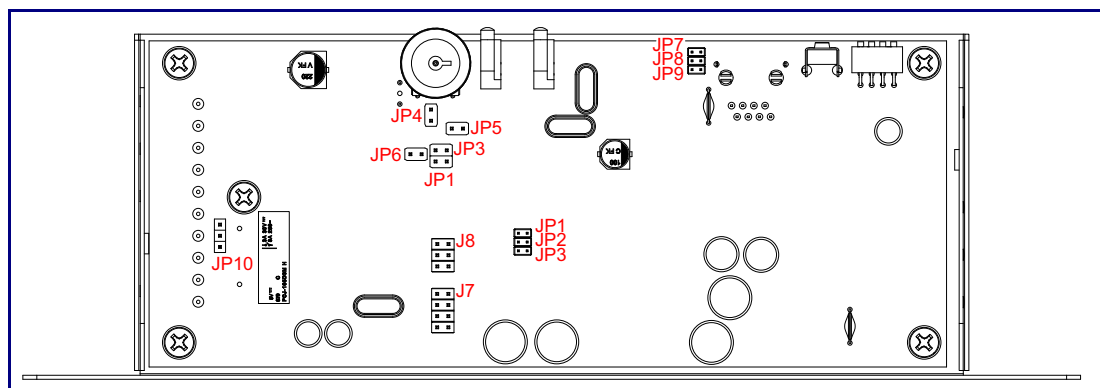

See [Table 2-6](#) for the jumper descriptions.

**Table 2-6. Jumper Descriptions**

Jumper	Description
JP1	Factory Only—Not Used
JP2	Factory Only—Not Used
JP3	Factory Only—Not Used
JP4	Manual Reset—Not Used
JP5	Watch Dog Timer Enable—Not Used
JP6	Audio Enable—Factory Only
JP7	Factory Only—Not Used
JP8	Factory Only—Not Used
JP9	Factory Only—Not Used
JP10	Relay Connection Option—Wire link in position-A.
J7	JTAG Interference—Factory Only
J8	Console Port—Factory Only

See [Table 2-7](#) for details about the Loudspeaker Amplifier connections.

Table 2-7. Loudspeaker Amplifier Connections

Connection	Connection Details	Location
Ethernet	<ul style="list-style-type: none"><li>Use a RJ 45 cable.</li></ul>	VoIP V2 Loudspeaker Amplifier

2.2.6.1 Loudspeaker Type

Using the amplified output, the CyberData VoIP V2 Loudspeaker Amplifier supports the 011068 Loudspeaker or equivalent unamplified loudspeaker.

Figure 2-16. 011068 Loudspeaker



2.2.6.2 Cabling/Wiring

Using the amplified output, you may connect a 011068 loudspeaker or equivalent unamplified speaker to a Loudspeaker Amplifier with good quality speaker wire that is 16 gauge and limited to 25 feet in length.

## 2.2.7 Confirm Operation

After connecting the Loudspeaker Amplifier to the ethernet hub, use the LEDs on the Loudspeaker Amplifier face to confirm that the Loudspeaker Amplifier is operational and linked to the network.

Table 2-8. Loudspeaker Amplifier LEDs

LED	Color	Function
Power	Blue/Green	The power LED is illuminated a steady green when the power is on and in low power mode. The power LED is illuminated a steady blue when the amplifier is in high power mode. The power LED will blink during a boot up or a phone call.
Status	Green	After supplying power to the Loudspeaker Amplifier, a steady LED confirms that the Loudspeaker Amplifier is operational. The status LED will blink during a page when it is online.
Link	Green/Yellow	The Link LED is illuminated green for a 10Mb link or yellow/green for a 100Mb link when the network link to the Loudspeaker Amplifier is established.
Activity	Green	The Activity LED blinks to indicate network traffic.

Figure 2-17. Loudspeaker Amplifier LEDs—Power and Link


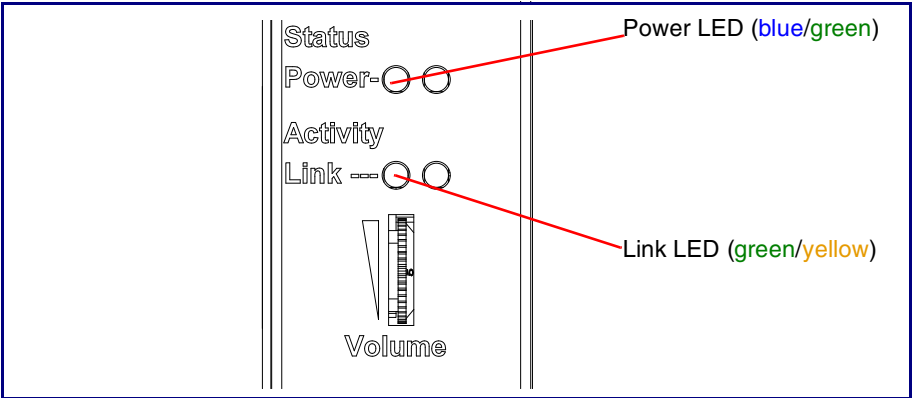


Figure 2-18. Loudspeaker Amplifier LEDs—Status and Activity



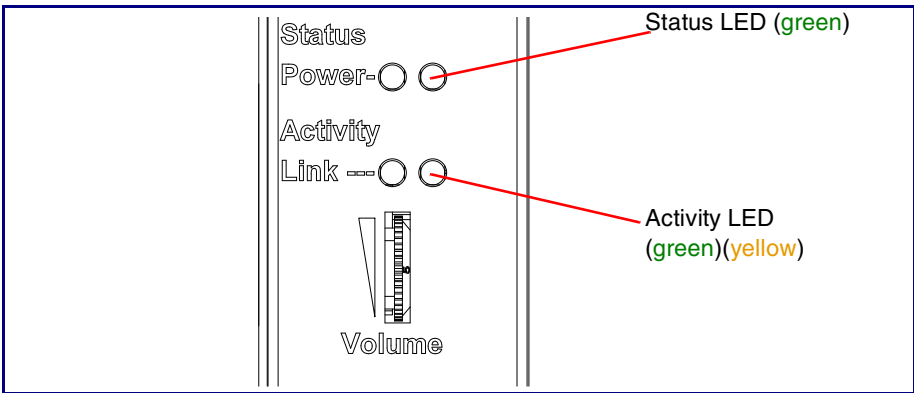


## 2.2.8 Confirm the IP Address and Test the Audio

### 2.2.8.1 RTFM Switch

When the Loudspeaker Amplifier is operational and linked to the network, use the Reset Test Function Management (RTFM) switch (Figure 2-19) on the Loudspeaker Amplifier face to announce and confirm the Loudspeaker Amplifier’s IP Address and test the audio to verify that it is working.

Figure 2-19. RTFM Switch

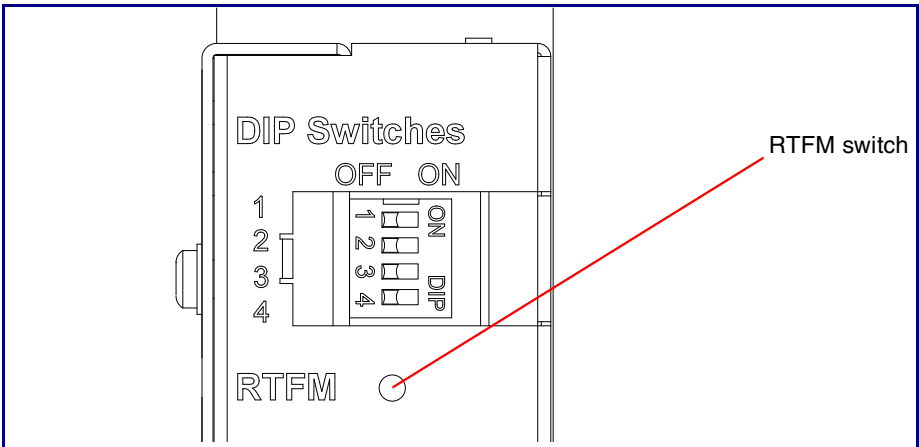

Announcing the IP Address To announce a Loudspeaker Amplifier’s current IP address:

- Press and hold the RTFM switch for a couple of seconds and then release it.



#### Caution

*Equipment Caution:* Pressing and holding the RTFM switch for more than five seconds will restore the V2 Paging Amplifier to the factory default settings. See the “[Restoring the Factory Default Settings](#)” section.

Restoring the Factory Default Settings

To restore the factory default settings, complete the following steps:

1. Press and hold the RTFM switch until you hear the Paging Amplifier announce the words, “restoring defaults” and “rebooting”.
2. Release the RTFM switch. The Paging Amplifier will be restored to the factory default settings.

## 2.2.9 Adjust the Volume

There are two ways to adjust the volume for the Loudspeaker Amplifier:

- The [Speaker Volume \(0-9\)](#) setting on the **Device Configuration** page
- The external **Volume** dial on the Loudspeaker Amplifier face

### 2.2.9.1 The “Speaker Volume (0-9)” Setting

To adjust the Loudspeaker Amplifier volume with the **Speaker Volume (0-9)** setting on the **Device Configuration** page, complete the following steps:

1. Make sure that dip switch 2 is set to **ON**.
2. Go to the Loudspeaker Amplifier **Home** page.
3. Select the **Device Configuration** page.
4. In the **Speaker Volume (0-9)** box, type a number between **0** (lowest) and **9** (highest).
5. Select **Save**.
6. Select **Reboot**.

### 2.2.9.2 The “Line-In Volume (0-9)” Setting

To adjust the Loudspeaker Amplifier volume with the **Line-In Playback Volume (0-9)** setting on the **Device Configuration** page, complete the following steps:

1. Make sure that dip switch 2 is set to **ON**.
2. Go to the Loudspeaker Amplifier **Home** page.
3. Select the **Device Configuration** page.
4. In the **Line-In Playback Volume (0-9)** box, type a number between **0** (lowest) and **9** (highest).
5. Select **Save**.
6. Select **Reboot**.


### 2.2.9.3 External Volume Dial

To adjust the Loudspeaker Amplifier volume with the external volume dial, complete the following steps:

1. Make sure that dip switch 2 is set to **OFF**.
2. Turn the external **Volume** dial (Figure 2-20) on the Loudspeaker Amplifier face.

**Note** For the lineout volume, the volume is fixed and the volume control is adjusted through an external amplifier.

**Figure 2-20. External Volume Dial**

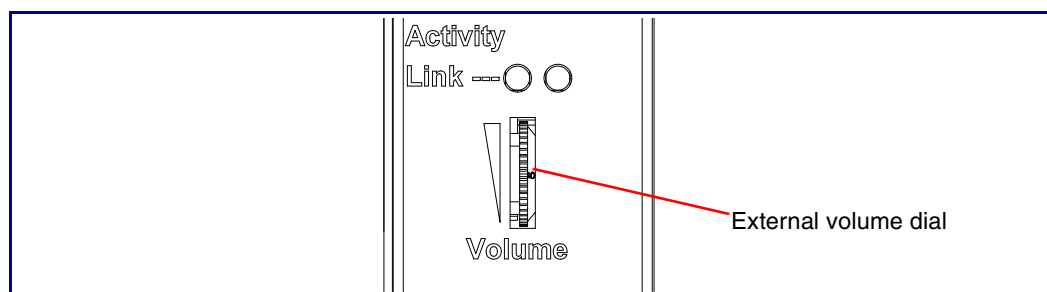

## 2.3 Configure the Loudspeaker Amplifier Parameters

To configure the Loudspeaker Amplifier online, use a standard web browser.

Configure each Loudspeaker Amplifier and verify its operation *before* you mount it. When you are ready to mount a Loudspeaker Amplifier enclosure, refer to [Appendix A, "Mounting the Amplifier"](#) for instructions.

All Loudspeaker Amplifier are initially configured with the default IP settings indicated in [Table 2-9](#).

When configuring more than one Loudspeaker Amplifier, attach the Loudspeaker Amplifiers to the network one at a time to avoid IP address conflicts.

**Table 2-9. Factory Default Settings**










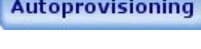

Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

## 2.3.1 Loudspeaker Amplifier Web Page Navigation

Table 2-10 shows the navigation buttons that you will see on every Loudspeaker Amplifier web page.

**Table 2-10. Loudspeaker Amplifier Web Page Navigation**

Web Page Item	Description
	Link to the <b>Home</b> page.
	Link to the <b>Device Configuration</b> page.
	Link to the <b>Networking</b> page.
	Link to the <b>SIP Configuration</b> page.
	Link to the <b>Nightringer</b> page.
	Link to the <b>Sensor Configuration</b> page.
	Link to the <b>Multicast Configuration</b> page.
	Link to the <b>Audio Configuration</b> page.
	Link to the <b>Event Configuration</b> page.
	Link to the <b>Autoprovisioning Configuration</b> page.
	Link to the <b>Update Firmware</b> page.

---

## 2.3.2 Log in to the Configuration Home Page

1. Open your browser to the Loudspeaker Amplifier IP address.

**Note** If the network does not have access to a DHCP server, the device will default to an IP address of 10.10.10.10.

**Note** Make sure that the PC is on the same IP network as the Loudspeaker Amplifier.

**Note** You may also download CyberData's VoIP Discovery Utility program which allows you to easily find and configure the default web address of the CyberData VoIP products.

CyberData's VoIP Discovery Utility program is available on the VoIP V2 Loudspeaker Amplifier product page at:

[http://www.cyberdata.net/support/voip/discovery\\_utility.html](http://www.cyberdata.net/support/voip/discovery_utility.html)

The Loudspeaker Amplifier ships in DHCP mode. To get to the **Home** page, use the discovery utility to scan for the device on the network and open your browser from there.

2. When prompted, use the following default **Web Access Username** and **Web Access Password** to access the **Home Page** (Figure 2-21):

Web Access Username: **admin**

Web Access Password: **admin**

**Figure 2-21. Home Page**

**CyberData Paging Amplifier**

**Home**

**Device Config**

**Networking**

**SIP Config**

**Nightringer**

**Sensor Config**

**Multicast Config**

**Audio Config**

**Event Config**

**Autoprovisioning**

**Update Firmware**

**Device Settings**

Device Name: CyberData Paging Amp

Change Username: admin

Change Password:

Re-enter Password:

**Current Settings**

Serial Number: 061000002

Mac Address: 00:20:f7:00:2c:81

Firmware Version: v6.0.0

IP Addressing: dhcp

IP Address: 10.10.1.12

Subnet Mask: 255.0.0.0

Default Gateway: 10.0.0.1

DNS Server 1: 68.87.76.178

DNS Server 2:

Speaker Volume: analog

High Power mode is: active

SIP Mode is: enabled (Registered with SIP Server)

Nightringer is: disabled

Multicast Mode is: disabled



Event Reporting is: disabled

\* You need to reboot for changes to take effect

Save Reboot

3. On the **Home Page**, review the setup details and navigation buttons described in [Table 2-11](#).

**Table 2-11. Home Page Overview**

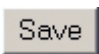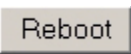Web Page Item	Description
<b>Device Settings</b>	
Device Name	Shows the device name (25 character limit).
Change Username	Type in this field to change the username (25 character limit).
Change Password	Type in this field to change the password (19 character limit).
Re-enter Password	Type the password again in this field to confirm the new password (19 character limit).
<b>Current Settings</b>	
Serial Number	Shows the device serial number.
Mac Address	Shows the device Mac address.
Firmware Version	Shows the current firmware version.
IP Addressing	Shows the current IP addressing setting ( <b>DHCP</b> or <b>Static</b> ).
IP Address	Shows the current IP address.
Subnet Mask	Shows the current subnet mask address.
Default Gateway	Shows the current default gateway address.
DNS Server 1	Shows the current DNS Server 1 address.
DNS Server 2	Shows the current DNS Server 2 address.
Speaker Volume	Shows the current Loudspeaker Amplifier volume mode: <b>Digital</b> (web page) or <b>Analog</b> (volume knob).
High Power Mode is	Shows the current status of High Power mode.
SIP Mode is	Shows the current status of the SIP Mode.
Nightringer is	Shows the current status of the Nightringer.
Multicast Mode is	Shows the current status of the Multicast Mode.
Event Reporting is	Shows the current status of the Event Reporting.
	Click the <b>Save</b> button to save your configuration settings. <b>Note:</b> You need to reboot for changes to take effect.
	Click on the <b>Reboot</b> button to reboot the system.

### 2.3.3 Configure the Device Parameters

1. Click the **Device Configuration** button to open the **Device Configuration** page. See [Figure 2-22](#).

**Figure 2-22. Device Configuration Page**

**CyberData Paging Amplifier**

**Device Configuration**

**Volume Settings**

Speaker Volume: analog

Speaker Volume (0-9):

Line In Playback Volume (0-9):

**Relay Settings**

Activate Relay with DTMF code: ☒

DTMF Activation Code:

DTMF Activation Duration (in seconds):

Activate Relay During Ring: ☐

Activate Relay During Night Ring: ☐

Activate Relay While Call Active: ☐

**Miscellaneous Settings**

Two Speakers Connected: ☐

Beep on Initialization: ☒

Auto-Answer Incoming Calls: ☒

Play Ringback Tone: ☐


Enable Line-in Playback: ☐

\* You need to reboot for changes to take effect






2. On the **Device Configuration** page, you may enter values for the parameters indicated in [Table 2-12](#).

**Table 2-12. Device Configuration Parameters**

Web Page Item	Description
<b>Volume Settings</b>	
Speaker Volume	Shows the current speaker volume mode ( <b>Analog</b> or <b>Digital</b> )
Speaker Volume (0-9)	Type the desired Loudspeaker Amplifier volume level into this field (range is 0 - 9).
Line-In Playback Volume (0-9)	Type the desired line-in playback volume level into this field (range is 0 - 9).
<b>Relay Settings</b>	
Activate Relay with DTMF Code	When selected, the relay can be activated with a DTMF code.
DTMF Activation Code	Type the desired DTMF activation code (25 character limit).
DTMF Activation Duration (in seconds)	Type the desired DTMF activation duration (in seconds) (1 character limit).
Activate Relay During Ring	When selected, the relay will be activated for as long as the phone is ringing.  <b>NOTE:</b> When the phone is set to <b>Auto Answer</b> , it will not ring and this option does nothing.
Activate Relay During Night Ring	When selected, the relay will be activated for as long as a night ring tone is playing.  <b>NOTE:</b> When the phone is set to <b>Auto Answer</b> , it will not ring and this option does nothing.
Activate Relay While Call Active	When selected, the relay will be activated for as long as the call is active.
<b>Miscellaneous Settings</b>	
Two Speakers Connected	Select this option if two speakers are connected to the Loudspeaker Amplifier.
Beep on Initialization	When selected, you will hear a beep when the Loudspeaker Amplifier initializes.
Auto-Answer Incoming Calls	When selected, the Loudspeaker Amplifier automatically answers incoming calls.
Play Ringback Tone	Check this box to enable the device to play a ringtone while the remote device is ringing.
Enable Line In Playback	When selected, whatever audio source that you have selected (mp3 player, internet stream, etc.) will be played.  <b>Note:</b> The line in audio will be treated as low priority audio that will only play if there is no other audio playing. When higher priority audio is playing, the line in audio will be muted.
	Click the <b>Save</b> button to save your configuration settings.  <b>Note:</b> You need to reboot for changes to take effect.

**Table 2-12. Device Configuration Parameters (continued)**

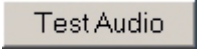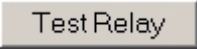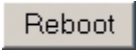Web Page Item	Description
	Click on the <b>Test Audio</b> button to do an audio test. Generates a voice message for testing the device audio quality and volume. It plays the audio at the volume you have configured the paging amp for  <b>Note:</b> If the test audio button is pressed while music is playing via the <b>Enabled Line In</b> feature, the music will be muted during the test audio message.
	Click on the <b>Test Relay</b> button to do a relay test.
	Click on the <b>Reboot</b> button to reboot the system.

3. After changing the parameters, click the **Save** button.

## 2.3.4 Configure the Network Parameters

1. Click the **Networking** button to open the **Network Configuration** page (Figure 2-23).

Figure 2-23. Network Configuration Page

**CyberData Paging Amplifier**

**Network Configuration**

Home  
Device Config  
**Networking**  
SIP Config  
Nightringer  
Sensor Config  
Multicast Config  
Audio Config  
Event Config  
Autoprovisioning  
Update Firmware

Stored Network Settings

IP Addressing: ☐ Static ☒ DHCP

IP Address: 10.10.10.10

Subnet Mask: 255.0.0.0

Default Gateway: 10.0.0.1

DNS Server 1: 10.0.0.1

DNS Server 2: 10.0.0.1

Current Network Settings

IP Address: 10.10.1.12

Subnet Mask: 255.0.0.0

Default Gateway: 10.0.0.1

DNS Server 1: 68.87.76.178


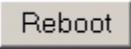
DNS Server 2:

\* You need to reboot for changes to take effect

Save Reboot

2. On the **Network Configuration** page, enter values for the parameters indicated in [Table 2-13](#).

**Table 2-13. Network Configuration Parameters**

Web Page Item	Description
<b>Stored Network Settings</b>	
IP Addressing*	Select either <b>DHCP IP Addressing</b> or <b>Static IP Addressing</b> by marking the appropriate radio button. If you select <b>Static</b> , configure the remaining parameters indicated in <a href="#">Table 2-13</a> . If you select <b>DHCP</b> , go to <a href="#">Step 3</a> .
IP Address*	Enter the Static IP address.
Subnet Mask	Enter the Subnet Mask address.
Default Gateway	Enter the Default Gateway address.
DNS Server 1*	Enter the DNS Server 1 address.
DNS Server 2*	Enter the DNS Server 2 address.
<b>Current Network Settings</b>	
IP Address	Shows the current Static IP address.
Subnet Mask	Shows the current Subnet Mask address.
Default Gateway	Shows the current Default Gateway address.
DNS Server 1	Shows the current DNS Server 1 address.
DNS Server 2	Shows the current DNS Server 2 address.
	Click the <b>Save</b> button to save your configuration settings. <b>Note:</b> You need to reboot for changes to take effect.
	Click on the <b>Reboot</b> button to reboot the system.

3. After changing the parameters, click **Save Settings**. This updates the changed parameters and reboots the Loudspeaker Amplifier if appropriate.
4. Connect the Loudspeaker Amplifier to the target network.
5. From a system on the same network as the Loudspeaker Amplifier, open a browser with the new IP address of the Loudspeaker Amplifier.

## 2.3.5 Configure the SIP Parameters

1. Click **SIP Config** to open the **SIP Configuration** page (Figure 2-24).

**Note** For specific server configurations, go to the **IP-PBX Server Compatibility** page at:

<http://www.cyberdata.net/support/server/index.html>


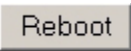
**Figure 2-24. SIP Configuration Page**

2. On the **SIP Configuration** page, you may enter values for the parameters indicated in Table 2-14.

**Table 2-14. SIP Configuration Parameters**

Web Page Item	Description
Enable SIP Operation	Enables or disables SIP operation.

**Table 2-14. SIP Configuration Parameters (continued)**

Web Page Item	Description
<b>SIP Settings</b>	
SIP Server*	Type the SIP server represented as either a numeric IP address in dotted decimal notation or the fully qualified host name (64 character limit [FQDN]).
Remote SIP Port*	Type the <b>Remote SIP Port</b> number (default 5060) (0 - 65535).
Local SIP Port*	Type the <b>Local SIP Port</b> number (default 5060) (0 - 65535).
Outbound Proxy	Type the Outbound Proxy as either a numeric IP address in dotted decimal notation or the fully qualified host name (64 character limit [FQDN]).
Outbound Proxy Port	Type the Outbound Proxy Port number (0 - 65535).
SIP User ID*	Type the <b>SIP User ID</b> (up to 25 alphanumeric characters).
Authenticate ID*	Type the <b>Authenticate ID</b> (up to 25 alphanumeric characters).
Authenticate Password*	Type the <b>Authenticate Password</b> (up to 25 alphanumeric characters).
Register with a SIP Server*	Enable or disable SIP Registration.
Re-registration Interval (in seconds)*	Type the SIP Registration lease time in seconds (default is 120 seconds) (range is 100 - ?).
Unregister on Reboot*	<ul style="list-style-type: none"> <li>• When selected, the Loudspeaker Amplifier automatically unregisters when it is rebooted.</li> <li>• When not selected, the Loudspeaker Amplifier remains registered when it is rebooted.</li> </ul>
Buffer SIP Calls	When this is enabled, SIP calls to the speaker will be stored in memory and will play when either the call is terminated or the buffer is full. The receive buffer is 2MB in size and this is equal to about four minutes of ulaw encoded audio.
Beep Before Page	Enable/Disable the tone (beep) before each page.
<b>RTP Settings</b>	
RTP Port (even)	<p>Specify the port number used for the RTP stream after establishing a SIP call. The RTP port has to be an even number between 0 and 65534. This port can be programmed for people who are not working on a local LAN, but who want to have outside access. Instead of RTP port being a random port, it will be set up so that only two ports can be opened in a firewall.</p> <p><b>Note:</b> The RTP port number has to be an even number because the control port is always one port number higher. Therefore, audio will go through the port number that you enter into the <b>RTP port</b> field, but the RTP control signals will go through a port that is one number higher than the <b>RTP port</b> field.</p>
	<p>Click the <b>Save</b> button to save your configuration settings.</p> <p><b>Note:</b> You need to reboot for changes to take effect.</p>
	Click on the <b>Reboot</b> button to reboot the system.

3. After changing the parameters, click **Save** to save the settings.

## 2.3.6 Configure the Night Ringer Parameters

1. Click on the **Nightringer** button to open the **Nightringer Configuration** page. See [Figure 2-27](#).

**Figure 2-25. Nightringer Configuration Setup**

The screenshot shows the 'CyberData Paging Amplifier' web interface. On the left is a vertical menu with buttons for: Home, Device Config, Networking, SIP Config, **Nightringer** (highlighted), Sensor Config, Multicast Config, Audio Config, Event Config, Autoprovisioning, and Update Firmware. The main area is titled 'Nightringer Configuration'. It contains an 'Enable Nightringer' checkbox which is currently unchecked. Below this is a 'Nightringer Settings' section with the following fields: SIP Server (10.0.0.253), Remote SIP Port (5060), Local SIP Port (5061), User ID (207), Authenticate ID (207), Authenticate Password (ext207), and Re-registration Interval (in seconds) (360). At the bottom of the settings section, there is a note: '\* You need to reboot for changes to take effect'. Below the note are two buttons: 'Save' and 'Reboot'.


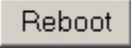
Nightringer Configuration	
Enable Nightringer:	<input type="checkbox"/>
Nightringer Settings	
SIP Server:	10.0.0.253
Remote SIP Port:	5060
Local SIP Port:	5061
User ID:	207
Authenticate ID:	207
Authenticate Password:	ext207
Re-registration Interval (in seconds):	360

\* You need to reboot for changes to take effect

Save Reboot

2. On the **Nightringer Configuration** page, enter values for the parameters indicated in [Table 2-17](#).

**Table 2-15. Nightringer Configuration Parameters**

Web Page Item	Description
Enable Nightringer	When the nightringer is enabled, the device will attempt to register a second extension with the SIP server. Any calls made to this extension will play a ringtone.
<b>Nightringer Settings</b>	
SIP Server	Type the SIP server represented as either a numeric IP address in dotted decimal notation.
Remote SIP Port	Type the Remote SIP Port number (default 5060) (8 character limit).
Local SIP Port	Type the Local SIP Port number (default 5060) (8 character limit). <b>Note:</b> This value cannot be the same as the <b>Local SIP Port*</b> found on the <a href="#">SIP Configuration Page</a> .
User ID	Type the <b>User ID</b> (up to 64 alphanumeric characters).
Authenticate ID	Type the <b>Authenticate ID</b> (up to 64 alphanumeric characters).
Authenticate Password	Type the <b>Authenticate Password</b> (up to 64 alphanumeric characters).
Re-registration Interval (in seconds)*	Type the SIP Registration lease time in minutes (default is 60 minutes) (8 character limit). Re-registration Interval (in seconds)*
	Click the <b>Save</b> button to save your configuration settings. <b>Note:</b> You need to reboot for changes to take effect.
	Click on the <b>Reboot</b> button to reboot the system.

3. After changing the parameters, click on the **Save** button.



## 2.3.7 Configure the Sensor Configuration Parameters

The sensor (pins 1 and 2) on the header can be used to monitor something's open or closed state. There is an option on the **Sensor Configuration** page to trigger on an open or short condition on these pins.

For the sensor there are three actions that the Loudspeaker Amplifier can do:

- Activate the relay until the sensor is deactivated
- Loop an audio file until the sensor is deactivated
- Call a preset extension and play a pre-recorded audio file (loops until user hangs up)




**Note** Calling a preset extension can be set up as a point-to-point call, but currently can't send delayed DTMF tones.

1. Click **Sensor Config** to open the **Sensor Configuration** page (Figure 2-26).

**Figure 2-26. Sensor Configuration Page**

2. On the **Sensor Configuration** page, enter values for the parameters indicated in [Table 2-16](#).

**Table 2-16. Sensor Configuration Parameters**

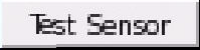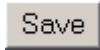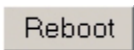Web Page Item	Description
<b>Sensor Settings</b>	
Sensor Normally Closed	Select the inactive state of the sensors.
Activate Relay	Check this box to activate the relay until the sensor is deactivated.
Play Audio Locally	Check this box to loop an audio file until the sensor is deactivated.
Play Audio Remotely	Check this box to make only one call to a preset extension and play a pre-recorded audio file repeatedly.
Dial Out Extension	Enter the dial-out extension number.
	Use this button to test the sensor.
	Click the <b>Save</b> button to save your configuration settings. <b>Note:</b> You need to reboot for changes to take effect.
	Click on the <b>Reboot</b> button to reboot the system.

3. After changing the parameters, click **Save Settings**.

---

## 2.3.8 Configure the Multicast Configuration Parameters

Multicast groups use multicasting to create public address paging zones. Multicasting is based on the concept of a group. Multicast addresses specify an arbitrary group of IP hosts that have joined the group and want to receive traffic sent to the group. Group members send IGMP messages to their local multicast routers, allowing the group traffic traversal from the source.

Multicast configuration provides the ability to join up to 10 paging zones. A paging zone can consist of one, or many, CyberData multicast group-enabled Loudspeaker Amplifiers. There is no limit to how many Loudspeaker Amplifiers can be in a given paging zone. Each multicast group is defined by a multicast address and port number. Each multicast group is also assigned a priority, allowing simultaneously arriving pages to be serviced based on importance. Multicast groups are compatible with IGMP through version 3.

**Note** The Loudspeaker Amplifier supports simultaneous SIP and Multicast.

1. Click on the **Multicast Configuration** button to open the **Multicast Configuration** page. See [Figure 2-27](#).

**Figure 2-27. Multicast Configuration Setup**

## CyberData Paging Amplifier

Home  
Device Config  
**Networking**  
SIP Config  
Nightringer  
Sensor Config  
**Multicast Config**  
Audio Config  
Event Config  
Autoprovisioning  
Update Firmware

### Multicast Configuration

Enable Multicast operation: ☐

Priority	Address	Port	Name	Buffer	Beep	Relay
9	239.168.3.10	11000	Emergency	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	239.168.3.9	10000	MG8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	239.168.3.8	9000	MG7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	239.168.3.7	8000	MG6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	239.168.3.6	7000	MG5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
SIP calls are considered priority 4.5						
4	239.168.3.5	6000	MG4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	239.168.3.4	5000	MG3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	239.168.3.3	4000	MG2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1	239.168.3.2	3000	MG1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
0	239.168.3.1	2000	Background Music	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


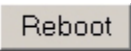
Port range can be from 2000-65535  
Priority 9 is the highest and 0 is the lowest  
A higher priority audio stream will always supercede a lower one  
Priority 9 streams will play at maximum volume

\* You need to reboot for changes to take effect

Save
Reboot

2. On the **Multicast Configuration** page, enter values for the parameters indicated in [Table 2-17](#).

**Table 2-17. Multicast Configuration Parameters**

Web Page Item	Description
Enable Multicast Operation	Enables or disables multicast operation.
Priority	Indicates the priority for the multicast group. Priority <b>9</b> is the highest (emergency streams). <b>0</b> is the lowest (background music). See <a href="#">Section 2.3.8.1, "Assigning Priority"</a> for more details.
Address	Enter the multicast IP Address for this multicast group (15 character limit).
Port (range can be from 2000 to 65535)	Enter the port number for this multicast group (5 character limit).  <b>Note:</b> The multicast ports have to be even values. The webpage will enforce this restriction.
Name	Assign a descriptive name for this multicast group (25 character limit).
Buffer	When buffering is enabled for a multicast stream, it will store any audio received on this socket to memory and play it back when the stream is stopped or the buffer is full.
Beep	Enable or disable the tone (beep) for a multicast stream.
Relay	Enable or disable the relay for a multicast stream.
	Click the <b>Save</b> button to save your configuration settings.  <b>Note:</b> You need to reboot for changes to take effect.
	Click on the <b>Reboot</b> button to reboot the system.

3. After changing the parameters, click on the **Save** button.

### 2.3.8.1 Assigning Priority

When playing multicast streams, audio on different streams will preempt each other according to their priority in the list. An audio stream with a higher priority will interrupt a stream with a lower priority.

If both SIP and Multicast is enabled, SIP audio streams are considered priority 4.5. SIP audio will interrupt multicast streams with priority 0 through 4 and will be interrupted by multicast streams with priority 5 through 9.

During priority 9 multicast streams, the analog volume control is bypassed and the volume level is set to maximum.

Line In audio is considered the lowest priority, so it will be muted if there are any multicast or SIP audio streams playing.

For example, if the test audio button on the Device Config page is pressed while music is playing via the Enabled Line In feature, the music will be muted during the test audio message.

**Note** SIP calls, buffered SIP calls, multicast streams, buffered multicast streams, ring tones, ringback tones, and nightring tones are all prioritized.

#### Ringtones and Nightringtones

Ringtones all play at the same priority level. This means that it is possible to have a nightring tone and a normal ringtone playing at the same time.

The maximum ringtone duration is 2,097,152 bytes or about four minutes of ulaw audio.

#### Lengthy Pages

Concerning how lengthy pages are handled (where someone puts the phone down for 15 minutes), after the 2MB limit is reached, further data will be thrown away while the audio file is played back. When the file is done playing, it will stop throwing away input and begin buffering data for another four minutes.

Therefore, with the buffered mode enabled on a stream playing background music, you will hear the following sequence of events:

1. Four minutes of silence.
2. Music from 0:00 through 4:00.
3. Four minutes of silence.
4. Music from 8:00 through 12:00 and so on.

#### Buffered Audio

When the device is playing back buffered audio and this buffered audio is interrupted by a higher priority stream, once the higher priority streams is finished, the device will restart the lower priority stream from the beginning.

## 2.3.9 Configure the Audio Parameters

Click the **Audio Config** button to open the **Audio Configuration** page. The **Audio Configuration** page is used to add custom audio to the board. User uploaded audio will take precedence over the audio files shipped with the Loudspeaker Amplifier.

**Figure 2-28. Audio Configuration Page**

**CyberData Paging Amplifier**

**Audio Configuration**

Available Space = 14.82MB

**Audio Files**

0: Currently set to default  
New File:

1: Currently set to default  
New File:

2: Currently set to default  
New File:

3: Currently set to default  
New File:

4: Currently set to default  
New File:

5: Currently set to default  
New File:

6: Currently set to default  
New File:

**Figure 2-29. Audio Configuration Page (continued)**

The screenshot displays a web-based configuration interface with a light blue background. It contains several sections, each with a label, a status message, a file input field, and a set of control buttons. The sections are as follows:

- 7: Currently set to default**  
New File: [text input] [Browse...]  
[Play] [Delete] [Save]
- 8: Currently set to default**  
New File: [text input] [Browse...]  
[Play] [Delete] [Save]
- 9: Currently set to default**  
New File: [text input] [Browse...]  
[Play] [Delete] [Save]
- Dot: Currently set to default**  
New File: [text input] [Browse...]  
[Play] [Delete] [Save]
- Audio test: Currently set to default**  
New File: [text input] [Browse...]  
[Play] [Delete] [Save]
- Page tone: Currently set to default**  
New File: [text input] [Browse...]  
[Play] [Delete] [Save]
- Your IP Address is: Currently set to default**  
New File: [text input] [Browse...]  
[Play] [Delete] [Save]



**Figure 2-30. Audio Configuration Page (continued)**




The screenshot displays the 'Audio Configuration Page (continued)' with a light blue background. It features six configuration sections, each with a title, a status indicator, a 'New File' input field, a 'Browse...' button, and three action buttons: 'Play', 'Delete', and 'Save'.

- Rebooting:** Currently set to default. New File: [input field] Browse... [Play] [Delete] [Save]
- Restoring Default:** Currently set to default. New File: [input field] Browse... [Play] [Delete] [Save]
- Ringback tone:** Currently set to default. New File: [input field] Browse... [Play] [Delete] [Save]
- Ring tone:** Currently set to default. New File: [input field] Browse... [Play] [Delete] [Save]
- Sensor Triggered:** Currently set to default. New File: [input field] Browse... [Play] [Delete] [Save]
- Night Ring:** Currently set to default. New File: [input field] Browse... [Play] [Delete] [Save]


On the **Audio Configuration** page, enter values for the parameters indicated in [Table 2-18](#).

**Note** Each entry on the **Audio Configuration** page replaces one of the stock audio files on the board. When the input box displays the word **default**, the Loudspeaker Amplifier is using the stock audio file. If that file is replaced with a user file, it will display the uploaded filename.

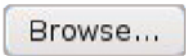**Table 2-18. Audio Configuration Parameters**

Web Page Item	Description
<b>Audio Files</b>	
0-9	The name of the audio configuration option is the same as the spoken audio that plays on the board (24 character limit).  '0' corresponds to the spoken word "zero." '1' corresponds to the spoken word "one." '2' corresponds to the spoken word "two." '3' corresponds to the spoken word "three." '4' corresponds to the spoken word "four." '5' corresponds to the spoken word "five." '6' corresponds to the spoken word "six." '7' corresponds to the spoken word "seven." '8' corresponds to the spoken word "eight." '9' corresponds to the spoken word "nine."
Dot	Corresponds to the spoken word "dot." (24 character limit)
Audiotest	Corresponds to the message "This is the CyberData IP speaker test message..." (24 character limit)
Pagetone	Corresponds to a simple tone that is unused by default (24 character limit).
Your IP Address is	Corresponds to the message "Your IP address is..." (24 character limit).
Rebooting	Corresponds to the spoken word "Rebooting" (24 character limit).
Restoring default	Corresponds to the message "Restoring default" (24 character limit).
Ringback Tone	Corresponds to the ringback tone that plays when calling a remote extension (24 character limit).
Ring Tone	Corresponds to the tone that plays when set to ring when receiving a call (24 character limit).
Sensor Triggered	Corresponds to the sensor when it is triggered (24 character limit).
Night Ring	Specifies the ringtone for Night Ringer. By default this parameter uses the same audio file that is selected for the <b>Ring Tone</b> parameter.
	The <b>Browse</b> button will allow you to navigate to and select an audio file.
	The <b>Play</b> button will play that audio file.
	The <b>Delete</b> button will delete any user uploaded audio and restore the stock audio file.

**Table 2-18. Audio Configuration Parameters (continued)**

Web Page Item	Description
	The <b>Save</b> button will download a new user audio file to the board once you've selected the file by using the <b>Browse</b> button. The <b>Save</b> button will delete any pre-existing user-uploaded audio files.


## 2.3.10 User-created Audio Files

User created audio files should be saved in the following format:


RIFF (little-endian) data, WAVE audio, Microsoft PCM, 16 bit, mono 8000 Hz

You can use the free utility *Audacity* to convert audio files into this format. See [Figure 2-31](#) through [Figure 2-33](#).

**Figure 2-31. Audacity 1**

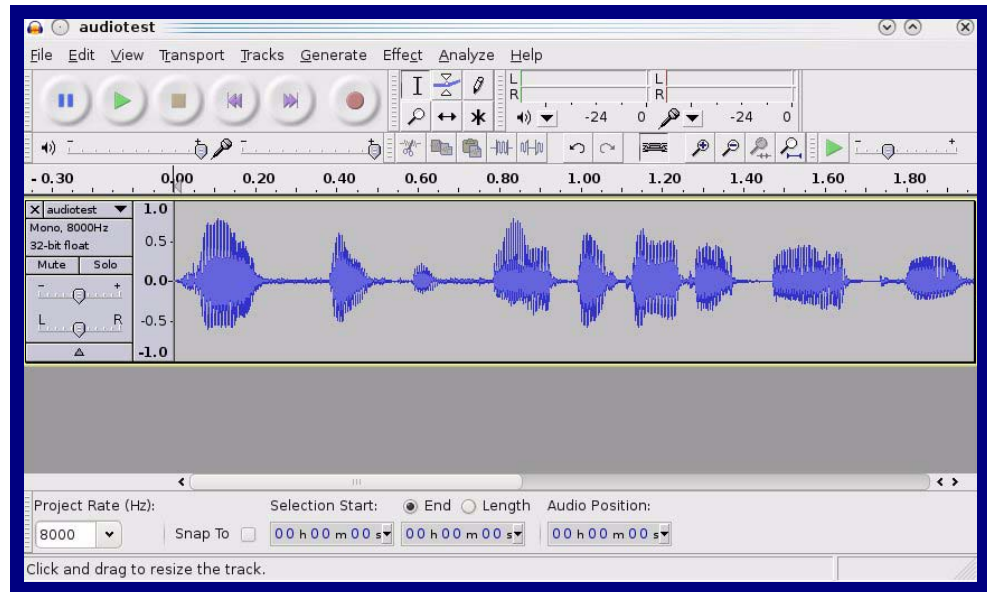


**Figure 2-32. Audacity 2**

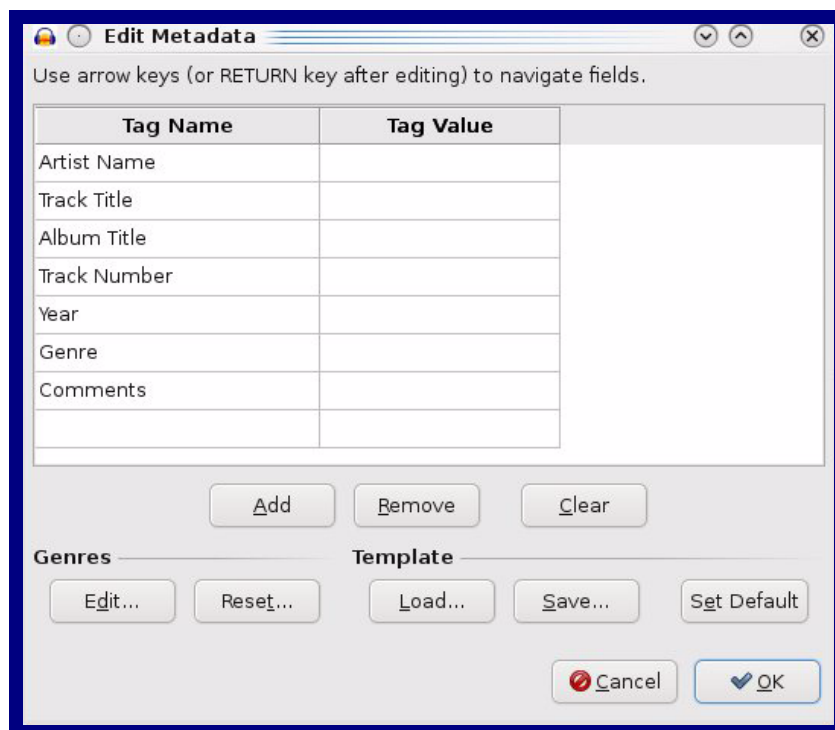

When you export an audio file with Audacity, save the output as:

- **WAV (Microsoft) signed 16 bit PCM.**

**Figure 2-33. WAV (Microsoft) signed 16 bit PCM**

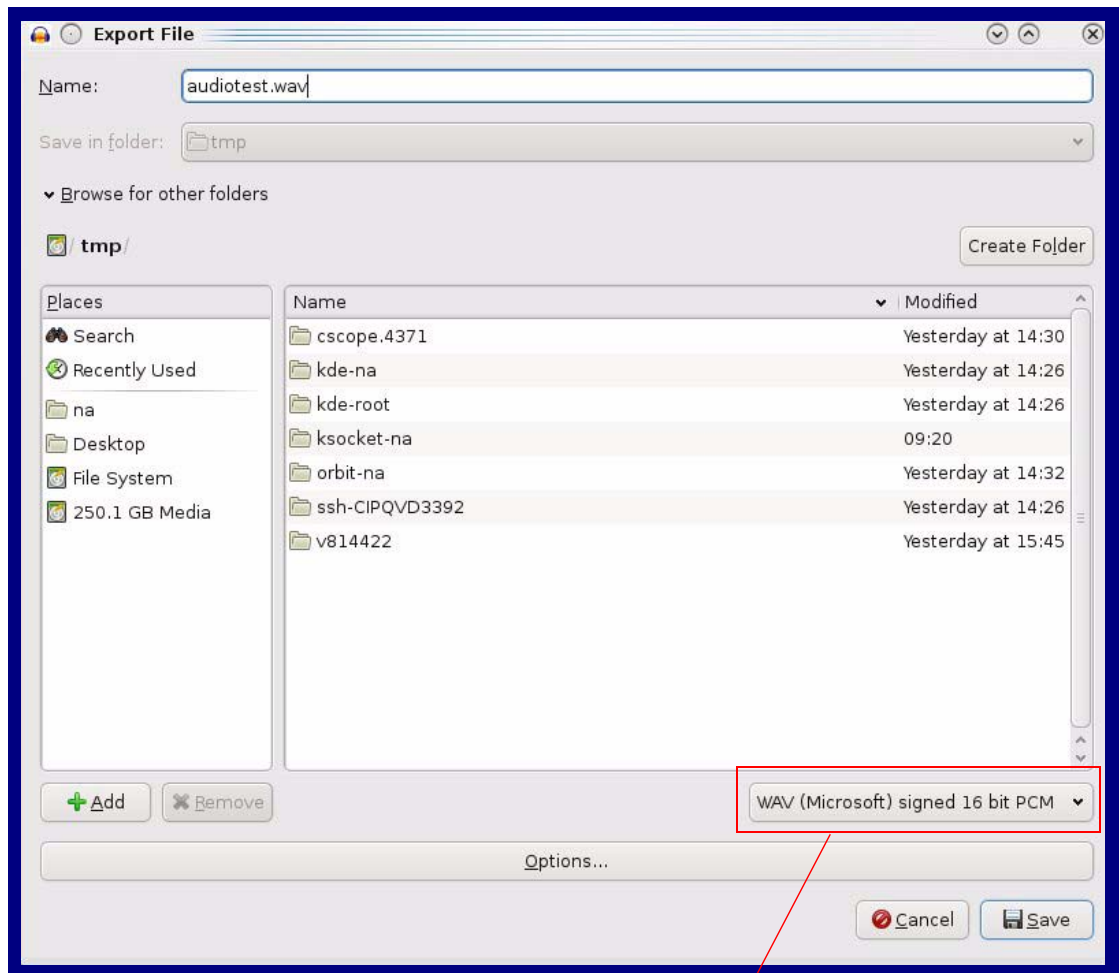

WAV (Microsoft) signed 16 bit PCM

## 2.3.11 Configure the Event Parameters

Click the **Event Config** button to open the **Event Configuration** page (Figure 2-34). The **Event Configuration** page specifies a remote server that can be used to receive HTTP POST events when actions take place on the board.

**Figure 2-34. Event Configuration Page**

**CyberData Paging Amplifier**

**Event Configuration**

Enable Event Generation: ☐

Remote Event Server

Remote Event Server IP: 10.0.0.250

Remote Event Server Port: 8080

Remote Event Server URL: xmlparse\_engine

Events

Enable Call Active Events: ☐

Enable Call Terminated Events: ☐

Enable Relay Activated Events: ☐

Enable Relay Deactivated Events: ☐

Enable Ring Events: ☐

Enable Night Ring Events: ☐

Enable Multicast Start Events: ☐

Enable Multicast Stop Events: ☐

Enable Power on Events: ☐


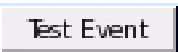
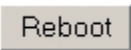
Enable 60 second Heartbeat Events: ☐

\* You need to reboot for changes to take effect

Save Test Event Reboot

Table 2-19 shows the web page items on the **Event Configuration** page.

**Table 2-19. Event Configuration**

Web Page Item	Description
Enable Event Generation	When selected, Event Generation is enabled.
<b>Remote Event Server</b>	
Remote Event Server IP	Type the Remote Event Server IP address. (64 character limit)
Remote Event Server Port	Type the Remote Event Server port number. (0 - 65535)
Remote Event Server URL	Type the Remote Event Server URL. (127 character limit)
<b>Events</b>	
Enable Call Active Events	When selected, Call Active Events are enabled.
Enable Call Terminated Events	When selected, Call Terminated Events are enabled.
Enable Relay Activated Events	When selected, Relay Activated Events are enabled.
Enable Relay Deactivated Events	When selected, Relay Deactivated Events are enabled.
Enable Ring Events	When selected, Ring Events are enabled.
Enable Night Ring Events	When selected, there is a notification when the device receives a night ring.
Enable Multicast Start Events	When selected, Multicast Start Events are enabled.
Enable Multicast Stop Events	When selected, Multicast Stop Events are enabled.
Enable Power On Events	When selected, Power On Events are enabled.
Enable 60 Second Heartbeat Events	When selected, 60 Second Heartbeat Events are enabled.
	Click the <b>Save</b> button to save your configuration settings. <b>Note:</b> You need to reboot for changes to take effect.
	Click on the <b>Test Event</b> button to test an event.
	Click on the <b>Reboot</b> button to reboot the system.

### 2.3.11.1 Example Packets for Events

The server and port are used to point to the listening server and the 'Remote Event Server URL' is the destination URL (typically the script running on the remote server that's used to parse and process the POST events).

**Note** The XML is URL-encoded before transmission so the following examples are not completely accurate.

Here are example packets for every event:

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 197
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>POWERON</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 199
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>HEARTBEAT</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 196
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>BUTTON</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 201
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>CALL_ACTIVE</event>
</cyberdata>
POST xmlparse_engine HTTP/1.1
```



```
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 205
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>CALL_TERMINATED</event>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 197
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>RINGING</event>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 234
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>MULTICAST_START</event>
<index>8</index>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 233
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>MULTICAST_STOP</event>
<index>8</index>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 234
Content-Type: application/x-www-form-urlencoded
<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>RELAY_ACTIVATED</event>
</cyberdata>
POST xmlparse_engine HTTP/1.1
```

```
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 234
Content-Type: application/x-www-form-urlencoded
<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>RELAY_DEACTIVATED</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 234
Content-Type: application/x-www-form-urlencoded
<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>NIGHTRINGING</event>
</cyberdata>
```

## 2.3.12 Configure the Autoprovisioning Parameters

1. Click the **Autoprovisioning** button to open the **Autoprovisioning Configuration** page.  
See [Figure 2-22](#).

**Figure 2-35. Autoprovisioning Configuration Page**

The screenshot shows the 'CyberData Paging Amplifier' web interface. On the left is a vertical menu with buttons for 'Home', 'Device Config', 'Networking', 'SIP Config', 'Nightringer', 'Sensor Config', 'Multicast Config', 'Audio Config', 'Event Config', 'Autoprovisioning' (which is highlighted), and 'Update Firmware'. The main content area is titled 'Autoprovisioning' and contains a form with the following fields:

- 'Enable Autoprovisioning:' with an unchecked checkbox.
- 'Get Autoprovisioning from DHCP:' with a checked checkbox.
- 'Autoprovisioning Server (IP Address):' with a text input field containing '10.0.0.254'.
- 'Autoprovisioning autoupdate (in minutes):' with a text input field containing '1440'.


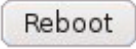
Below the form, there are two lines of status text:

- \* Autoprovisioning file name: 0020f7002c81.config
- \* You need to reboot for changes to take effect

At the bottom of the form area are two buttons: 'Save' and 'Reboot'.

2. On the **Autoprovisioning Configuration** page, you may enter values for the parameters indicated in [Table 2-12](#).

**Table 2-20. Autoprovisioning Configuration Parameters**

Web Page Item	Description
<b>Autoprovisioning</b>	
Enable Autoprovisioning	See <a href="#">Section 2.3.12.1, "Autoprovisioning"</a> .
Get Autoprovisioning from DHCP	See <a href="#">Section 2.3.12.1, "Autoprovisioning"</a> .
Autoprovisioning Server (IP Address)	See <a href="#">Section 2.3.12.1, "Autoprovisioning"</a> (15 character limit).
Autoprovisioning Autoupdate (in minutes)	Type the desired time (in minutes) that you want the Autoprovisioning feature to update (6 character limit).
	Click the <b>Save</b> button to save your configuration settings. <b>Note:</b> You need to reboot for changes to take effect.
	Click on the <b>Reboot</b> button to reboot the system.

3. After changing the parameters, click the **Save** button.

### 2.3.12.1 Autoprovisioning

Enable Autoprovisioning Option	<p>With autoprovisioning enabled, the board will get its configuration from a remote TFTP server on startup or periodically on a scheduled delay. Autoprovisioned values will override values stored in on-board memory and will be visible on the web page. The board gets its autoprovisioning information from an XML-formatted file hosted from a TFTP server. CyberData will provide a template for this XML file and the user can modify it for their own use.</p> <p>To use autoprovisioning, create a copy of the autoprovisioning template with the desired settings and name this file with the mac address of the device to configure (for example: <b>0020f7350058.config</b>). Put this file into your TFTP server directory and manually set the TFTP server address on the board.</p> <p>It is not necessary to set every option found in the autoprovisioning template. As long as the XML is valid, the file can contain any subset. Options not autoprovisioned will default to the values stored in the on board memory. For example if you only wanted to modify the device name, the following would be a valid autoprovisioning file:</p> <pre>&lt;?xml version="1.0" encoding="utf-8" ?&gt; &lt;specific&gt;   &lt;MiscSettings&gt;     &lt;DeviceName&gt;auto V2 Paging Amplifier&lt;/DeviceName&gt;   &lt;/MiscSettings&gt; &lt;/specific&gt;</pre>
Networking	<p>The board will only apply networking settings or firmware upgrades after a reboot.</p>
Get Autoprovisioning from DHCP	<p>When this option is checked, the device will automatically fetch its autoprovisioning server address from the DHCP server. The device will use the address specified in <b>OPTION 150</b> (TFTP-server-name) or <b>OPTION 66</b>. If both options are set, the device will use <b>OPTION 150</b>.</p> <p>Refer to the documentation of your DHCP server for setting up <b>OPTION 150</b>.</p>

To set up a Linux DHCPD server to serve autoprovisioning information (in this case using both option 66 and 150), here's an example dhcpd.conf:

```
# dhcpd.conf
#
# Configuration file for ISC dhcpd (see 'man dhcpd.conf')
#
ddns-update-style ad-hoc;

option option-150 code 150 = ip-address;

subnet 10.0.0.0 netmask 255.0.0.0 {
    max-lease-time 120;
    default-lease-time 120;

    option routers                10.0.0.1;
    option subnet-mask            255.0.0.0;

    option domain-name            "voiplab";
    option domain-name-servers    10.0.0.1;

    option time-offset             -8;      # Pacific Standard Time

    option tftp-server-name        "10.0.0.254";

    option option-150              10.0.0.254;

    range 10.10.0.1 10.10.2.1;}
```

**Autoprovisioning Server (IP Address)** Instead of using DHCP to provide the autoprovisioning tftp server address, you can specify an address manually.

**Autoprovisioning Autoupdate** If **Autoprovisioning** is enabled and the **Autoprovisioning Autoupdate** value is something other than 0 minutes, a service is started on startup that will wait the configured number of minutes and then try to re-download its autoprovisioning file. It will compare its previously autoprovisioned file with this new file and if there are differences, it will reboot the board.

**Autoprovisioned Firmware Upgrades** An Autoprovisioned firmware upgrade only happens after a reboot, will take roughly three minutes, and the web page will be unresponsive during this time.

The '**FirmwareVersion**' value in the xml file *must* match the version stored in the '**FirmwareFile**'.

```
<FirmwareVersion>v5.0.5b01</FirmwareVersion>
<FirmwareFile>505b01-uImage-ceilingpeak</FirmwareFile>
```

If these values are mismatched, the board can get stuck in a loop where it goes through the following sequence of actions:

1. The board downloads and writes a new firmware file.
2. After the next reboot, the board recognizes that the firmware version does not match.
3. The board downloads and writes the firmware file again.

CyberData has timed a firmware upgrade at 140 seconds. Therefore, if you suspect the board is stuck in a loop, either remove or comment out the **FirmwareVersion** line in the XML file and let the board boot as it normally does.

#### Autoprovisioned Audio Files

Audio files are stored in non-volatile memory and an autoprovisioned audio file will only have to be downloaded once for each device. Loading many audio files to the device from the web page could cause it to appear unresponsive. If this happens, wait until the transfer is complete and then refresh the page.

The device uses the file name to determine when to download a new audio file. This means that if you used autoprovisioning to upload a file and then changed the contents of this file at the TFTP server, the device will not recognize that the file has changed (because the file name is the same).

Since audio files are stored in non-volatile memory, if autoprovisioning is disabled after they have been loaded to the board, the audio file settings will not change. You can force a change to the audio files on the board by clicking **Restore Default** on the **Audio Configuration** page or by changing the autoprovisioning file with “**default**” set as the file name.

---

## 2.3.13 Upgrade the Firmware and Reboot the Loudspeaker Amplifier

To upload the Loudspeaker Amplifier firmware from your PC:

1. Retrieve the latest Loudspeaker Amplifier firmware from the VoIP V2 Loudspeaker Amplifier **Downloads** page at:  
<http://www.cyberdata.net/products/voip/digitalanalog/loudspeakerampv2/downloads.html>
2. Unzip the Loudspeaker Amplifier version file. This file may contain the following:
  - Firmware file
  - Release notes
3. Log in to the Loudspeaker Amplifier home page as instructed in [Section 2.3.2, "Log in to the Configuration Home Page"](#).



4. Click the **Update Firmware** button to open the **Upgrade Firmware** page. See [Figure 2-36](#).

**Figure 2-36. Firmware Upgrade Page**


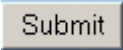
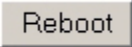
The screenshot shows the 'CyberData Paging Amplifier' web interface. The left sidebar contains navigation buttons: Home, Device Config, Networking, SIP Config, Nightringer, Sensor Config, Multicast Config, Audio Config, Event Config, Autoprovisioning, and Update Firmware. The main panel is titled 'Upgrade Firmware'. It features a 'File Upload' section with a text box displaying 'Firmware Version: v6.0.0' and a prompt 'Please specify a file:' followed by a file input field and a 'Browse...' button. Below the file upload section, a message states 'System will automatically reboot after upgrading firmware'. At the bottom of the main panel are 'Submit' and 'Reboot' buttons.

5. Click **Browse**, and then navigate to the location of the Loudspeaker Amplifier firmware file.
6. Click **Submit**.

**Note** This starts the upload process. Once the Loudspeaker Amplifier has uploaded the file, the **Uploading Firmware** countdown page appears, indicating that the firmware is being written to flash. The Loudspeaker Amplifier will automatically reboot when the upload is complete. When the countdown finishes, the **Upgrade Firmware** page will refresh. The uploaded firmware filename should be displayed in the system configuration (indicating successful upload and reboot).

Table 2-21 shows the web page items on the **Upgrade Firmware** page.

**Table 2-21. Firmware Upgrade Parameters**


Web Page Item	Description
Firmware Version	Shows the current firmware version.
	Use the <b>Browse</b> button to navigate to the location of the Intercom firmware file that you want to upload.
	Click on the <b>Submit</b> button to automatically upload the selected firmware and reboot the system.
	Click on the <b>Reboot</b> button to reboot the system.

## 2.3.14 Reboot the Loudspeaker Amplifier

To reboot a Loudspeaker Amplifier, log in to the web page as instructed in [Section 2.3.2, "Log in to the Configuration Home Page"](#).

1. Click **Update Firmware** to open the **Upgrade Firmware** page ([Figure 2-37](#)).

**Figure 2-37. Upgrade Firmware Page**

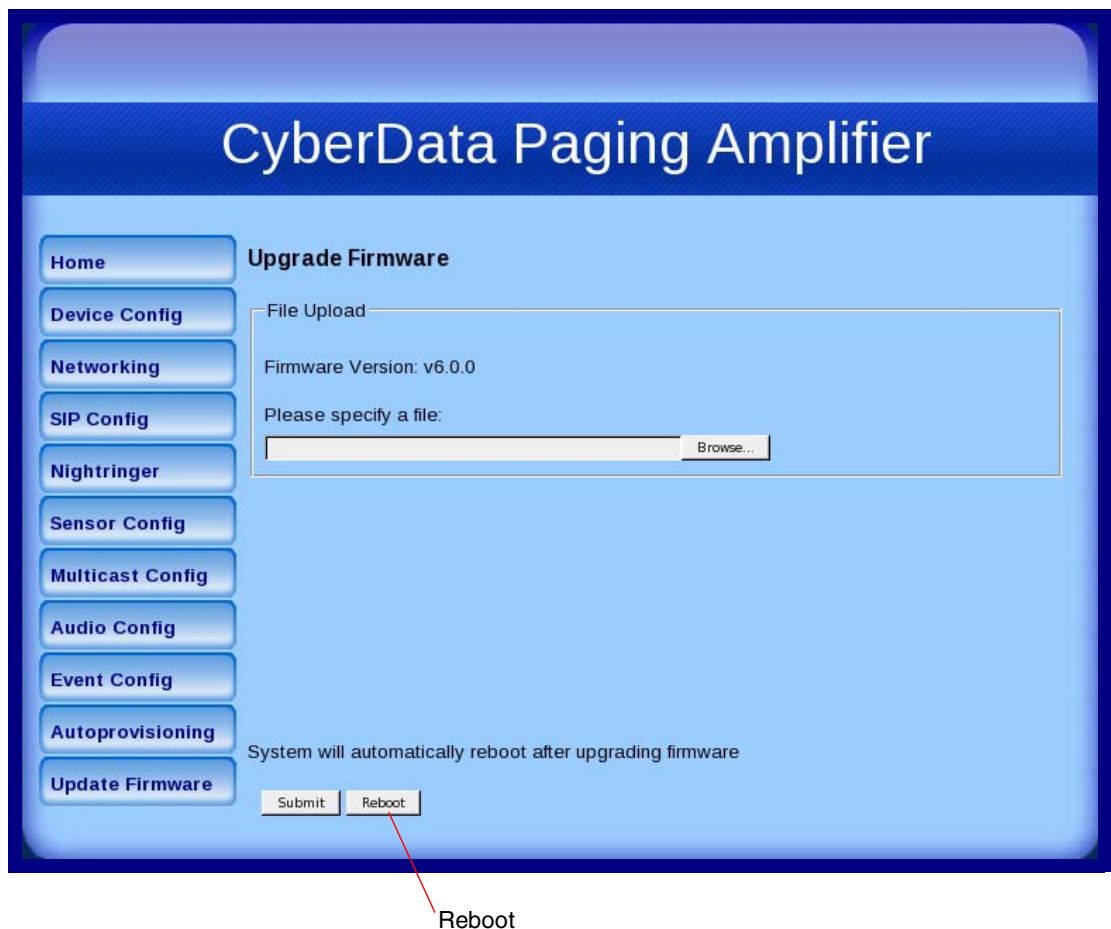

2. Click **Reboot**. A normal restart will occur and you will see the following Reboot page.

**Figure 2-38. Reboot Page**





# Appendix A: Mounting the Amplifier

## A.1 Mount the Loudspeaker Amplifier

Before you mount the enclosure, make sure that you have received all of the parts for each enclosure. Refer to [Table A-22](#).

**Table A-22. Wall Mounting Components (Part of the Accessory Kit)**

Quantity	Part Name	Illustration
3	#6 Plastic Ribbed Anchors	
3	#6 Sheet Metal Screws	

**Note** The Loudspeaker Amplifier was designed for indoor use. Mounting it on the external part of a building will require additional hardware for weatherproofing, cabling access, and lightning suppression. Consult a certified electrician for details.


**Note** For mounting, use the three **#6 SHEET METAL SCREWS** to secure the enclosure.

## A.1.1 Mounting the Enclosure

To mount the enclosure:

1. Prepare holes for the screws.
2. Plug in the power adapter and use the green Power light to verify that the power is on.
3. Plug the Ethernet cable into the Loudspeaker Amplifier. The yellow Link light verifies the network connection.
4. For wall mounting, use the three #6 x 1-1/4-inch Pan Head Phillip screws to secure the speaker. See [Figure A-1.](#)

**Figure A-1. Mounting the Enclosure**

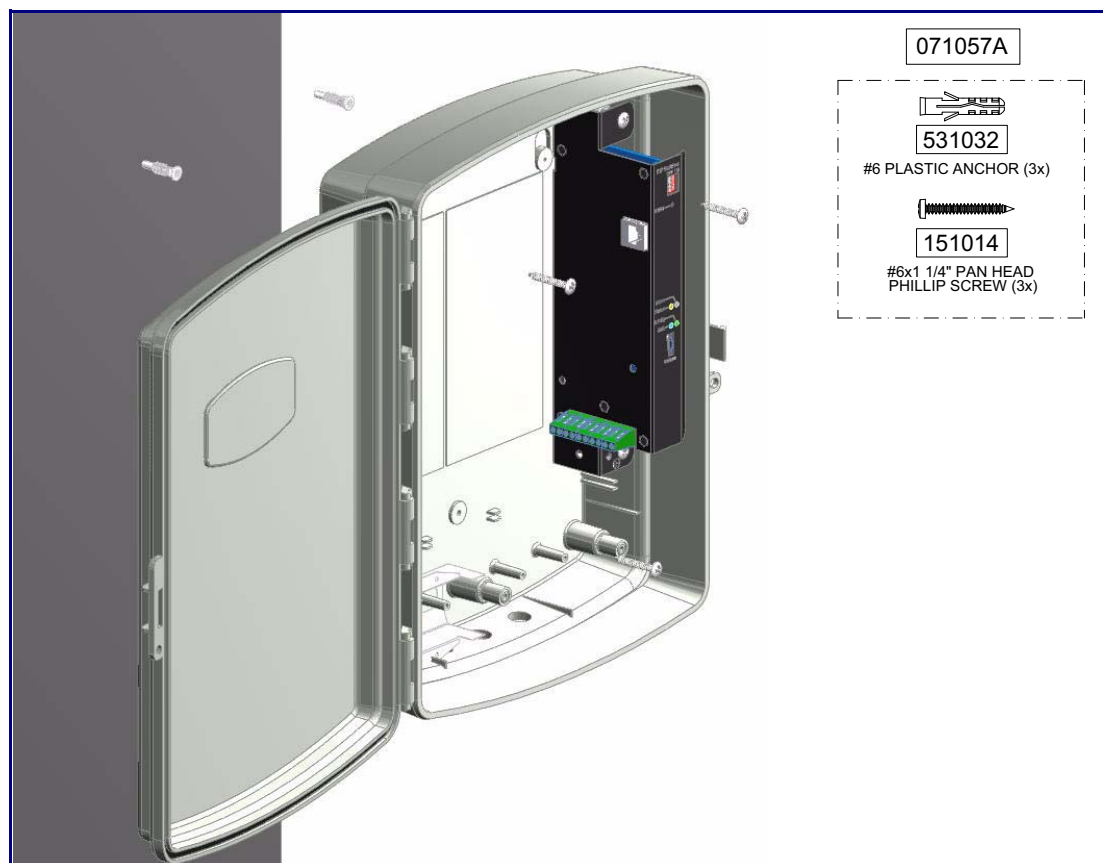

# Appendix B: Setting up a TFTP Server

---

## B.1 Set up a TFTP Server

Autoprovisioning requires a TFTP server for hosting the configuration file.

---

### B.1.1 In a LINUX Environment

To set up a TFTP server on LINUX:

1. Create a directory dedicated to the TFTP server, and move the files to be uploaded to that directory.
2. Run the following command where `/tftpboot/` is the path to the directory you created in [Step 1](#): the directory that contains the files to be uploaded. For example:

```
in.tftpd -l -s /tftpboot/your_directory_name
```

---

### B.1.2 In a Windows Environment

You can find several options online for setting up a Windows TFTP server. This example explains how to use the Solarwinds freeware TFTP server, which you can download at:

<http://www.cyberdata.net/support/voip/solarwinds.html>

To set up a TFTP server on Windows:

1. Install and start the software.
2. Select **File/Configure/Security** tab/**Transmit Only**.
3. Make a note of the default directory name, and then move the firmware files to be uploaded to that directory.

# Appendix C: Troubleshooting/Technical Support

---

## C.1 Frequently Asked Questions (FAQ)

To see a list of frequently asked questions for your product, do the following:

1. Go to the following URL:

<http://www.cyberdata.net/products/voip/digitalanalog/loudspeakerampv2/faqs.html>

2. Go to the support page for your product, and click on the **FAQs** tab.

---

## C.2 Documentation

The documentation for this product is released in an English language version only. You can download PDF copies of CyberData product documentation by doing the following:

1. Go to the following URL:

<http://www.cyberdata.net/products/voip/digitalanalog/loudspeakerampv2/docs.html>

2. Go to the support page for your product, and click on the **Documentation** tab.

## C.3 Contact Information

Contact	<p>CyberData Corporation  3 Justin Court  Monterey, CA 93940 USA  <a href="http://www.CyberData.net">www.CyberData.net</a>  Phone: 800-CYBERDATA (800-292-3732)  Fax: 831-373-4193</p>
Sales	<p>Sales 831-373-2601 Extension 334</p>
Technical Support	<p>The fastest way to get technical support for your VoIP product is to submit a VoIP Technical Support form at the following website:</p> <p><a href="http://www.cyberdata.net/support/contactsupportvoip.html">http://www.cyberdata.net/support/contactsupportvoip.html</a></p> <p>We have several technical support staff monitoring this form and they will contact you within 12 hours after receiving a form submission.</p> <p>Phone: (831) 373-2601, Ext. 333  Email: support@cyberdata.net</p>
Returned Materials Authorization	<p>To return the product, contact the Returned Materials Authorization (RMA) department:</p> <p>Phone: 831-373-2601, Extension 136  Email: RMA@CyberData.net</p> <p>When returning a product to CyberData, an approved CyberData RMA number must be printed on the outside of the original shipping package. No product will be accepted for return without an approved RMA number. Send the product, in its original package, to the following address:</p> <p>CyberData Corporation  3 Justin Court  Monterey, CA 93940  Attention: RMA "your RMA number"</p>
RMA Status Form	<p>If you need to inquire about the repair status of your product(s), please use the CyberData RMA Status form at the following web address:</p> <p><a href="http://www.cyberdata.net/support/rmastatus.html">http://www.cyberdata.net/support/rmastatus.html</a></p>



---

## C.4 Warranty

CyberData warrants its product against defects in material or workmanship for a period of two years from the date of purchase. Should the product fail within the warranty period, CyberData will repair or replace the product free of charge. This warranty includes all parts and labor.

Should the product fail out-of-warranty, a flat rate repair charge of one half of the purchase price of the product will be assessed. Repairs that are in warranty but are damaged by improper modifications or abuse, will be charged at the out-of-warranty rate. Products shipped to CyberData, both in and out-of-warranty, are shipped at the expense of the customer. Shipping charges for repaired products shipped back to the customer by CyberData, will be paid by CyberData.

CyberData shall not under any circumstances be liable to any person for any special, incidental, indirect or consequential damages, including without limitation, damages resulting from use or malfunction of the products, loss of profits or revenues or costs of replacement goods, even if CyberData is informed in advance of the possibility of such damages.

---

### C.4.1 Warranty & RMA Returns within the United States

If service is required, you must contact CyberData Technical Support prior to returning any products to CyberData. Our Technical Support staff will determine if your product should be returned to us for further inspection. If Technical Support determines that your product needs to be returned to CyberData, an RMA number will be issued to you at this point.

Your issued RMA number must be printed on the outside of the shipping box. No product will be accepted for return without an approved RMA number. The product in its original package should be sent to the following address:

CyberData Corporation

3 Justin Court.

Monterey, CA 93940

Attn: RMA "xxxxxx"

---

### C.4.2 Warranty & RMA Returns Outside of the United States

If you purchased your equipment through an authorized international distributor or reseller, please contact them directly for product repairs.

---

### C.4.3 Spare in the Air Policy

CyberData now offers a *Spare in the Air* no wait policy for warranty returns within the United States and Canada. More information about the *Spare in the Air* policy is available at the following web address:

<http://www.cyberdata.net/support/warranty/spareintheair.html>

---

## C.4.4 Return and Restocking Policy

For our authorized distributors and resellers, please refer to your CyberData Service Agreement for information on our return guidelines and procedures.

For End Users, please contact the company that you purchased your equipment from for their return policy.

---

## C.4.5 Warranty and RMA Returns Page

The most recent warranty and RMA information is available at the CyberData Warranty and RMA Returns Page at the following web address:

<http://www.cyberdata.net/support/warranty/index.html>

# Index

---

## Symbols

#6 sheet metal screws 61

## Numerics

1 speaker configuration 10, 11  
 16 gauge wire 10, 11  
 2 speaker configuration 11  
 802.3af compliance switch 10  
 802.3af mode 10, 11  
 802.3af power injector (low power mode) 10  
 802.3at compliance switch 11  
 802.3at mode 11  
 802.3at power injector (high power mode) 11

## A

accessory kit 6  
 activate relay (door sensor) 35  
 activity LED 17  
 address, configuration login 22  
 amplified outputs 10, 11  
     high power mode 11  
     how to use and connect 10  
     low power mode 10  
 announcing an IP address 18  
 audio (buffered) 39  
 audio configuration 40  
     night ring tone parameter 43  
 audio configuration page 40  
 audio encodings 3  
 autoprovisioning 52, 54  
     autoprovisioned audio files 56  
     autoprovisioned firmware upgrades 55  
     autoprovisioning autoupdate 55  
     autoprovisioning enabled option 54  
     autoprovisioning from DHCP 54  
     autoprovisioning server (IP address) 55  
     networking 54  
 autoprovisioning configuration 53

## B

buffered audio 39

## C

cabling 16  
 components 9  
 configurable parameters 24, 26  
 configuration  
     default IP settings 20  
     door sensor 34  
     intrusion sensor 34  
     network 28  
     SIP 30  
     using Web interface 20  
 configuration home page 23  
 configuration page  
     configurable parameters 24, 26  
 connecting the amplified outputs 10  
 connections 9  
 connections inside of the NEMA box 9  
 contact information 65  
 contact information for CyberData 65  
 Current Network Settings 29  
 current network settings 29  
 CyberData contact information 65

## D

default  
     gateway 7, 20  
     IP address 7, 20  
     subnet mask 7, 20  
     username and password 7, 20  
     web login username and password 23  
 default gateway 7, 20, 29  
 default IP settings 20  
 default login address 22  
 device configuration  
     device configuration parameters 53  
     the device configuration page 52  
 device configuration page 25  
 device configuration parameters 26  
 DHCP Client 3  
 DHCP IP addressing 29  
 dial out extension (door sensor) 35  
 discovery utility program 22  
 DNS server 29  
 door sensor 34, 43  
     activate relay 35  
     dial out extension 35  
     play audio locally 35  
     play audio remotely 35

## E

- enable night ring events 48
- enclosure, mounting 61
- event configuration
  - enable night ring events 48
- expiration time for SIP server lease 31, 33

## F

- factory defaults 8, 18
- firmware
  - where to get the latest firmware 57
- firmware upgrade parameters 59

## H

- hazard levels 5
- high power mode (amplified outputs) 11
- home page 23
- http web-based configuration 3

## I

- identifying your product 1
- illustration of amplifier mounting process 61
- input specifications 4
- installation 2
- IP address 7, 20, 29
- IP addressing 29
  - default
    - IP addressing setting 7, 20

## L

- lease, SIP server expiration time 31, 33
- LEDs 17
- lengthy pages 39
- line input specifications 4
- line output specifications 4
- link LED 17
- Linux, setting up a TFTP server on 63
- local SIP port 31
- log in address 22
- loudspeaker, cabling/wiring 16
- loudspeaker, type 16
- low power mode (amplified outputs) 10

## M

- maximum distance between speakers 11
- maximum wire length for single speaker
  - configuration 10
- maximum wire length for two speaker configuration 11
- MGROUP
  - MGROUP Name 38
- mounting an amplifier 61
- multicast configuration 36
- Multicast IP Address 38

## N

- navigation (web page) 21
- navigation table 21
- NEMA box components 9
- network configuration of intercom 28
- network link activity, verifying 17
- Network Setup 28
- nightring tones 39
- Nightringer 32
- nightringer settings 33

## O

- one speaker configuration 10, 11
- optional two speaker configuration 11
- outbound proxy 31
- output specifications 4

## P

- packet time 3
- pages (lengthy) 39
- parts list 6
- password
  - for SIP server login 31
  - login 23
  - restoring the default 7, 20
- play audio locally (door sensor) 35
- play audio remotely (door sensor) 35
- port
  - local SIP 31
  - remote SIP 31
- power LED 17
- power, connecting to loudspeaker amplifier 10
- priority
  - assigning 39
- product

- configuring 20
- mounting 61
- parts list 6
- product features 2
- product overview
  - product features 2
  - product specifications 4
  - supported protocols 3
  - supported SIP servers 3
  - typical system installation 2
- product specifications 4
- protocols supported 3

## R

- reboot 59, 60
- registration and expiration, SIP server lease 31
- remote SIP port 31
- reset test function management switch 18
- resetting the IP address to the default 61
- restoring the factory defaults 8, 18
- return and restocking policy 67
- ringtones 39
  - lengthy pages 39
- RMA returned materials authorization 65
- RMA status 65
- RTFM switch 8, 18
- RTP port 31
- RTP/AVP 3

## S

- safety instructions 4
- sales 65
- sensor
  - sensor normally closed 35
- sensor settings 35
- sensor setup page 34
- sensor setup parameters 34
- server address, SIP 31
- service 65
- SIP
  - enable SIP operation 30
  - local SIP port 31
  - user ID 31
- SIP (session initiation protocol) 3
- SIP configuration 30
  - SIP Server 31
- SIP configuration parameters
  - registration and expiration, SIP server lease 33
- SIP registration 31
- SIP remote SIP port 31

- SIP server 31
  - password for login 31
  - SIP servers supported 3
  - unregister from 31
  - user ID for login 31
- SIP settings 31
- Spare in the Air Policy 66
- speaker cable 16
- speaker configuration 10, 11
- speaker configuration for two speakers 11
- speaker wire 16
- standard 1 speaker configuration 10, 11
- static IP addressing 29
- status LED 17
- subnet mask 7, 20, 29
- supported protocols 3

## T

- tech support 65
- technical support, contact information 65
- test audio button 27
- TFTP server 3, 63
- two speaker configuration 11

## U

- user ID
  - for SIP server login 31
- user ID, SIP 31
- username
  - default for web configuration access 23
  - restoring the default 7, 20
- using the amplified outputs 10

## V

- verifying
  - network link and activity 17
  - power on 17
- volume 19
- volume dial 19

## W

- warranty 66
- warranty & RMA returns outside of the United States 66
- warranty & RMA returns within the United States 66
- warranty and RMA returns page 67

- warranty policy at CyberData 66
- web access password 7, 20
- web access username 7, 20
- web configuration log in address 22
- web page
  - navigation 21
- web page navigation 21
- web-based configuration 20
- Windows, setting up a TFTP server on 63
- wire gauge 10, 11
- wire length for single speaker configuration 10
- wire length going to wire nuts for two speaker
  - configuration 11
- wire nuts to connect wire 11
- wiring 16