
Gang Box Mounting Options

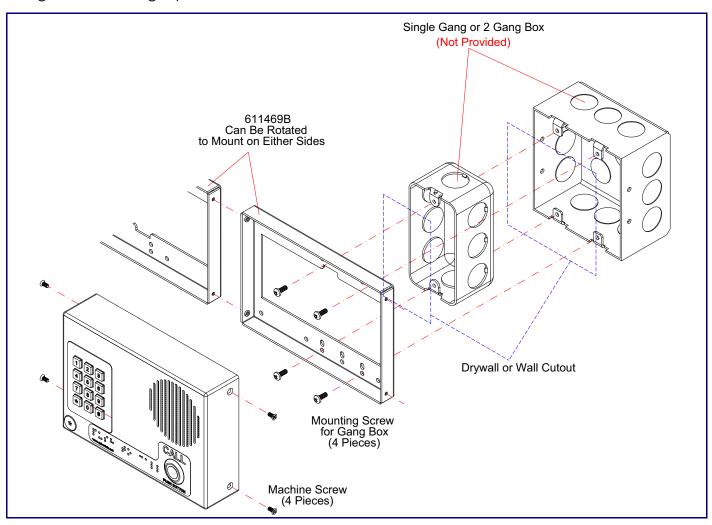

Contacting CyberData

Phone: 831-373-2601

Sales: (831) 373-2601 ext. 334 Corporate Headquarters Support: 831-373-2601 ext. 333

CyberData Corporation Web: http://www.cyberdata.net/support/contactsupportvoip.html

3 Justin Court RMA Dept: (831) 373-2601 ext. 136 Monterey, CA 93940, USA Email: RMA@CyberData.net

RMA Status: http://www.cyberdata.net/support/rmastatus.html

Fax: 831-373-4193 Warranty information is available at:

www.CyberData.net Web: http://www.cyberdata.net/support/warranty/index.html

The IP Endpoint Company

CyberData Installation Quick Reference


VoIP Indoor Intercom with Keypad

SiP Compliant

011113*, RAL 9003, Signal White

*Replaces the 011078 number.


The CyberData SIP-enabled VoIP Indoor Intercom with Keypad is a Power-over-Ethernet (PoE 802.3af) and Voice-over-IP (VoIP) two-way communications device that easily connects into existing local area networks (LANs) with a single cable connection.

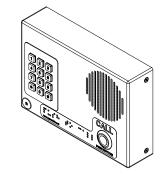

Parameter	Factory Default Setting
IP Addressing	DHCP
P Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

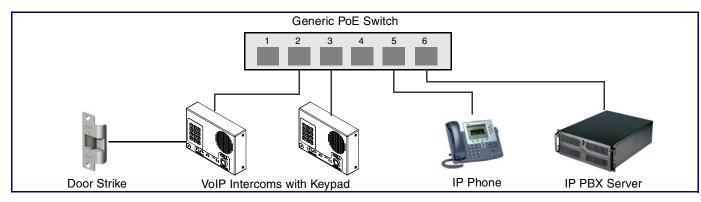

Getting Started


- Download the VoIP Indoor Intercom with Keypad Operations Guide PDF file from the Documents page at: http://www.cyberdata.net/products/voip/digitalanalog/intercomkeypad/docs.html
- Create a plan for the locations of your Intercoms.
- Prior to installation, consult local building and electrical code requirements.
- WARNING: This enclosure is not rated for any AC voltages!

Intercom Parts


Quick Reference




Dimensions

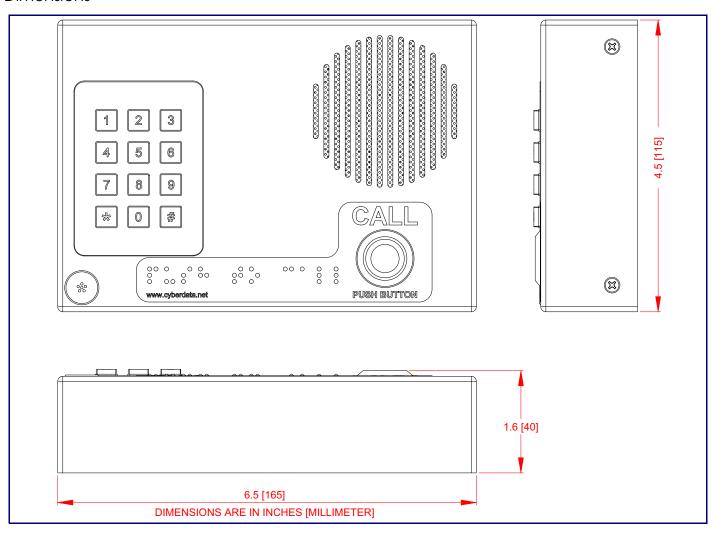

Terminal Block Connections

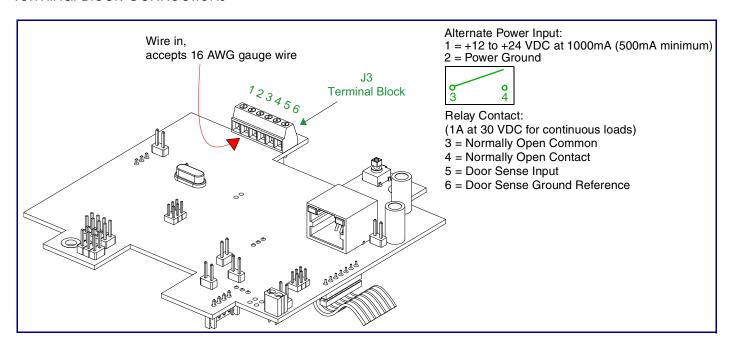

RTFM Switch

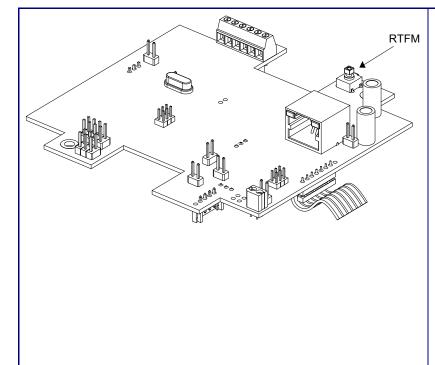

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) switch (see picture) to announce the device's IP address or restore the device to the factory default settings.

To announce the device's current IP address:

• Press and release the RTFM switch within a five second window.

Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

To restore the device to factory default settings:

 Press and hold the RTFM switch for longer than five seconds until you hear the device announce that it is restoring the factory default settings.

Wall Mounting Options

