



## Wall Mounting Option

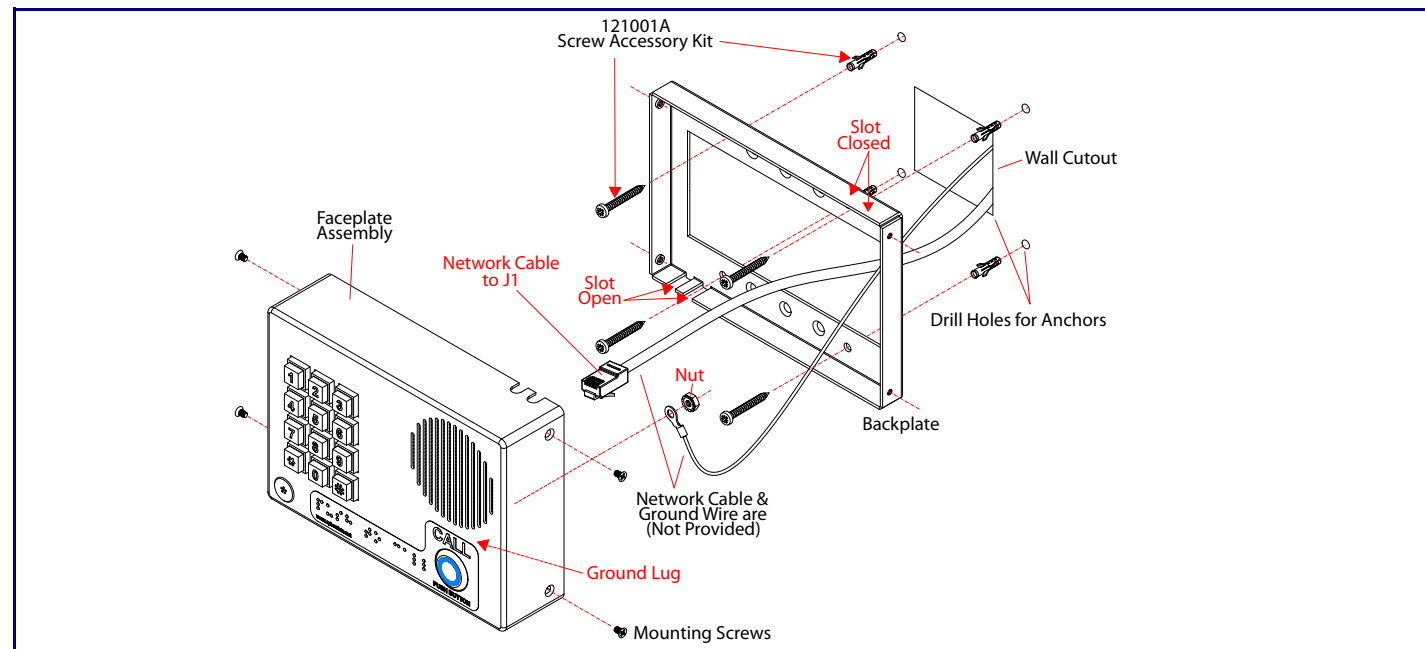

## Gang Box Mounting Option

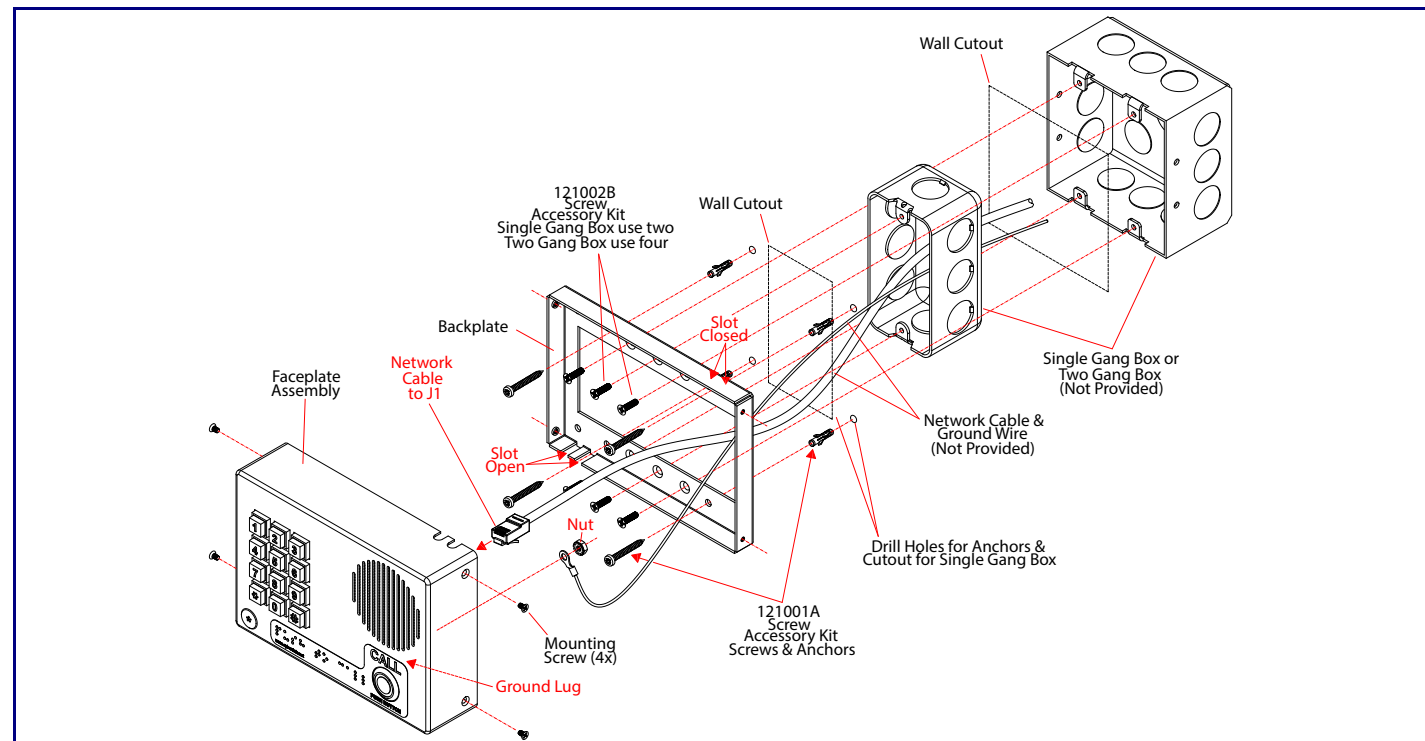

## Contacting CyberData

### Corporate Headquarters

CyberData Corporation  
3 Justin Court  
Monterey, CA 93940, USA

Phone: 831-373-2601  
Fax: 831-373-4193  
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334  
Support: 831-373-2601 ext. 333  
Support Website: <http://support.cyberdata.net/>  
RMA Department: (831) 373-2601 ext. 136  
RMA Email: [RMA@CyberData.net](mailto:RMA@CyberData.net)  
RMA Status: <http://support.cyberdata.net/>  
Warranty Information: <http://support.cyberdata.net/>

**CyberData**  
The IP Endpoint Company

Installation Quick Reference

# SIP Indoor Intercom with Keypad- Surface Mount


SIP Compliant  
**011113**



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

## Typical System Installation

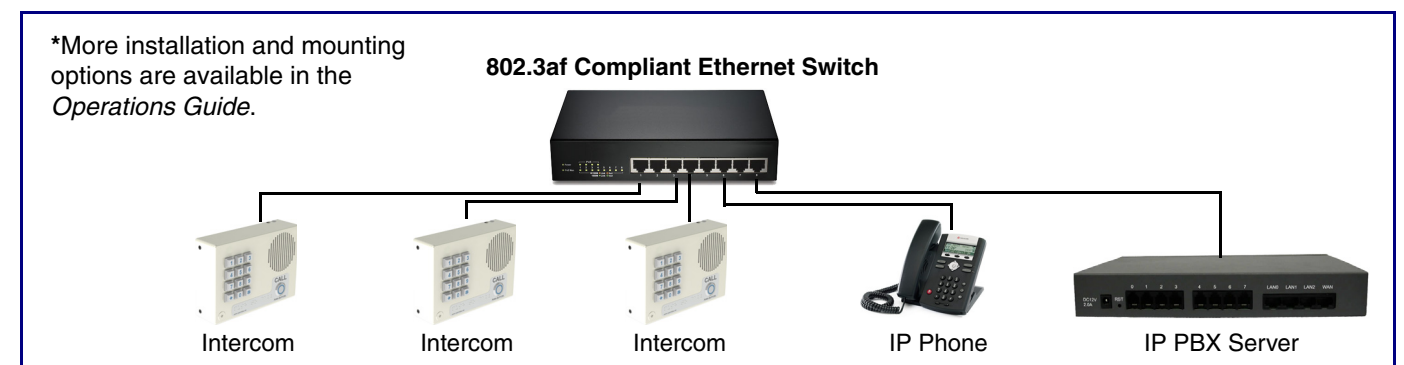


## Getting Started

- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:  
<http://www.cyberdata.net/voip/011113/>
- Create a plan for the locations of your Intercoms.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.**
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.**
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.**
- WARNING: This enclosure is not rated for any AC voltages!**

## Parts

<b>(1) Intercom Assembly</b> 	<b>(1) Wall Mounting Kit</b> (4) #6 x 0.75-inch Sheet Metal Screw (4) #6 Plastic anchor	<b>(1) Gang Box Mounting Kit</b> (4) #6 x 3/8-inch Pan Head Phillips Machine Screw* * Only two screws are needed for a single gang box.
----------------------------------	-----------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------

## Dimensions

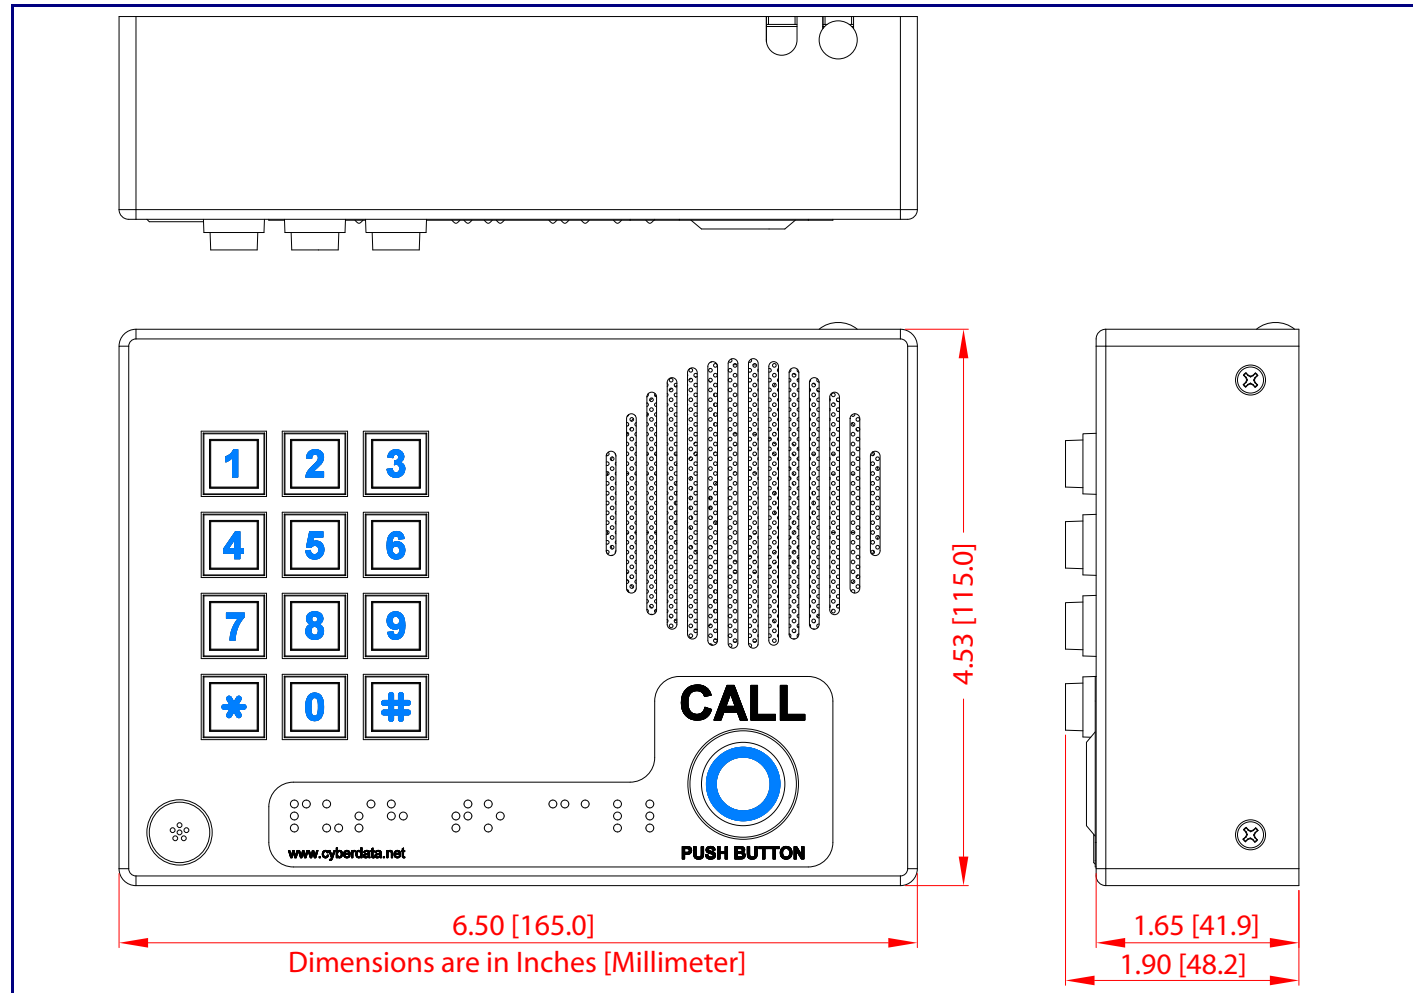


## Terminal Block Connections

### Alternate Power Input:

1 = +8 to +12VDC @ 1000mA Regulated Power Supply\*

 2 = Power Ground\*



### Relay Contact:

(1 A at 30 VDC for continuous loads)

3 = Relay Common

4 = Relay Normally Open Contact


5 = Sense Input

6 = Sense Ground


7 = Remote Switch "A"

8 = Remote Switch "B"

\*Contacts 1 and 2 on the terminal block are only for powering the device from a non-PoE 12VDC power source as an alternative to Network PoE power. Use of these contacts for any other purpose will damage the device and void the product warranty.

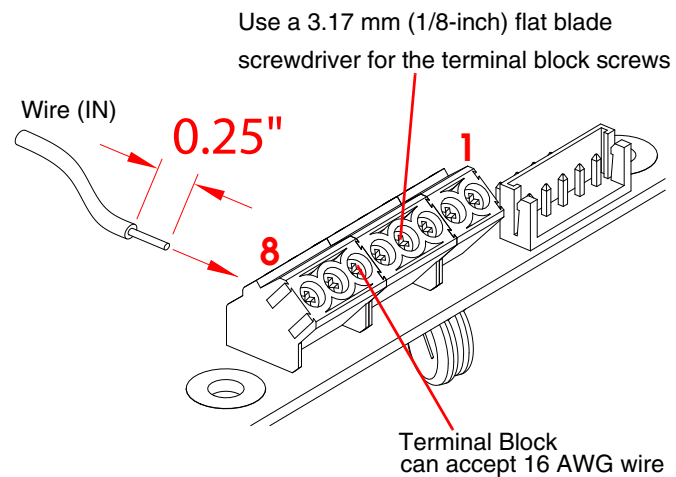

## RTFM Button

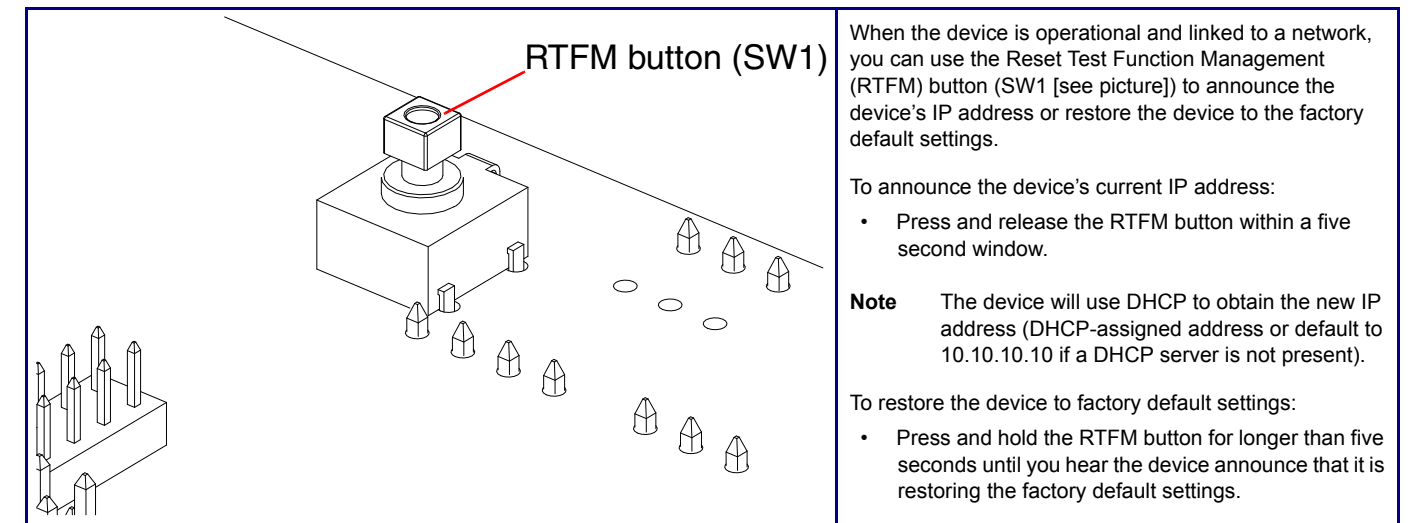

## Ground Connection

