

Auxiliary Analog Speaker

011120*, RAL 9002, Gray White, Standard

011121, RAL 9003, Signal White, Optional

*Replaces the 011072 number.



The Auxiliary Analog Speaker is an option for the CyberData SIP speaker to extend the coverage area.


When connecting the Auxiliary Analog Speaker to the SIP speaker, the total speaker wattage is the same. However, by adding this Auxiliary Analog Speaker, additional coverage can be realized.

The Auxiliary Analog Speaker can be mounted with the same mounting hardware options available for the SIP Speakers.








Getting Started

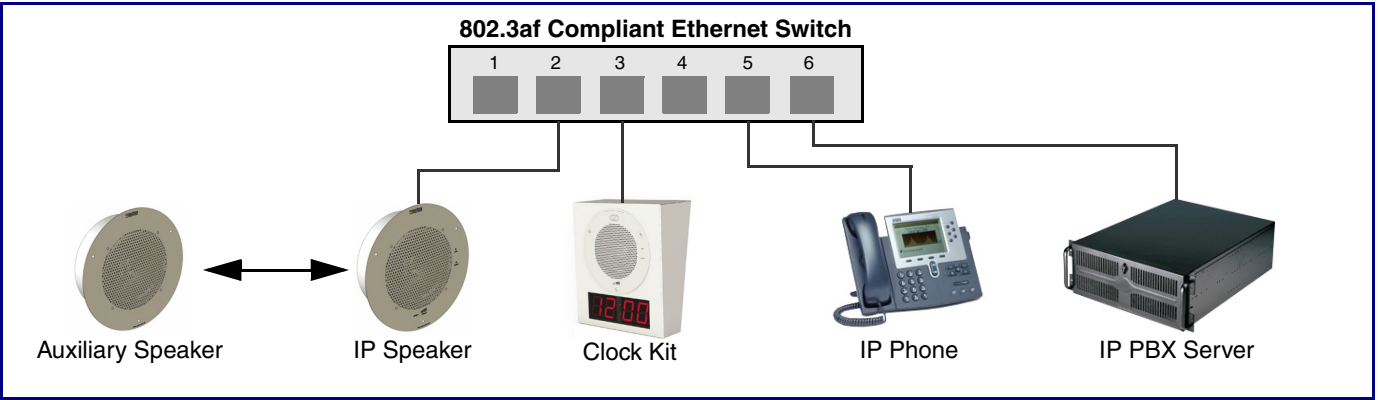- Create a plan for the locations of your speakers.
- Prior to installation, consult local building and electrical code requirements.

 
Typical System Installation

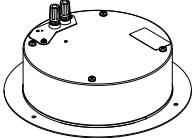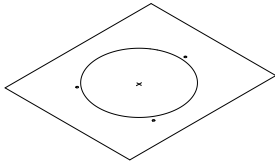


Parts

(1) Speaker Assembly	(1) Template for Speaker and Screw Holes*	(1) Drop Ceiling Mounting Kit	(1) Drywall Mounting Kit
	 <i>* See the last page of this document</i>	(3) #8 Nylon Thumb Nuts (3) #8 Fender Washers (3) 8-32 x 1 1/4" Mounting Screws	(3) Plastic Ribbed Anchors (3) #8 Sheet Metal Screws
		  	 


Dimensions

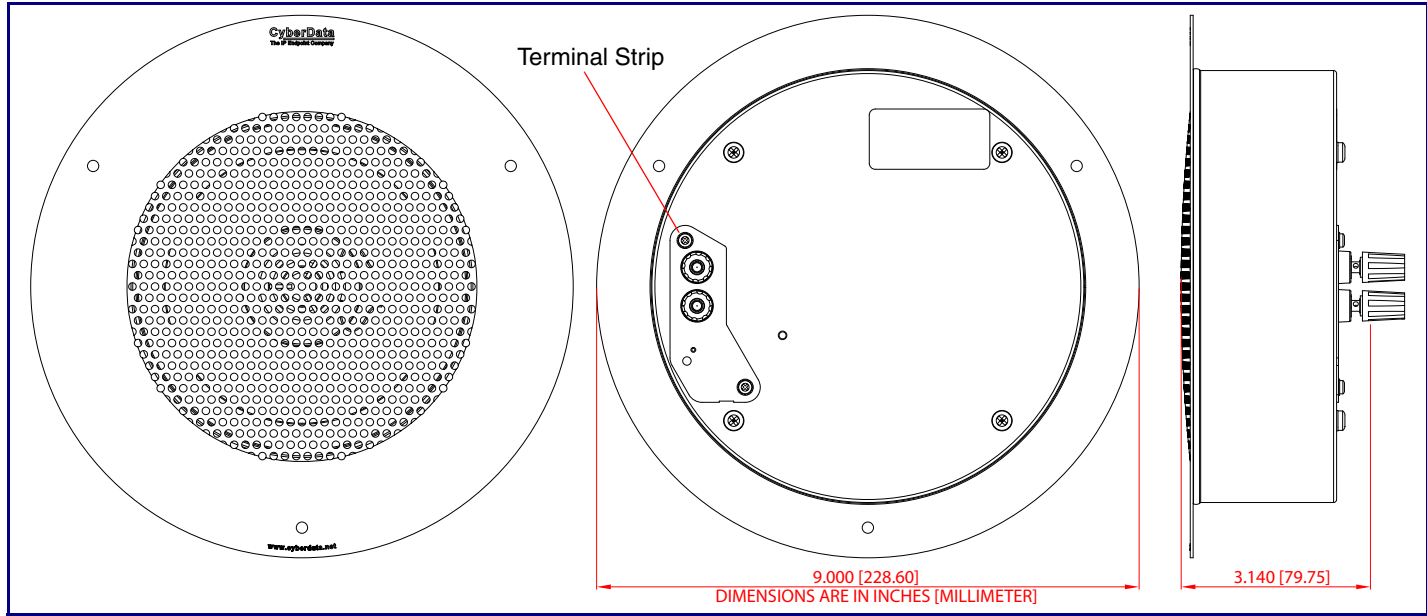

Connections

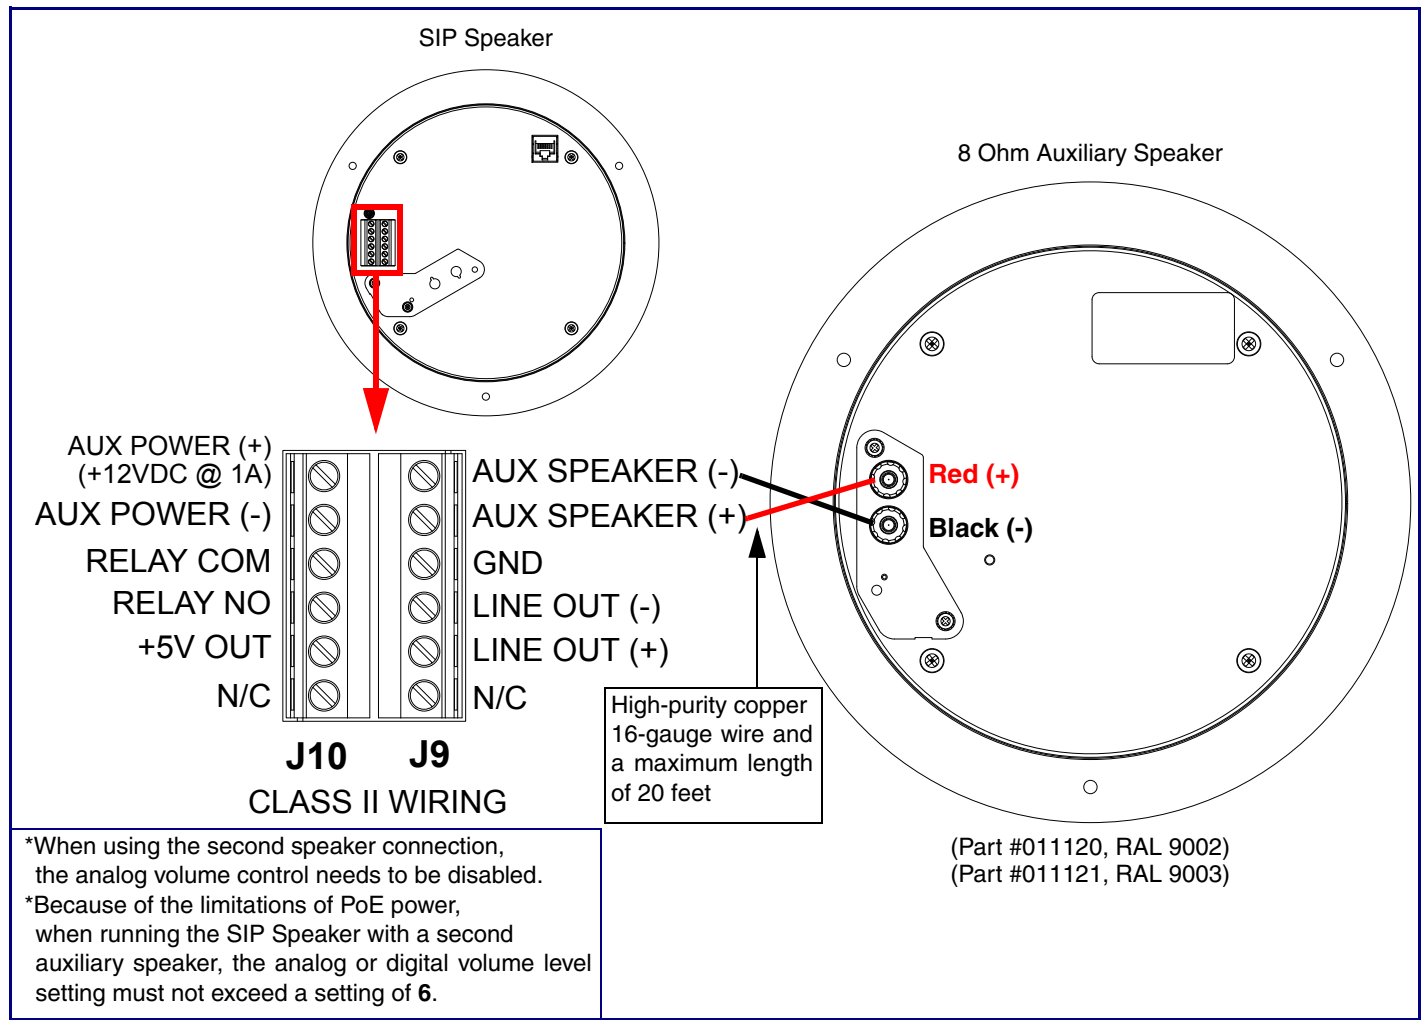

Mounting

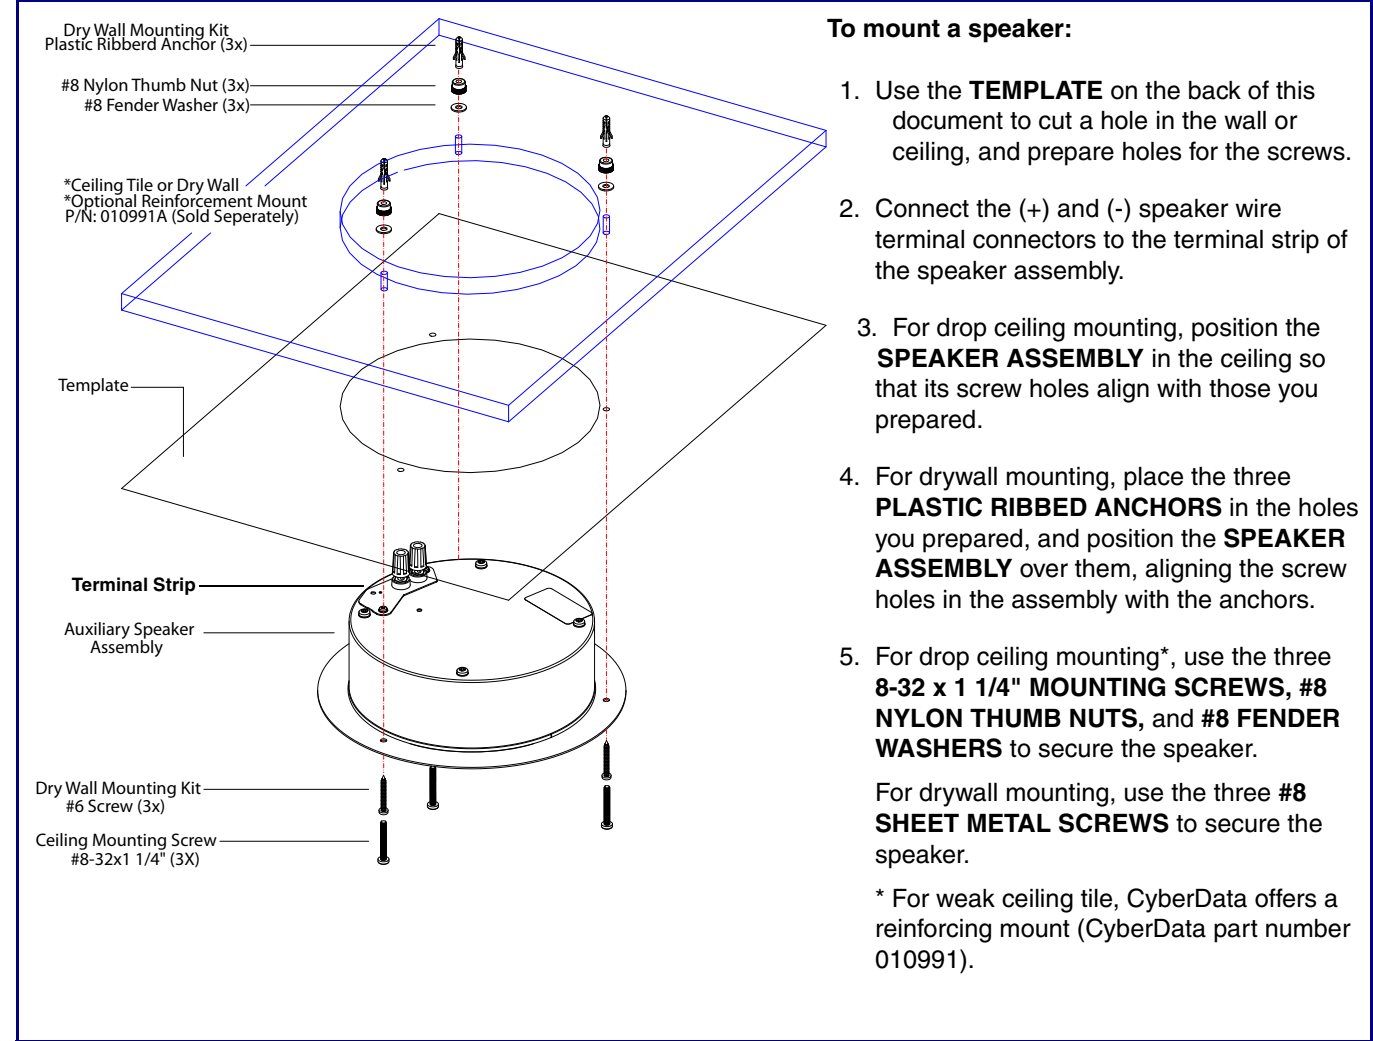

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <http://support.cyberdata.net/>
RMA Department: (831) 373-2601 ext. 136
RMA Email: RMA@CyberData.net
RMA Status: <http://support.cyberdata.net/>
Warranty Information: <http://support.cyberdata.net/>