Contacting CyberData

Corporate Headquarters

Sales: (831) 373-2601 ext. 334

Support: 831-373-2601 ext. 333

CyberData Corporation 3 Justin Court

Web: http://www.cyberdata.net/support/contactsupportvoip.php

RMA Dept: (831) 373-2601 ext. 136 Email: RMA@CyberData.net

Monterey, CA 93940, USA

RMA Status: http://www.cyberdata.net/support/rmastatus.html

Phone: 831-373-2601 Fax: 831-373-4193 www.CyberData.net

Warranty and RMA information is available at the following website:

http://www.cyberdata.net/support/warranty/index.html

CyberData The IP Endpoint Company


Installation Quick Reference

VoIP Indoor Intercom with Keypad (Flush-Mount)

SIP Compliant

011123*, RAL 9003, Signal White


The CyberData SIP-enabled VoIP Indoor Intercom with Keypad (Flush-Mount) is a Power-over-Ethernet (PoE 802.3af) and Voice-over-IP (VoIP) two-way communications device that easily connects into existing local area networks (LANs) with a single cable connection.

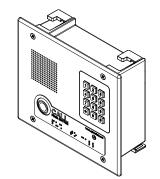

Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

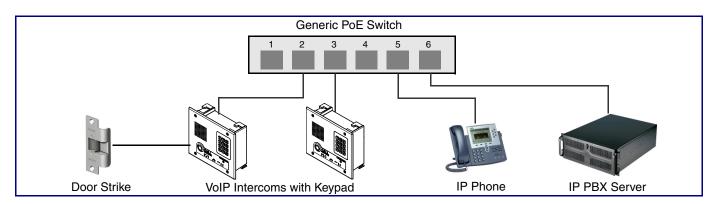


Getting Started


- Download the VoIP Indoor Intercom with Keypad Operations Guide PDF file from the **Documents** page at: http://www.cyberdata.net/products/voip/digitalanalog/intercomkeypad/docs.html
- · Create a plan for the locations of your Intercoms.
- Prior to installation, consult local building and electrical code requirements.
- WARNING: This enclosure is not rated for any AC voltages

Intercom Parts


Quick Reference

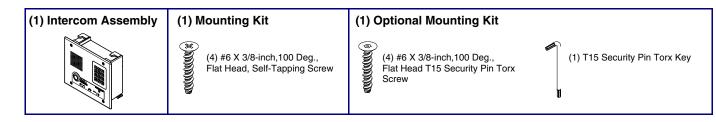


Dimensions

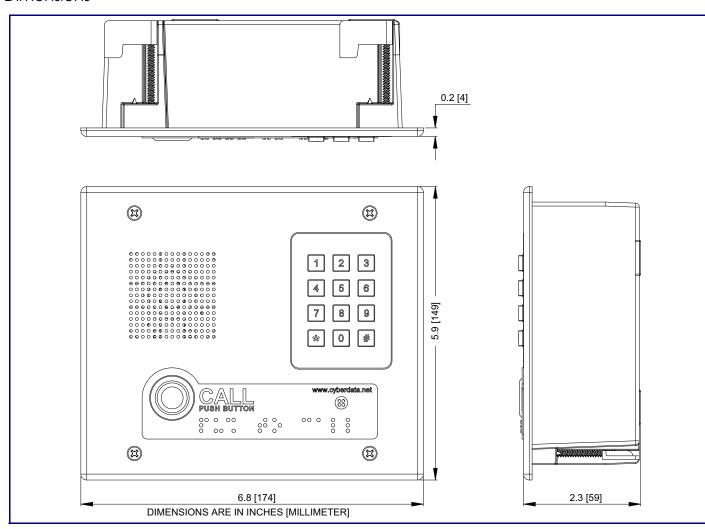

Terminal Block Connections

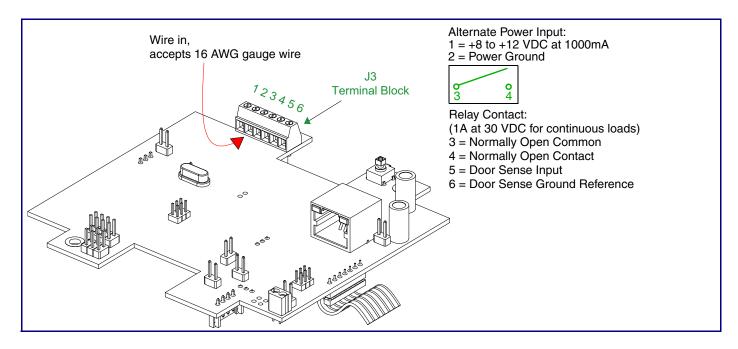

RTFM Switch

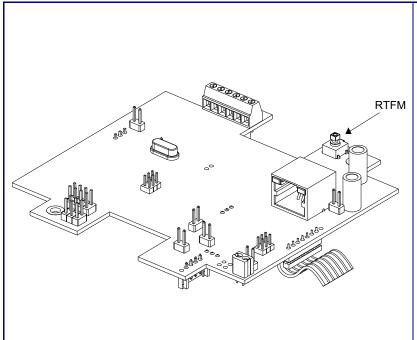

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) switch (see picture) to announce the device's IP address or restore the device to the factory default settings.

To announce the device's current IP address:


• Press and release the RTFM switch within a five second window.

Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

To restore the device to factory default settings:

· Press and hold the RTFM switch for longer than five seconds until you hear the device announce that it is restoring the factory default settings.

Mounting Options

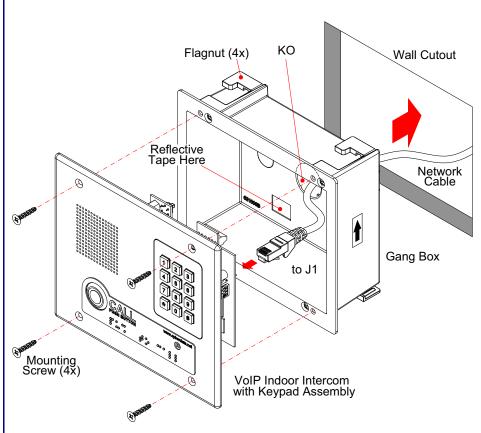

To mount the Intercom:

- 1. Cut out a section of the wall that is 6.03 inches [153 mm] from left to right and 5.28 inches [134 mm] from top to bottom.
- 2. Use a flat blade screwdriver to remove the knockout (KO) from the back of the gang box.
- 3. Feed the network cable from the wall cutout through the knockout of gang box and into J1 of the Intercom.
- 4. Install the gang box into the wall cutout.
- 5. Install the four flag nuts with a screwdriver.
- 6. Install the Intercom to the gang box.
- 7. Secure the Intercom to the gang box with the four mounting screws.

930369F