

Wall Mounting Options

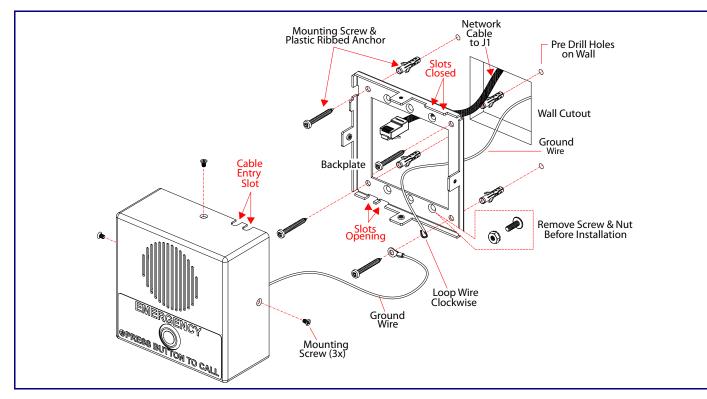

Gang Box Mounting Options

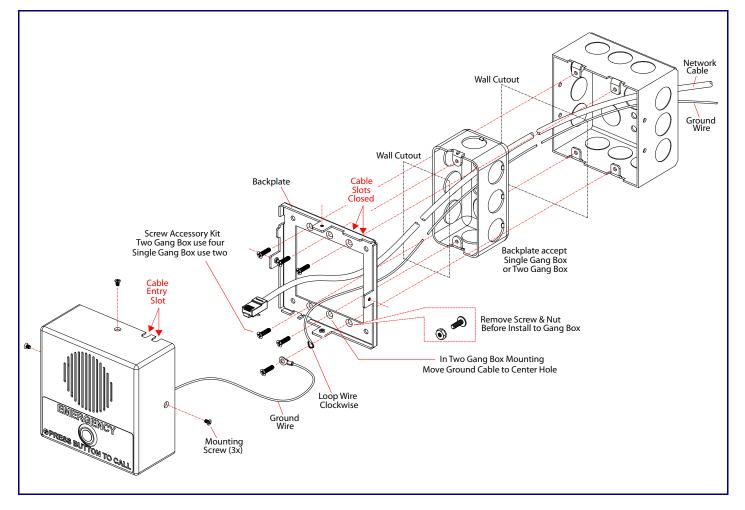

CyberData Installation Quick Reference The IP Endpoint Company SIP Emergency Intercom SIP Compliant 011209* *Replaces the 011035 number.



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.


Getting Started

• Download the Operations Guide PDF file, from the **Downloads** tab at the following webpage:

https://www.cyberdata.net/products/011209

- Create a plan for the locations of your devices.
- •
- instructions.
- WARNING: This enclosure is not rated for any AC voltages!

Parts

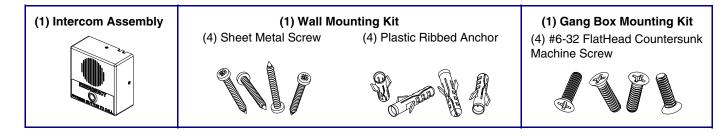

Contacting CyberData

Corporate Headquarters

CyberData Corporation 3 Justin Court Monterey, CA 93940, USA


Phone: 831-373-2601 Fax: 831-373-4193 http://www.cyberdata.net/

© 2019, CyberData Corporation, ALL RIGHTS RESERVED 931598A


WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes. • WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation

• WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.


Sales: (831) 373-2601 ext. 334 Support: 831-373-2601 ext. 333 Support Website: http://support.cyberdata.net/ RMA Department: (831) 373-2601 ext. 136 RMA Email: RMA@CyberData.net RMA Status: http://support.cyberdata.net/ Warranty Information: http://support.cyberdata.net/

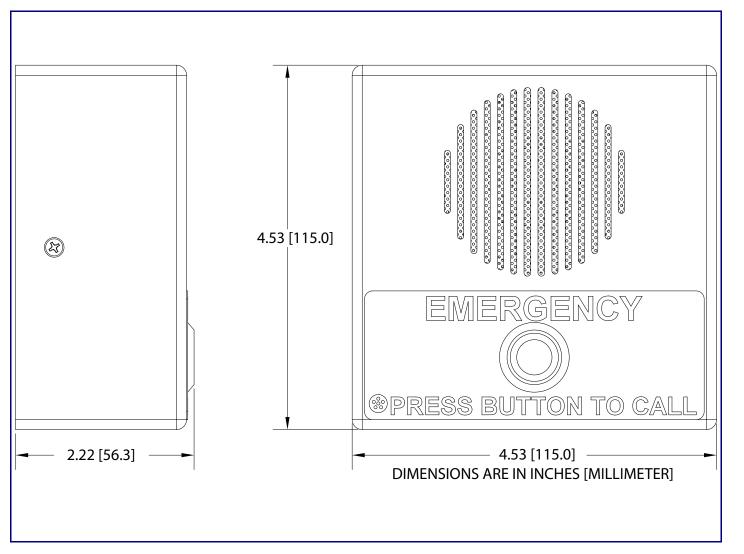


Terminal Block Connections

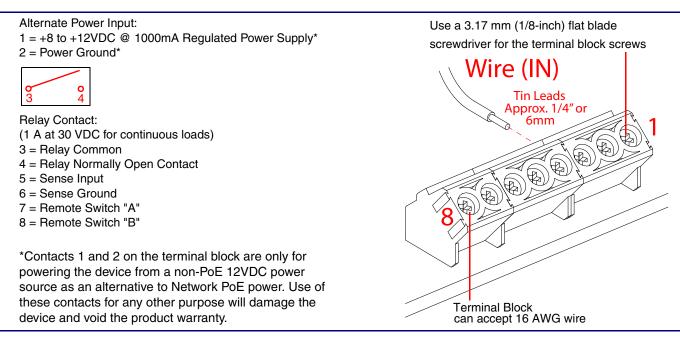

RTFM Button

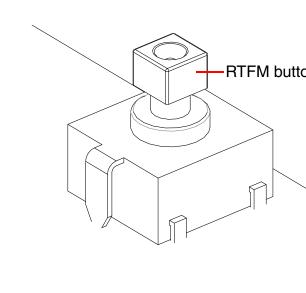

Maximum Recommended Wall Cutout Dimensions

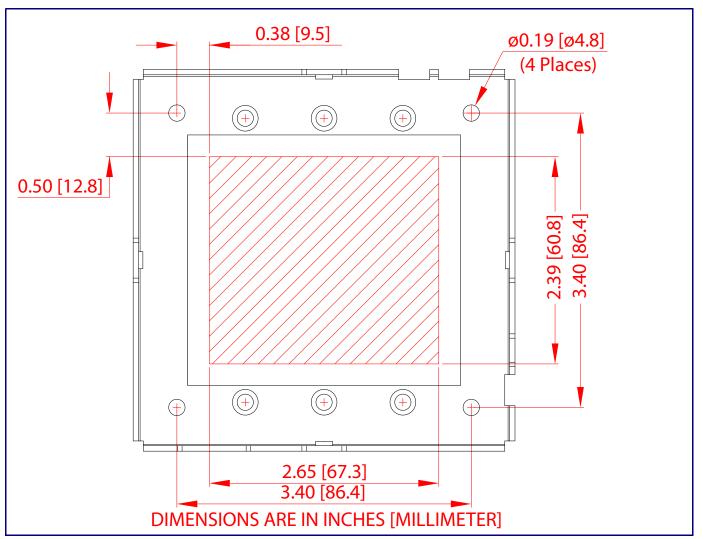

on (SW1)	When the device is operational and linked to a net- work, you can use the Reset Test Function Man- agement (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory default settings.	
	To announce the device's current IP address:Press and release the RTFM button within a five second window.	
	Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).	
	 To restore the device to factory default settings: Press and hold the RTFM button for longer than five seconds until you hear the device announce that it is restoring the factory default settings. 	