

## Wall Mounting Options

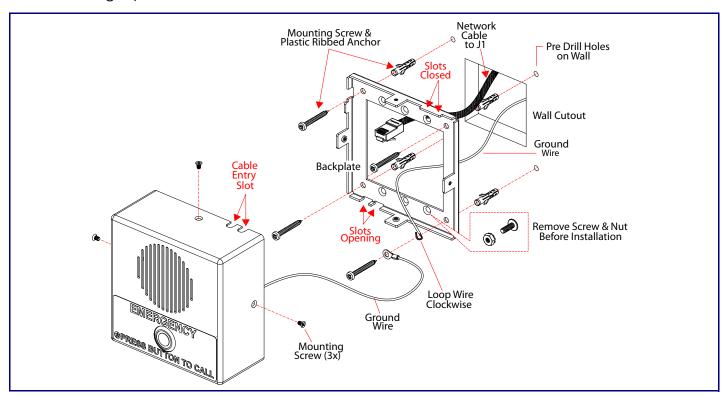

## Gang Box Mounting Options

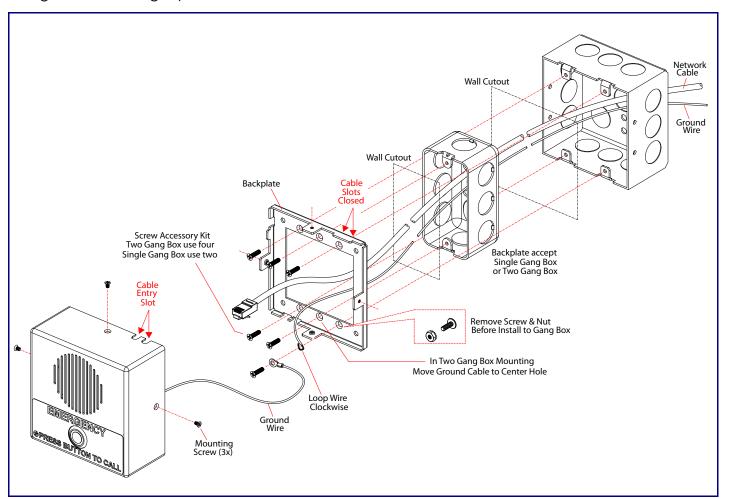



# CyberData Installation Quick Reference The IP Endpoint Company CID Company CID Company

## SIP Emergency Intercom SIP Compliant 011209



<b>Factory Default Setting</b>
DHCP
IPv4 Link Local
admin
admin
IPv4 Link Local
IPv4 Link Local

a. Default if there is not a DHCP server present.


## Getting Started

• Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:

#### https://www.cyberdata.net/products/011209

- Create a plan for the locations of your devices.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: This enclosure is not rated for any AC voltages!

## **Parts**

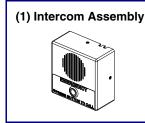

#### (1) Wall Mounting Kit

(4) Sheet Metal Screw

(4) Plastic Ribbed Anchor

## (1) Gang Box Mounting Kit

(4) #6-32 FlatHead Countersunk Machine Screw



## Contacting CyberData

## Corporate Headquarters

CyberData Corporation 3 Justin Court Monterey, CA 93940, USA


Phone: 831-373-2601 Fax: 831-373-4193 https://www.cyberdata.net/ Sales: 831-373-2601 ext. 334 Support: 831-373-2601 ext. 333

Support Website: https://support.cyberdata.net/


RMA Department Contact and Status: https://support.cyberdata.net/

Warranty Information: https://support.cyberdata.net/


## **Dimensions**

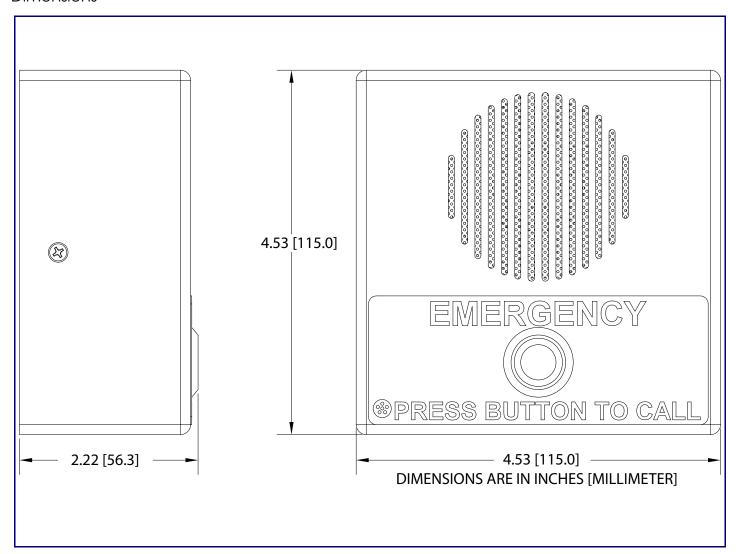

### Terminal Block Connections

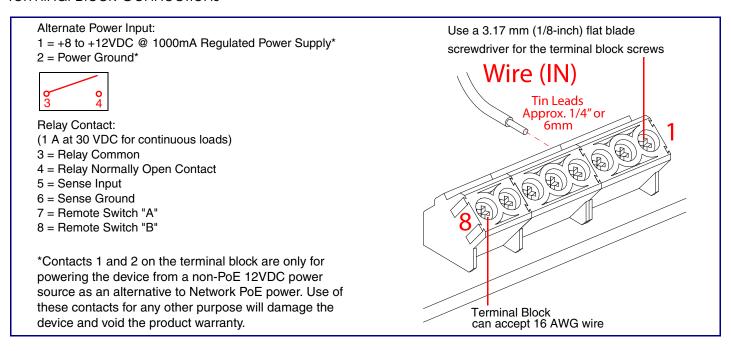

## RTFM Button

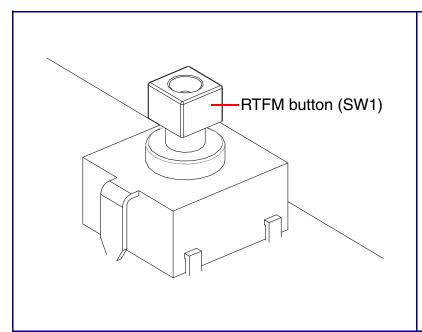

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory default settings.

To announce the device's current IP address:

 Press and release the RTFM button within a five second window.

Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to IPv4 Link Local if a DHCP server is not present).

To restore the device to factory default settings:

 Press and hold the RTFM button for longer than five seconds until you hear the device announce that it is restoring the factory default settings.

## Maximum Recommended Wall Cutout Dimensions

