
# Gooseneck Mounting

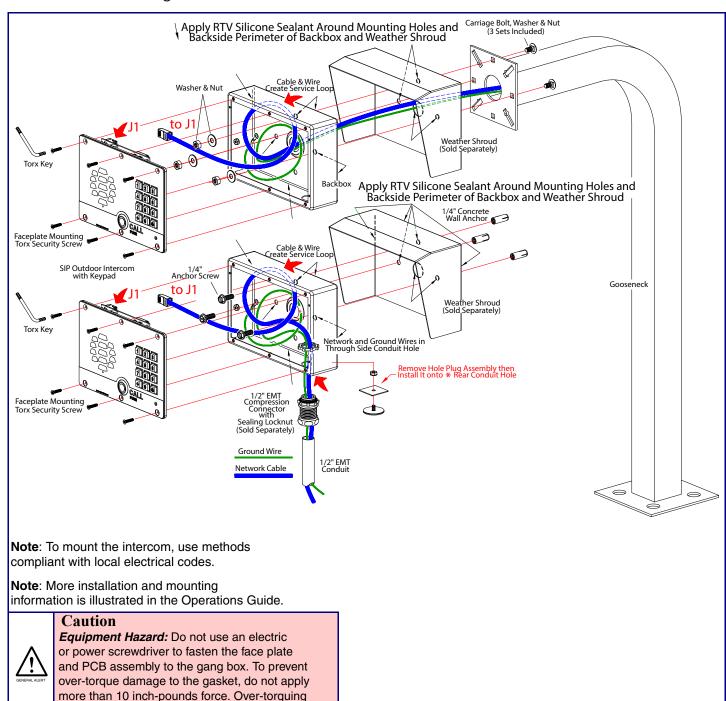

# Contacting CyberData

# Corporate Headquarters

Sales: (831) 373-2601 ext. 334 CyberData Corporation Support: 831-373-2601 ext. 333 3 Justin Court

will cause the gasket to tear, risk moisture intrusion

and effectively void the manufacturer's warranty.

Support Website: <a href="http://support.cyberdata.net/">http://support.cyberdata.net/</a> Monterey, CA 93940, USA RMA Department: (831) 373-2601 ext. 136

RMA Email: RMA@CyberData.net Phone: 831-373-2601

Fax: 831-373-4193 RMA Status: <a href="http://support.cyberdata.net/">http://support.cyberdata.net/</a>

http://www.cyberdata.net/ Warranty Information: http://support.cyberdata.net/



# The IP Endpoint Company SIP Outdoor Intercom with Keypad SIP Compliant


# 011214



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

## Typical System Installation

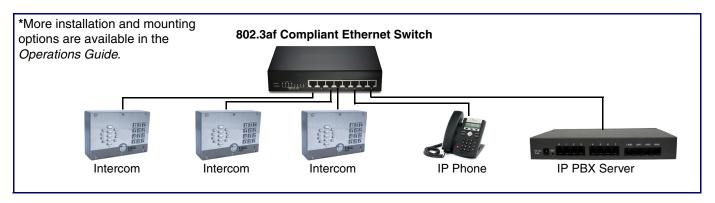


# Getting Started

- Download the Operations Guide PDF file, from the Downloads tab at the following webpage:
  - https://www.cyberdata.net/products/011214
- · Create a plan for the locations of your devices.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation
- · WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: This enclosure is not rated for any AC voltages!

#### **Parts**


**Quick Reference** 

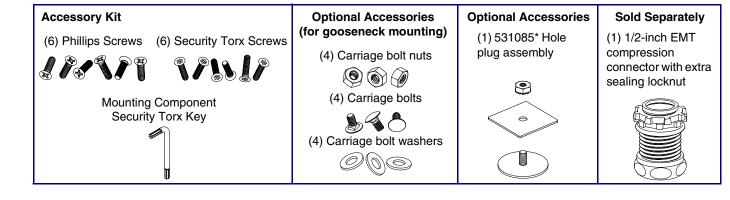

931560D

#### **Features**

#### Dimensions (Front and Side View)

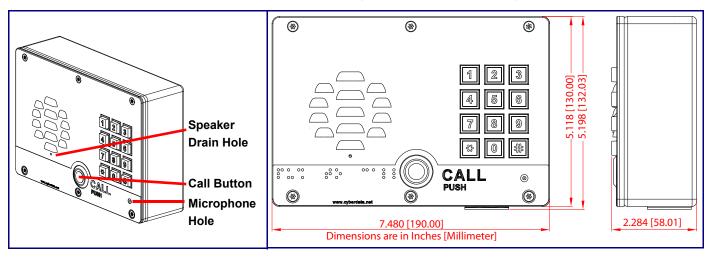

#### **Terminal Block Connections**



- 1 = +8 to +12VDC @ 1000mA Regulated Power Supply\*
- 2 = Power Ground\*




#### Relay Contact:


(1 A at 30 VDC for continuous loads)

- 3 = Relay Common
- 4 = Relay Normally Open Contact
- 5 = Sense Input
- 6 = Sense Ground
- 7 = Remote Switch "A"
- 8 = Remote Switch "B"

\*Contacts 1 and 2 on the terminal block are only for powering the device from a non-PoE 12VDC power source as an alternative to Network PoE power. Use of these contacts for any other purpose will damage the device and void the product warranty.

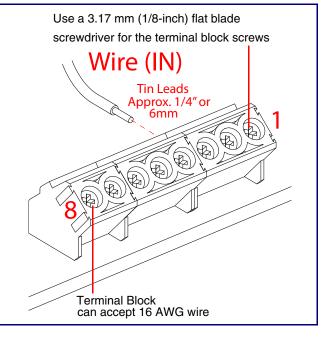

#### RTFM Button

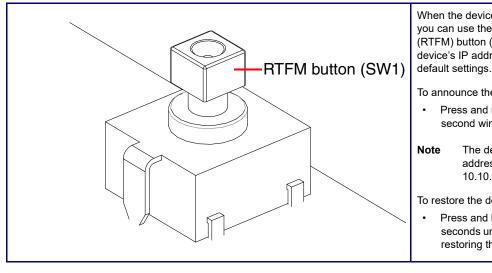

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory

To announce the device's current IP address:


Press and release the RTFM button within a five second window.

The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).


To restore the device to factory default settings:

Press and hold the RTFM button for longer than five seconds until you hear the device announce that it is restoring the factory default settings.

#### Dimensions (Rear View and Mounting Holes)

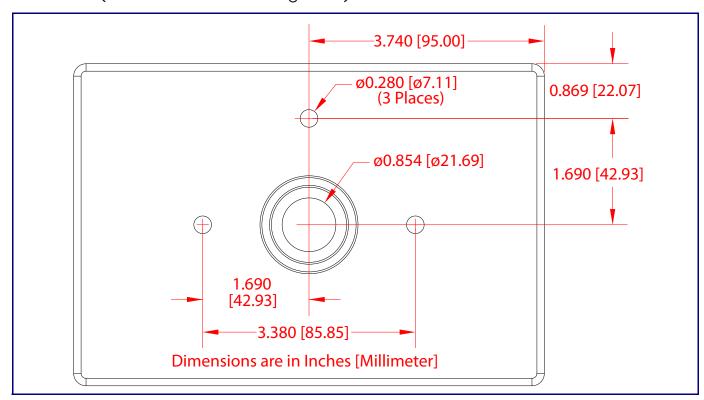

## Wall Mounting with Ground Cable and Network Cable Installation

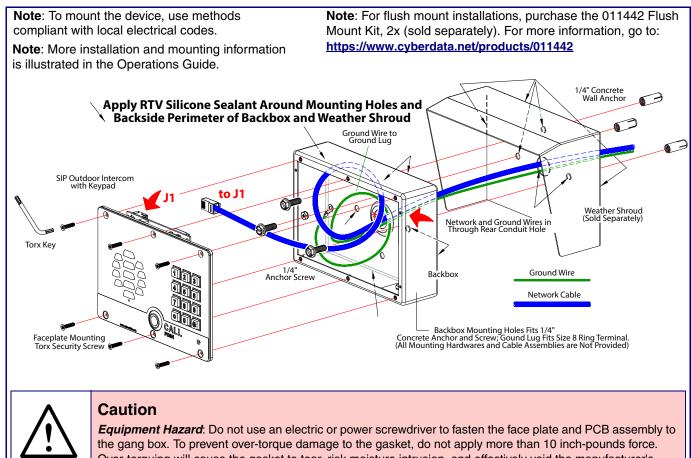

# GENERAL ALERT

Over-torquing will cause the gasket to tear, risk moisture intrusion, and effectively void the manufacturer's