



Wall Mounting Options

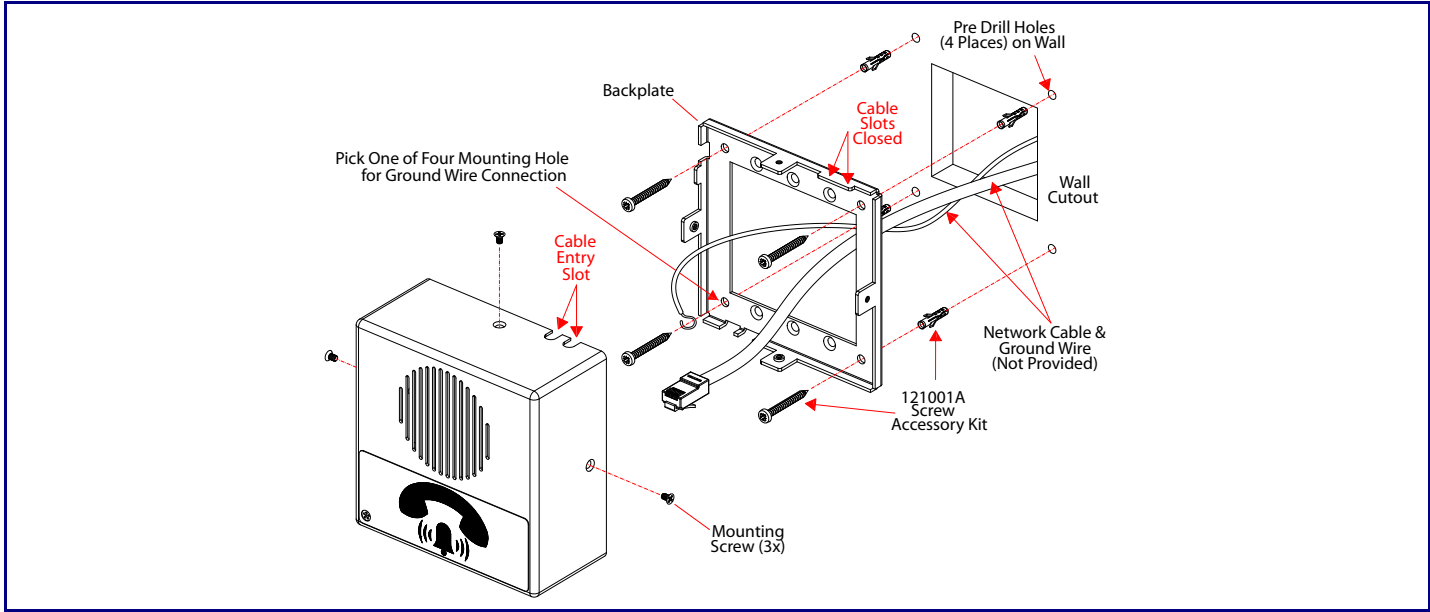

Gang Box Mounting Options

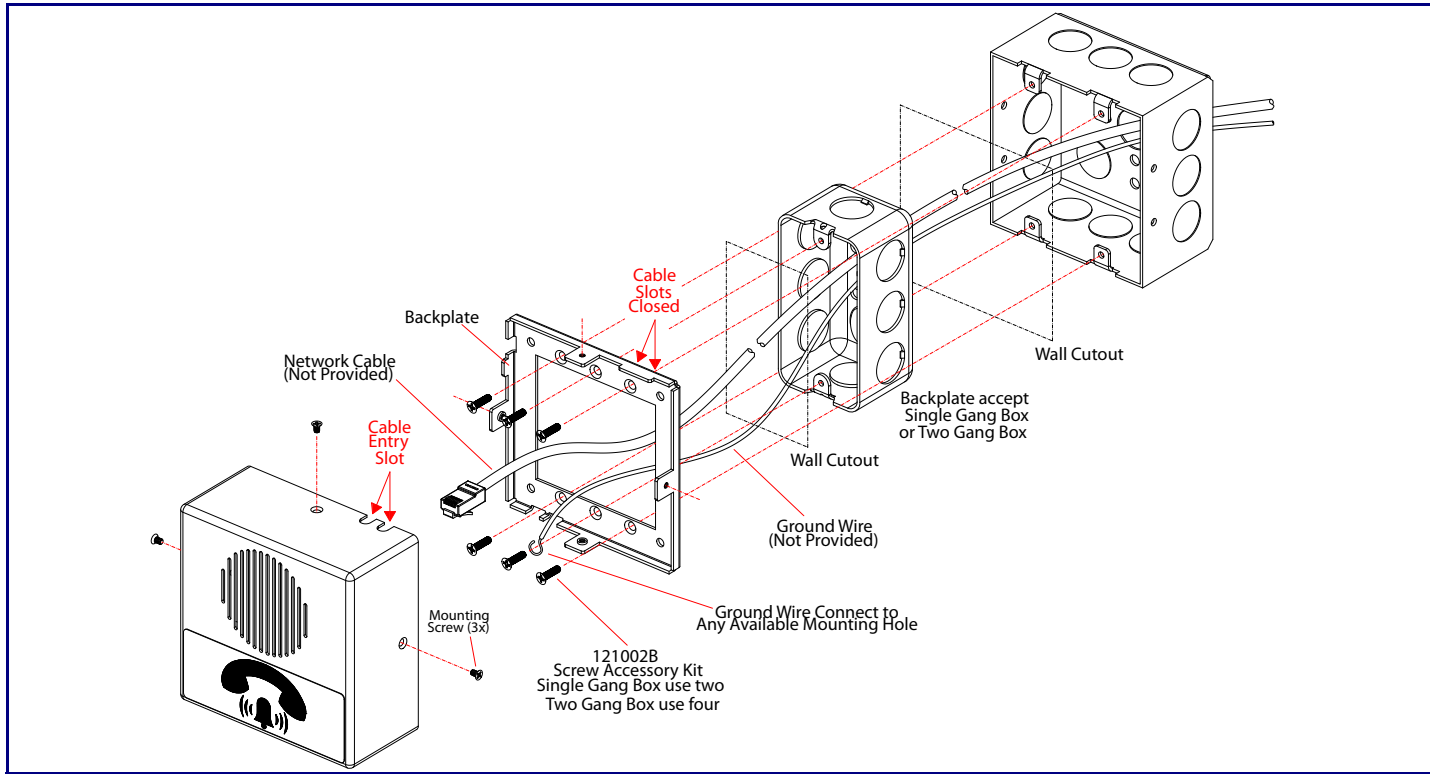

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<https://www.cyberdata.net/>

Sales: 831-373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <https://support.cyberdata.net/>
RMA Department Contact and Status: <https://support.cyberdata.net/>
Warranty Information: <https://support.cyberdata.net/>


Installation Quick Reference
SIP Office Ringer
SIP Compliant
011216



| Parameter | Factory Default Setting |
|------------------------------|-------------------------|
| IP Addressing | DHCP |
| IP Address ^a | IPv4 Link Local |
| Web Access Username | admin |
| Web Access Password | admin |
| Subnet Mask ^a | IPv4 Link Local |
| Default Gateway ^a | IPv4 Link Local |

a. Default if there is not a DHCP server present.

Typical System Installation

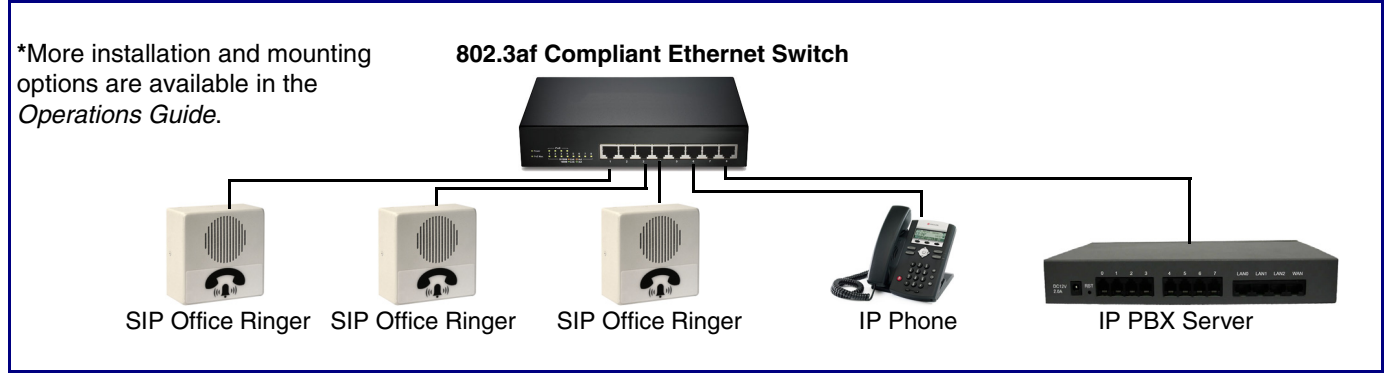


Getting Started

- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:
<https://www.cyberdata.net/products/011216>
- Create a plan for the locations of your Office Ringers.
- WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING:** This enclosure is not rated for any AC voltages!


Parts

| (1) Office Ringer Assembly | (1) Wall Mounting Kit | (1) Gang Box Mounting Kit |
|----------------------------|--|---|
| | <p>(4) #6 x 1.25-inch Sheet Metal Screw</p> <p>(4) Plastic ribbed anchor</p> | <p>(4) 6-32 x 0.5-inch flat undercut Phillips machine screw</p> |


Dimensions

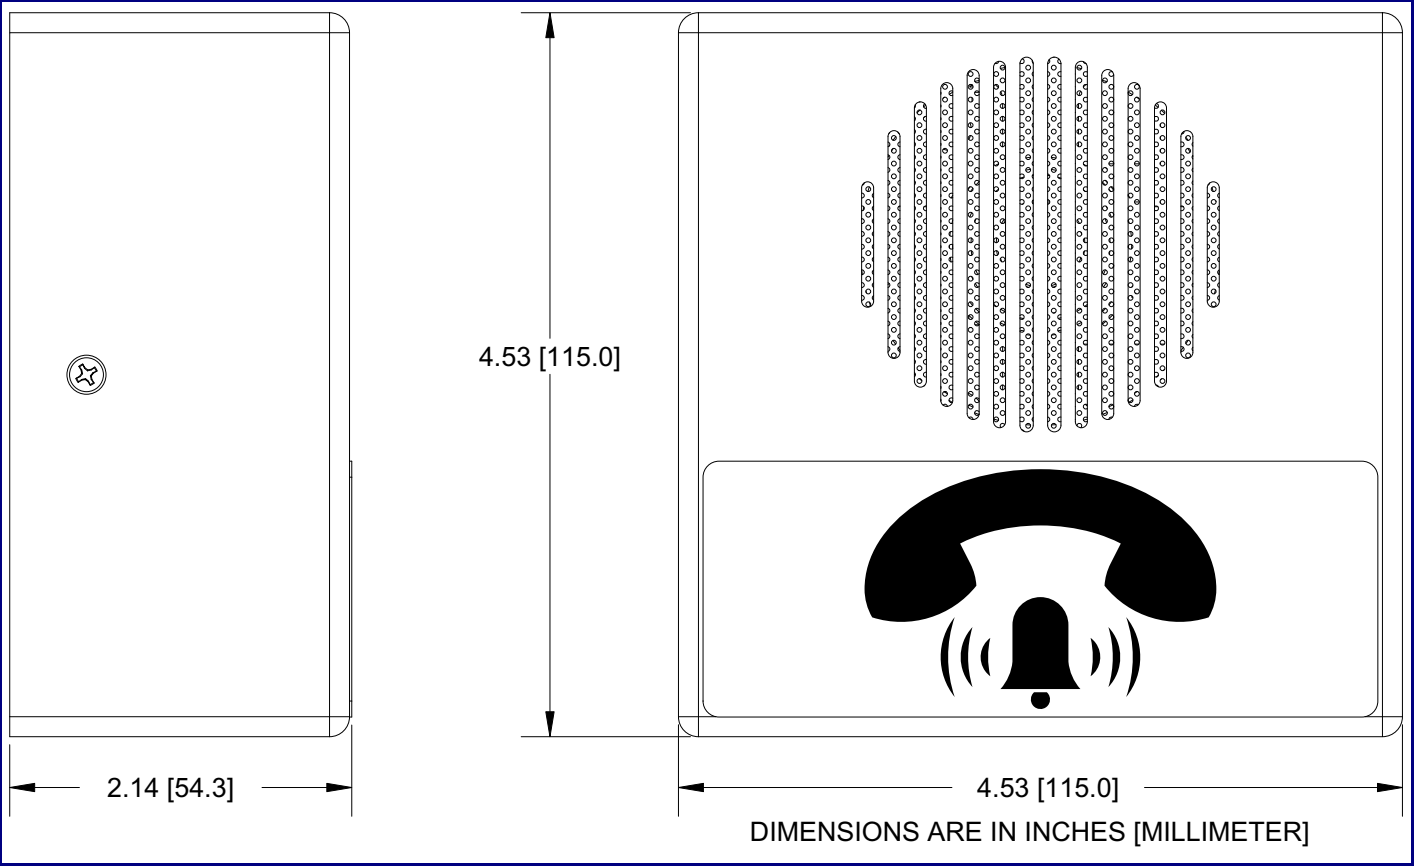


Dimensions for Wall Mounting and One / Two Gang Box Mounting

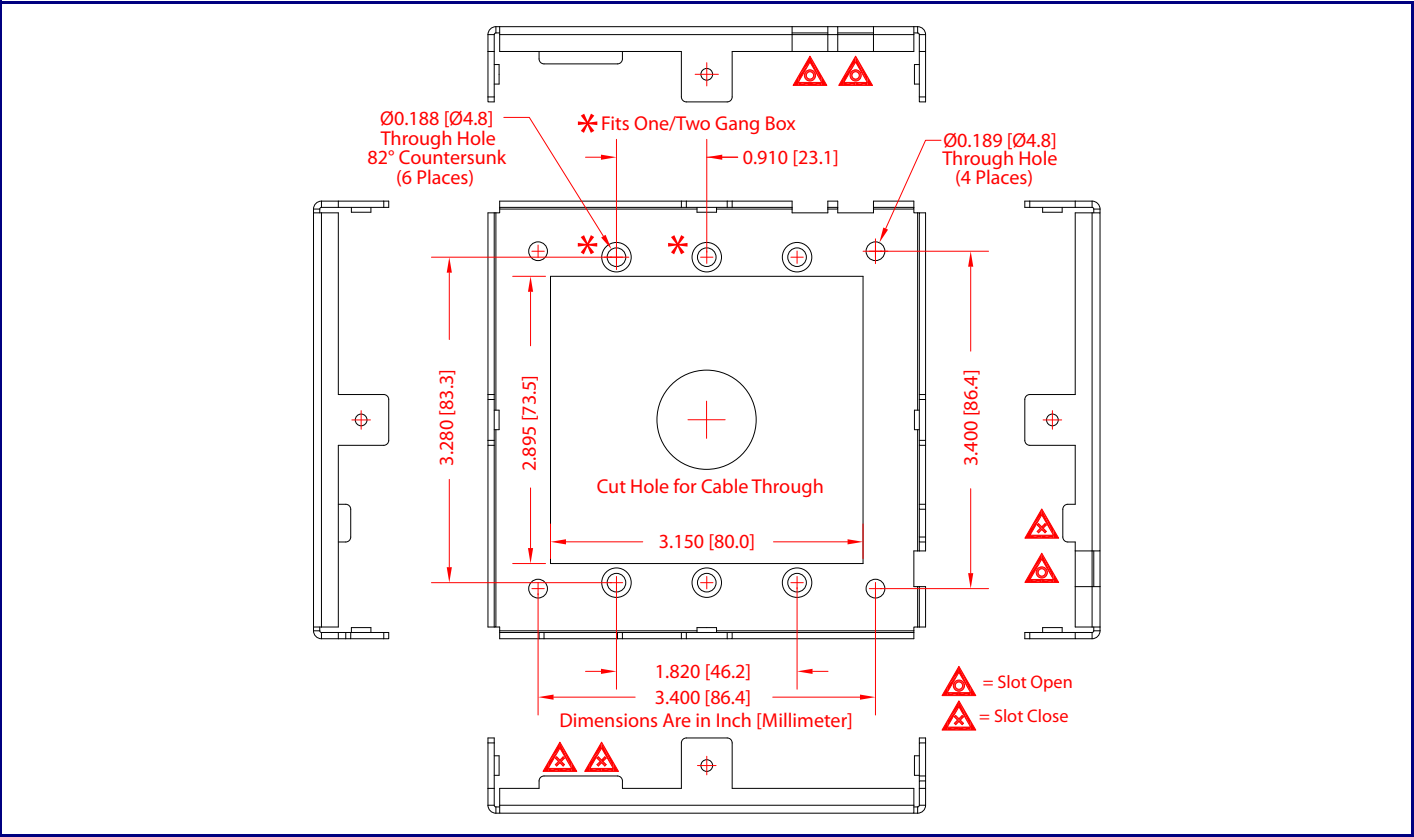

RTFM Button

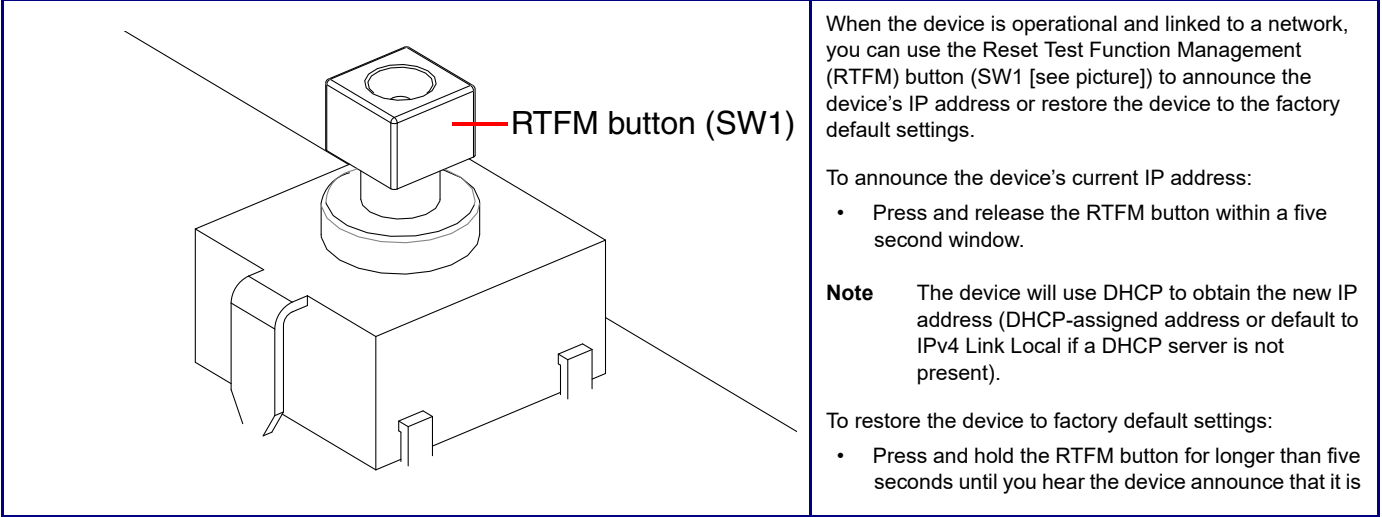

Terminal Block Connections

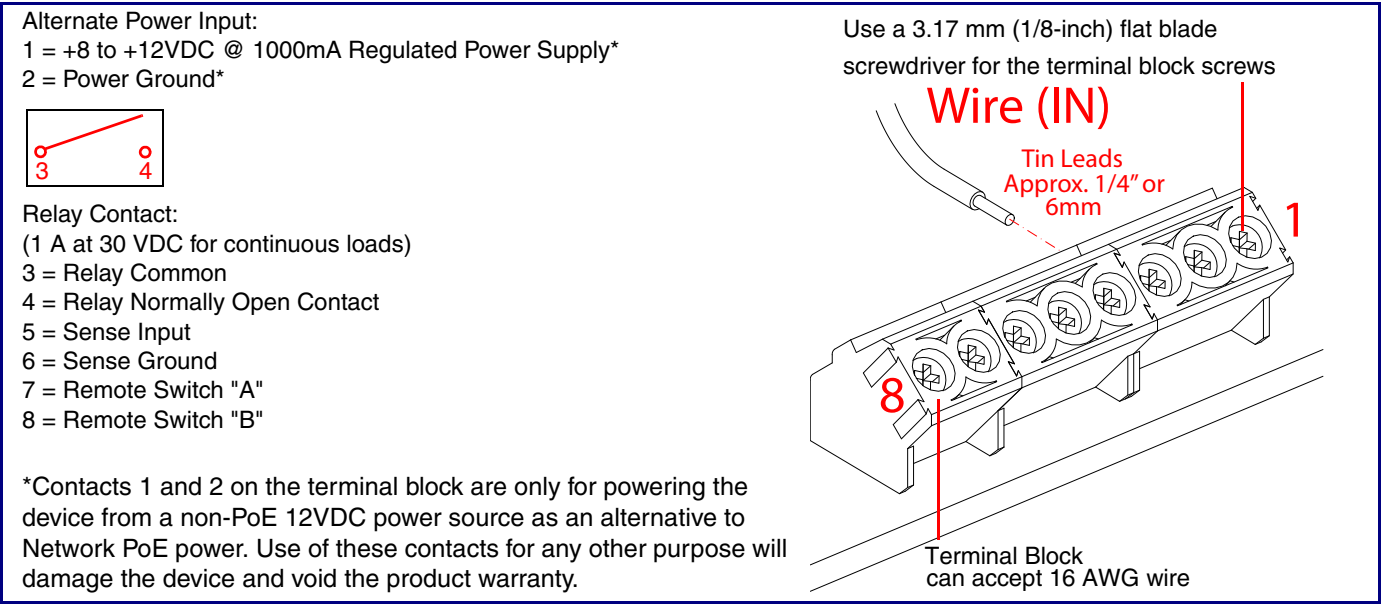

Plug in the Network Cable and Create Service Loop

