

## Wall Mounting Options

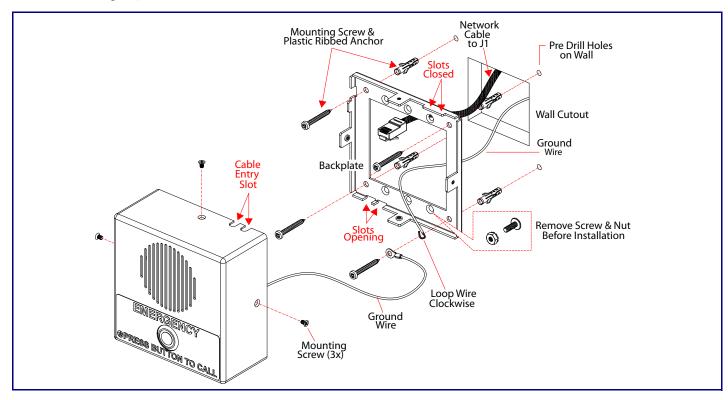

## Gang Box Mounting Options

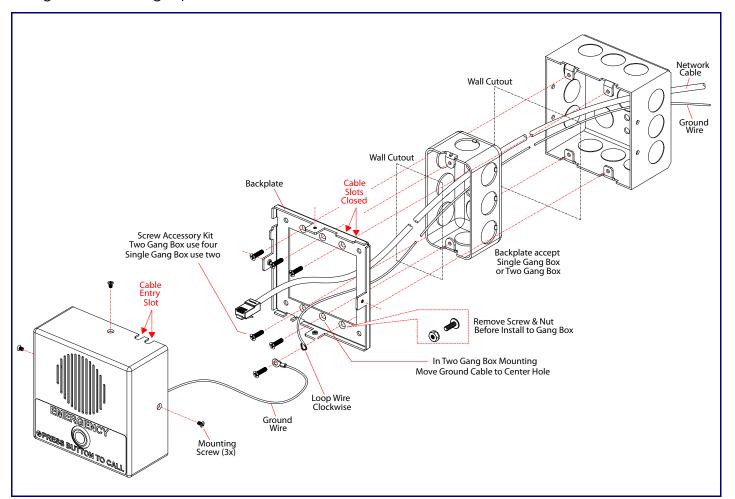



# CyberData Installation Quick Reference The IP Endpoint Company InformaCast Enabled Emergency Intercom 011304



Factory Default Setting
DHCP
10.10.10.10
admin
admin
255.0.0.0
10.0.0.1

a. Default if there is not a DHCP server present.


# Getting Started

• Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:

#### https://www.cyberdata.net/products/011304

- Create a plan for the locations of your Intercoms.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: This enclosure is not rated for any AC voltages!

## **Parts**

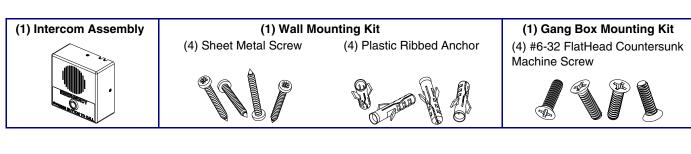

# Contacting CyberData

## Corporate Headquarters

CyberData Corporation 3 Justin Court

Monterey, CA 93940, USA

Phone: 831-373-2601 Fax: 831-373-4193 http://www.cyberdata.net/ Sales: (831) 373-2601 ext. 334 Support: 831-373-2601 ext. 333


Support Website: <a href="http://support.cyberdata.net/">http://support.cyberdata.net/</a>

RMA Department: (831) 373-2601 ext. 136 RMA Email: RMA@CyberData.net


RMA Status: http://support.cyberdata.net/

Warranty Information: http://support.cyberdata.net/


## Dimensions

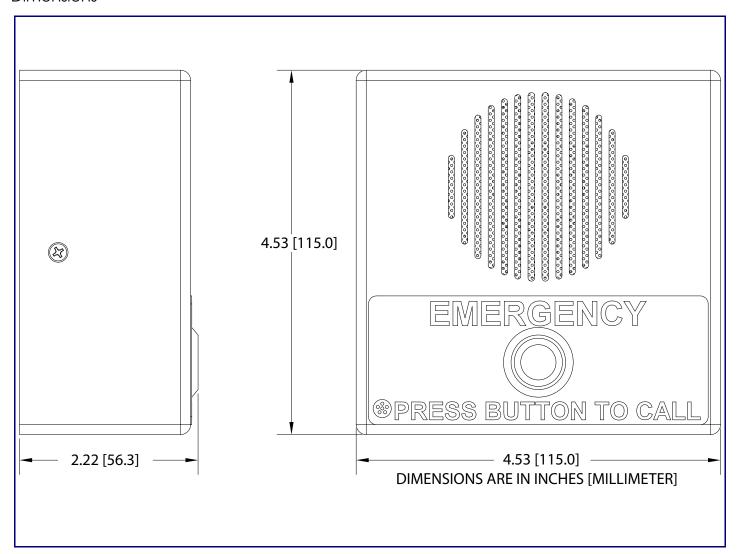

## **Terminal Block Connections**

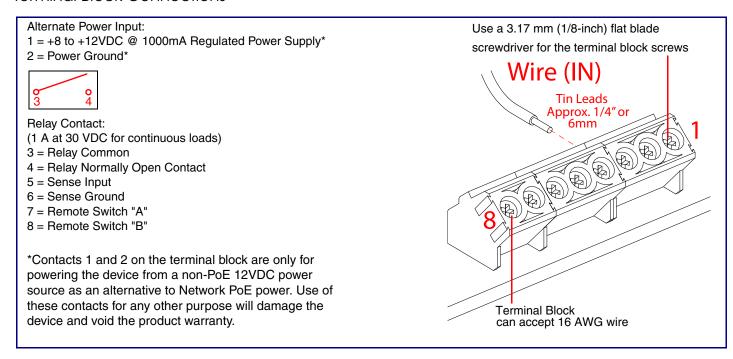

## RTFM Button

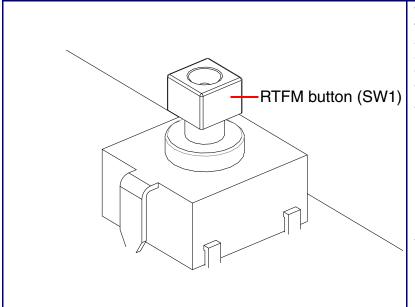

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory default settings.

To announce the device's current IP address:

 Press and release the RTFM button within a five second window.

Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

To restore the device to factory default settings:

 Press and hold the RTFM button for longer than five seconds until you hear the device announce that it is restoring the factory default settings.

# Maximum Recommended Wall Cutout Dimensions

