
Dimensions

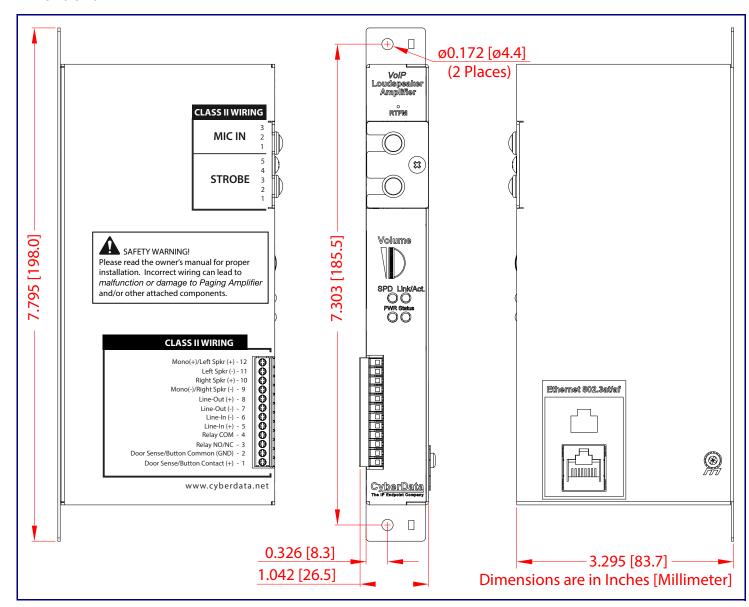

Contacting CyberData

Corporate Headquarters

CyberData Corporation

3 Justin Court Supp Monterey, CA 93940, USA Supp

Monterey, CA 93940, USA

Phone: 831-373-2601 Fax: 831-373-4193 http://www.cyberdata.net/ Sales: (831) 373-2601 ext. 334 Support: 831-373-2601 ext. 333

Support Website: http://support.cyberdata.net/

RMA Department: (831) 373-2601 ext. 136 RMA Email: RMA@CyberData.net

RMA Status: http://support.cyberdata.net/
Warranty Information: http://support.cyberdata.net/

CyberData
The IP Endpoint Company

Installation Quick Reference SIP Paging Amplifier


011324



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

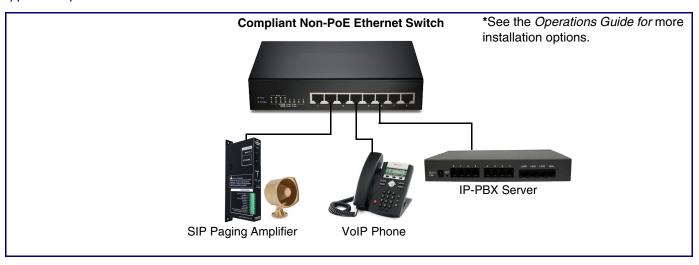


Getting Started

- Download the Operations Guide PDF file from the Documents tab at the following webpage: http://www.cyberdata.net/voip/011324/
- Create a plan for the locations of your paging amplifiers.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- · WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: The SIP Paging Amplifier enclosure is not rated for any AC voltages!


Parts




931154D

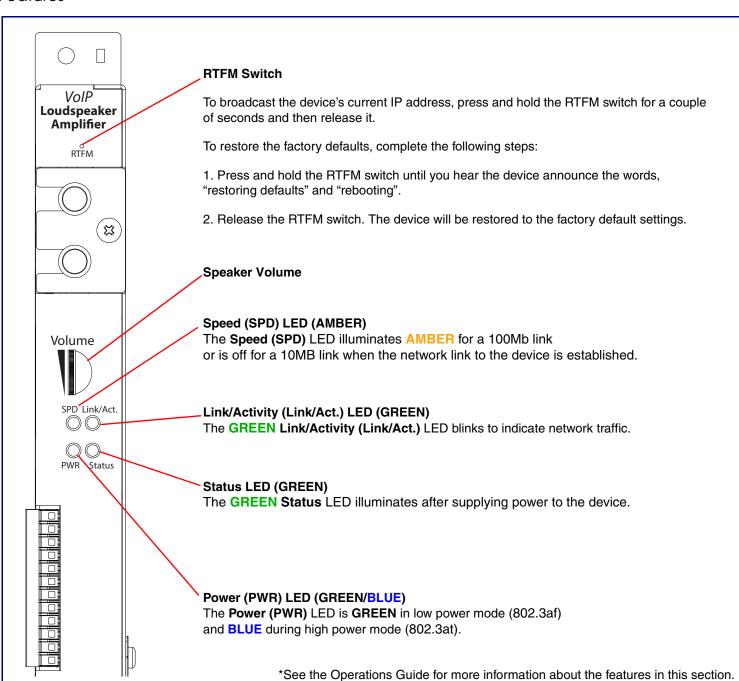

Strobe Connections

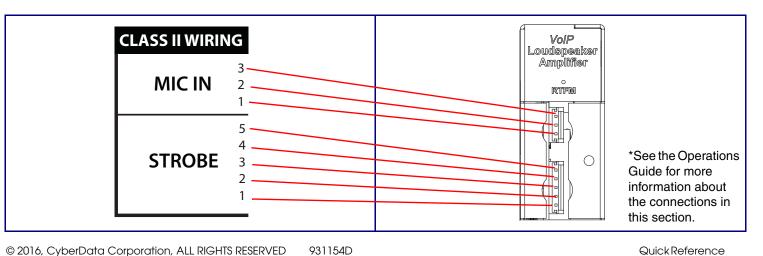

Connection Options

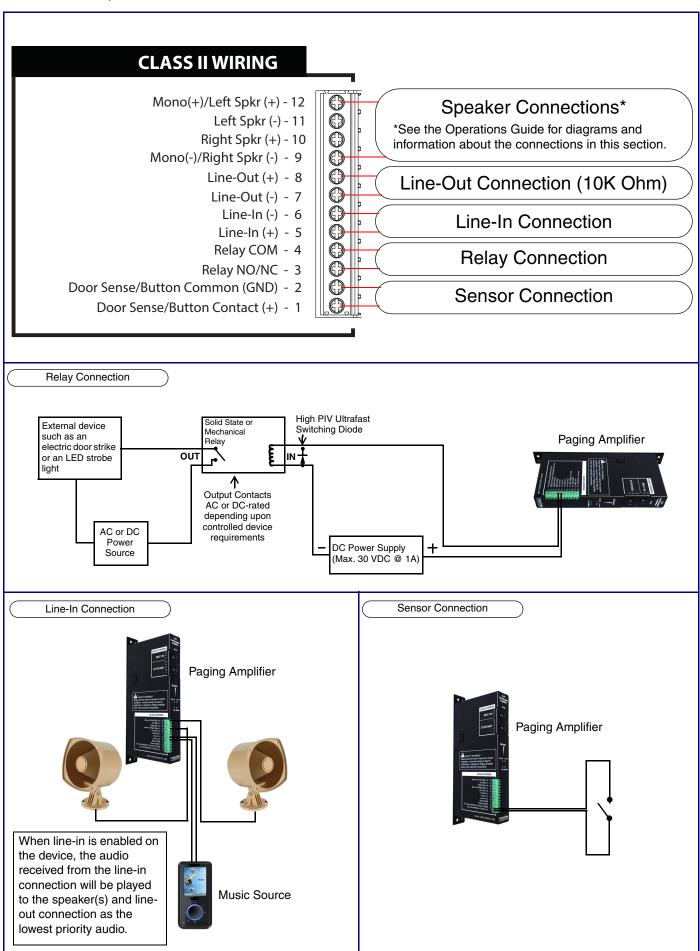

Quick Reference