


Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	192.168.1.23
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.255.255.0
Default Gateway ^a	192.168.1.1

a. Default if there is not a DHCP server present.


Typical System Installation

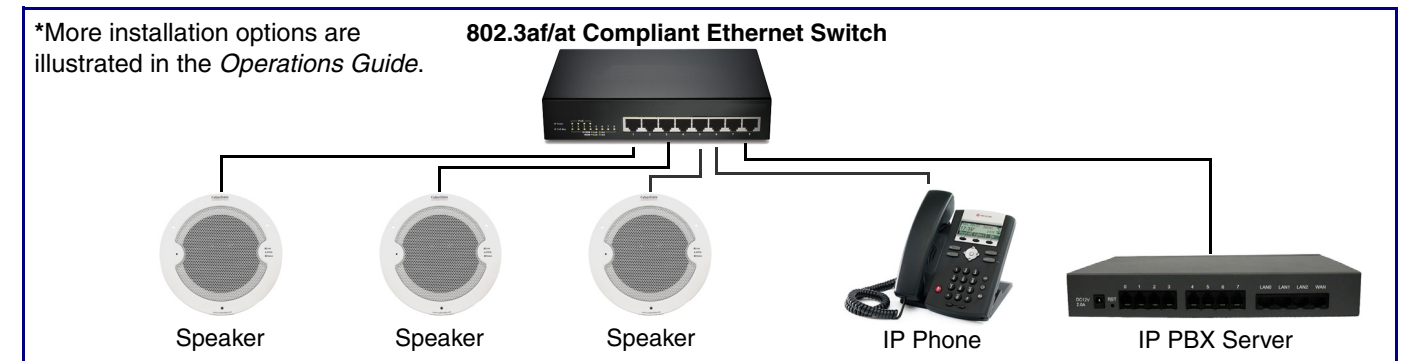


Getting Started

- Download the *Operations Guide* PDF file, from the following webpage:
<https://www.cyberdata.net/products/011394>
- Create a plan for the locations of your SIP Speakers.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!


Parts

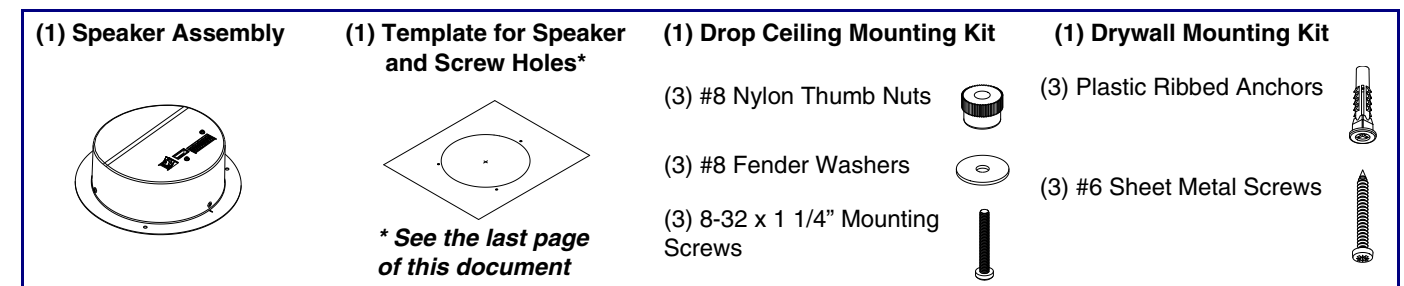


Dimensions and Connections

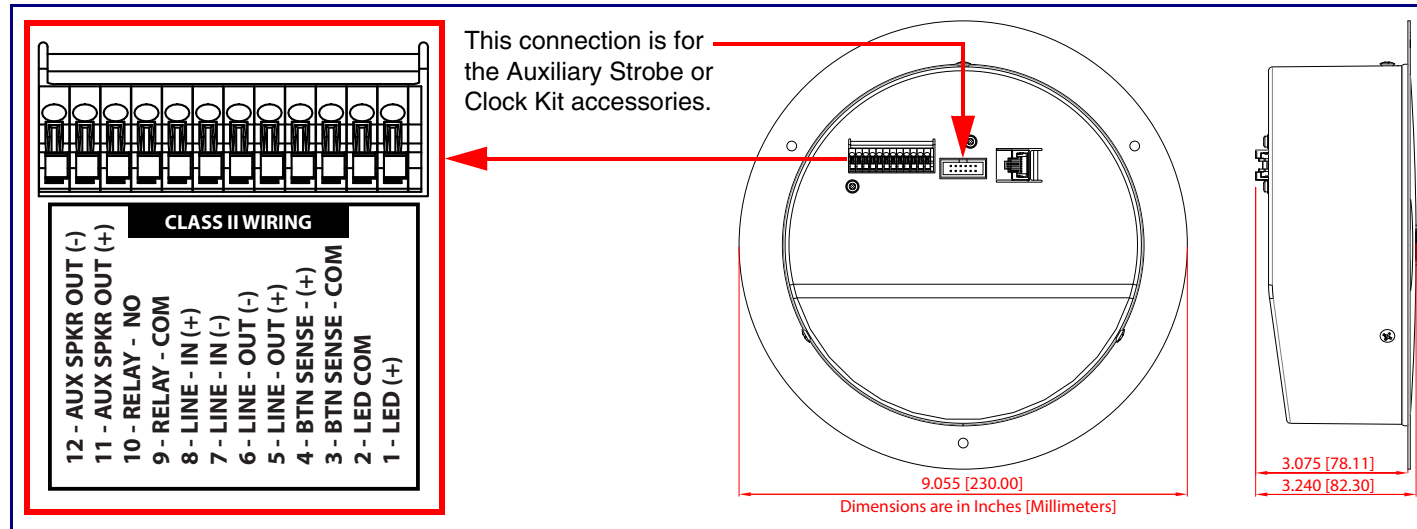


Connecting Power

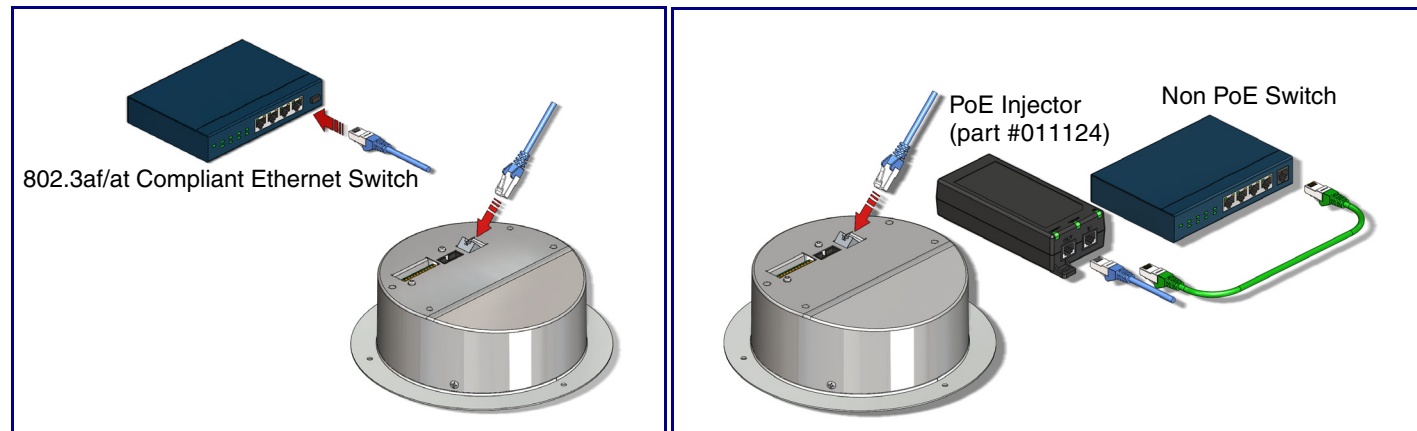

Features

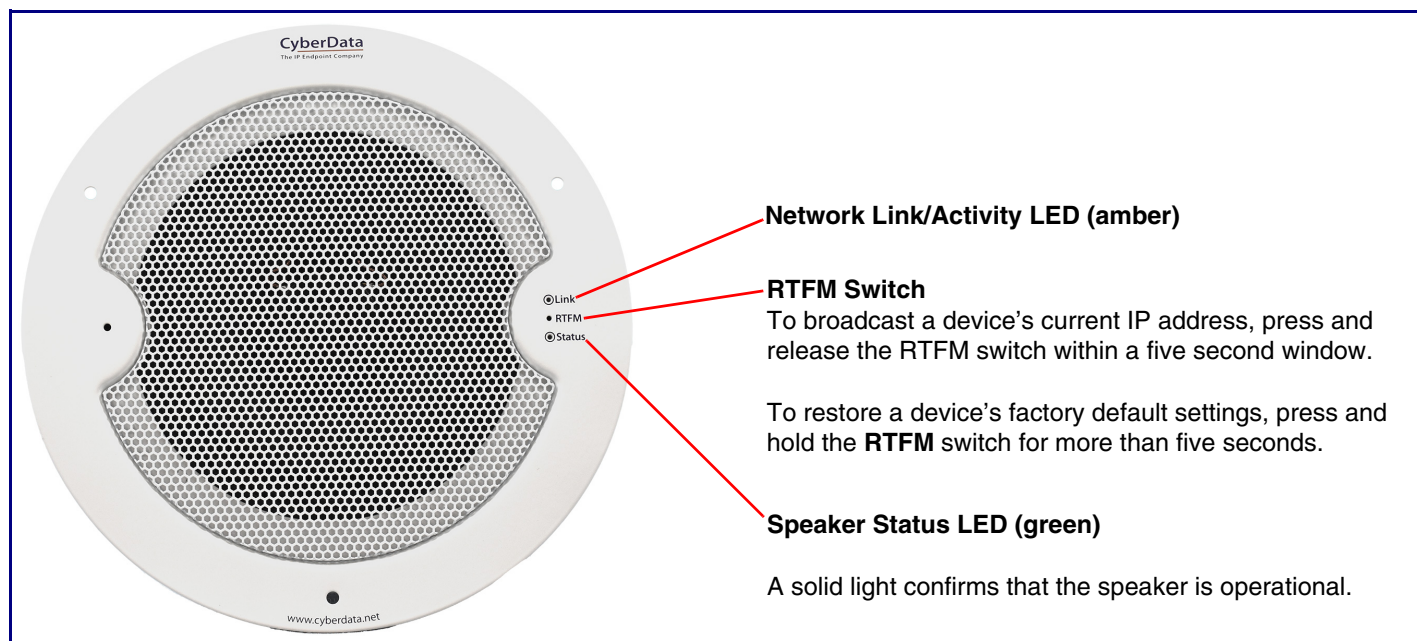

Mounting

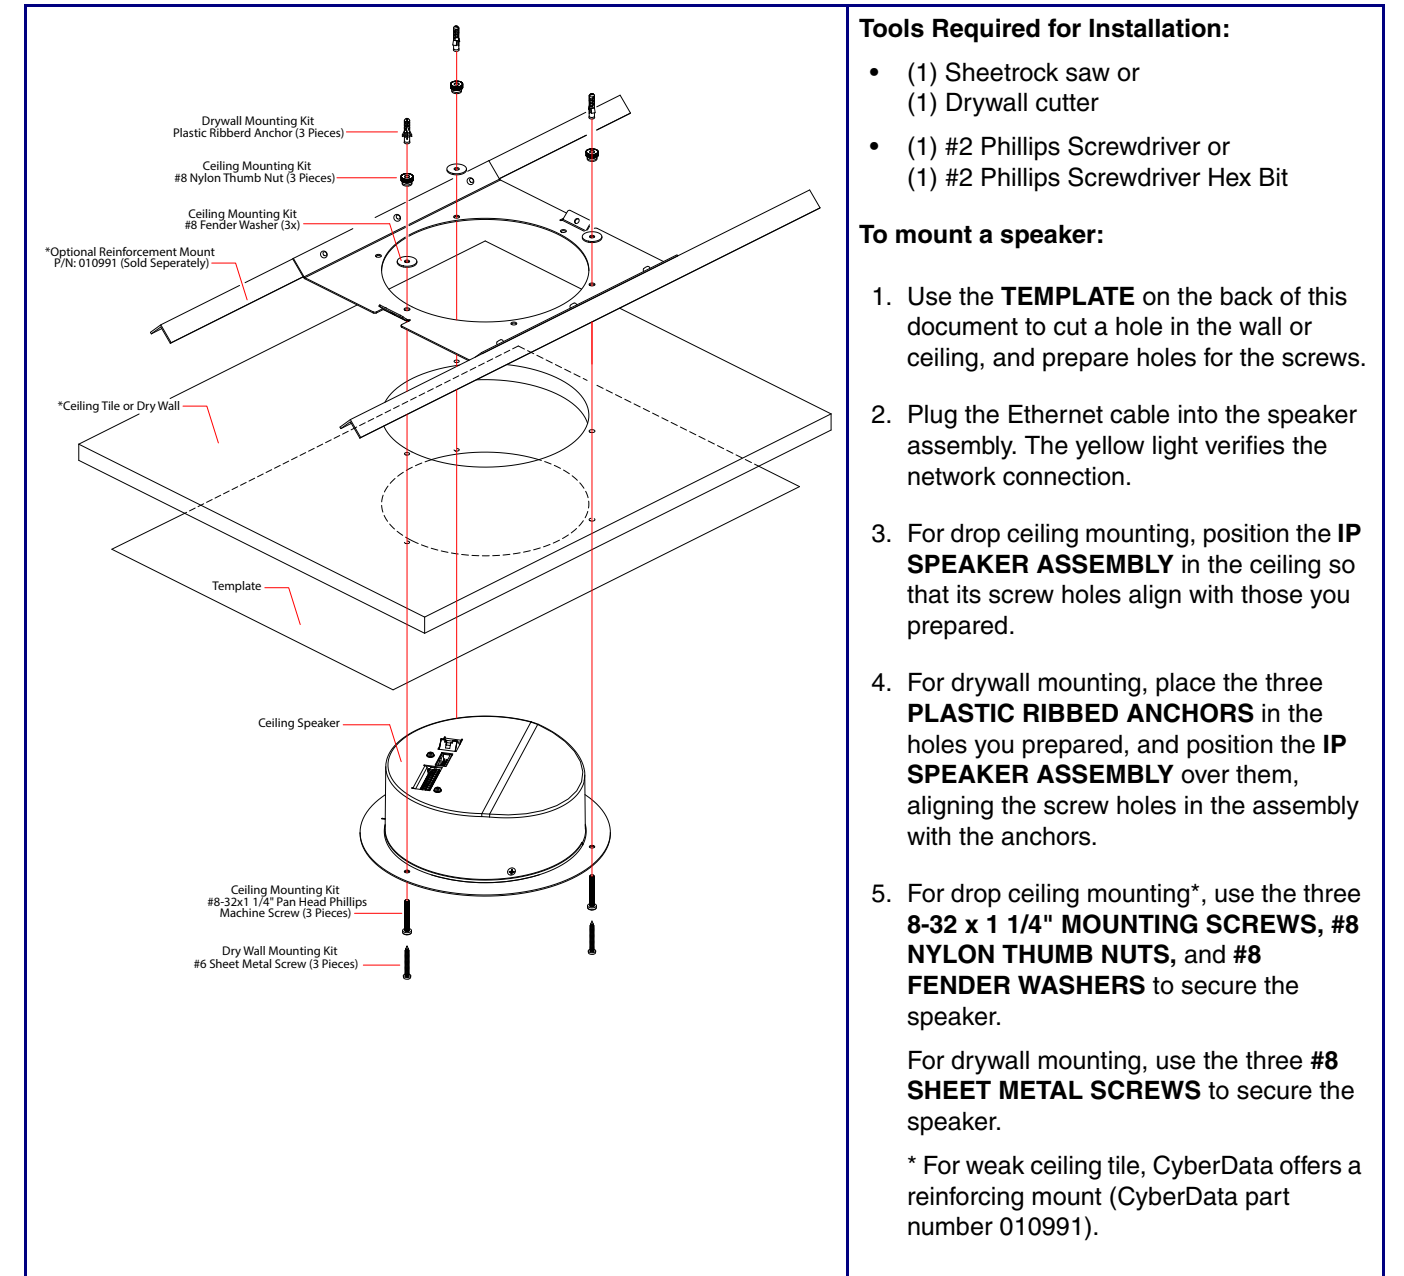

Contacting CyberData

