


Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	192.168.1.23
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.255.255.255
Default Gateway ^a	192.168.1.1

a. Default if there is not a DHCP server present.

Typical System Installation

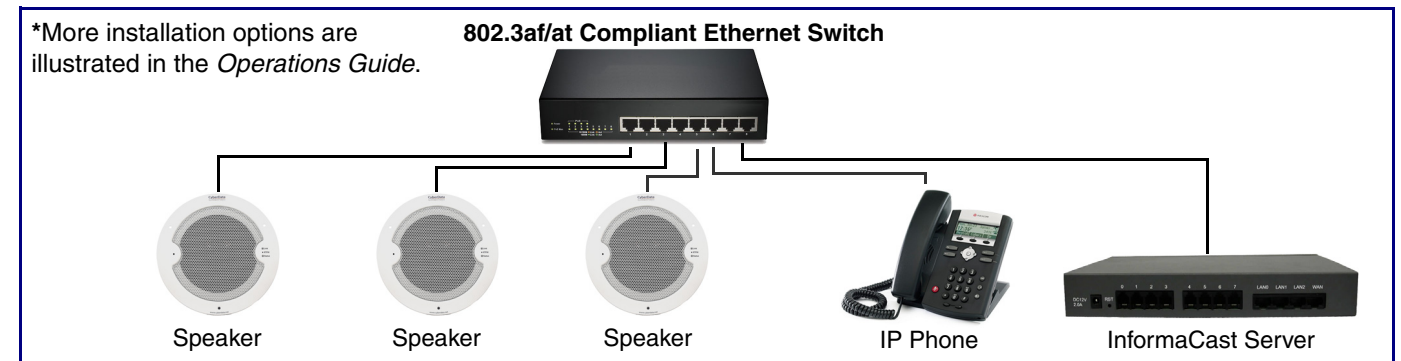


Getting Started

- Download the *Operations Guide* PDF file, from the following webpage:
<https://www.cyberdata.net/pages/informacast-resources>
- Create a plan for the locations of your InformaCast® Enabled Speakers.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!


Parts

<p>(1) Speaker Assembly</p>	<p>(1) Template for Speaker and Screw Holes*</p> <p><i>* See the last page of this document</i></p>	<p>(1) Drop Ceiling Mounting Kit</p> <p>(3) #8 Nylon Thumb Nuts</p> <p>(3) #8 Fender Washers</p> <p>(3) 8-32 x 1 1/4" Mounting Screws</p>	<p>(1) Drywall Mounting Kit</p> <p>(3) Plastic Ribbed Anchors</p> <p>(3) #6 Sheet Metal Screws</p>
------------------------------------	--	--	---


Dimensions and Connections

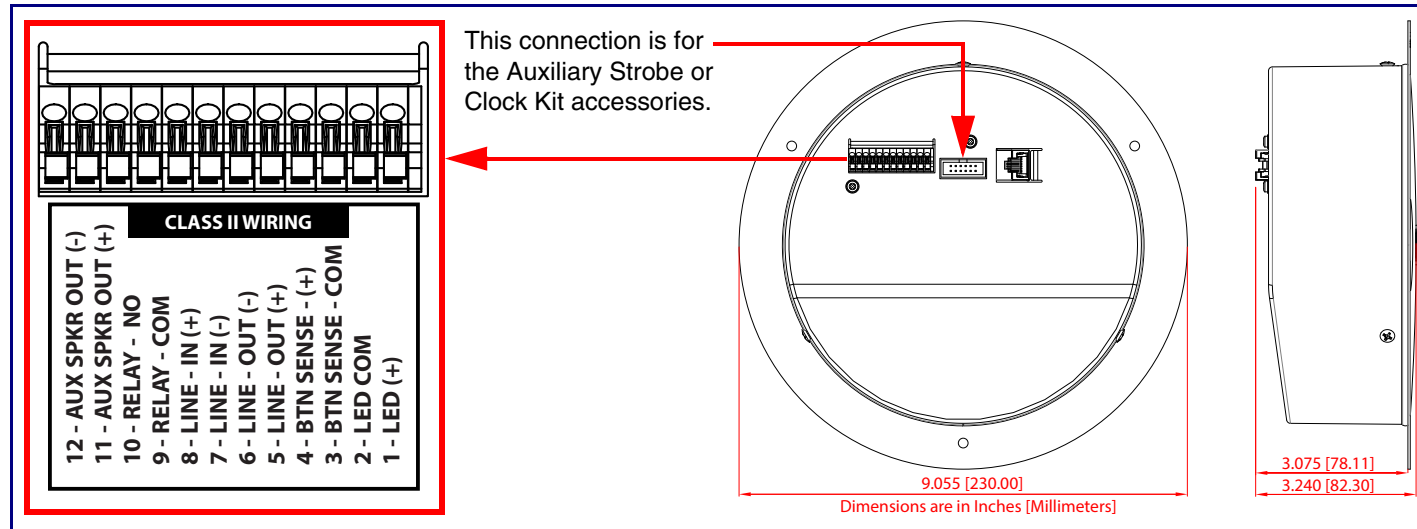


Connecting Power

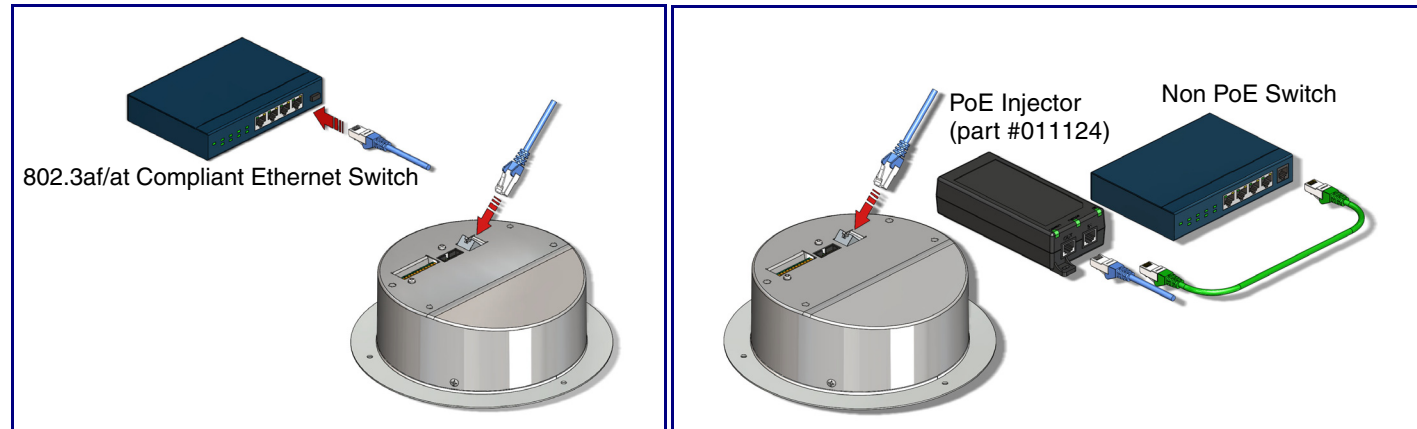

Features

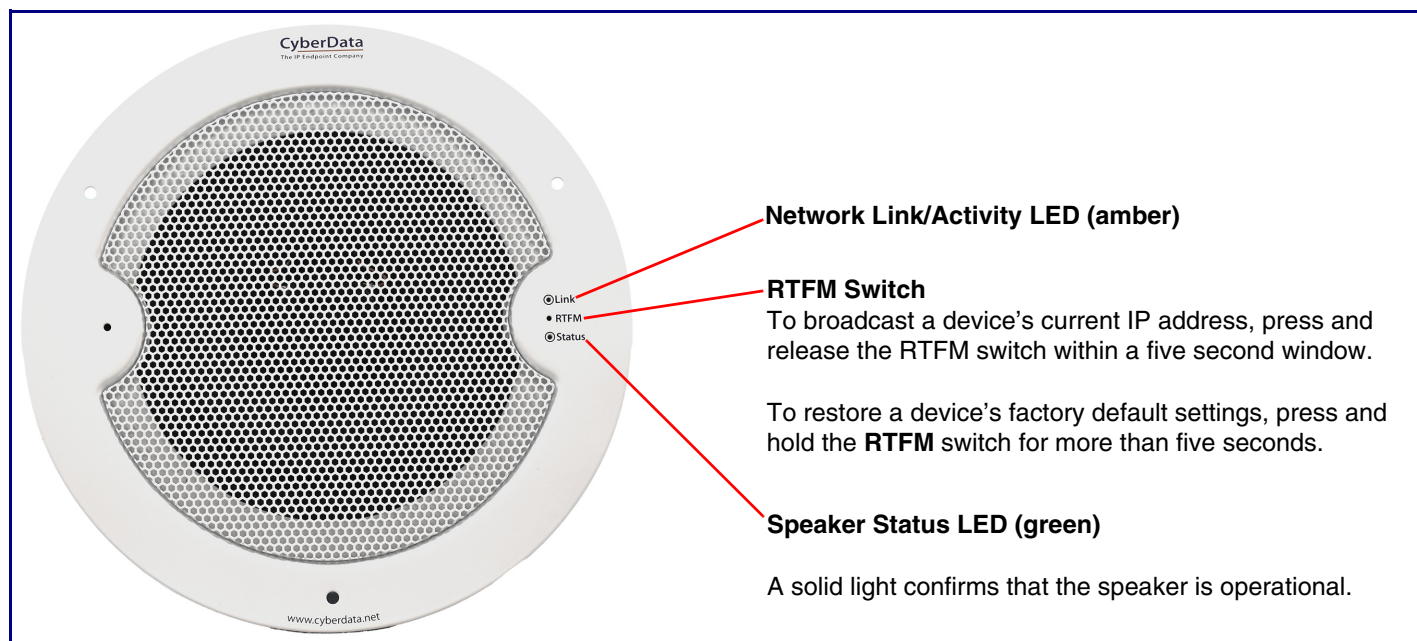

Mounting

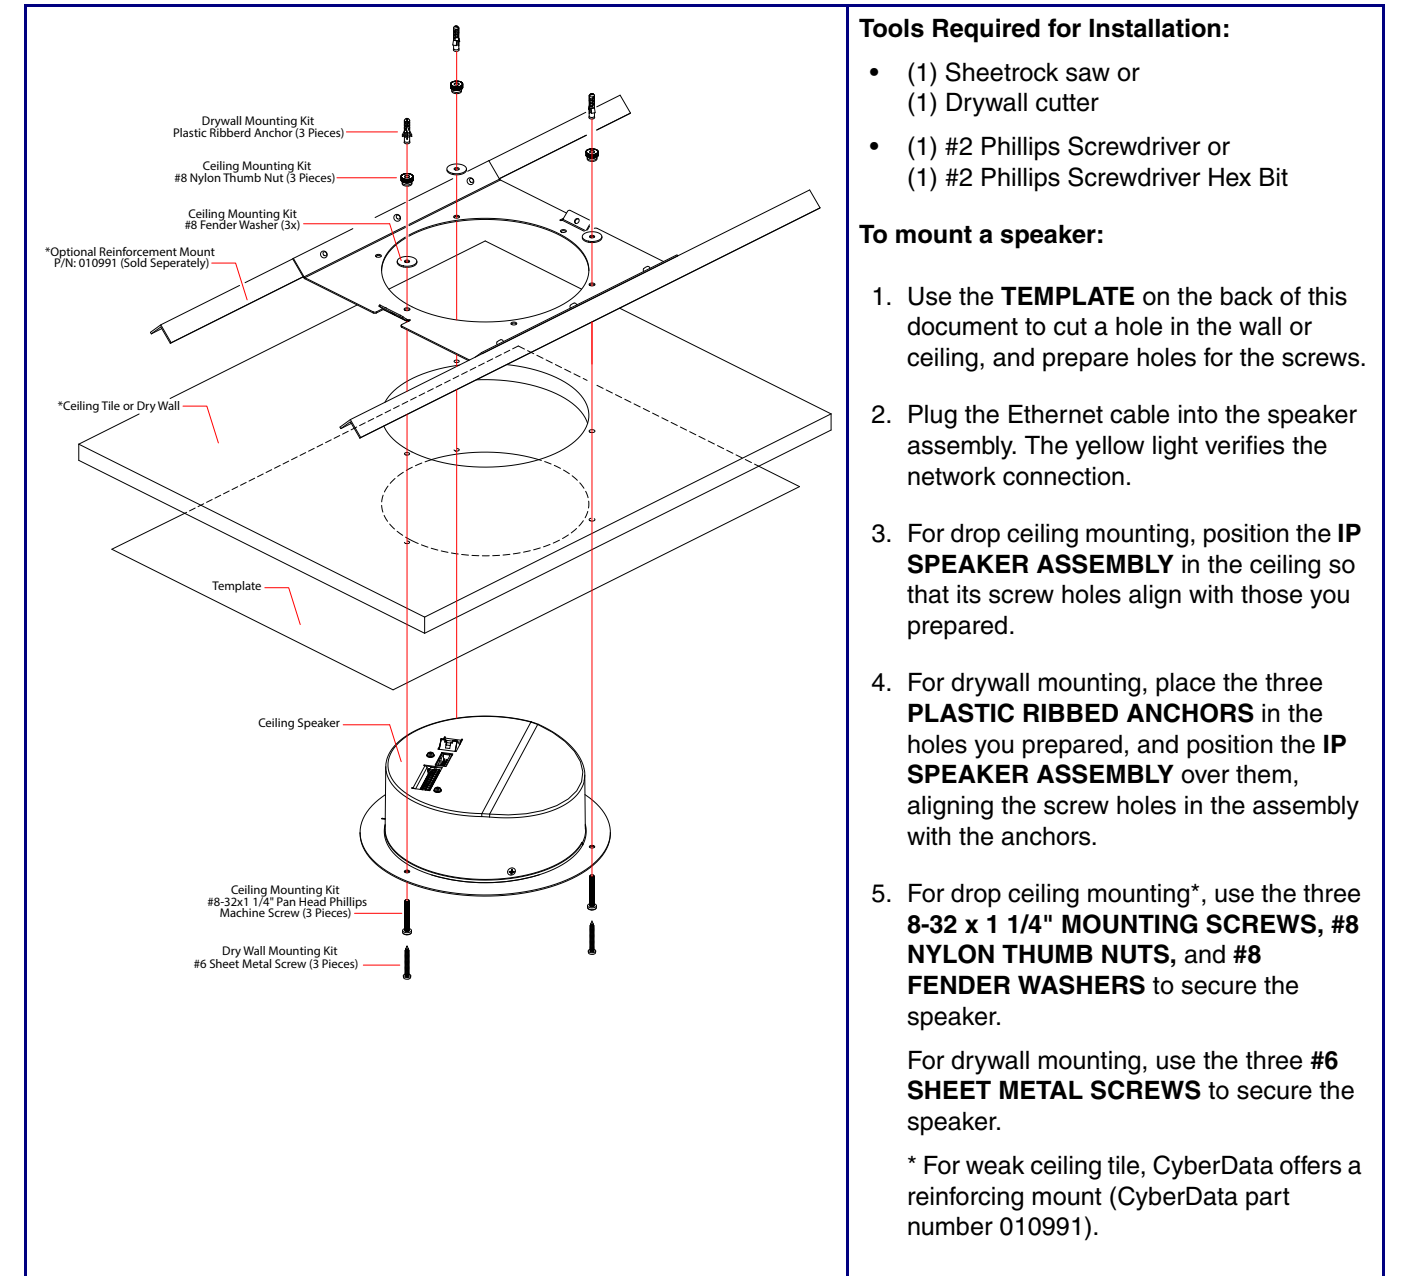

Contacting CyberData

