


CyberData

The IP Endpoint Company

Installation Quick Reference

InformaCast® Enabled Speaker with Talk-Back


011396

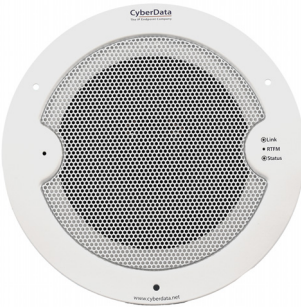

Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	192.168.1.23
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.255.255.0
Default Gateway ^a	192.168.1.1

a. Default if there is not a DHCP server present.

Typical System Installation

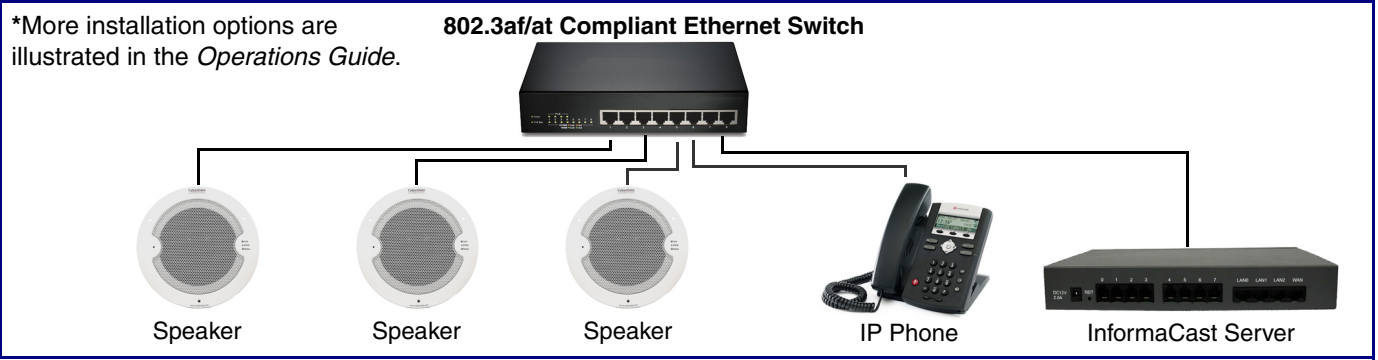


Getting Started

- Download the *Operations Guide* PDF file, from the following webpage:
<https://www.cyberdata.net/products/011396>
- Create a plan for the locations of your InformaCast® Enabled Speakers.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!


Parts

(1) Speaker Assembly	(1) Template for Speaker and Screw Holes*	(1) Drop Ceiling Mounting Kit	(1) Drywall Mounting Kit
	 * See the last page of this document	(3) #8 Nylon Thumb Nuts (3) #8 Fender Washers (3) 8-32 x 1 1/4" Mounting Screws	(3) Plastic Ribbed Anchors (3) #6 Sheet Metal Screws


Dimensions and Connections

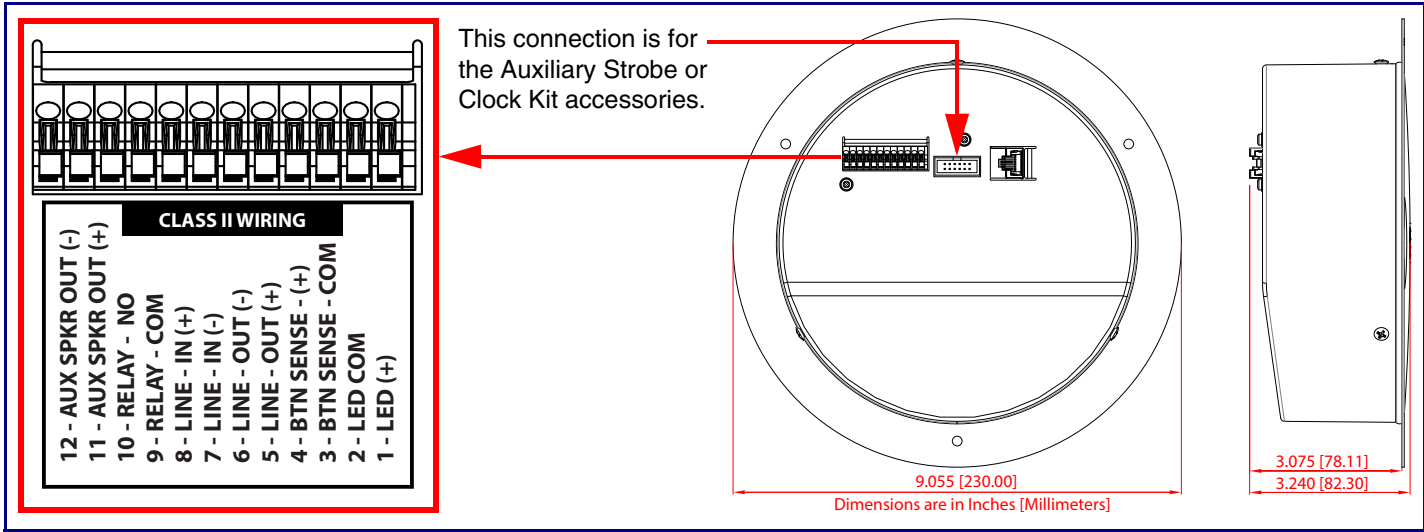


Connecting Power

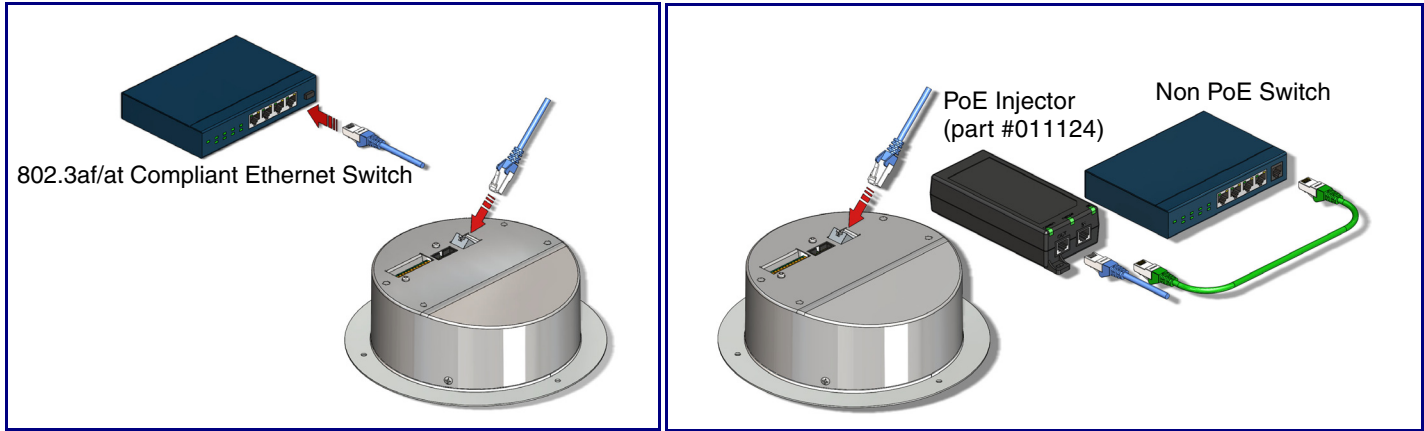

Features

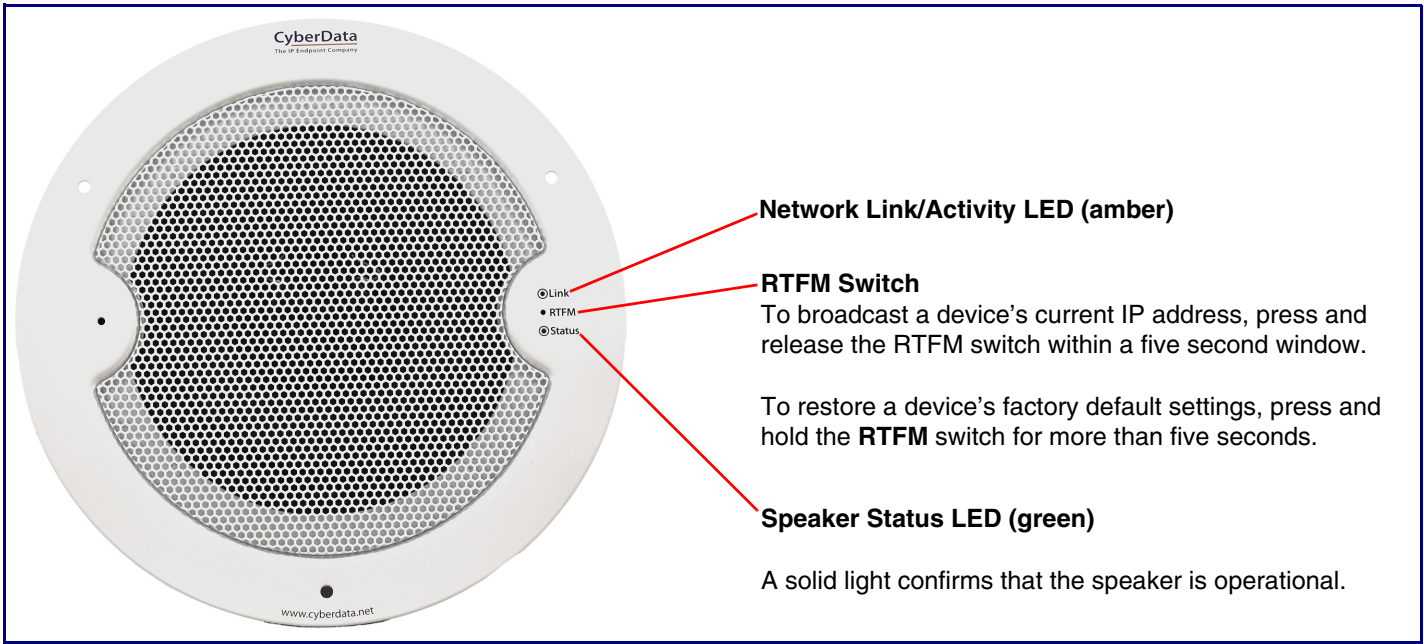

Mounting

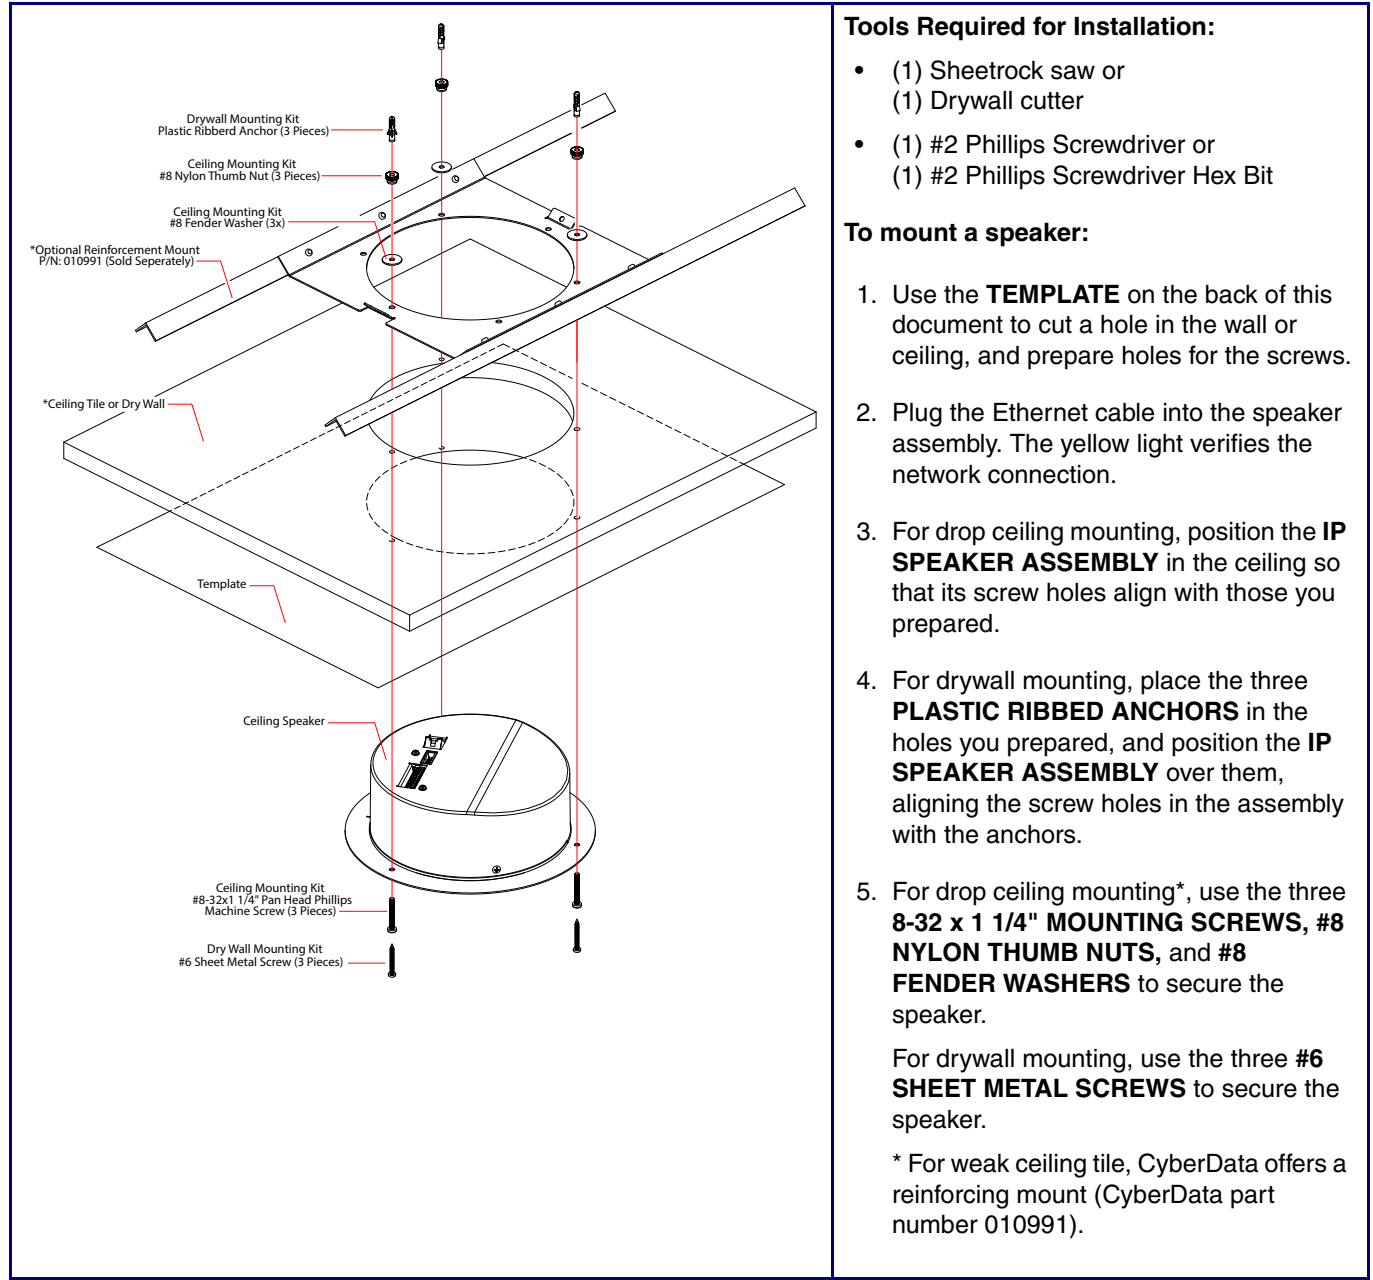

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<https://www.cyberdata.net/>

Sales: 831-373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <https://support.cyberdata.net/>
RMA Department Contact and Status: <https://support.cyberdata.net/>
Warranty Information: <https://support.cyberdata.net/>