 


Mounting the Enclosure

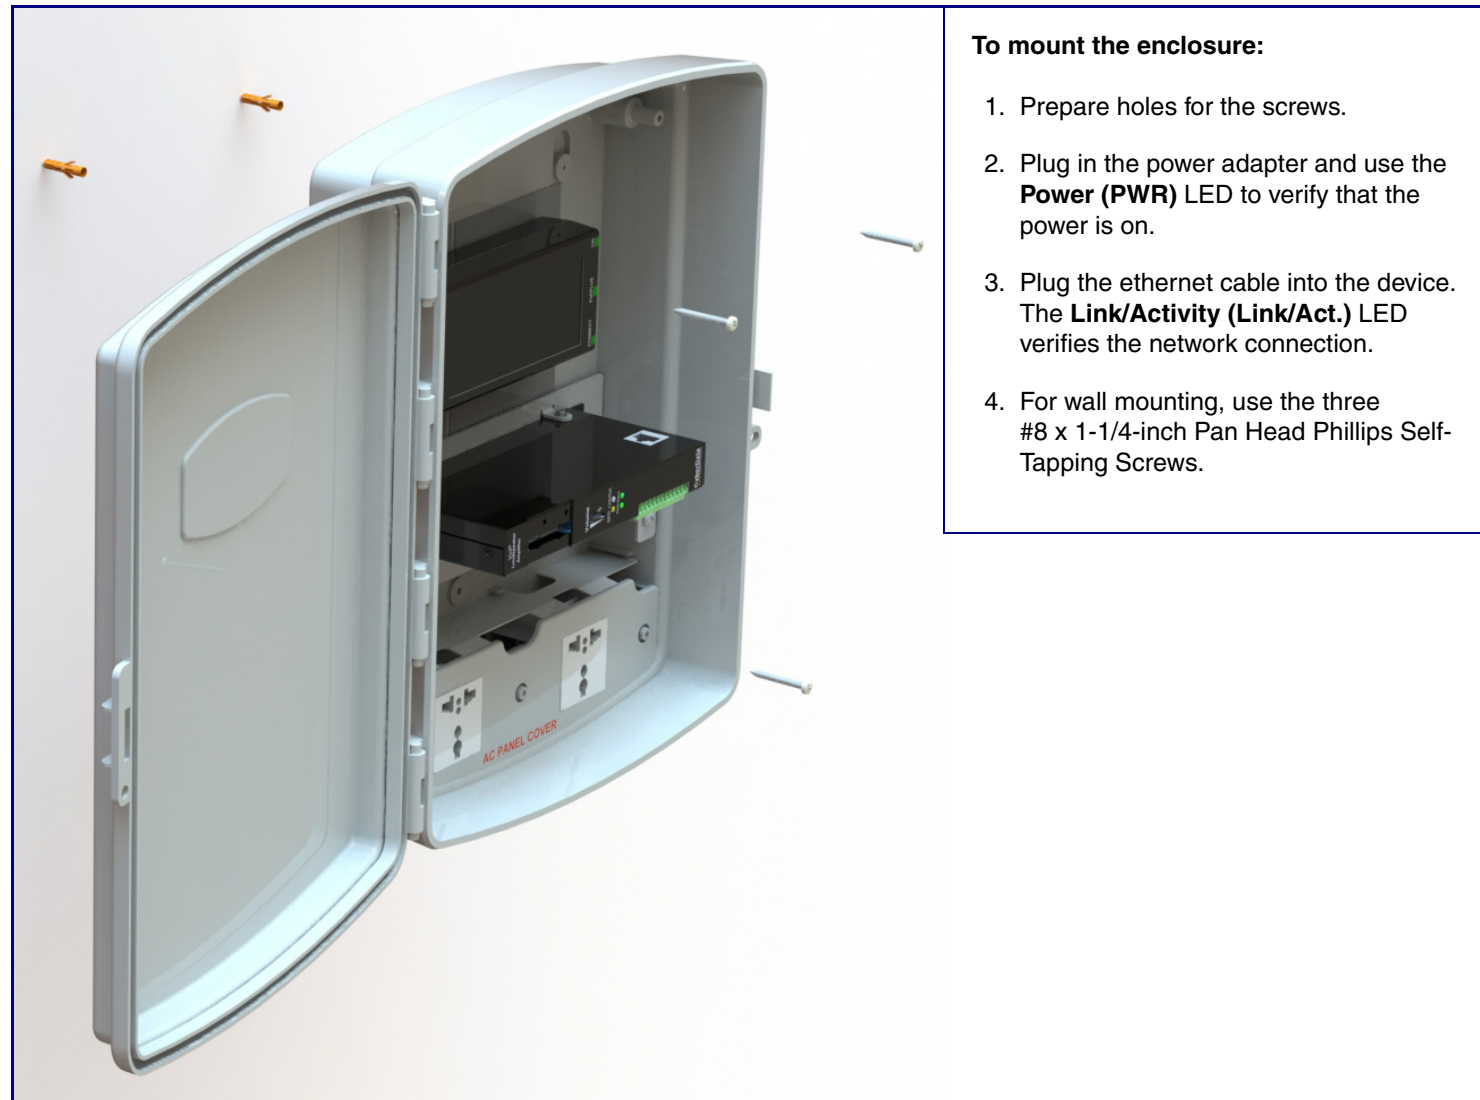

To mount the enclosure:

1. Prepare holes for the screws.
2. Plug in the power adapter and use the **Power (PWR)** LED to verify that the power is on.
3. Plug the ethernet cable into the device. The **Link/Activity (Link/Act.)** LED verifies the network connection.
4. For wall mounting, use the three #8 x 1-1/4-inch Pan Head Phillips Self-Tapping Screws.

CyberData
The IP Endpoint Company

Installation Quick Reference Singlewire InformaCast Loudspeaker Amplifier (AC-Powered) SIP Compliant 011406



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Getting Started

 

 
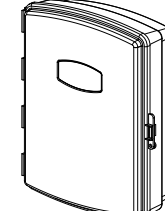 
 
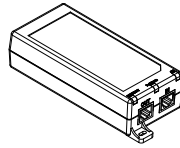 
- Download the *Operations Guide* PDF file from the **Documents** tab at the following webpage: <http://www.cyberdata.net/voip/011406/>
- Create a plan for the locations of your paging amplifiers.
- **WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.**
- **WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.**
- **WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.**
- **WARNING: The Singlewire InformaCast Loudspeaker Amplifier enclosure is not rated for any AC voltages!**

Wiring the 125V AC Plug

The green wire with the yellow stripe is a ground connection for electrostatic discharge (ESD) protection, and should not be removed.

To wire the 125V AC plug, consult a licensed electrician and the local building codes in your area.

Parts

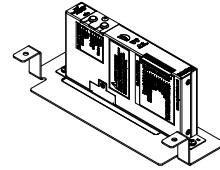(1) Assembly 	(1) Wall Mounting Kit	
	(3) #8 Plastic Anchors 	(3) #8 x 1-1/4" Pan Head Phillips Self-Tapping Screws 
(1) Enclosure 	Additional Parts	
	(1) CAT 5e/CAT6 cable 	(1) PoE Power Injector 

Contacting CyberData

 
Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <http://support.cyberdata.net/>
RMA Department: (831) 373-2601 ext. 136
RMA Email: RMA@CyberData.net
RMA Status: <http://support.cyberdata.net/>
Warranty Information: <http://support.cyberdata.net/>

Features

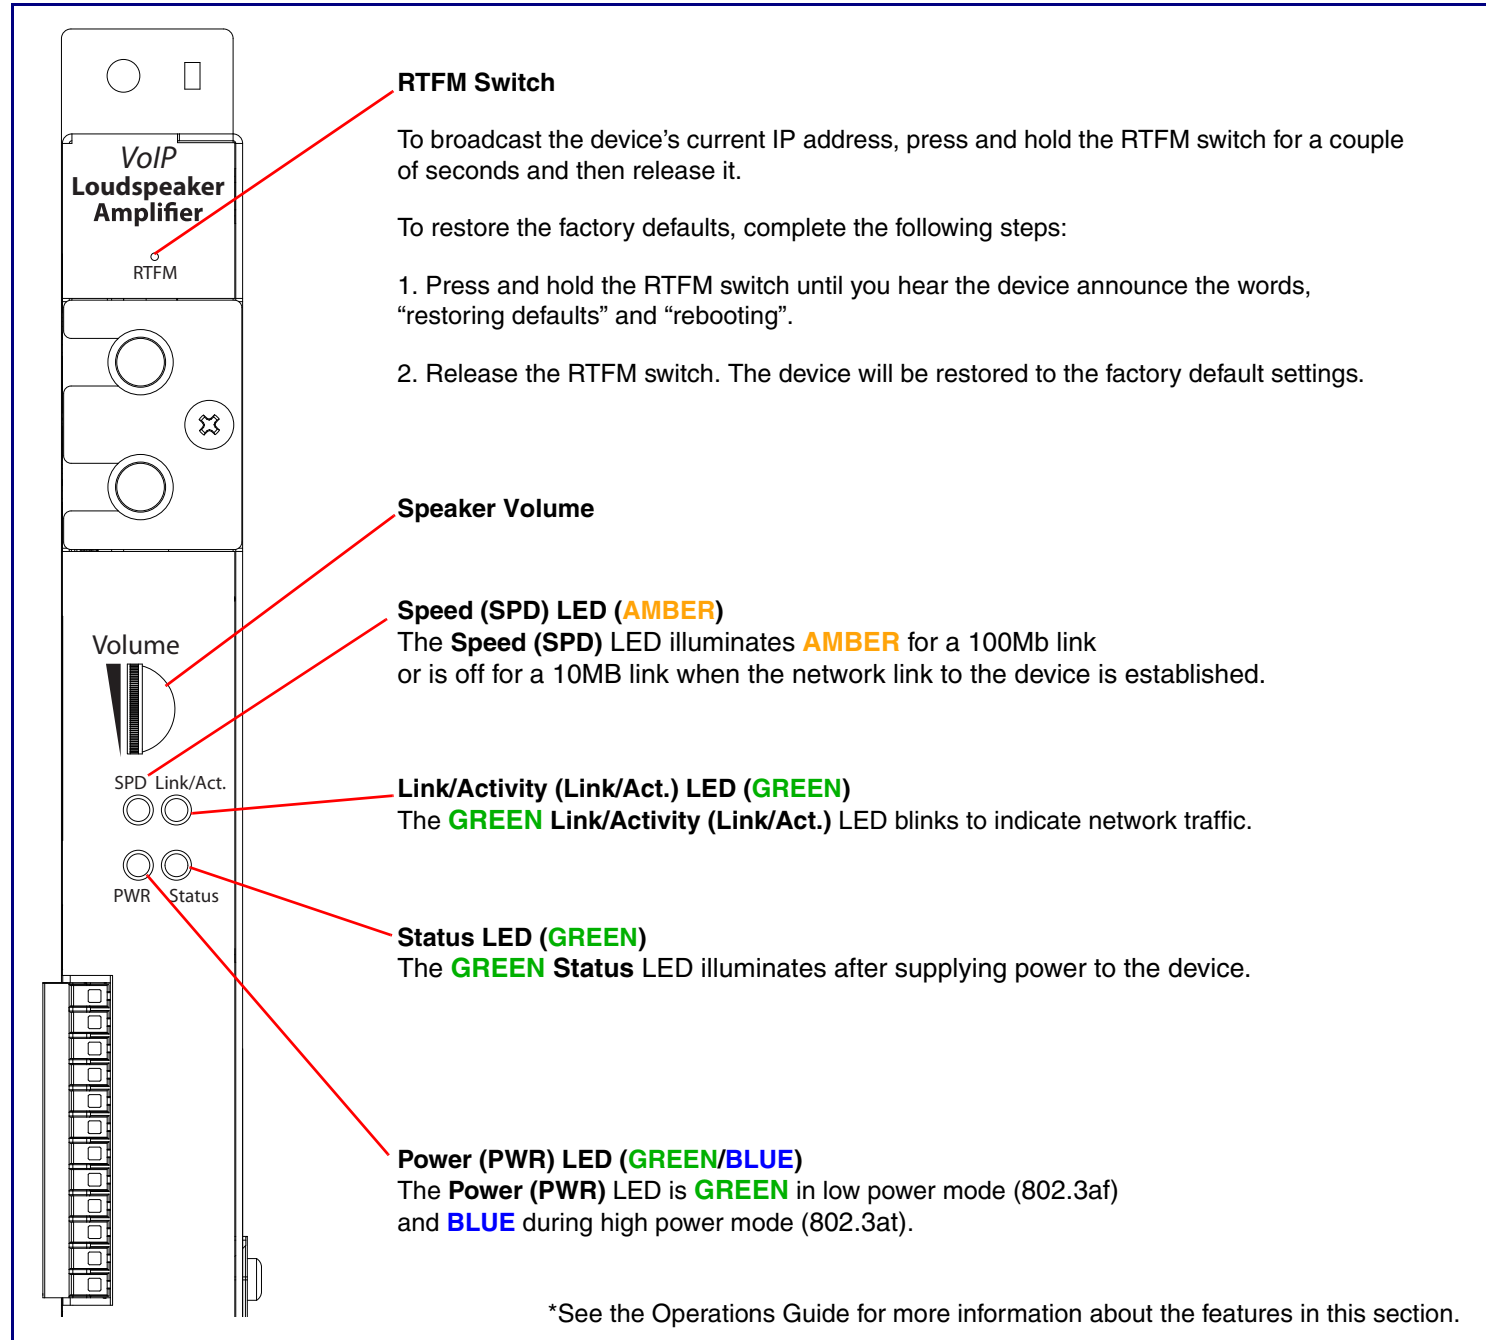

Dimensions and Mounting Template

