



Connecting the Intercom (Service Loop Routing)

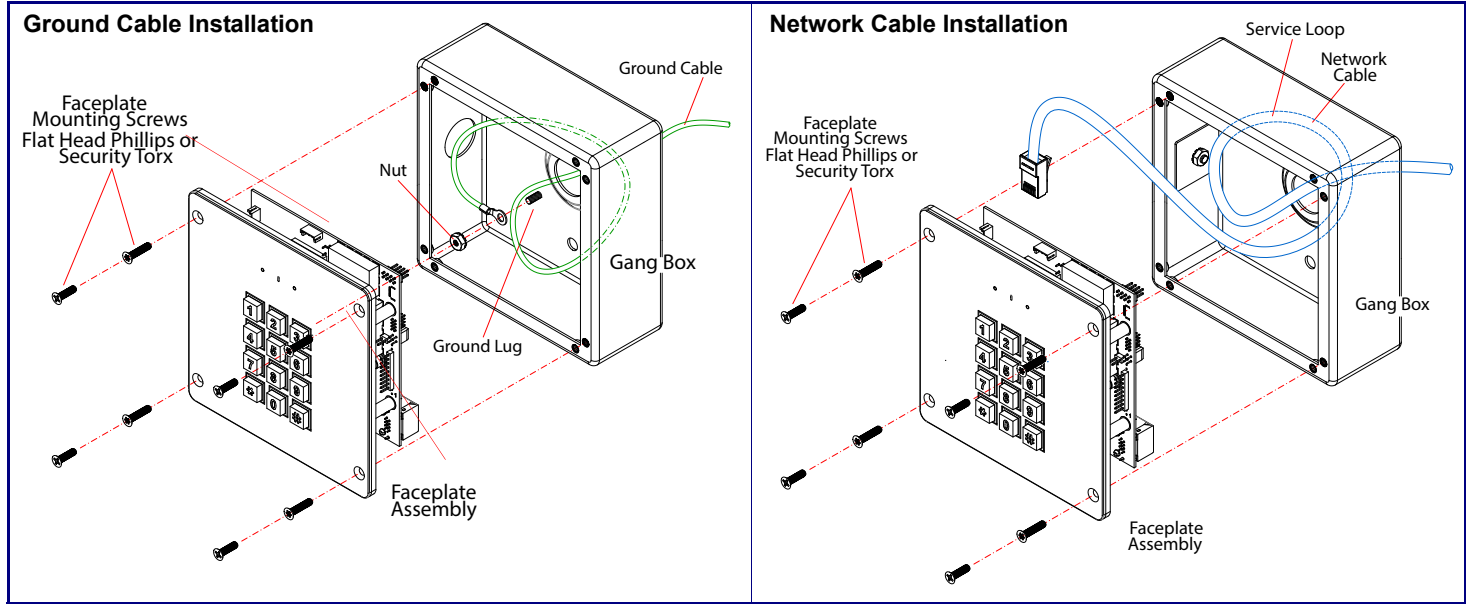

Securing the Intercom

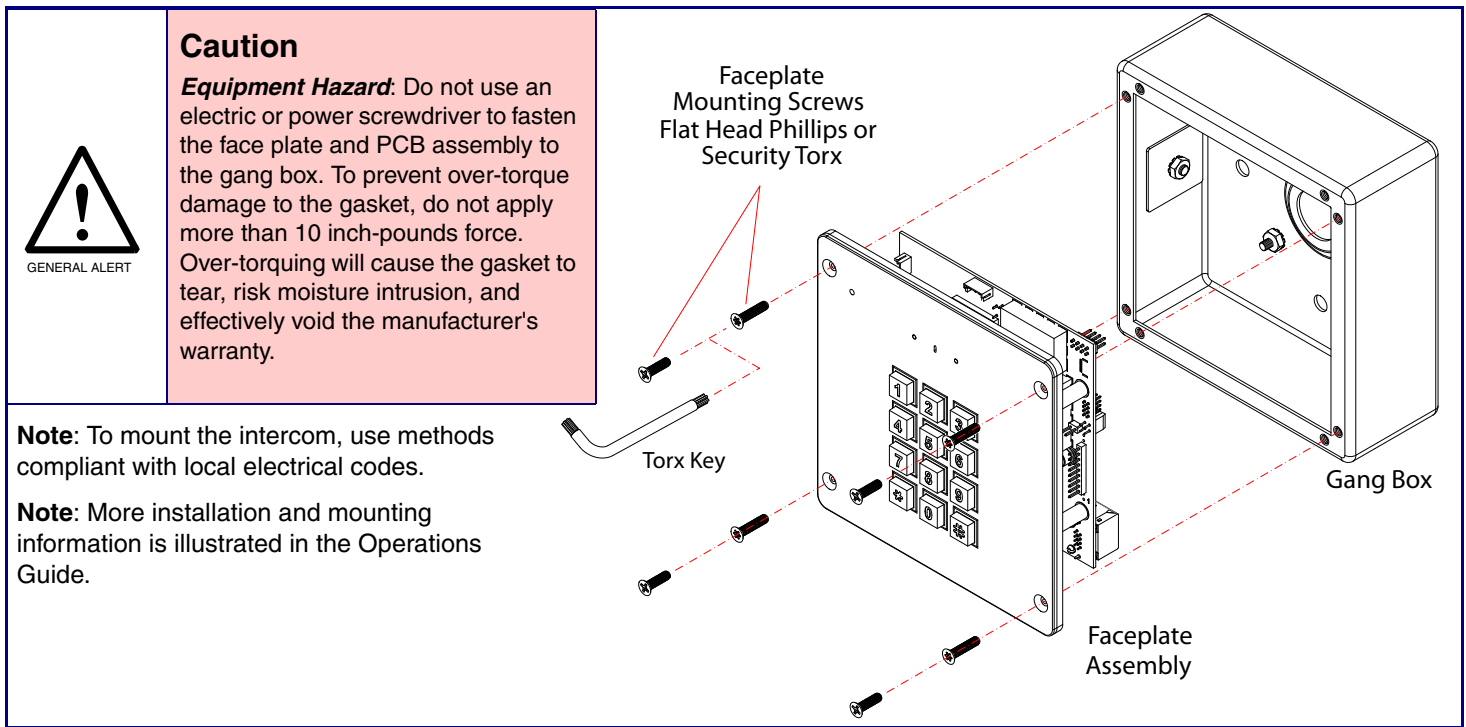

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <http://support.cyberdata.net/>
RMA Department: (831) 373-2601 ext. 136
RMA Email: RMA@CyberData.net
RMA Status: <http://support.cyberdata.net/>
Warranty Information: <http://support.cyberdata.net/>


Installation Quick Reference
Secure Access Control Keypad
SIP Compliant
011433



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

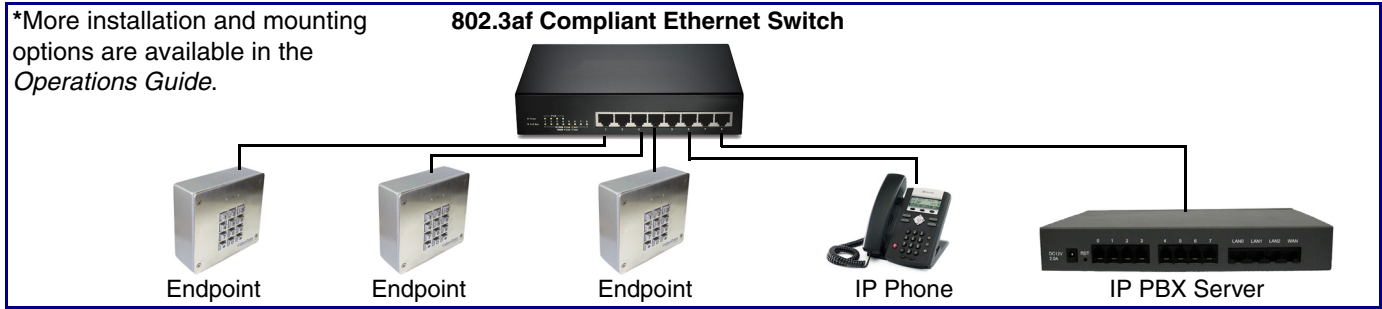


Getting Started

- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:
<http://www.cyberdata.net/voip/011433>
- Create a plan for the locations of your Intercoms.
- WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING:** This enclosure is not rated for any AC voltages!


Parts

<p>(1) Secure Access Control Keypad</p>	<p>(1) T-15H Torx Key</p> <p>(4) Security Torx Screw</p>	<p>Optional Accessories (for gooseneck mounting)</p> <p>(4) Carriage bolt nuts</p> <p>(4) Carriage bolts</p> <p>(4) Carriage bolt washers</p>	<p>Optional Accessories</p> <p>(1) Spacer for half-inch set conduit connector</p> <p>(1) Hole plug assembly</p>
--	--	--	--


Features

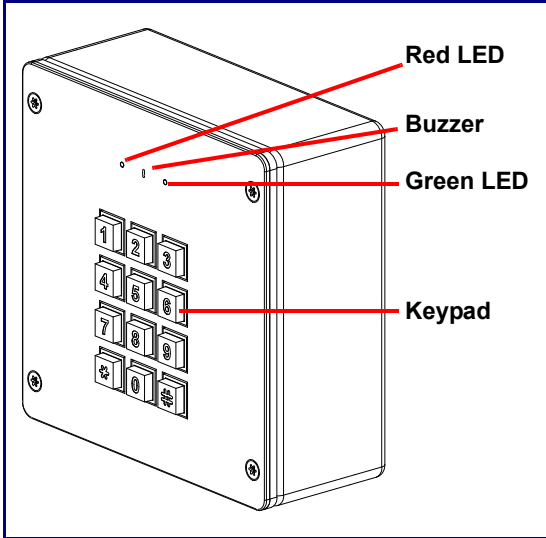

Dimensions (Front and Side View)

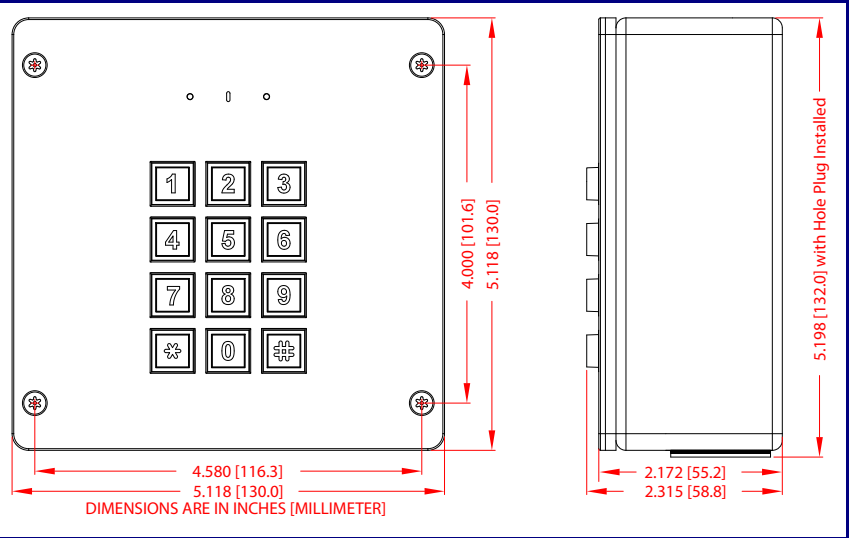

RTFM Button

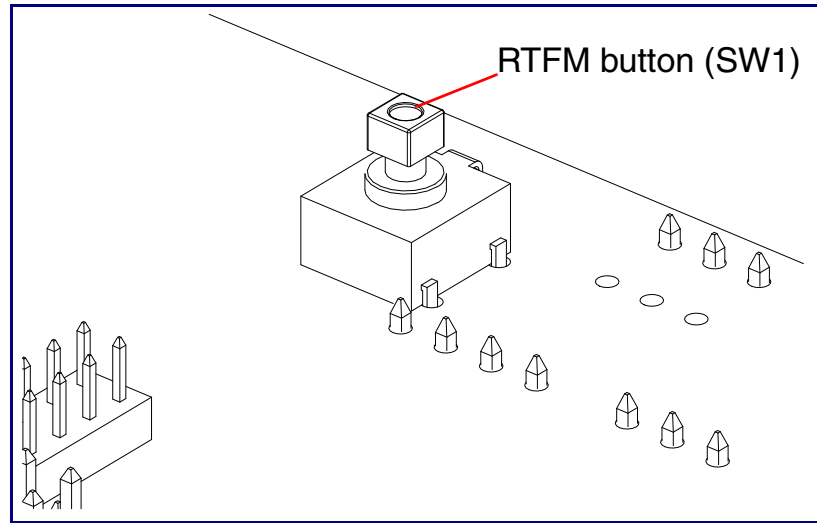


When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory default settings.

Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).


To restore the device to factory default settings:

- Press and hold the RTFM button for longer than five seconds.


Dimensions (Rear View and Mounting Holes)

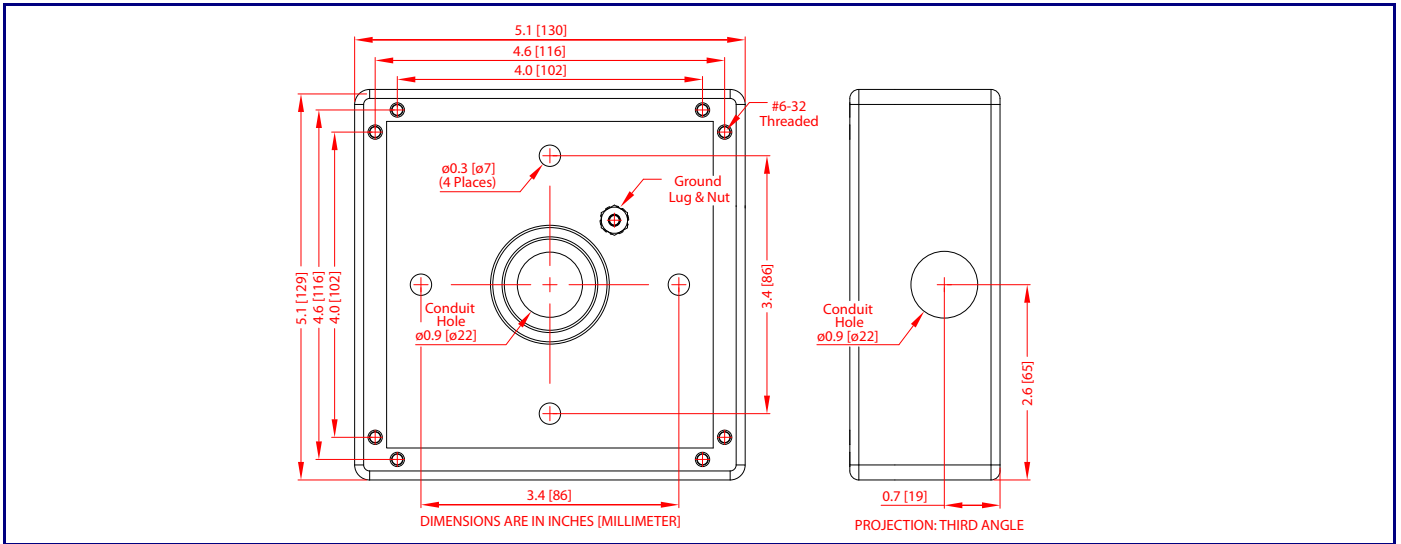

Optional Conduit Mounting (Side Entry)

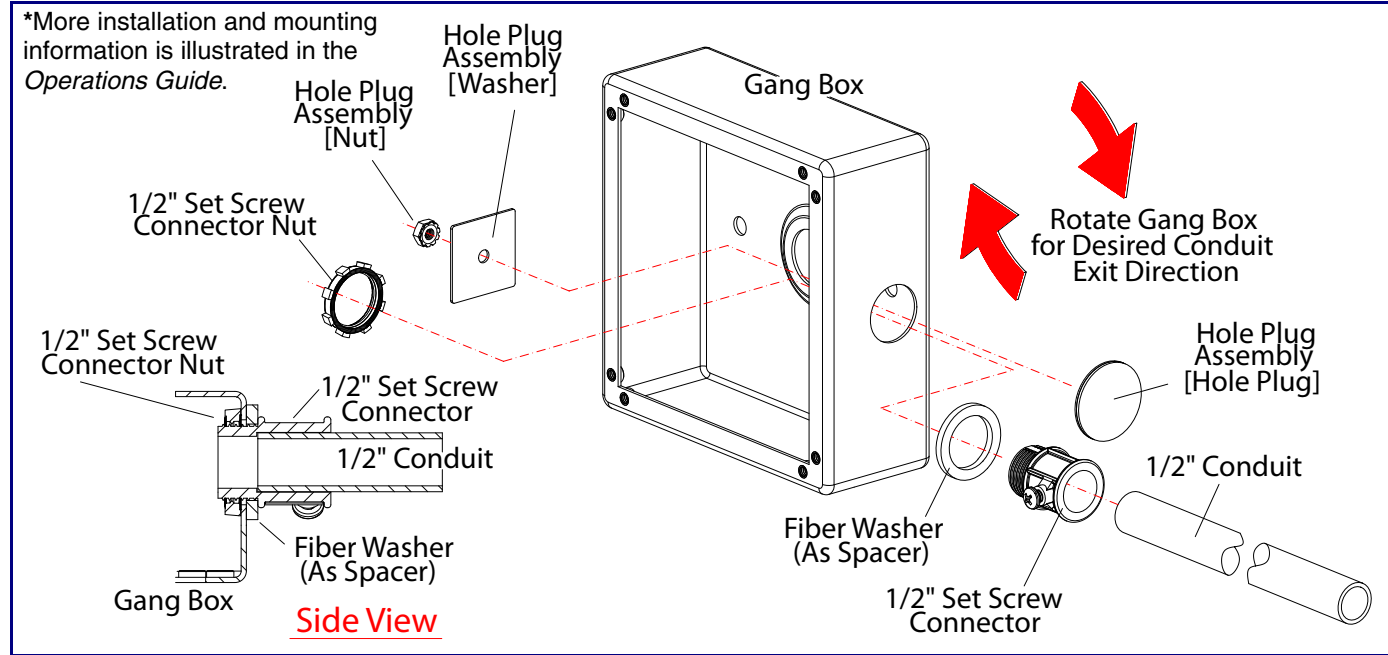

Terminal Block Connections

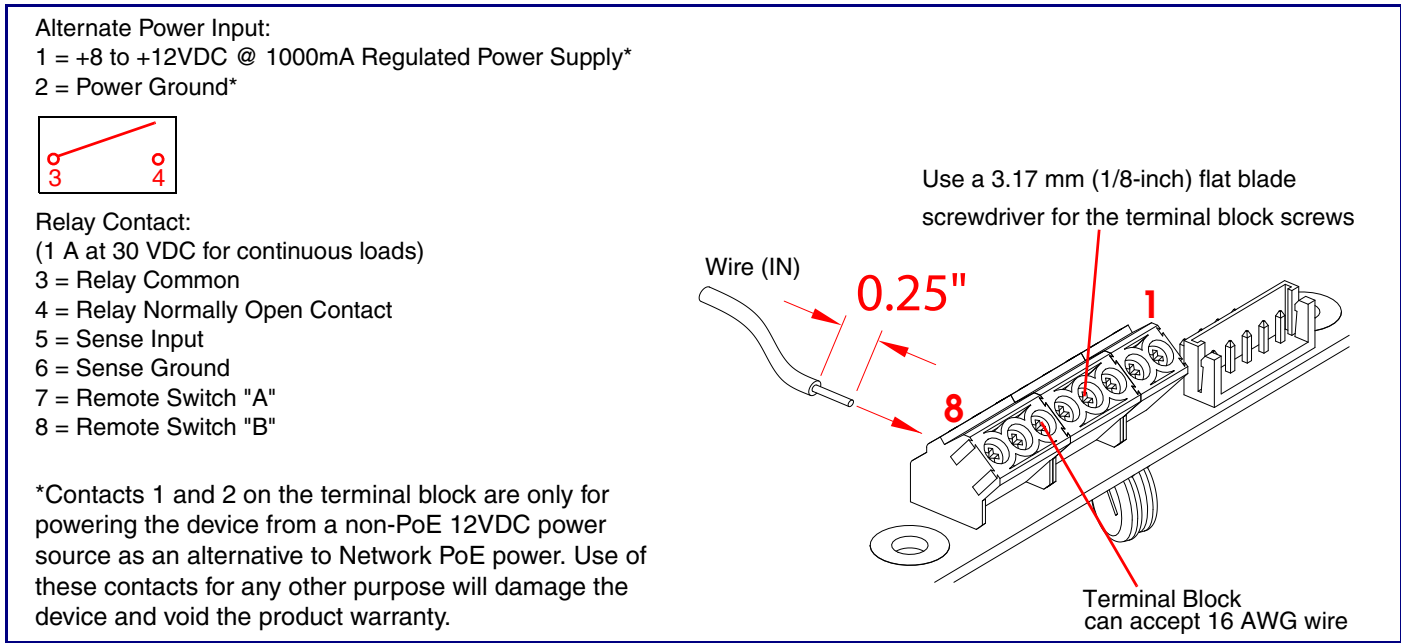

Optional Goose Neck Mounting

