



# CyberData Installation Quick Reference The IP Endpoint Company Multicast Ceiling Speaker SIP Compliant


# 011458



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	IPv4 Link Local
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	IPv4 Link Local
Default Gateway <sup>a</sup>	IPv4 Link Local

a. Default if there is not a DHCP server present.

### Typical System Installation

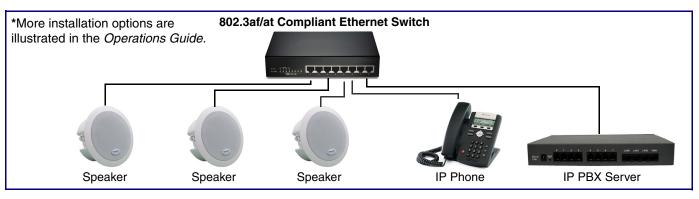

## Getting Started


- Download the Operations Guide PDF file, from the Downloads tab at the following webpage: https://www.cyberdata.net/products/011458/
- · Create a plan for the locations of your speakers.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: This enclosure is not rated for any AC voltages!

#### **Parts**


**Quick Reference** 




#### Dimensions

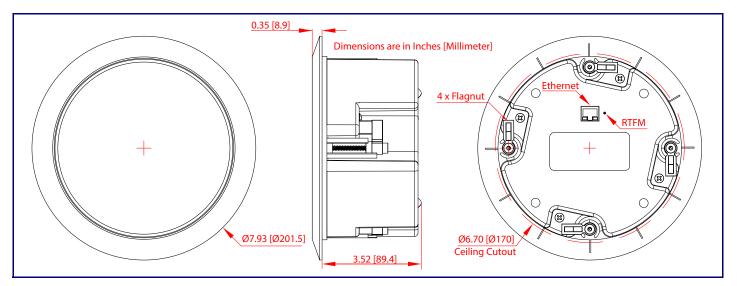


#### **Features**

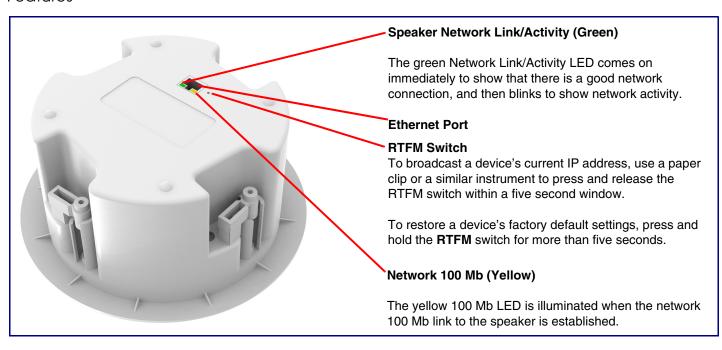


## **Connecting Power**

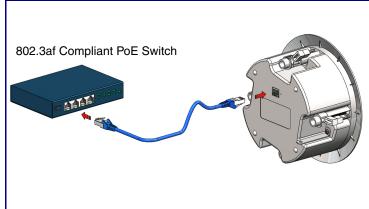

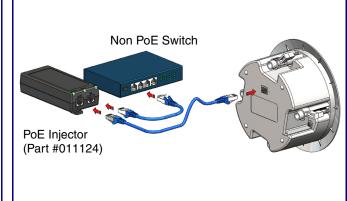

#### Mounting

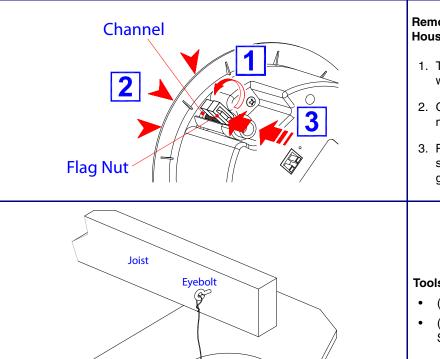


# Remove the Speaker Grill out of the Speaker

- 1. Turn and line up at least two of the flag nuts with their channel.
- 2. Grasp the speaker grill with your index, middle, and ring fingers.
- 3. Place your thumb over the flag nut. At the same time, slowly push out the speaker

## **Tools Required for Installation:** • (1) Sheetrock Saw or Drywall Cutter • (1) #2 Phillips Screw Driver or Powered Screw Driver with #2 Phillips Hex Bit To mount the speaker:

- 1. Loosen the Four (4) flag nuts with a #2 Phillip Screw Driver or Powered Screw Driver.
- 2. Use the TEMPLATE on the back of this document to cut a hole in the wall\* or
  - \*Skip the seismic tether mounting when mounting it to the wall.
- 3. Tighten the Four (4) flag nuts with a #2 Phillip Screw Driver or Powered Screw Driver.
- 4. Replace the speaker grill to the speaker housing.

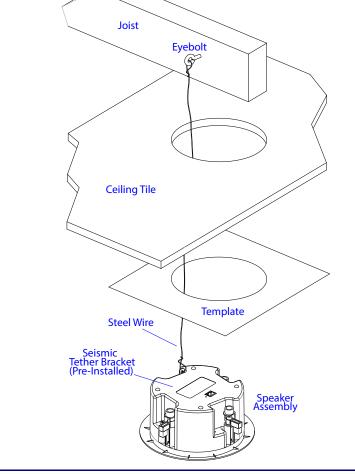

## Contacting CyberData

#### Corporate Headquarters

CyberData Corporation 3 Justin Court Monterey, CA 93940, USA

Phone: 831-373-2601 Fax: 831-373-4193

https://www.cyberdata.net/

Sales: 831-373-2601 ext. 334 Support: 831-373-2601 ext. 333

Support Website: <a href="https://support.cyberdata.net/">https://support.cyberdata.net/</a>

RMA Department Contact and Status: <a href="https://support.cyberdata.net/">https://support.cyberdata.net/</a>

Warranty Information: <a href="https://support.cyberdata.net/">https://support.cyberdata.net/</a>