


Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	IPv4 Link Local
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	IPv4 Link Local
Default Gateway ^a	IPv4 Link Local

a. Default if there is not a DHCP server present.


Typical System Installation

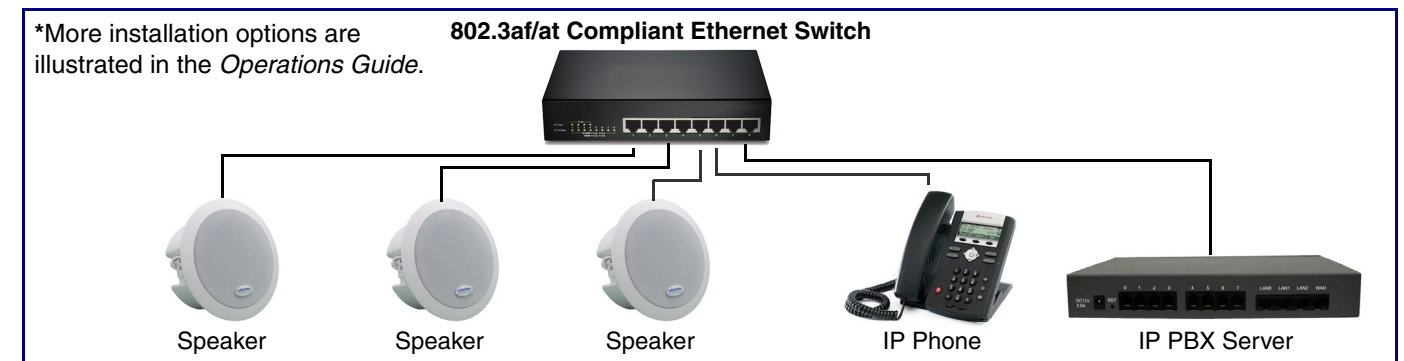


Getting Started

- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:
<https://www.cyberdata.net/products/011458/>
- Create a plan for the locations of your speakers.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!


Parts

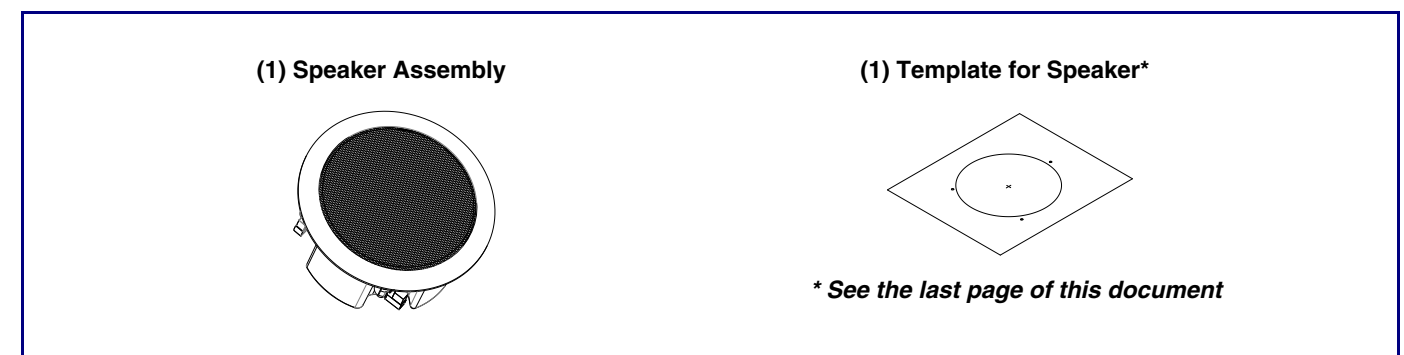


Dimensions

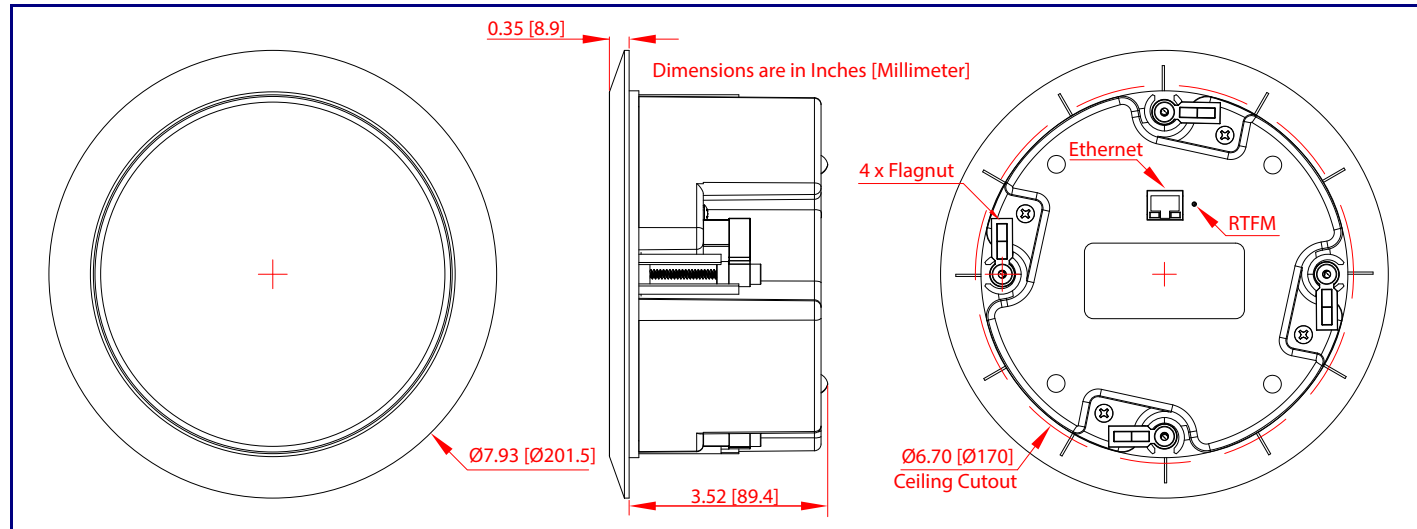


Features

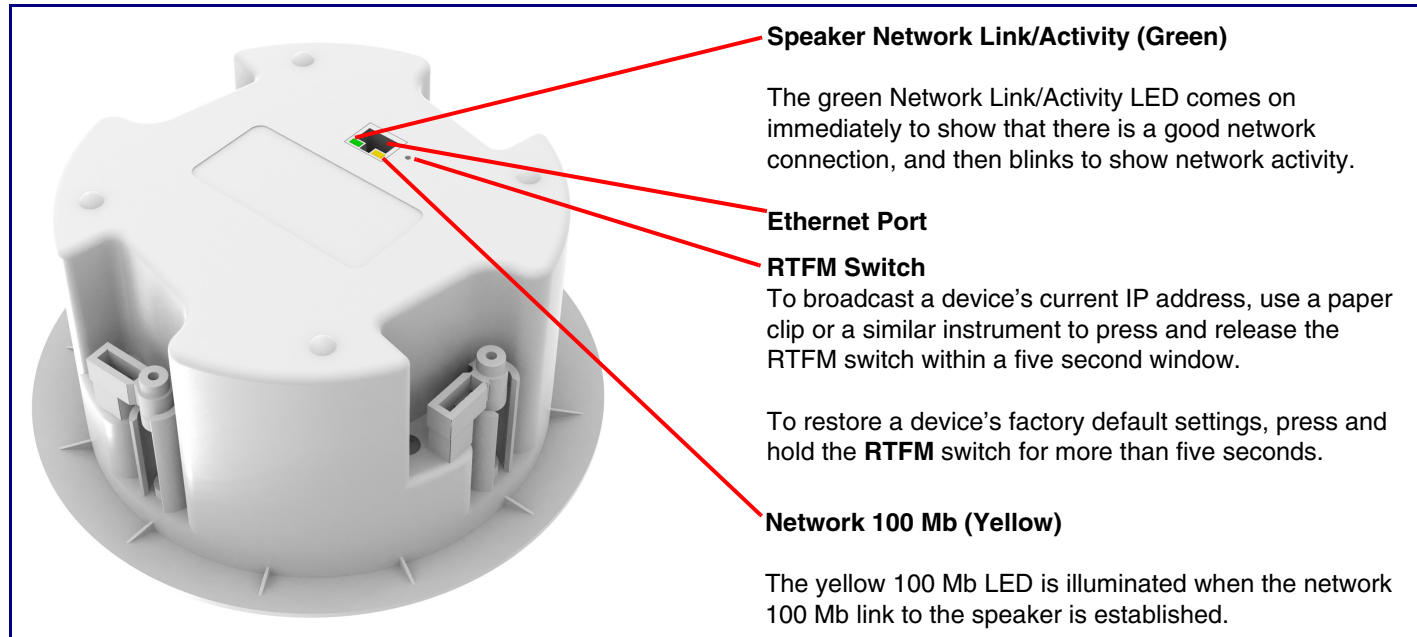

Connecting Power

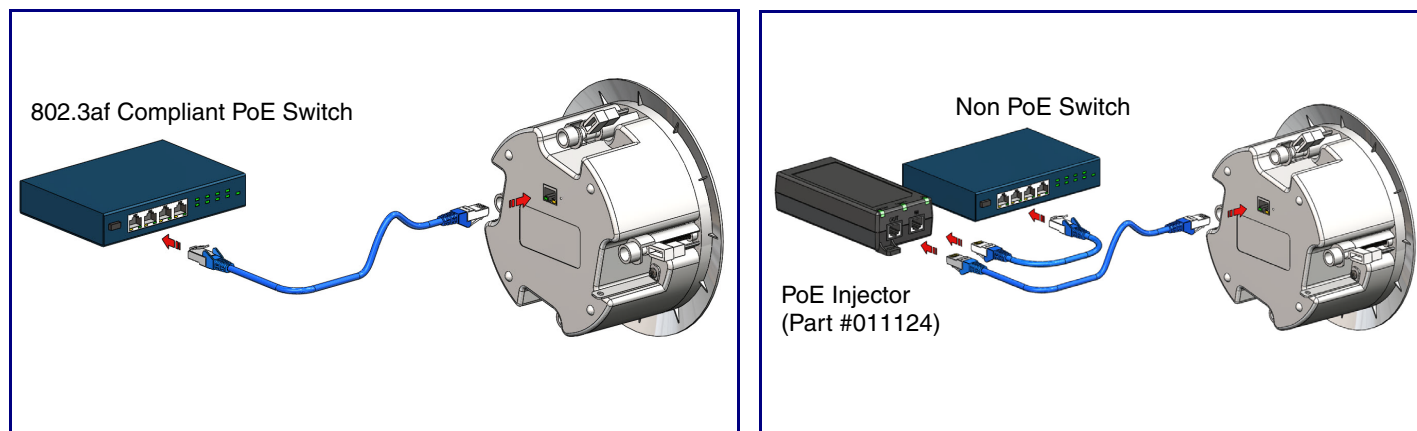

Mounting

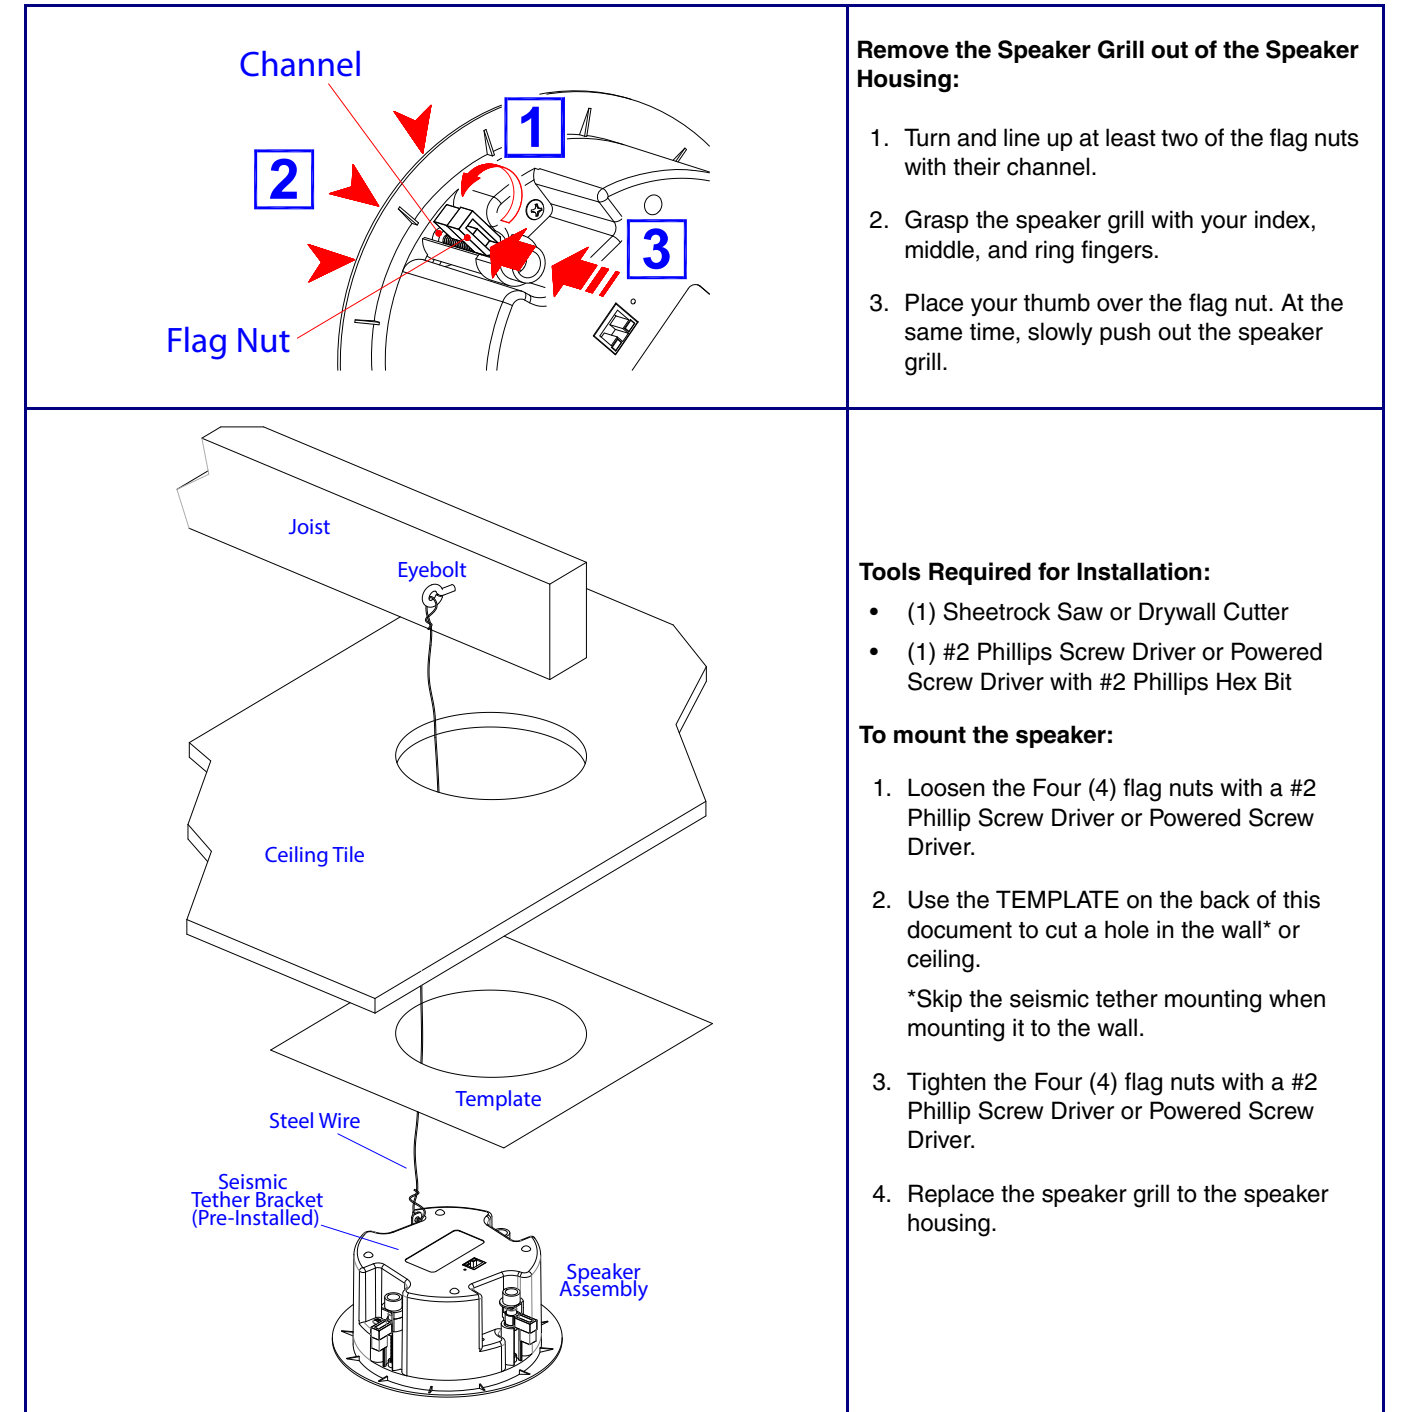

Contacting CyberData

