


Gooseneck Mounting

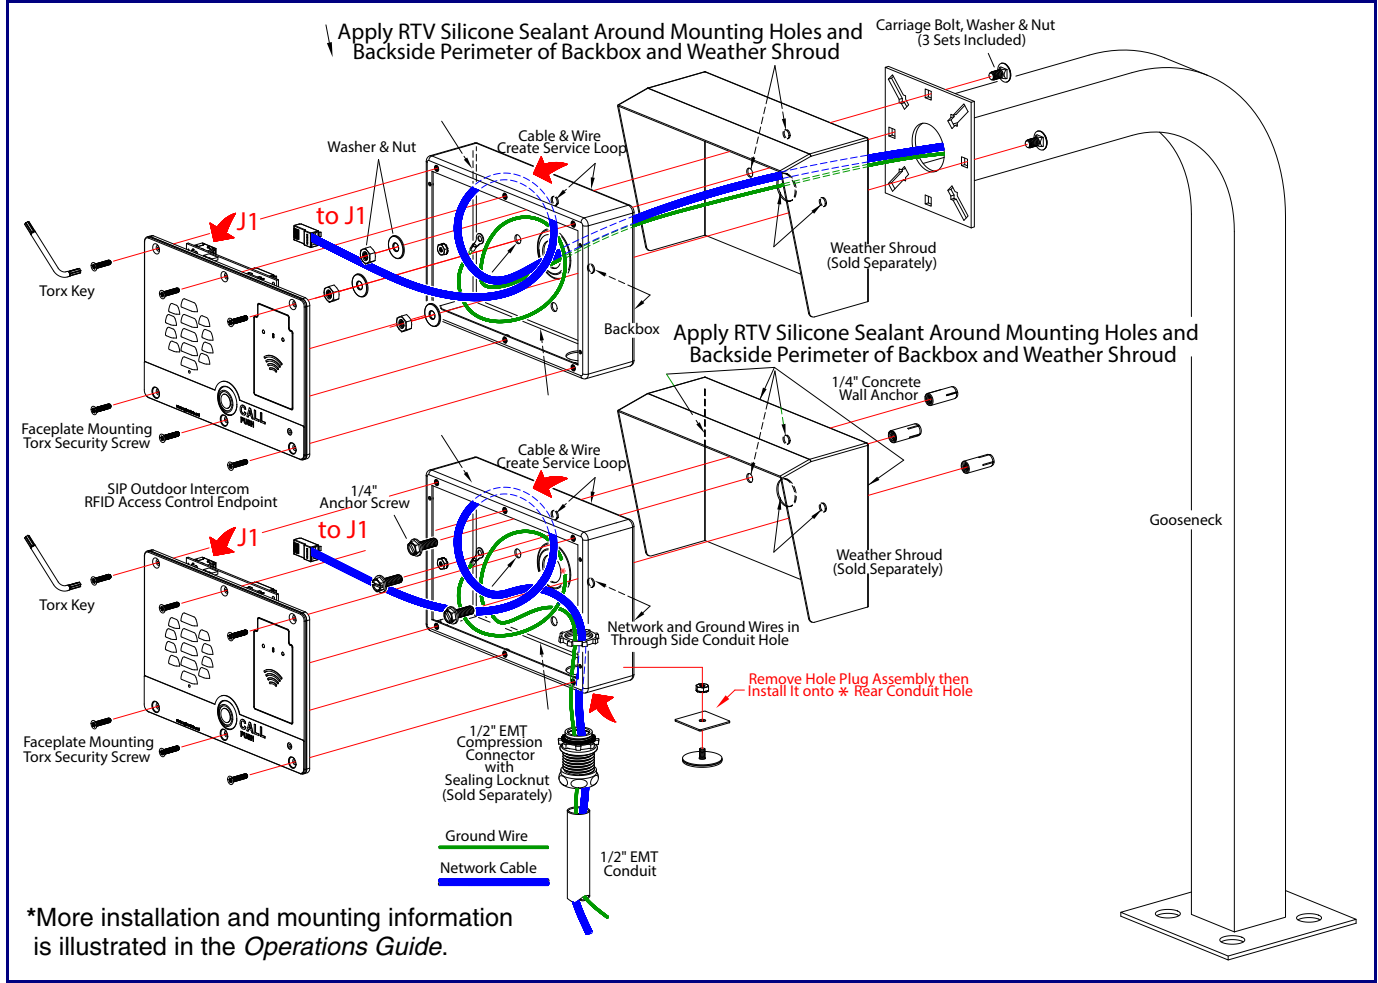

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<https://www.cyberdata.net/>

Sales: 831-373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <https://support.cyberdata.net/>
RMA Department Contact and Status: <https://support.cyberdata.net/>
Warranty Information: <https://support.cyberdata.net/>


Installation Quick Reference
SIP Outdoor Intercom with RFID
Secure Access Control Endpoint
011477



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	192.168.1.23
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.255.255.0
Default Gateway ^a	192.168.1.1

a. Default if there is not a DHCP server present.

Typical System Installation

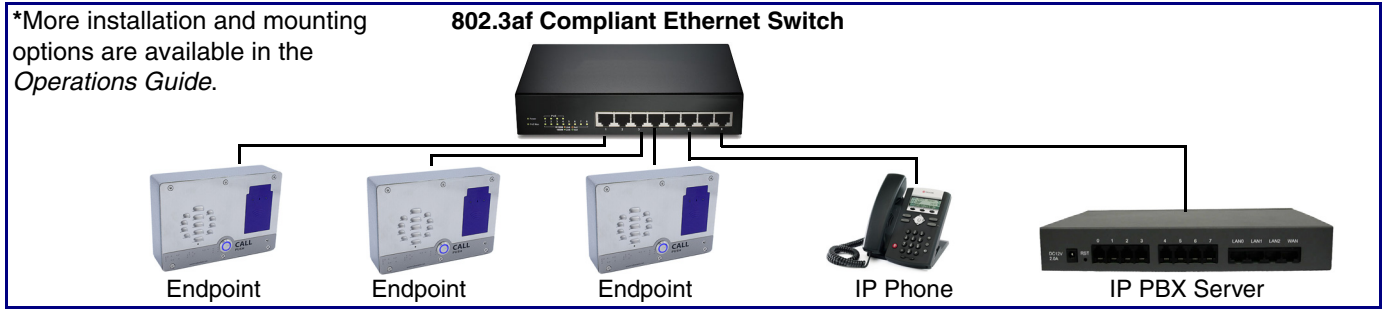


Getting Started

- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:
<https://www.cyberdata.net/products/011477>
- Create a plan for the locations of your devices.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!


Parts

(1) Assembly	Accessory Kit	Optional Accessories (1) 531085* Hole plug assembly	Sold Separately (1) 1/2-inch EMT compression connector with extra sealing locknut
RFID cards			


Features

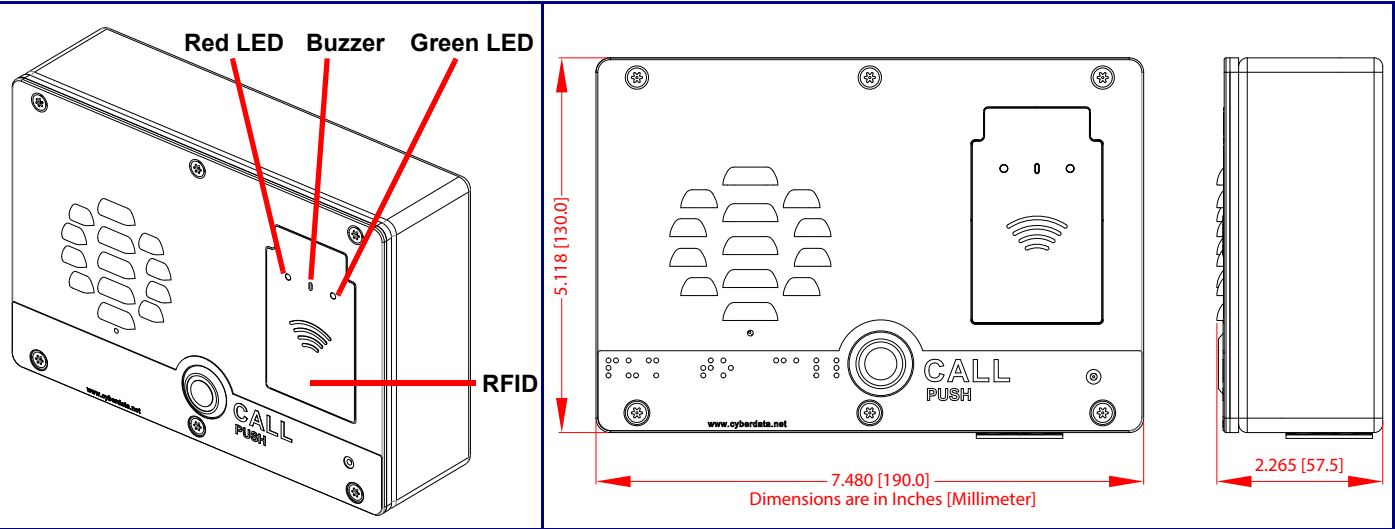


Terminal Block Connections

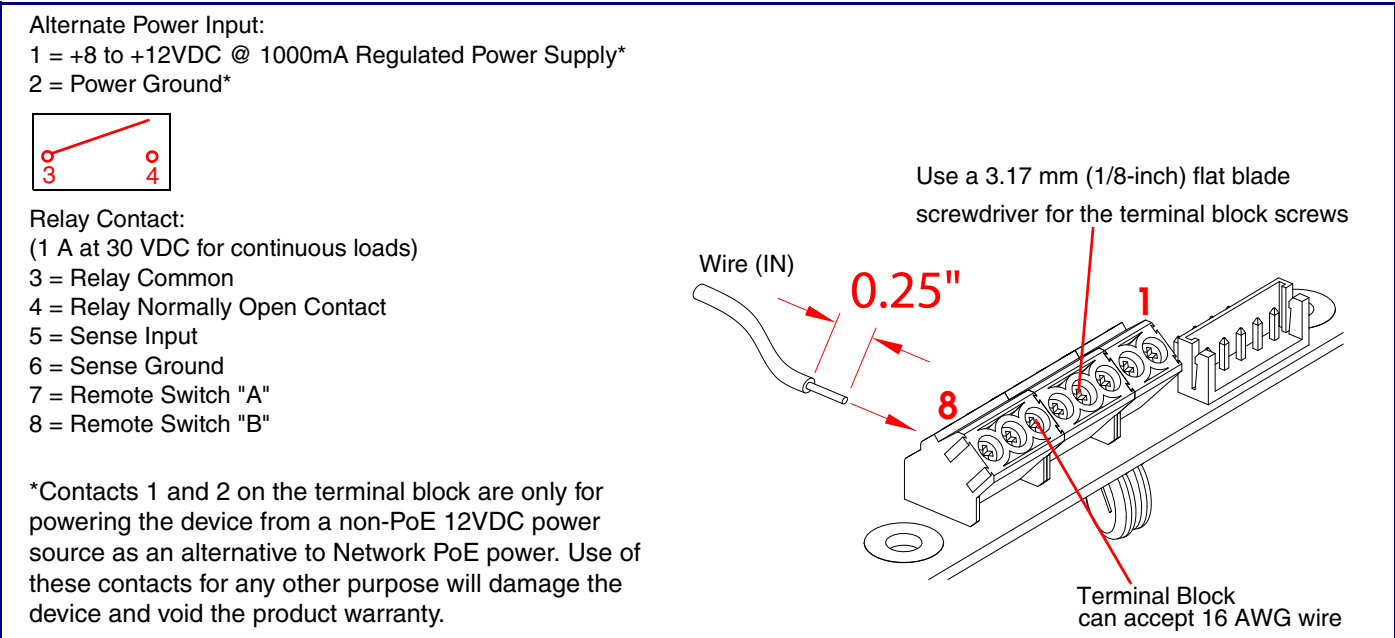

RTFM Button

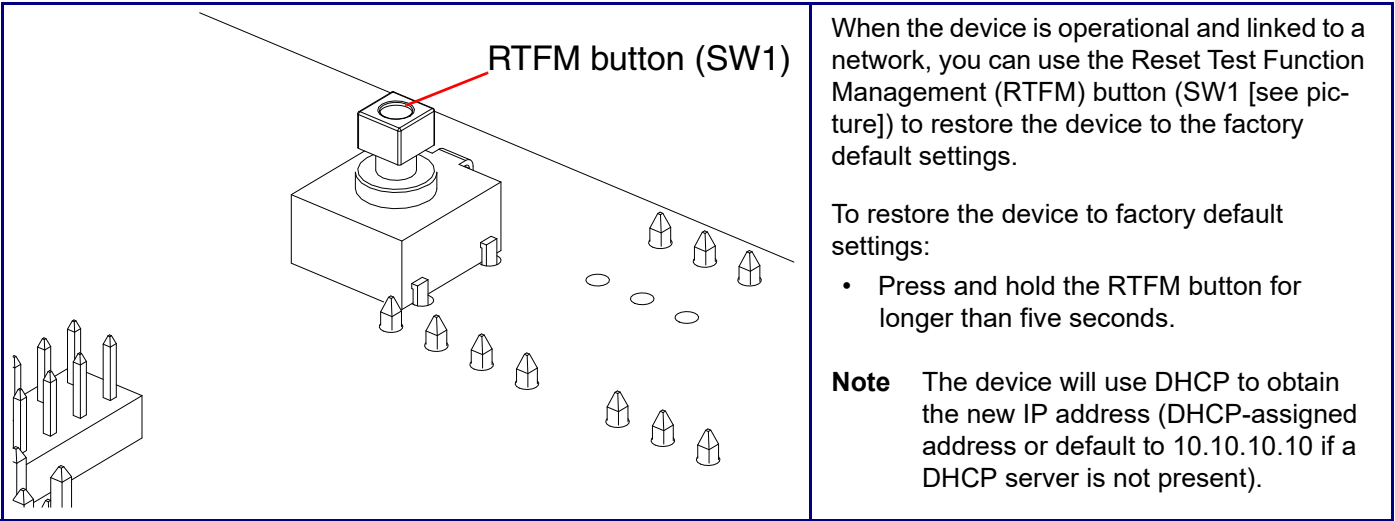

Dimensions (Rear View and Mounting Holes)

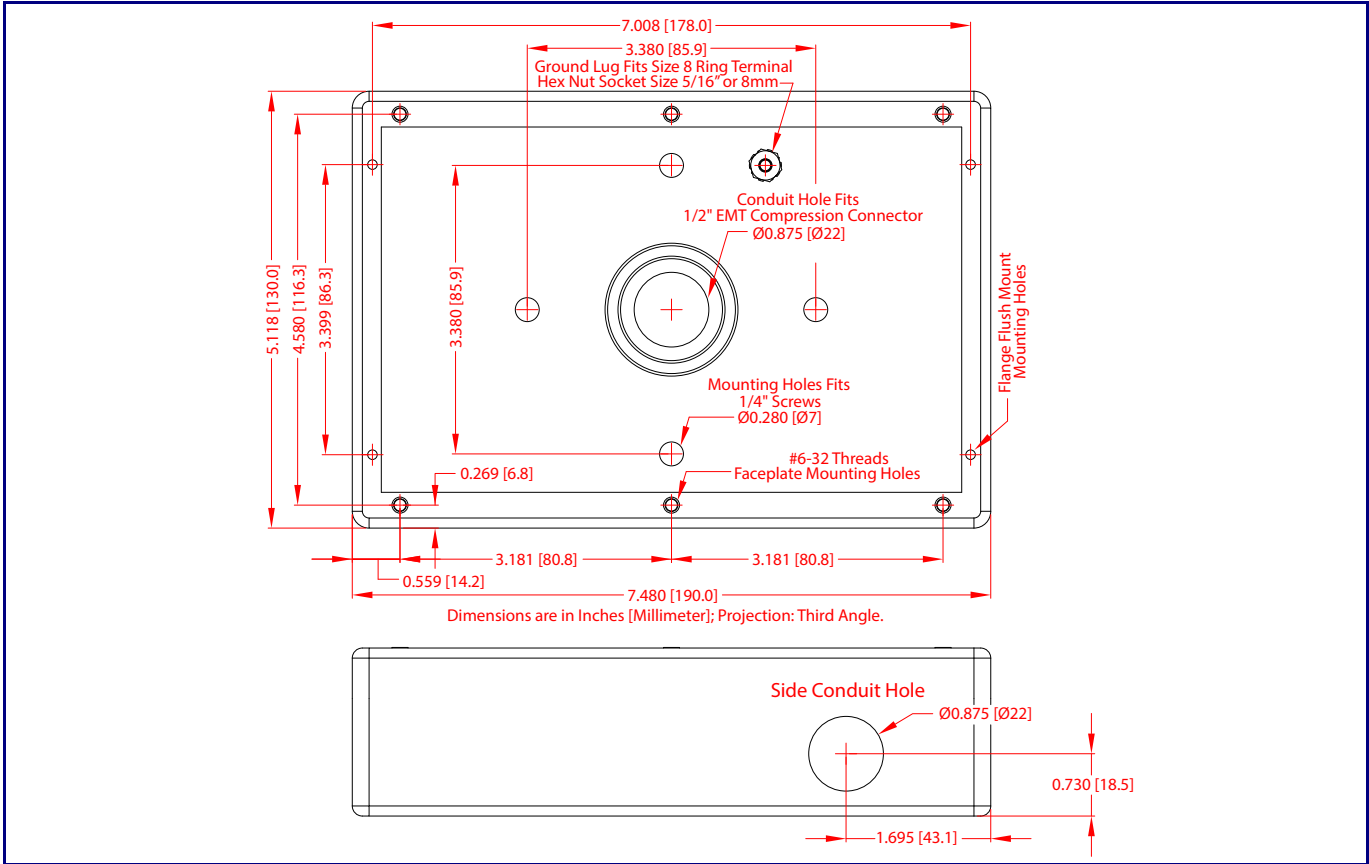

Wall Mounting with Ground Cable and Network Cable Installation

