
Gooseneck Mounting

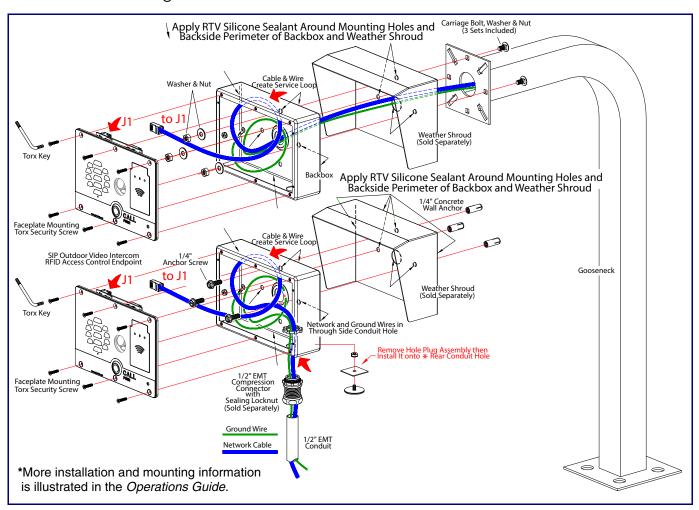

Contacting CyberData

Corporate Headquarters

CyberData Corporation 3 Justin Court

Monterey, CA 93940, USA

Phone: 831-373-2601 Fax: 831-373-4193 http://www.cyberdata.net/ Sales: 831-373-2601 ext. 334 Support: 831-373-2601 ext. 333

Support Website: http://support.cyberdata.net/

RMA Department Contact and Status: http://support.cyberdata.net/

Warranty Information: http://support.cyberdata.net/

The IP Endpoint Company


CyberData Installation Quick Reference SIP Outdoor Video Intercom with RFID Secure Access Control Endpoint 011478



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

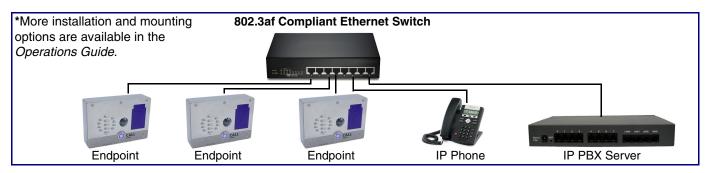


Getting Started


- Download the Operations Guide PDF file, from the **Downloads** tab at the following webpage:
- https://www.cyberdata.net/products/011478 Create a plan for the locations of your devices.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation
- · WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: This enclosure is not rated for any AC voltages!

Parts


Quick Reference

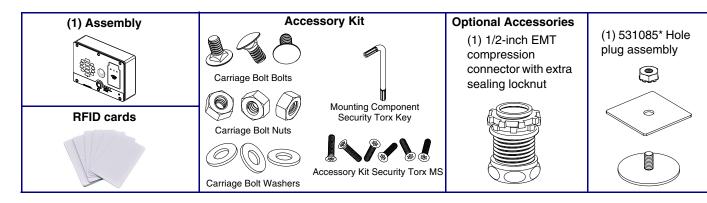


Red LED Buzzer Green LED **RFID**

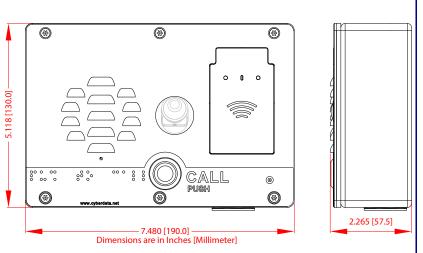

Terminal Block Connections

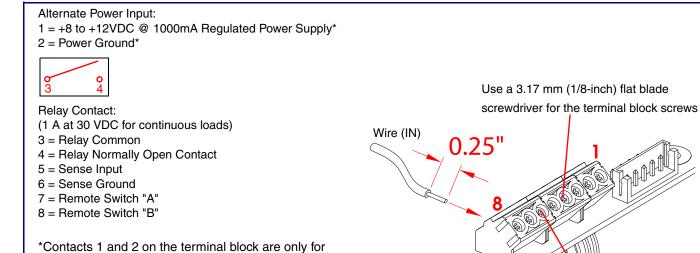

RTFM Button

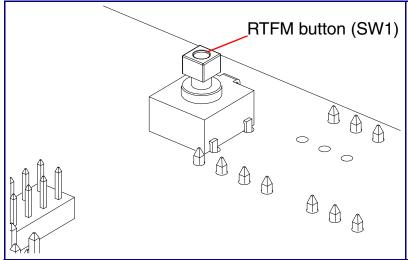

powering the device from a non-PoE 12VDC power

device and void the product warranty.

source as an alternative to Network PoE power. Use of these contacts for any other purpose will damage the

> When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to restore the device to the factory default settings.

Terminal Block


can accept 16 AWG wire

To restore the device to factory default


• Press and hold the RTFM button for longer than five seconds.

Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

Dimensions (Rear View and Mounting Holes)

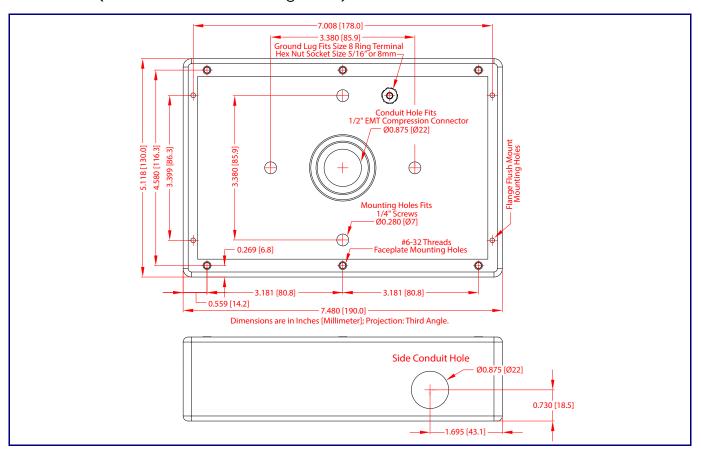

Wall Mounting with Ground Cable and Network Cable Installation

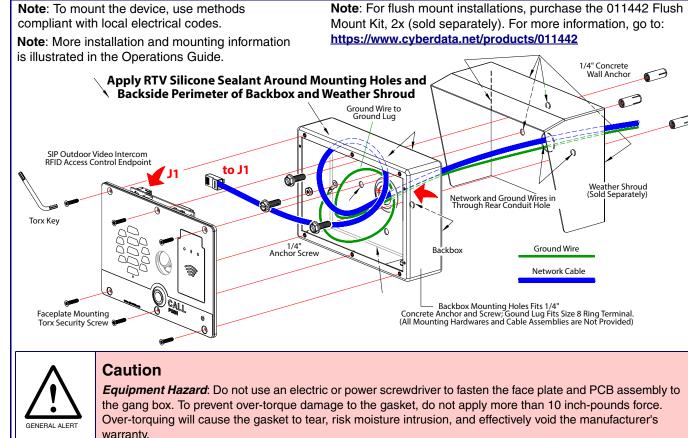

931665B

Quick Reference