
## Side Conduit Mounting

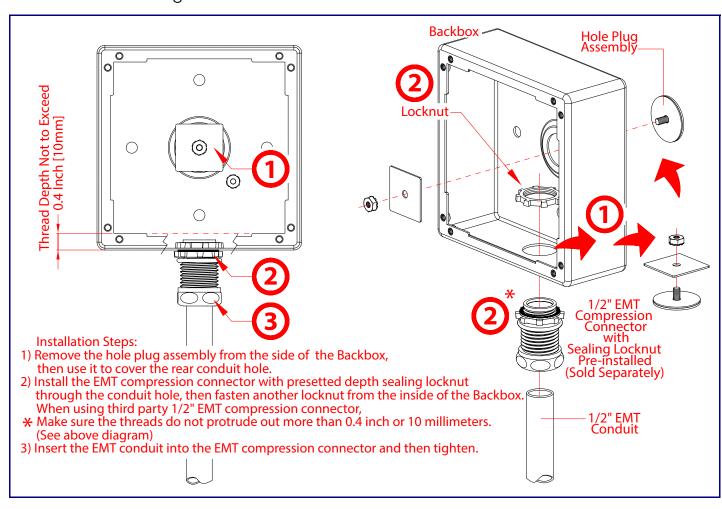

## Contacting CyberData

## Corporate Headquarters

Sales: (831) 373-2601 ext. 334 CyberData Corporation Support: 831-373-2601 ext. 333 3 Justin Court

Monterey, CA 93940, USA Support Website: <a href="http://support.cyberdata.net/">http://support.cyberdata.net/</a> RMA Department: (831) 373-2601 ext. 136

Phone: 831-373-2601 RMA Email: RMA@CyberData.net Fax: 831-373-4193 RMA Status: http://support.cyberdata.net/ http://www.cyberdata.net/ Warranty Information: http://support.cyberdata.net/ The IP Endpoint Company

## CyberData Installation Quick Reference


# SIP Outdoor RGB (Multi-Color) Strobe 011479



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

## Typical System Installation

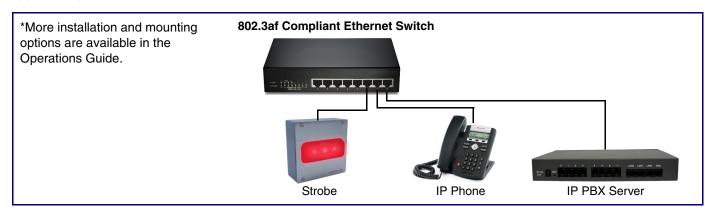

## Getting Started


Download the SIP Outdoor RGB (Multi-Color) Strobe Operations Guide PDF file, from the SIP Outdoor RGB (Multi-Color) Strobe product page at:


#### https://www.cyberdata.net/products/011479

- Create a plan for the locations of your SIP Outdoor RGB (Multi-Color) Strobes.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: This enclosure is not rated for any AC voltages!


#### **Parts**

**Quick Reference** 

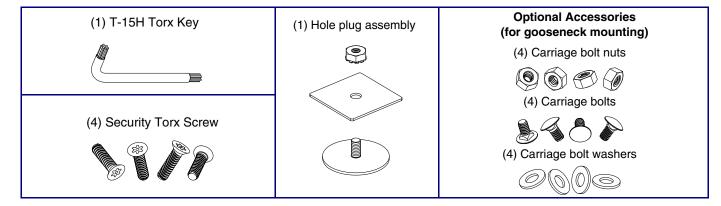

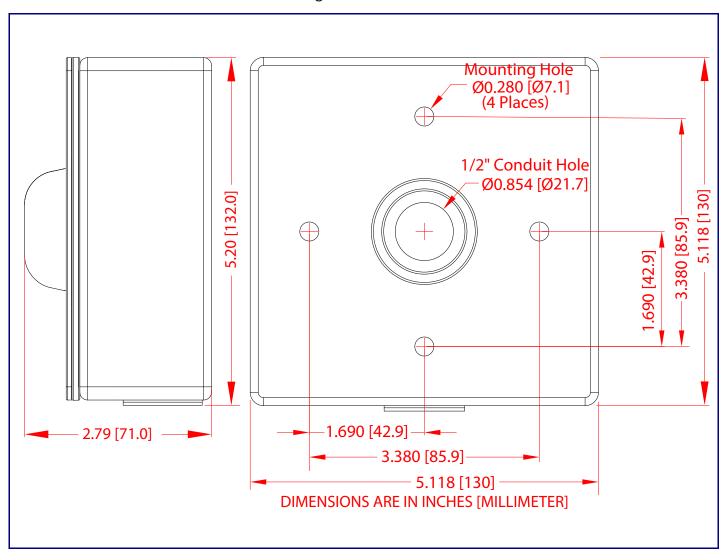


#### Connections

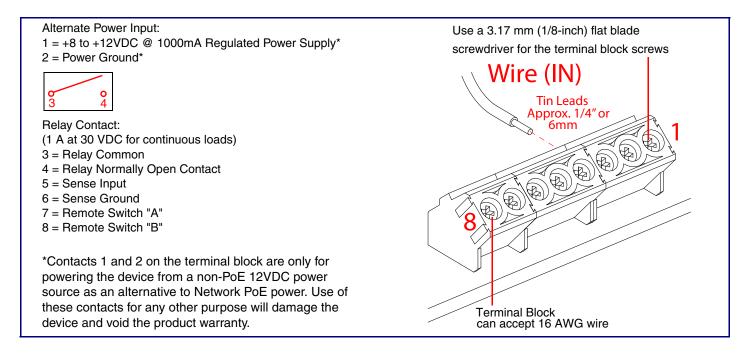

### RTFM Button

Quick Reference

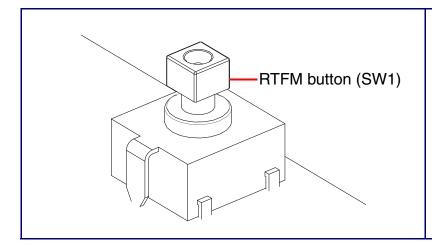


When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1) to restore the device to the factory default settings.

To restore the device to factory default settings:

 Press and hold the RTFM button for seven seconds, and then release the RTFM button.

## Connecting and Sealing the RGB Strobe

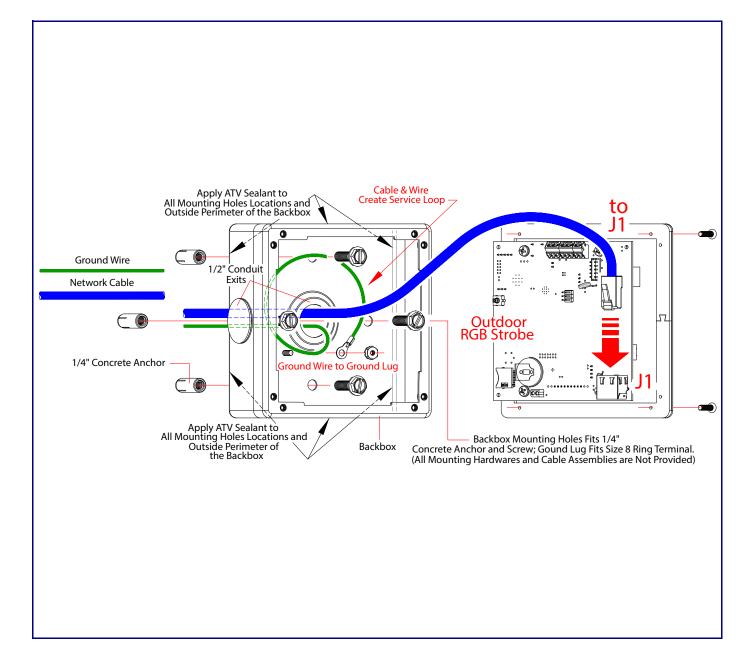

931627C