


Maximum Recommended Wall Cutout Dimensions

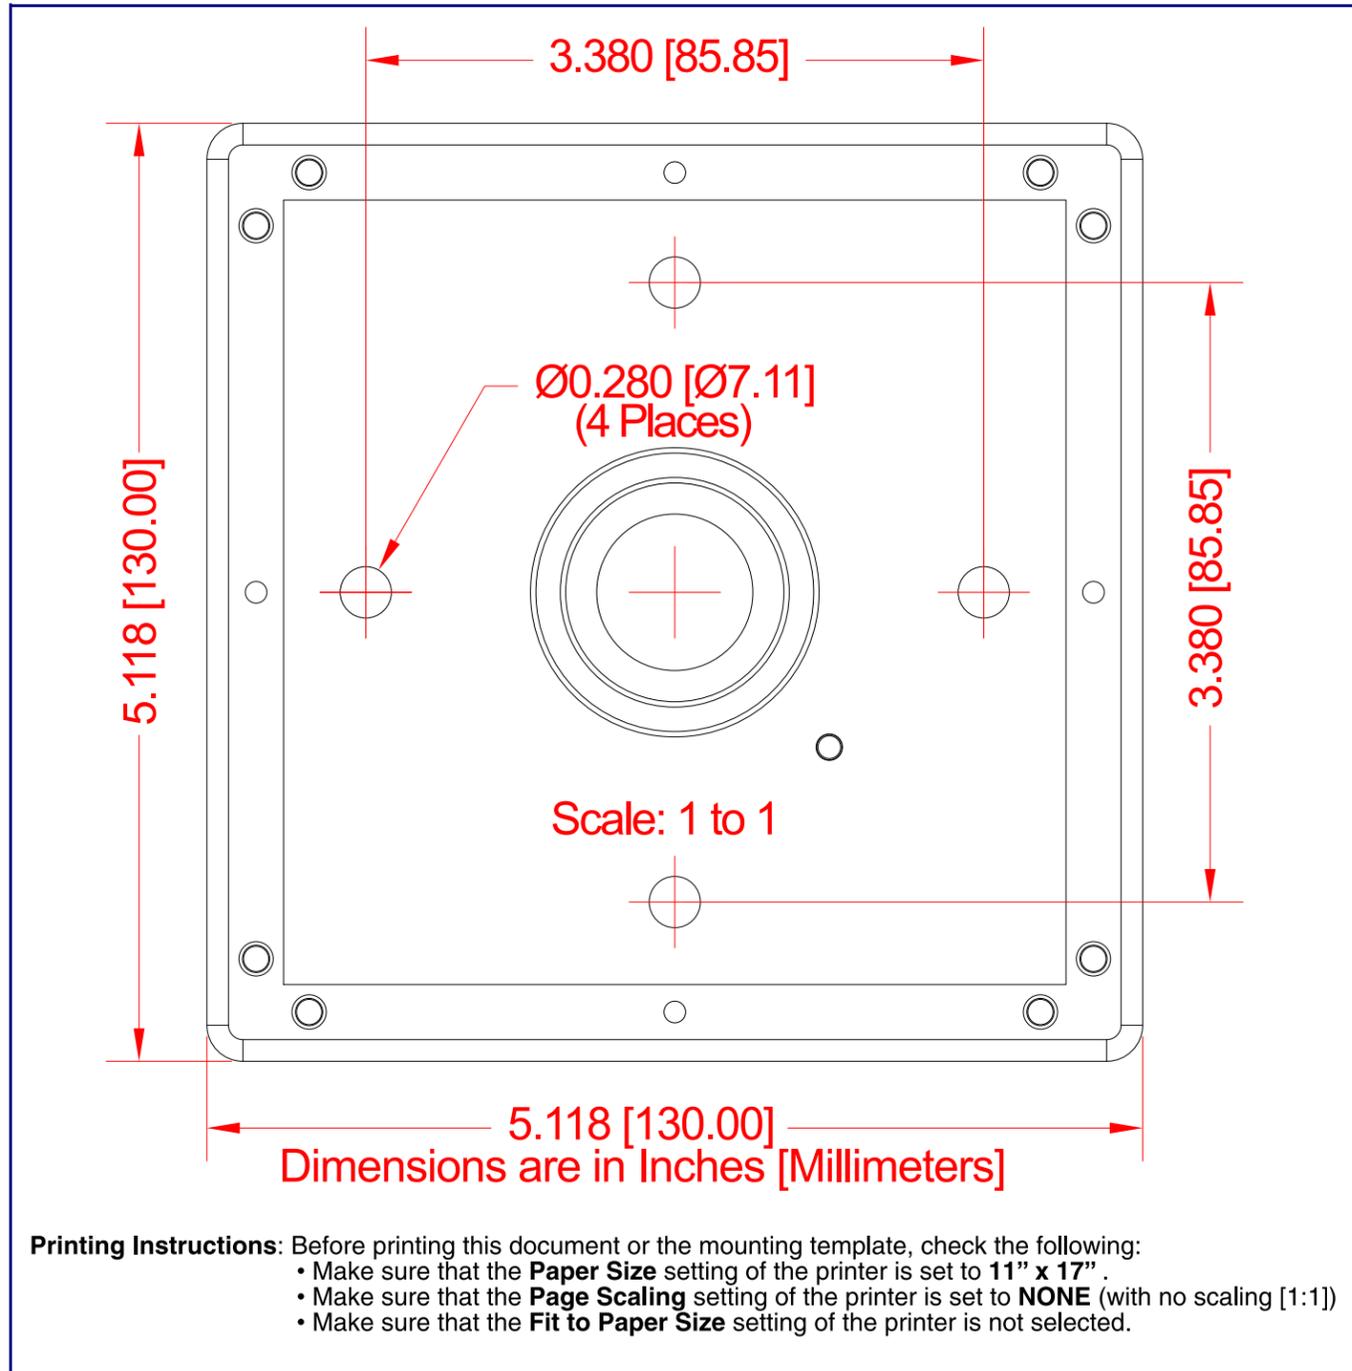

Contacting CyberData

**Corporate Headquarters**

CyberData Corporation  
3 Justin Court  
Monterey, CA 93940, USA

Phone: 831-373-2601  
Fax: 831-373-4193  
<https://www.cyberdata.net/>

Sales: 831-373-2601 ext. 334 Support: 831-373-2601 ext. 333  
Support Website: <https://support.cyberdata.net/>  
RMA Department Contact and Status: <https://support.cyberdata.net/>  
Warranty Information: <https://support.cyberdata.net/>


**SIP Outdoor Call/Panic Button**  
SIP Compliant  
**011491**



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	192.168.1.23
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.255.255.0
Default Gateway <sup>a</sup>	192.168.1.1

a. Default if there is not a DHCP server present.

Typical System Installation

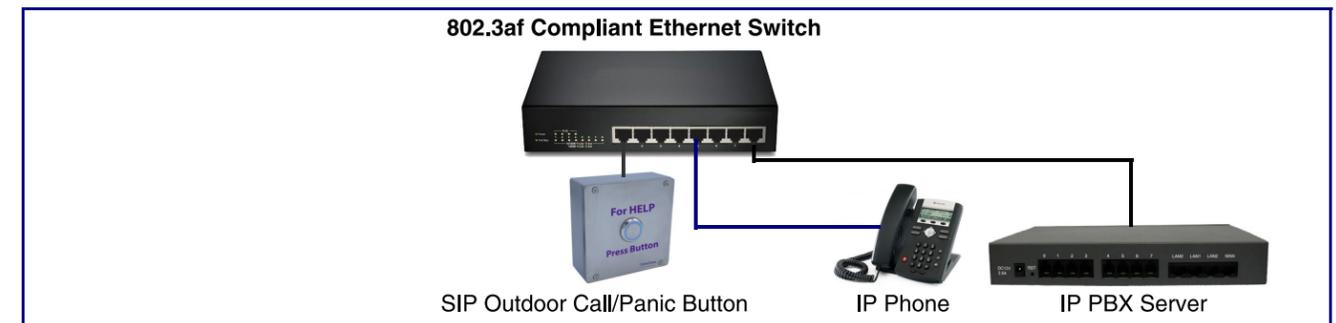


Getting Started

- Download the *SIP Outdoor Call/Panic Button Operations Guide* PDF file, from the SIP Outdoor Call/Panic Button product page at:  
<https://www.cyberdata.net/products/011491>
- Create a plan for the locations of your SIP Outdoor Call/Panic Buttons.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!

Parts

Accessory Kit	Optional Accessories (for gooseneck mounting)	Optional Accessories	Sold Separately
(4) Phillips Screws (4) Security Torx Screws	(4) Carriage bolt nuts (4) Carriage bolts (4) Carriage bolt washers	(1) 531085* Hole plug assembly	(1) 1/2-inch EMT compression connector with extra sealing locknut
Mounting Component Security Torx Key			

## Dimensions

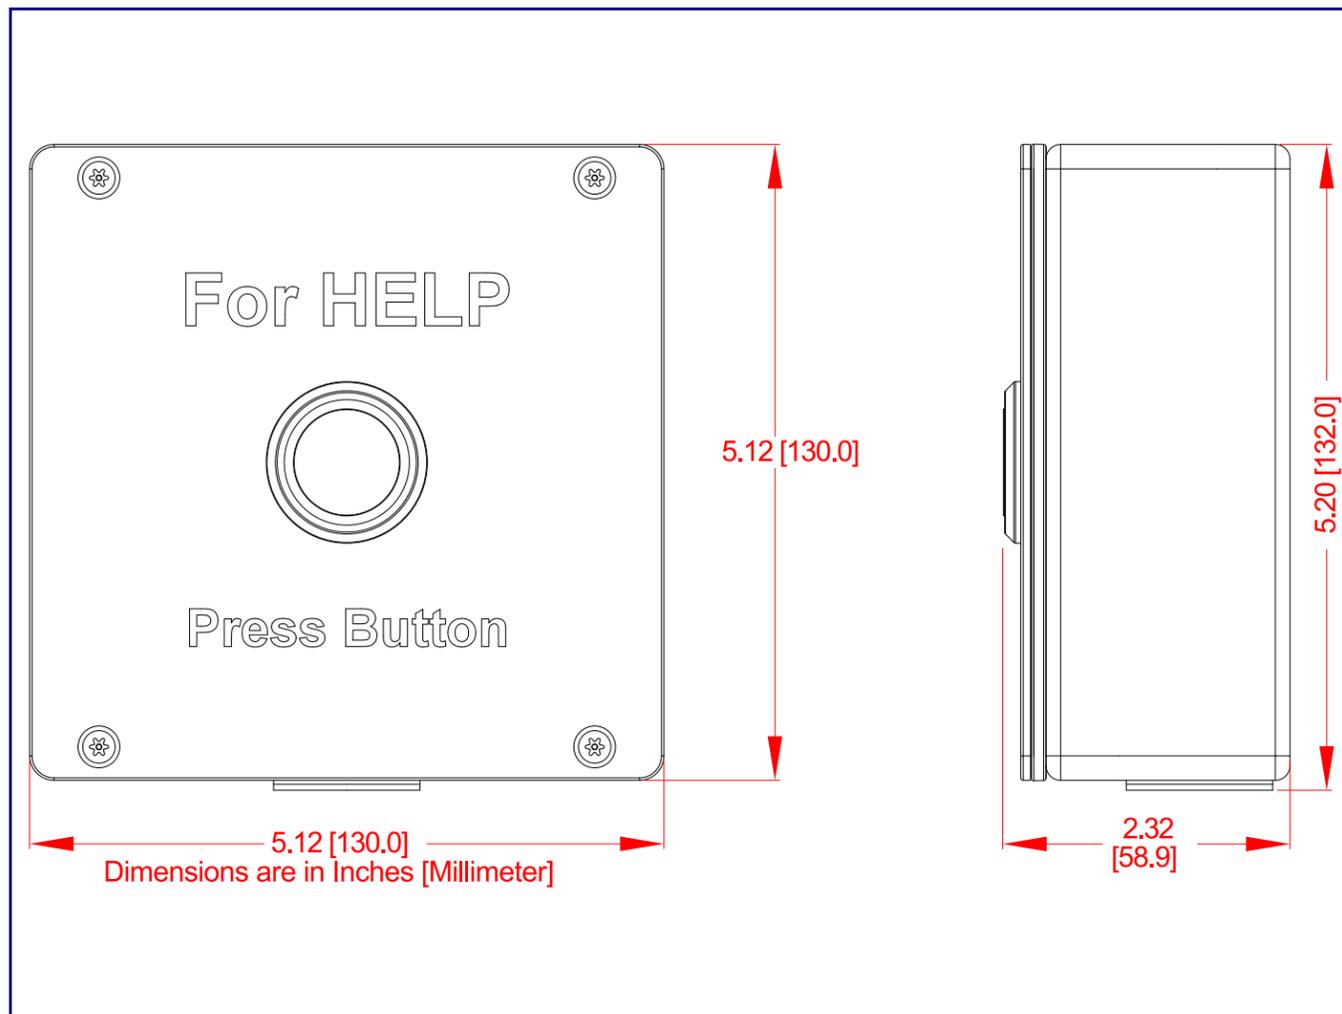

## Terminal Block Connections

### Alternate Power Input:

- 1 = +8 to +12VDC @ 1000mA Regulated Power Supply\*
- 2 = Power Ground\*




### Relay Contact:


- (1 A at 30 VDC for continuous loads) 3 = Relay Common
- 4 = Relay Normally Open Contact
- 5 = Sense Input
- 6 = Sense Ground
- 7 = Remote Switch "A"
- 8 = Remote Switch "B"

\*Contacts 1 and 2 on the terminal block are only for powering the device from a non-PoE 12VDC power source as an alternative to Network PoE power. Use of these contacts for any other purpose will damage the device and void the product warranty.

Use a 3.17 mm (1/8-inch) flat blade screwdriver for the terminal block screws

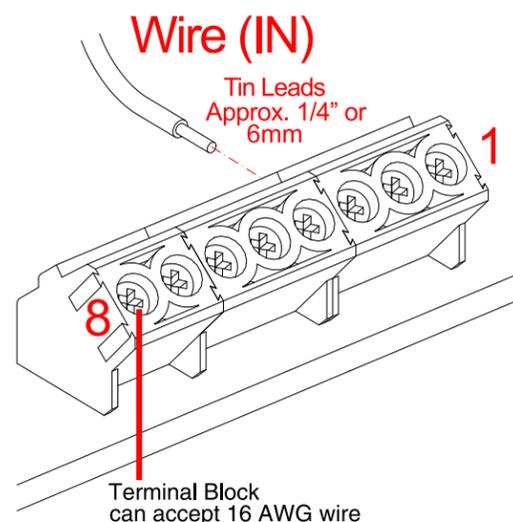

## RTFM Button

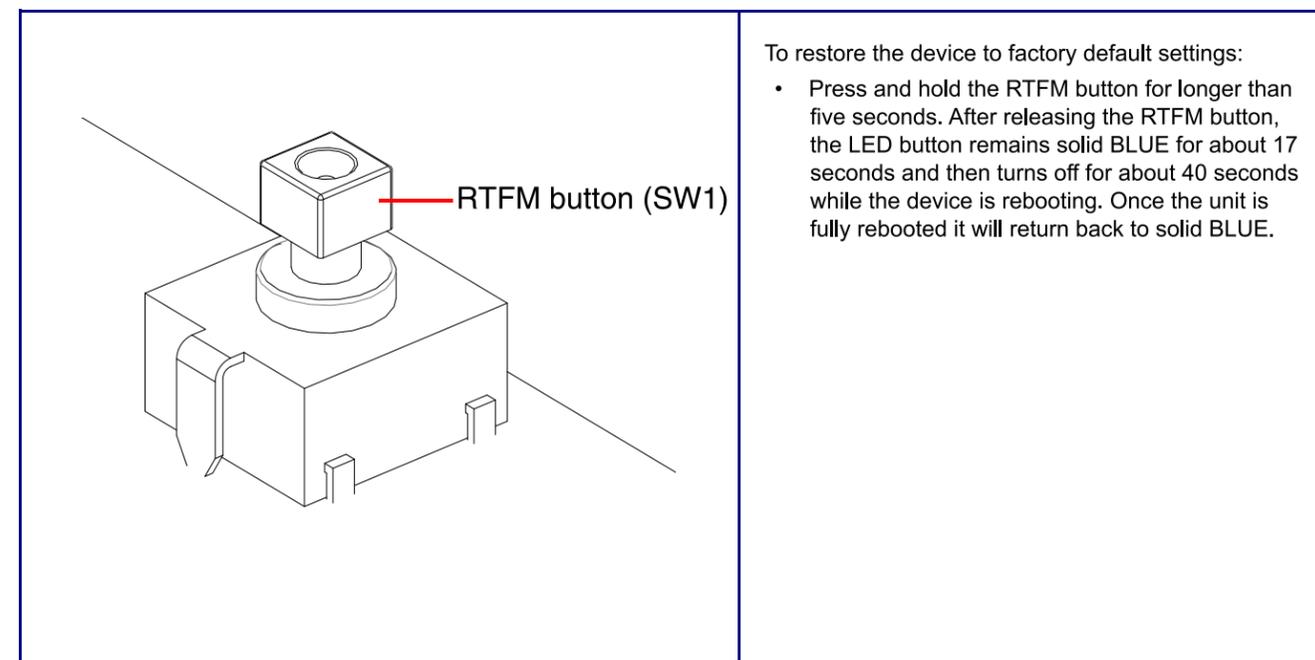

## Wall Mounting Options

