



CyberData The IP Endpoint Company Installation Quick Reference InformaCast Enabled Ceiling Speaker


011504



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	IPv4 Link Local
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	IPv4 Link Local
Default Gateway ^a	IPv4 Link Local

a. Default if there is not a DHCP server present.

Typical System Installation

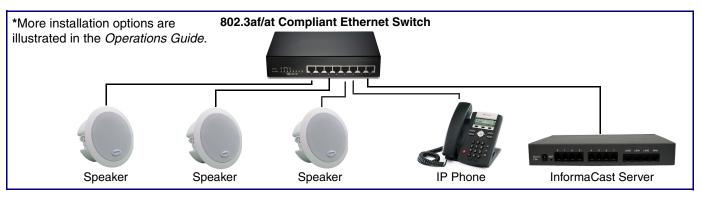

Getting Started


- Download the Operations Guide PDF file, from the Downloads tab at the following webpage: https://www.cyberdata.net/products/011504/
- · Create a plan for the locations of your speakers.
- WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING: This enclosure is not rated for any AC voltages!

Parts


Quick Reference




Dimensions

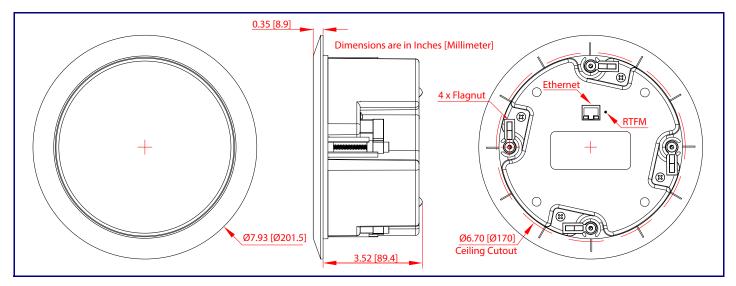


Features

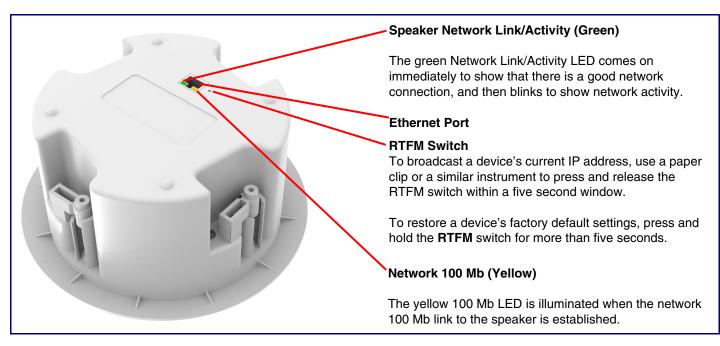


Connecting Power

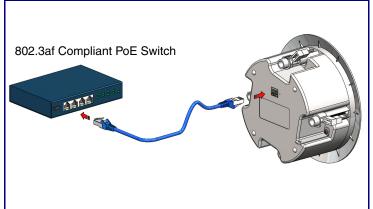

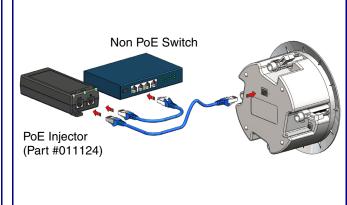

Mounting

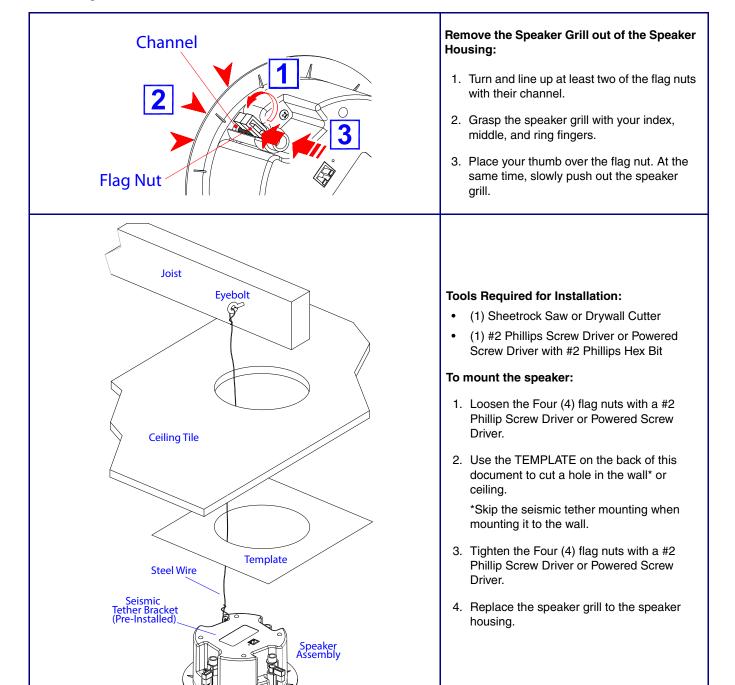

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Monterey, CA 93940, USA

Phone: 831-373-2601 Fax: 831-373-4193 https://www.cyberdata.net/

Quick Reference

Sales: 831-373-2601 ext. 334 Support: 831-373-2601 ext. 333

931681B

Support Website: https://support.cyberdata.net/

RMA Department Contact and Status: https://support.cyberdata.net/

Warranty Information: https://support.cyberdata.net/