


| Parameter | Factory Default Setting |
|------------------------------|-------------------------|
| IP Addressing | DHCP |
| IP Address ^a | IPv4 Link Local |
| Web Access Username | admin |
| Web Access Password | admin |
| Subnet Mask ^a | IPv4 Link Local |
| Default Gateway ^a | IPv4 Link Local |

a. Default if there is not a DHCP server present.


Typical System Installation

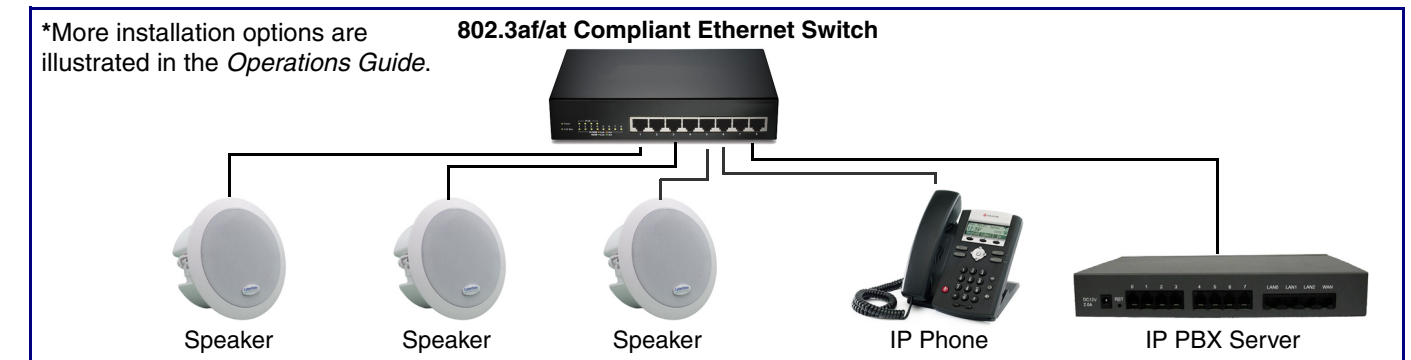


Getting Started

- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:
<https://www.cyberdata.net/products/011511/>
- Create a plan for the locations of your speakers.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!


Parts

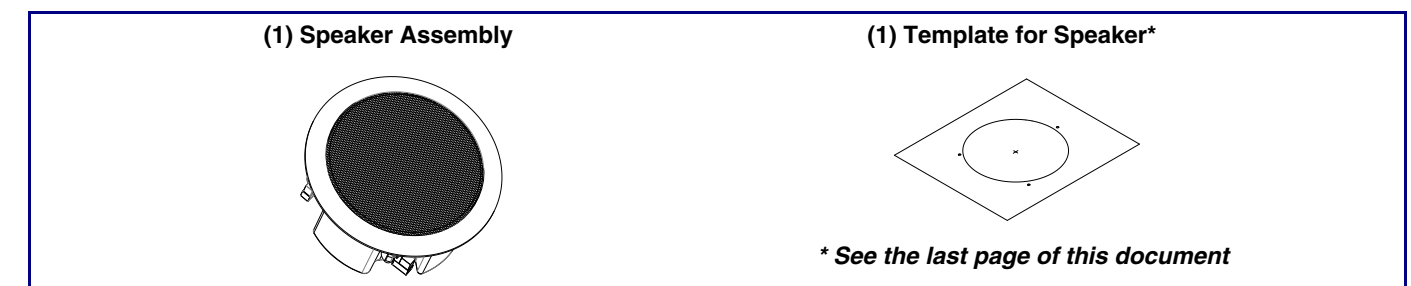


Dimensions

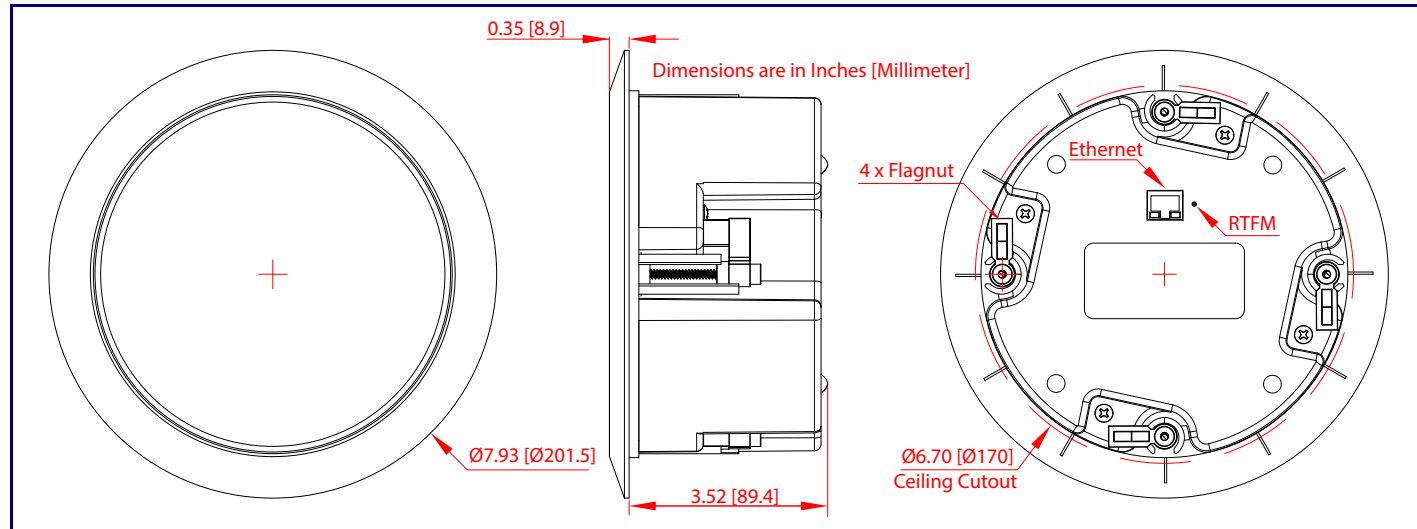


Features

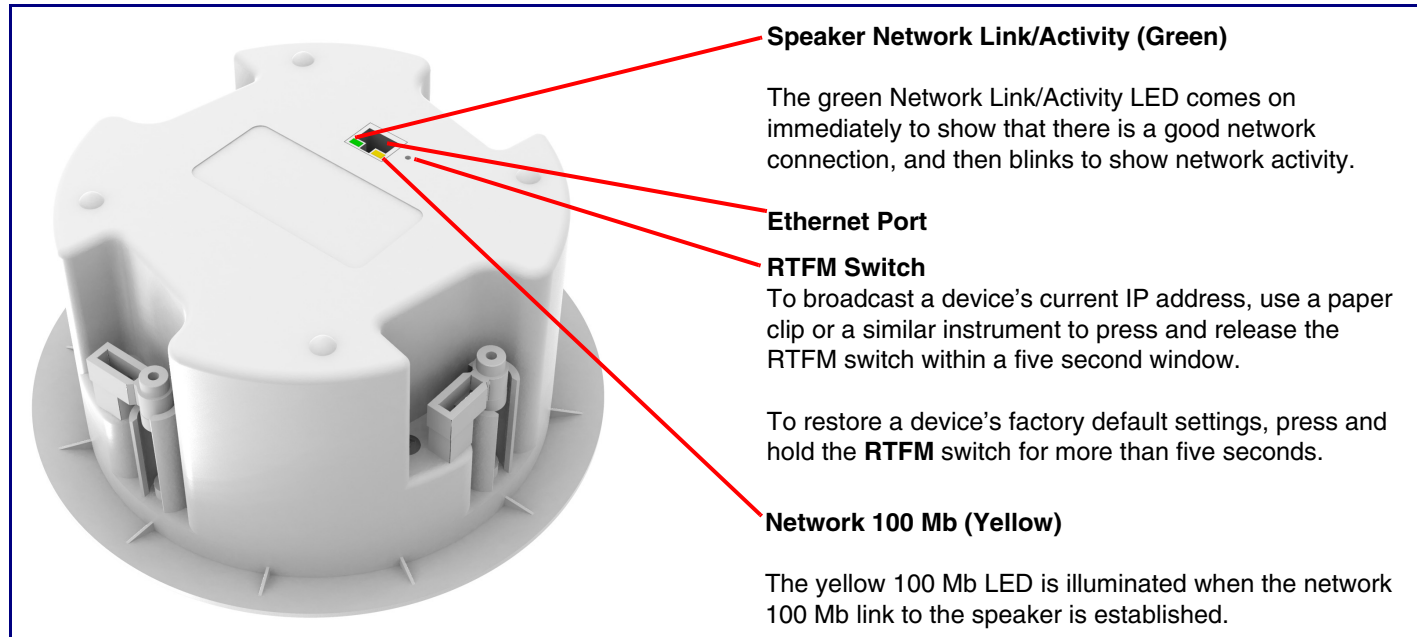

Connecting Power

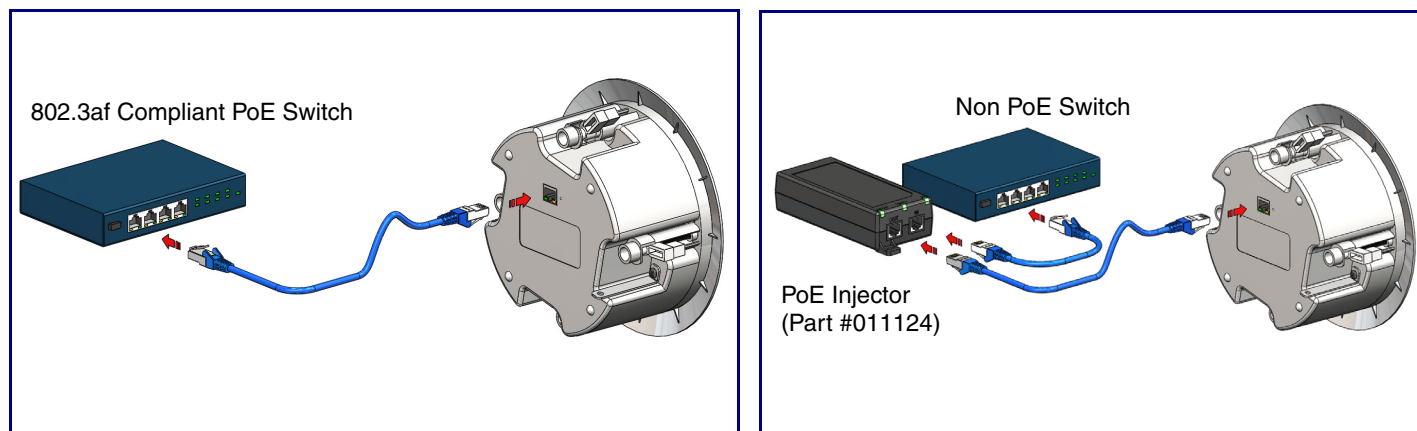

Mounting

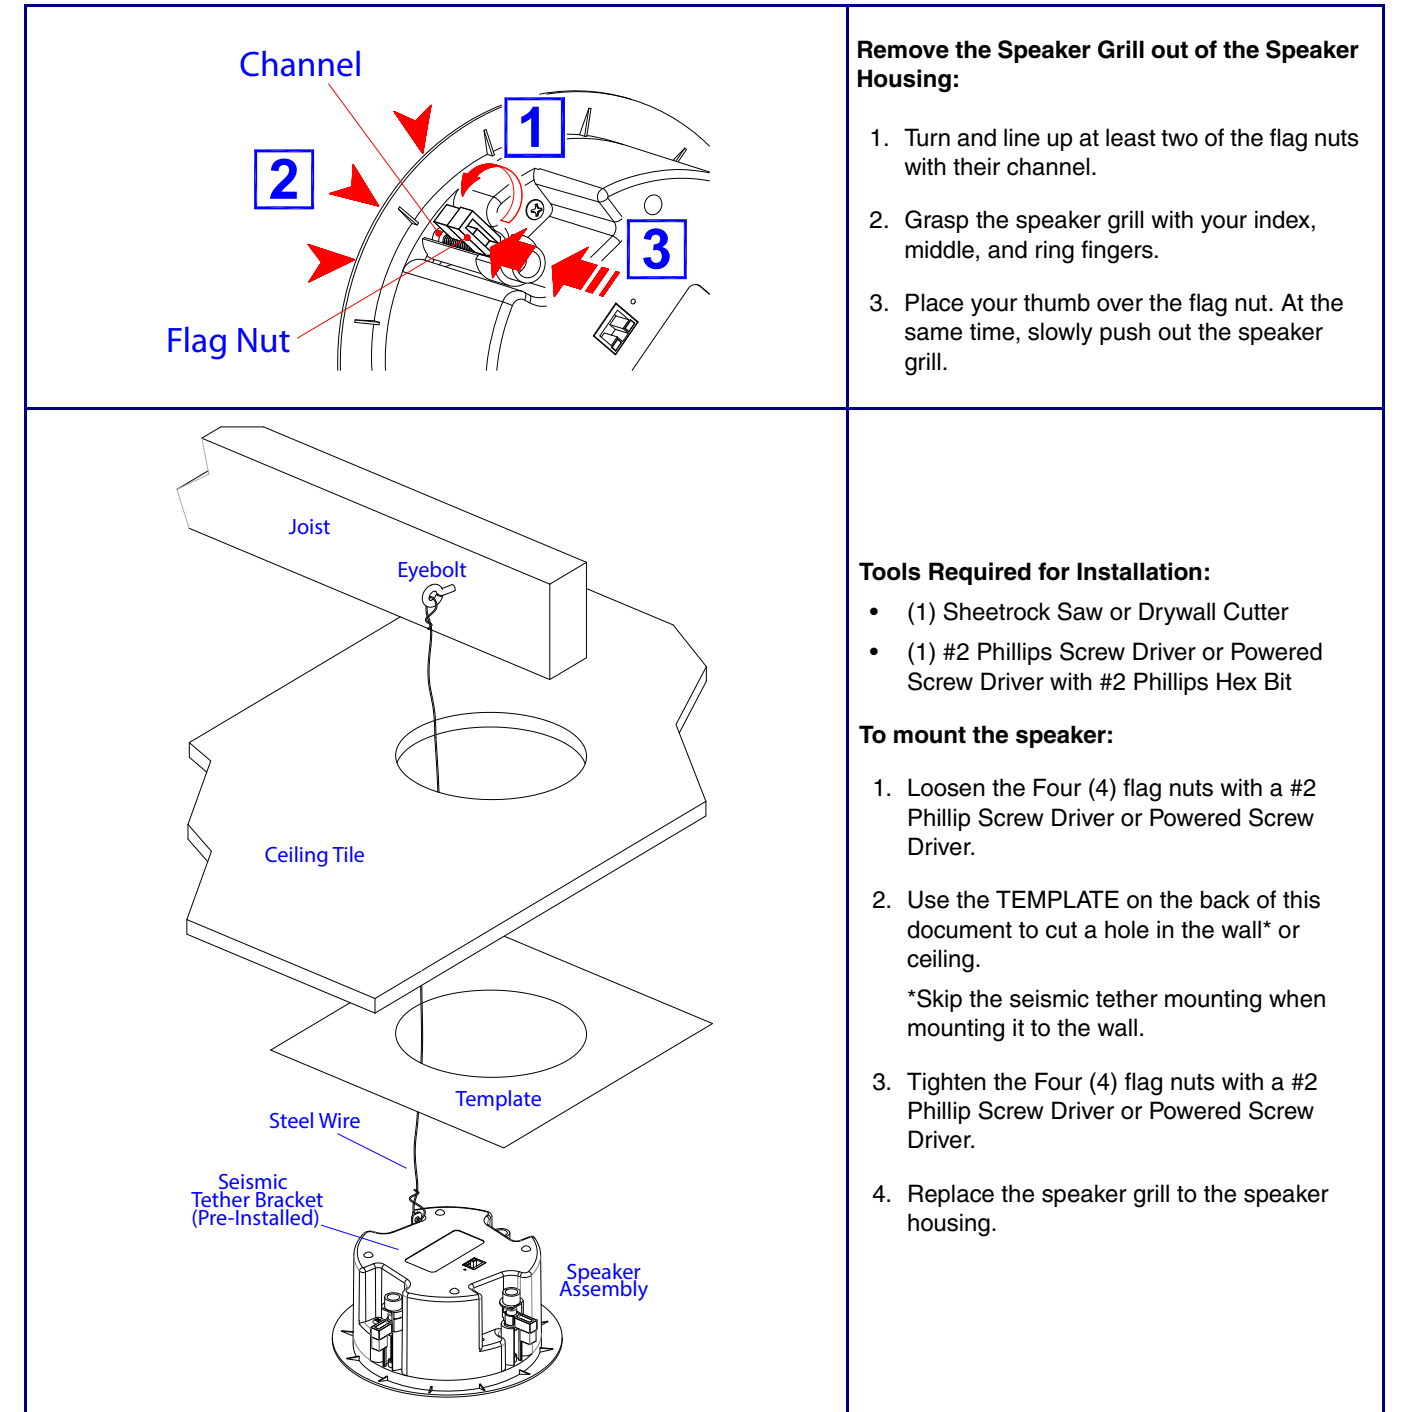

Contacting CyberData

