





## Caution

*Equipment Hazard:* All equipment should be powered down prior to making wiring connections and changing switch positions.

## AT&T PagePac 20 PowerMate

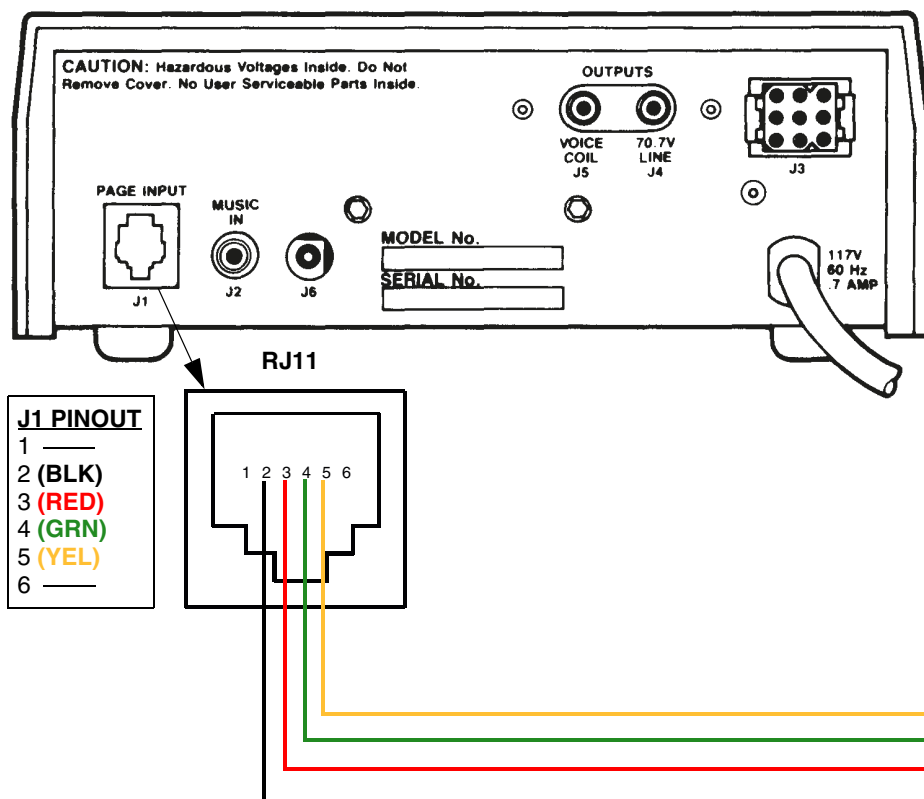

## SIP Paging Server Connections

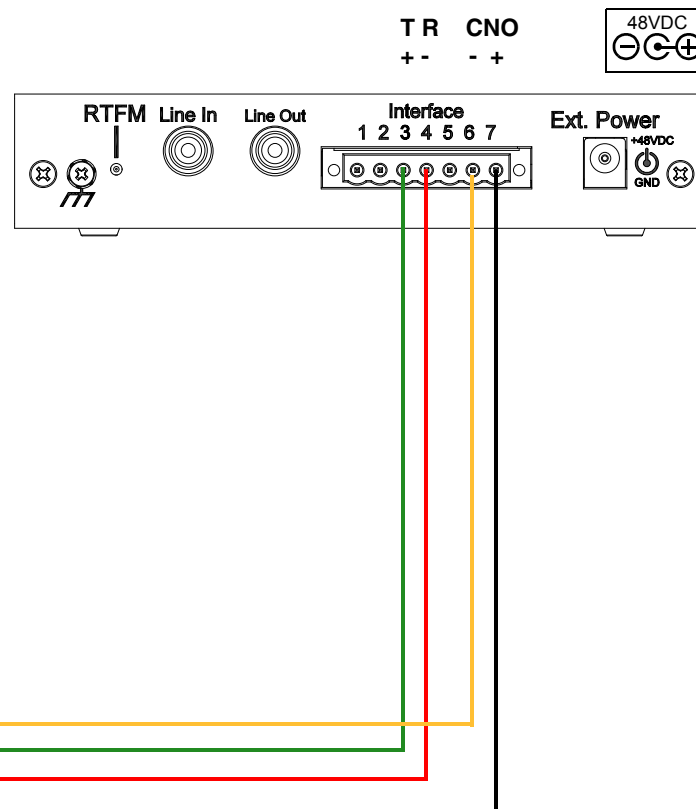

## Notes

CyberData SIP Paging Server's Page Port output connects to the PAGE INPUT on the AT&T PagePac 20 PowerMate using an RJ11 modular connector for single-zone paging. Talkback is not supported.

It will be necessary to use the SIP Paging Server's normally open relay contacts in addition to the Page Port connection for contact closure.

Please enable the setting **Activate Relay on Local Audio** which is located on the device page of the web interface.