



Panasonic WA-740A Amplifier

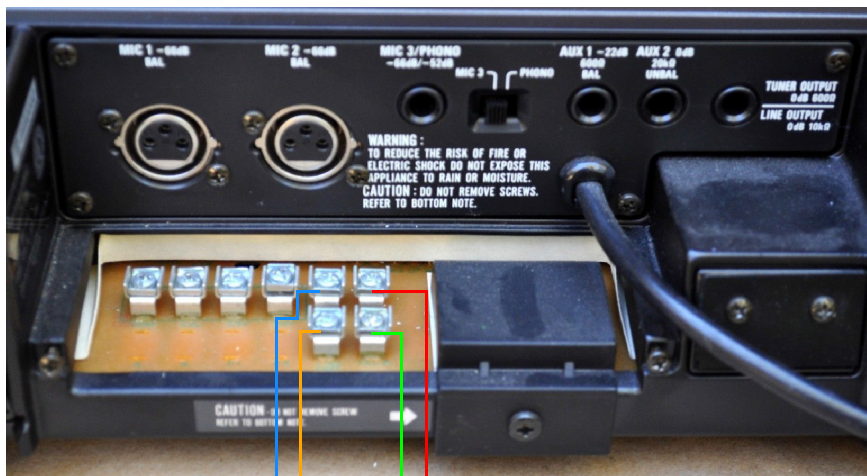

SIP Paging Adapter Connections

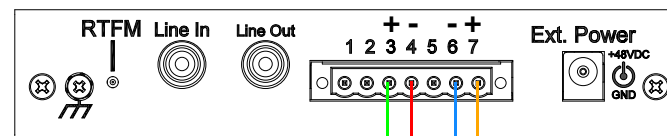

Page Port Connections

| Pin | Description |
|-----|--|
| 1 | Fault Sense Input (Common). |
| 2 | Fault Sense Input (Sense). |
| 3 | Positive 600-Ohm Audio Output ^a |
| 4 | Negative 600-Ohm Audio Output ^a |
| 5 | Audio Ground Reference. |
| 6 | Relay Contact - Common ^b |
| 7 | Relay Contact - Normally Open ^b |

Notes

The CyberData SIP Paging Adapter's Page Port output connects to the AUX-1 Telephone Paging input screw terminals under the removable panel of the Panasonic WA-740A Amplifier.

Connect pins 3 and 4 of the SIP Paging Adapter's terminal block to the TEL T and TEL R terminals, respectively.

It may be necessary to use the dry relay contacts to trigger the page by connecting pins 6 and 7 to the CONT and CONT (-) terminals of the WA-740A Amplifier, respectively.

When using the relay, check the box to **Enable Relay on Local Audio** on the **Device Configuration** page of the web interface.

2-conductor, shielded speaker wire is recommended.

a. The 600-Ohm audio output of the page port is also suited for interfaces with lower input impedances.

b. 1 Amp at 30 VDC for continuous loads.