




Caution


Equipment Hazard: All equipment should be powered down prior to making wiring connections and changing switch positions.

The Peavey **MIC/PAGE** switch needs to be in the **PAGE** position.

SIP Paging Adapter Connections

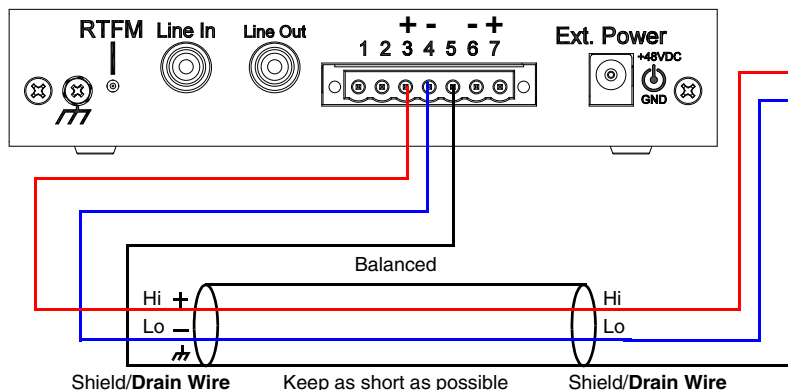

Peavey UA 35T II Amplifier

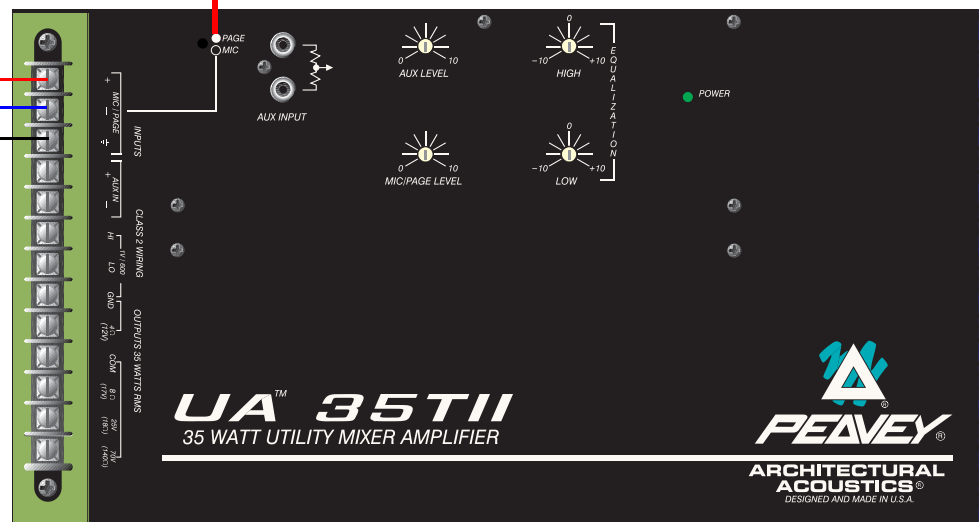

Page Port Output Connections

Pin	Description
1	Fault Sense Input (Common).
2	Fault Sense Input (Sense).
3	Positive 600-Ohm Audio Output ^a
4	Negative 600-Ohm Audio Output ^a
5	Audio Ground Reference.
6	Relay Contact - Common ^b
7	Relay Contact - Normally Open ^b

a. The 600-Ohm audio output of the page port is also suited for interfaces with lower input impedances.

b. 1 Amp at 30 VDC for continuous loads.

Notes

The Peavey **MIC/PAGE** switch needs to be in the **PAGE** position.

To go straight to page without menu selection, you need to select **Bypass DTMF Menus** on the **Device** page (under **DTMF Settings**) of the SIP Paging Adapter.

2 conductor, shielded speaker wire is recommended.