



# *VoIP Zone Controller: 4-Port Audio Out Operations Guide*

*SiP Compliant 010881*

Document Part #930109D  
for Firmware Version 1.0.6

**CyberData Corporation**  
3 Justin Court  
Monterey, CA 93940  
(831) 373-2601

**Operations Guide 930109D**  
**SiP Compliant 010881**

**COPYRIGHT NOTICE:**

© 2010, CyberData Corporation, ALL RIGHTS RESERVED.

This manual and related materials are the copyrighted property of CyberData Corporation. No part of this manual or related materials may be reproduced or transmitted, in any form or by any means (except for internal use by licensed customers), without prior express written permission of CyberData Corporation. This manual, and the products, software, firmware, and/or hardware described in this manual are the property of CyberData Corporation, provided under the terms of an agreement between CyberData Corporation and recipient of this manual, and their use is subject to that agreement and its terms.

**DISCLAIMER:** Except as expressly and specifically stated in a written agreement executed by CyberData Corporation, CyberData Corporation makes no representation or warranty, express or implied, including any warranty or merchantability or fitness for any purpose, with respect to this manual or the products, software, firmware, and/or hardware described herein, and CyberData Corporation assumes no liability for damages or claims resulting from any use of this manual or such products, software, firmware, and/or hardware. CyberData Corporation reserves the right to make changes, without notice, to this manual and to any such product, software, firmware, and/or hardware.

**OPEN SOURCE STATEMENT:** Certain software components included in CyberData products are subject to the GNU General Public License (GPL) and Lesser GNU General Public License (LGPL) "open source" or "free software" licenses. Some of this Open Source Software may be owned by third parties. Open Source Software is not subject to the terms and conditions of the CyberData COPYRIGHT NOTICE or software licenses. Your right to copy, modify, and distribute any Open Source Software is determined by the terms of the GPL, LGPL, or third party, according to who licenses that software.

Software or firmware developed by Cyberdata that is unrelated to Open Source Software is copyrighted by CyberData, subject to the terms of CyberData licenses, and may not be copied, modified, reverse-engineered, or otherwise altered without explicit written permission from CyberData Corporation.

**TRADEMARK NOTICE:** CyberData Corporation and the CyberData Corporation logos are trademarks of CyberData Corporation. Other product names, trademarks, and service marks may be the trademarks or registered trademarks of their respective owners.



**Technical Support**

The fastest way to get technical support for your VoIP product is to submit a VoIP Technical Support form at the following website:  
<http://www.cyberdata.net/support/contactsupportvoip.html>

We have several technical support staff monitoring this form and they will contact you within 12 hours after receiving a submission.

Phone: (831) 373-2601, Ext. 333

Email: [support@cyberdata.net](mailto:support@cyberdata.net)

Fax: (831) 373-4193

Company and product information is at [www.cyberdata.net](http://www.cyberdata.net).

---

# Revision History

Revision 930109D, which corresponds to firmware version 1.0.6, was released on November 15, 2011 and has the following changes:

- Updates the [Product Overview](#) introduction with the following text:

“The VoIP Zone Controller is a PoE-enabled, single SIP-endpoint, enabling user-defined paging zones through RCA line level output connections to legacy analog amplifiers to existing legacy analog speakers.”

# Contents

---

<b>Chapter 1 Product Overview</b>	<b>1</b>
1.1 How to Identify this Product .....	1
1.2 Product features .....	2
1.3 Supported .....	2
1.4 Product Specifications .....	2
<b>Chapter 2 Implementing the VoIP Zone Controller</b>	<b>3</b>
2.1 Parts List .....	3
2.2 Typical Installation .....	4
2.3 Setting up the VoIP Zone Controller .....	5
2.3.1 Cables Used for Connecting to Legacy Analog Amplifiers .....	5
2.3.2 Connect to the Power Source .....	5
2.3.3 Connect to the Network .....	6
2.3.4 Confirm that the VoIP Zone Controller is Up and Running .....	7
Confirm Power on, Network Connectivity, and Connection Speed .....	7
Verify Network Activity .....	7
2.3.5 Restore the Factory Default Settings as Required .....	8
2.4 Configuring the VoIP Zone Controller .....	9
2.4.1 Gather the Required Configuration Information .....	9
Static or DHCP Addressing? .....	9
Username and Password for Configuration GUI .....	9
SIP Settings .....	9
2.4.2 Log in to the Configuration GUI .....	10
2.4.3 Configure the Network Parameters .....	12
2.4.4 Change the Default Username and Password .....	14
2.4.5 Configure the SIP Parameters .....	16
2.5 Set up the Zones .....	19
2.6 Operating the VoIP Zone Controller .....	21
2.7 Upgrading the Firmware .....	21
2.8 Rebooting the VoIP Zone Controller .....	23
<b>Appendix A Setting Up a TFTP Server</b>	<b>24</b>
A.1 Set up a TFTP Server .....	24
A.1.1 In a LINUX Environment .....	24
A.1.2 In a Windows Environment .....	24
<b>Appendix B Troubleshooting/Technical Support</b>	<b>25</b>
B.1 Frequently Asked Questions (FAQ) .....	25
B.1.1 Documentation .....	25
B.2 Contact Information .....	26
B.3 Warranty .....	27
B.3.1 Warranty & RMA Returns within the United States .....	27
B.3.2 Warranty & RMA Returns Outside of the United States .....	27
B.3.3 Spare in the Air Policy .....	27
B.3.4 Return and Restocking Policy .....	28
B.3.5 Warranty and RMA Returns Page .....	28
<b>Index</b>	<b>29</b>

# 1 Product Overview

---

The VoIP Zone Controller is a PoE-enabled, single SIP-endpoint, enabling user-defined paging zones through RCA line level output connections to legacy analog amplifiers to existing legacy analog speakers.


SIP compliant IP-PBX's can now interface with existing legacy analog paging speaker installations.

---

## 1.1 How to Identify this Product

To identify the VoIP Zone Controller, look for a model number label similar to the one shown in [Figure 1-1](#). The model number on the label should be **010881**.

**Figure 1-1. Model Number Label**

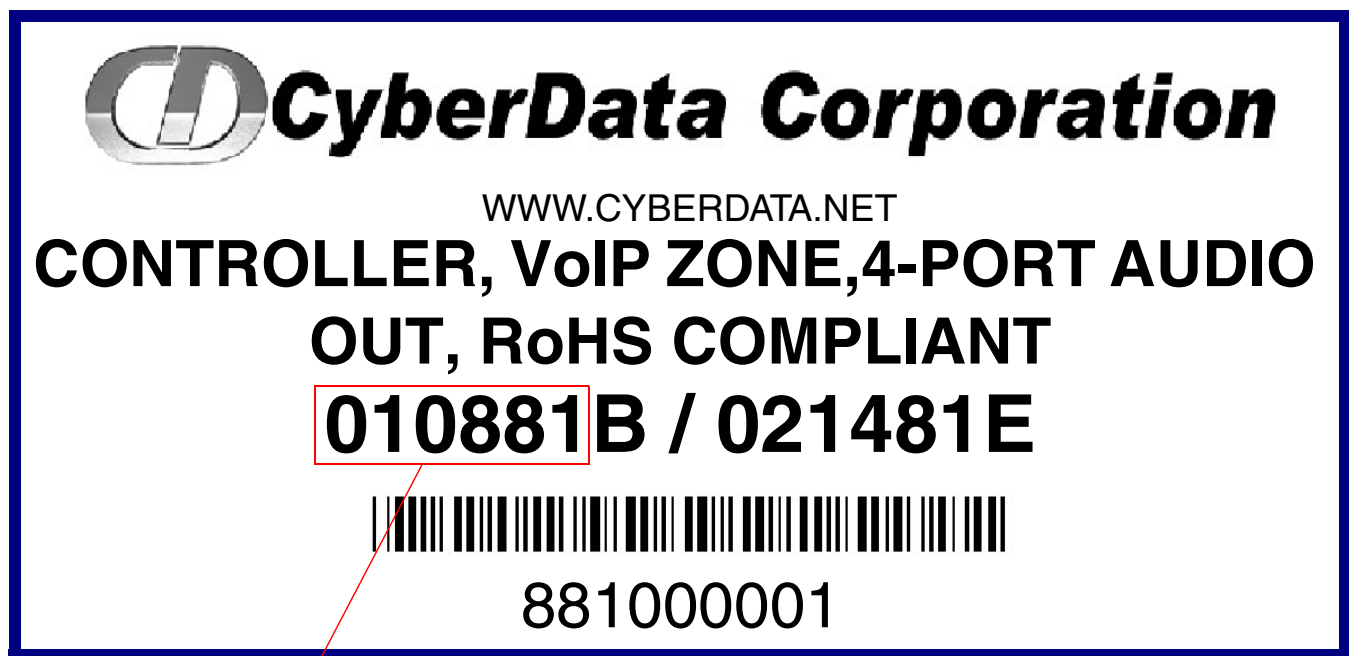

Model number

---

## 1.2 Product features

- SIP compliancy
- 10/100BaseT Ethernet Connection
- Page any combination of zones in 15 configurable groups
- TFTP-based firmware upgrades
- PoE enabled
- Connector for optional external power supply

---

## 1.3 Supported

- HTTP Web-based configuration
- Provides an intuitive GUI for easy system configuration and verification of speaker operations.
- DHCP Client
- TFTP Client
- Audio Codec
- G.711 U-law
- DTMF detection

---

## 1.4 Product Specifications

### Specifications

Power Requirement	PoE or 48V DC
Connection Speed	10/100 Mbps
Protocol	SIP compliant
Part Number	010881
Dimensions	6.11"L x 4.05"W x 1.15" H
Weight	1.2 pounds

---


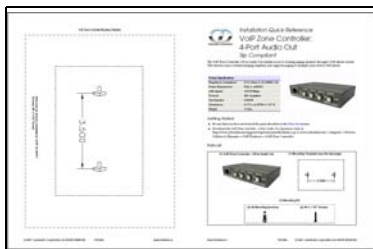
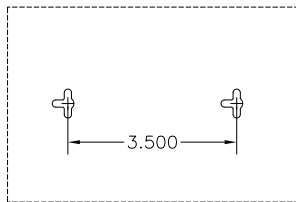

## 2 Implementing the VoIP Zone Controller

The topics in this chapter provide information on setting up, configuring, and using the VoIP Zone Controller.

### 2.1 Parts List

The packaging for the VoIP Zone Controller includes the parts in this illustration.


**Table 2-1. Parts List**

Quantity	Part Name	Illustration
1	VoIP Zone Controller	
1	Installation Quick Reference Guide	
1	Mounting Template (located on the last page of the <i>Installation Quick Reference</i> )	
1	Mounting Kit (part #070057A) which includes: (2) #4-6 x 7/8" Mounting Anchors (2) #4 x 1-1/4" Round Phillips Wood Screws	

## 2.2 Typical Installation

Figure 2-2 illustrates how the VoIP Zone Controller is normally installed as part of a paging system.

Figure 2-2. Typical Installation

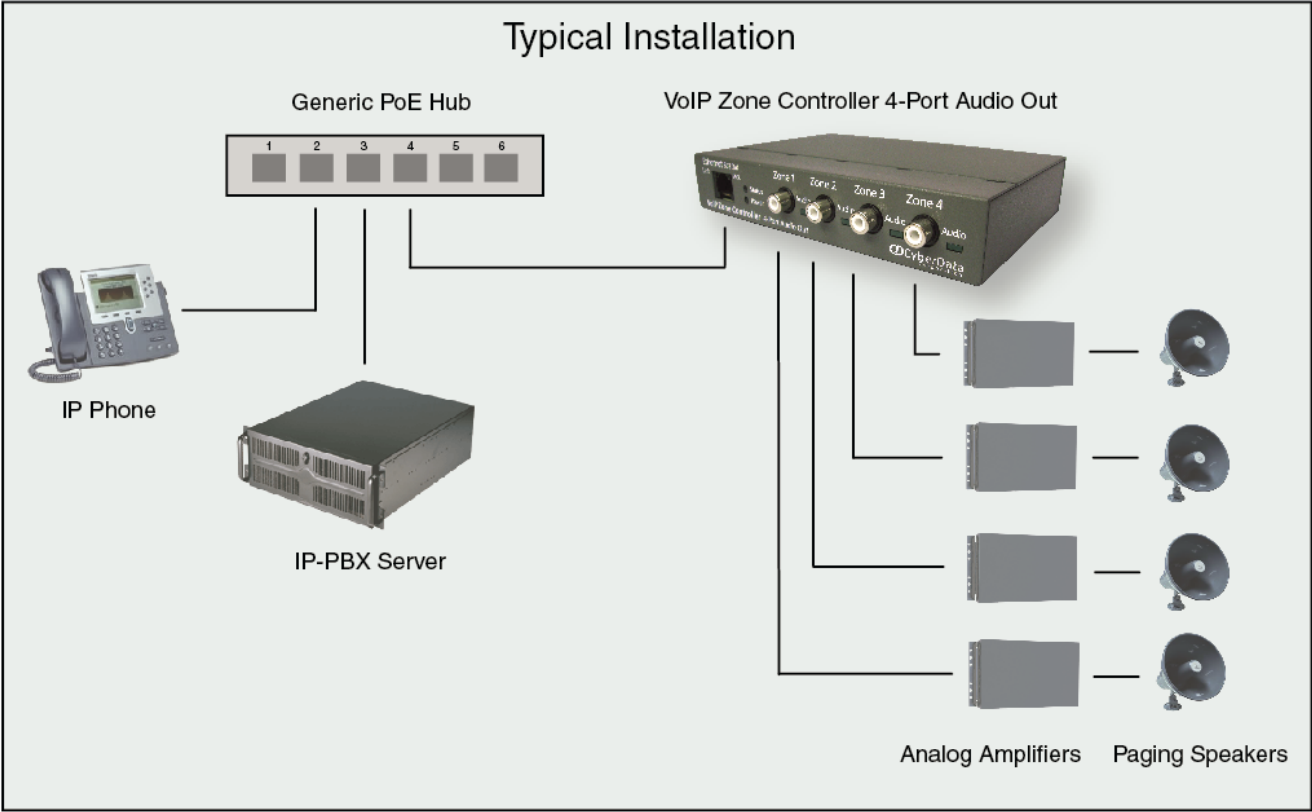



---

## 2.3 Setting up the VoIP Zone Controller

Before you set up the VoIP Zone Controller, be sure that you have received all the parts described in [Section 2.1, "Parts List"](#).

---

### 2.3.1 Cables Used for Connecting to Legacy Analog Amplifiers

The VoIP Zone Controller connects to zones through RCA line level output connections to legacy analog amplifiers to existing legacy analog speakers.

---

### 2.3.2 Connect to the Power Source

To use PoE, plug a Cat 5 Ethernet cable from the VoIP Zone Controller **Ethernet** port to your network. As an alternative to PoE, you can plug one end of a +48V DC power supply into the VoIP Zone Controller, and plug the other end into a receptacle. If required, connect the earth grounding wire to the chassis ground on the back of the unit.

**Figure 2-3. Connecting to the Power Source**



---

### 2.3.3 Connect to the Network

Plug one end of a standard Ethernet cable into the VoIP Zone Controller **Ethernet** port. Plug the other end into your network.


**Figure 2-4. Connecting to the Network**



## 2.3.4 Confirm that the VoIP Zone Controller is Up and Running

The indicator LEDs on the front of the VoIP Zone Controller verify the unit's operations.

**Figure 2-5. VoIP Zone Controller Indicator LEDs**

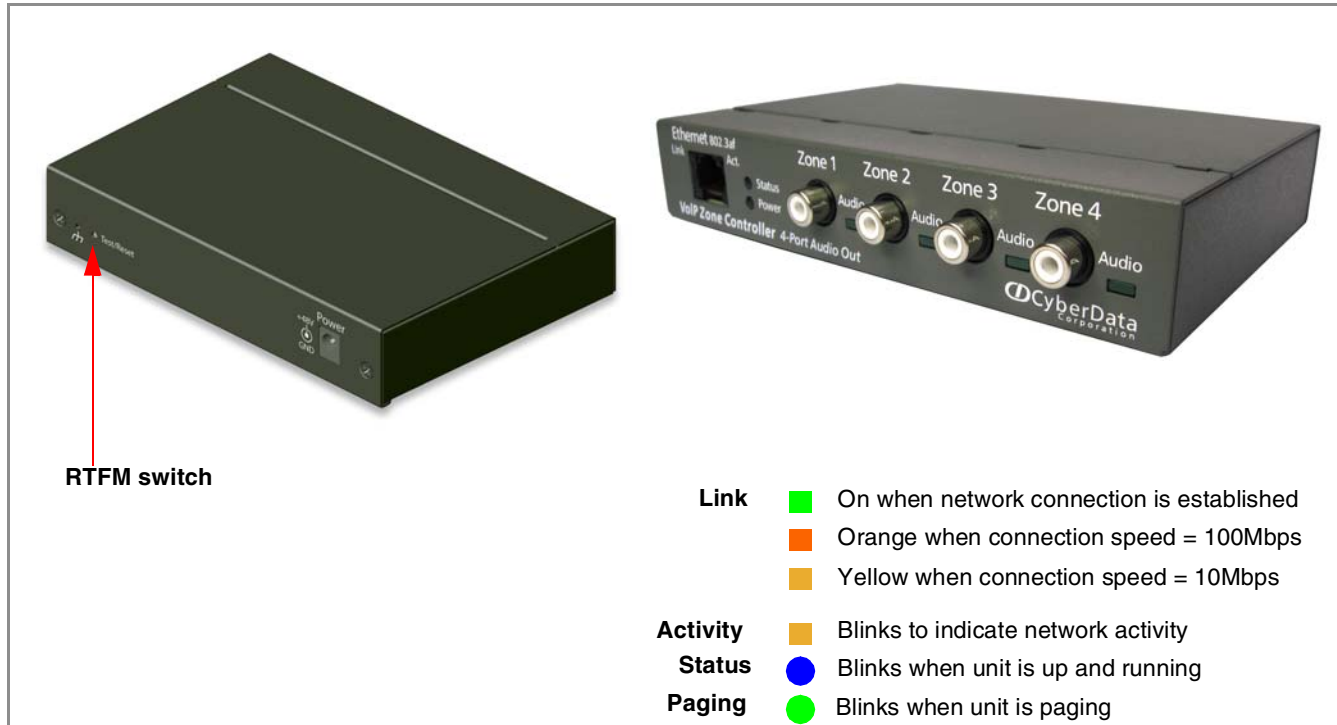

### 2.3.4.1 Confirm Power on, Network Connectivity, and Connection Speed

When you plug in the Ethernet cable or power supply:

- The round, **BLUE Status** LED on the front of the VoIP Zone Controller comes on indicating that the power is on. Once the device has been initialized, this LED blinks at one second intervals.
- The square, **GREEN Link** LED above the Ethernet port indicates that the network connection has been established. The **Link** LED changes color to confirm the auto-negotiated connection speed:
  - This LED is **YELLOW** at 10 Mbps.
  - This LED is **ORANGE** at 100 Mbps.
- The **GREEN Paging** LED comes on after the device is booted and initialized. This LED blinks when a page is in progress.


### 2.3.4.2 Verify Network Activity

The square, **YELLOW Activity** LED blinks when there is network activity.

### 2.3.5 Restore the Factory Default Settings as Required

The VoIP Zone Controller is delivered with factory set default values for the following parameters. Use the **RTFM** switch (see [Figure 2-6](#)) on the back of the unit to restore these parameters to the factory default settings.

Figure 2-6. RTFM Switch

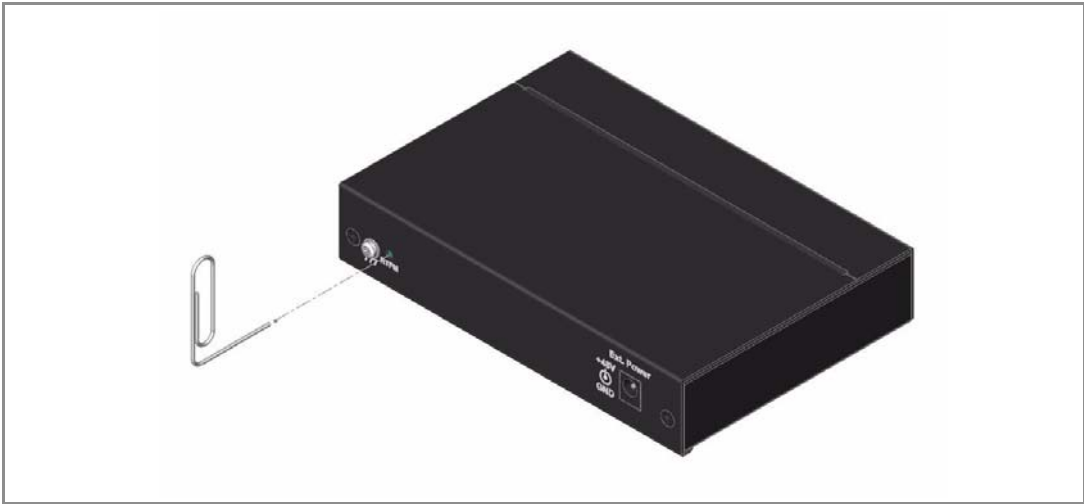

**Note** When you perform this procedure, the factory default settings are restored for *all* the following parameters.

Parameter	Factory Default Setting
IP Addressing	static
IP Address	192.168.3.10
Subnet Mask	255.255.255.0
Default Gateway	192.168.3.1
Username	admin
Password	admin

To restore these parameters to the factory default settings:

1. Press and hold the RTFM switch until the paging LEDs come on.
2. Continue to hold the RTFM switch after the LEDs go off.
3. Continue to hold the RTFM switch until the audio LEDs come on a second time (approximately 10 to 12 seconds).
4. Release the RTFM switch.
5. Wait for approximately five seconds.
6. Power down the device.
7. Wait for approximately 10 seconds.
8. Power on the device. The unit should now be restored to factory defaults.

---

## 2.4 Configuring the VoIP Zone Controller

Use this section to configure the VoIP Zone Controller.

---

### 2.4.1 Gather the Required Configuration Information

Have the following information available before you configure the VoIP Zone Controller.

#### 2.4.1.1 Static or DHCP Addressing?

Know whether your system uses static or dynamic (DHCP) IP addressing. If it uses static addressing, you also need to know the values to assign to the following VoIP Zone Controller parameters:

- IP Address
- Subnet Mask
- Default Gateway

#### 2.4.1.2 Username and Password for Configuration GUI

Determine the Username and Password that will replace the defaults after you initially log in to the configuration GUI.

- The Username is case-sensitive, and must be from four to 25 alphanumeric characters long.
- The Password is case-sensitive, and must be from four to 20 alphanumeric characters long.

#### 2.4.1.3 SIP Settings

To configure the SIP parameters, determine whether you want to register the VoIP Zone Controller. If you do, determine the number of minutes the registration lease remains valid, and whether you want to automatically unregister when you reboot. To configure the SIP parameters, you also need to determine the values for these parameters:

- SIP Server IP Address
- Remote and Local SIP Port Numbers
- SIP User ID, and Authenticate ID and Password for this User ID

## 2.4.2 Log in to the Configuration GUI

To log in:

1. For the initial configuration of the VoIP Zone Controller, open your browser and enter the following address:

`http://192.168.3.10`


**Note** To work with the VoIP Zone Controller configuration *after* the initial configuration, log in using the IP address you assign to the device. [Section 2.4.3, "Configure the Network Parameters"](#) provides instructions for entering the IP address.

2. When prompted, use the following default **Username** and **Password** to open the configuration Home page:

Username: **admin**



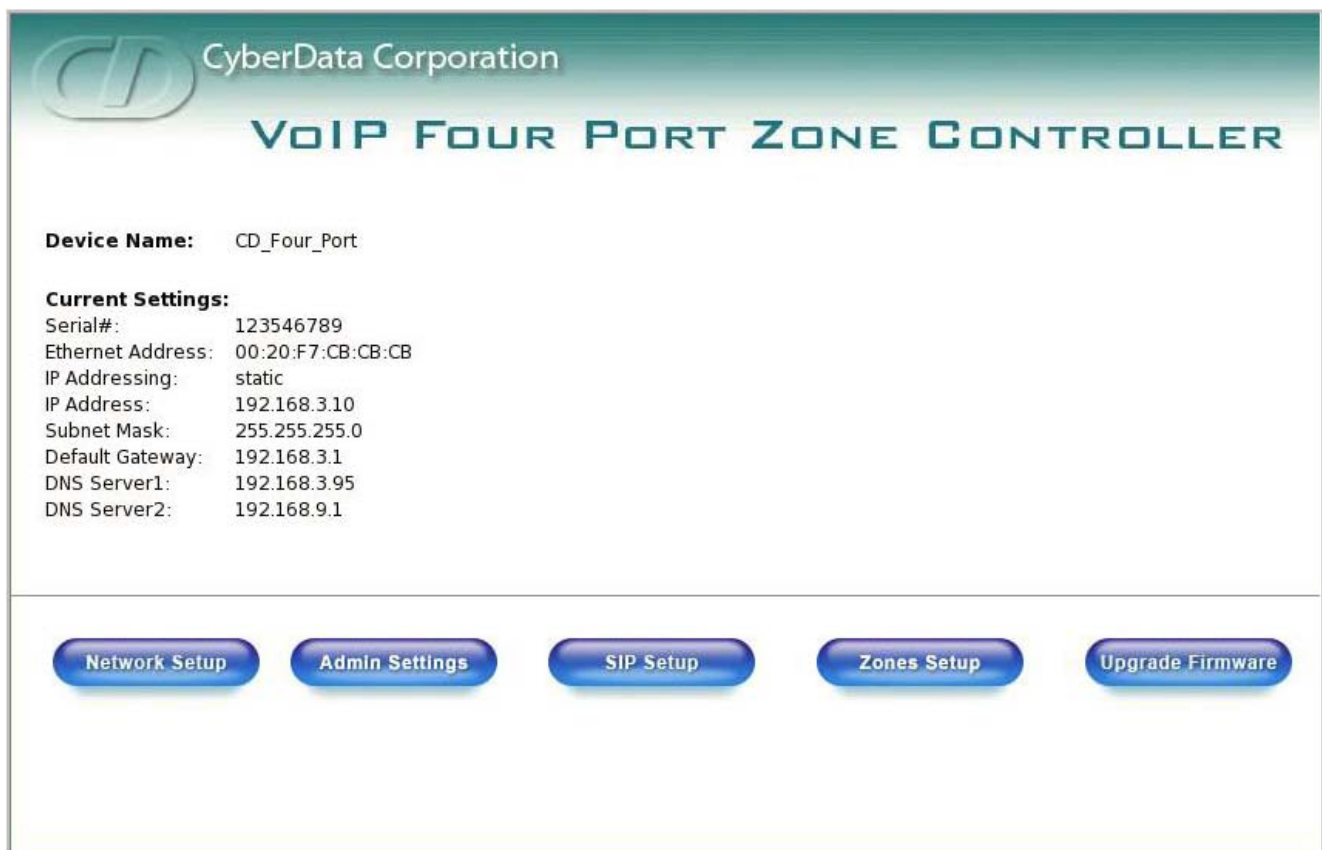


Password: **admin**

**Figure 2-7. Home Page**



3. On the **Home Page**, review the setup details and navigation buttons described in [Table 2-1](#).

**Table 2-1. Home Page Overview**

Web Page Item	Description
Device Name	Shows the device name.
Serial #	Device serial number.
Ethernet Address	Device ethernet address.
IP Addressing	Shows the current IP addressing setting ( <b>DHCP</b> or <b>static</b> ).
IP Address	Shows the current IP address.
Subnet Mask	Shows the current subnet mask address.
Default Gateway	Shows the current default gateway address.
DNS Server 1	Shows the DNS Server 1 address.
DNS Server 2	Shows the DNS Server 2 address.
	Link to the <b>Network Setup</b> web page.
	Link to the <b>Admin Settings</b> web page.
	Link to the <b>SIP Setup</b> web page.
	Link to the <b>Zones Setup</b> web page.
	Link to the <b>Upgrade Firmware</b> web page.

At this point you can:


- Review the VoIP Zone Controller's **Current Settings**. Use the RTFM switch to restore the factory default settings. See [Section 2.3.5, "Restore the Factory Default Settings as Required"](#).
- Configure the network parameters. Click **Network Setup** and refer to [Section 2.4.3, "Configure the Network Parameters"](#) for instructions.
- Configure the Admin parameters. Click **Admin Settings** and refer to [Section 2.4.4, "Change the Default Username and Password"](#) for instructions.
- Configure the SIP parameters. Click **SIP Setup** and see [Section 2.4.5, "Configure the SIP Parameters"](#).
- Configure the Zones parameters. Click **Zones Setup** and refer to ....for instructions.

**Note** Click the **Upgrade Firmware** button any time you need to upload new versions of the firmware or **Reboot** the VoIP Zone Controller. Refer to [Section 2.7, "Upgrading the Firmware"](#) and [Section 2.8, "Rebooting the VoIP Zone Controller"](#) for instructions.

## 2.4.3 Configure the Network Parameters

Configuring the network parameters enables your network to recognize the VoIP Zone Controller and communicate with it. Click **Network Setup** on the Home page to open the **Network Configuration** page.

Figure 2-8. Network Setup Page

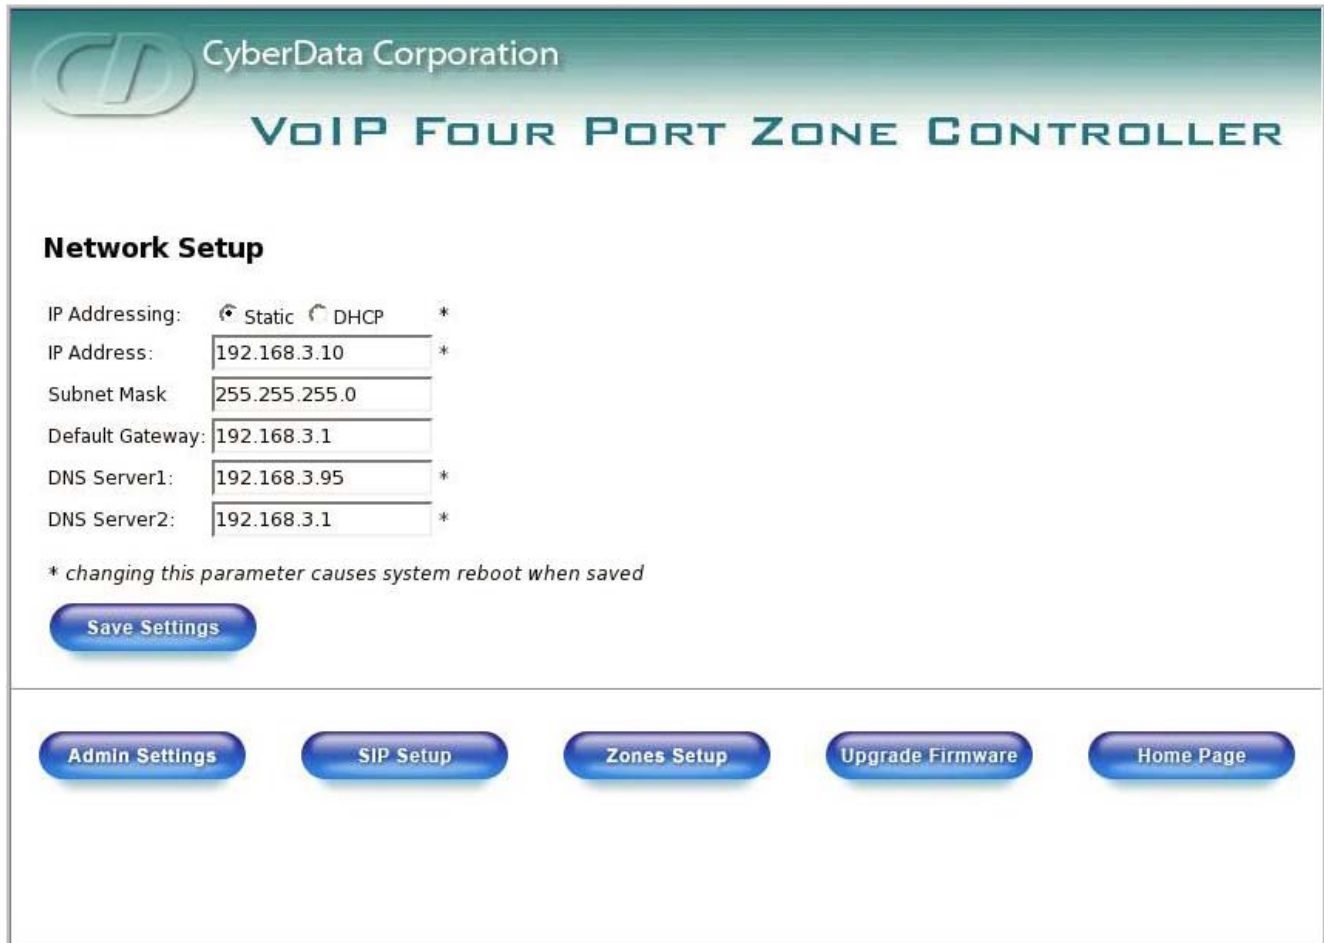

CyberData Corporation

# VoIP FOUR PORT ZONE CONTROLLER

## Network Setup

IP Addressing: ☒ Static ☐ DHCP \*

IP Address:  \*

Subnet Mask:

Default Gateway:

DNS Server1:  \*

DNS Server2:  \*

*\* changing this parameter causes system reboot when saved*







[Save Settings](#)

[Admin Settings](#) [SIP Setup](#) [Zones Setup](#) [Upgrade Firmware](#) [Home Page](#)



On the **Network Setup** page, enter values for the parameters indicated in [Table 2-2](#).

**Table 2-2. Network Setup Parameters**

Web Page Item	Description
IP Addressing*	Select either <b>DHCP IP Addressing</b> or <b>Static IP Addressing</b> by marking the appropriate radio button. If you select <b>Static</b> , configure the remaining parameters indicated in <a href="#">Table 2-2</a> . If you select <b>DHCP</b> , go to <a href="#">Step 3</a> .
IP Address*	Enter the Static IP address.
Subnet Mask	Enter the Subnet Mask address.
Default Gateway	Enter the Default Gateway address.
DNS Server 1*	Enter the DNS Server 1 address.
DNS Server 2*	Enter the DNS Server 2 address.
	Click on this button to save your configuration settings. Changing a parameter that has an asterisk next to it will cause a system reboot when saved.
	Link to the <b>Admin Settings</b> web page.
	Link to the <b>SIP Setup</b> web page.
	Link to the <b>Zones Setup</b> web page.
	Link to the <b>Upgrade Firmware</b> web page.
	Link to the <b>Home</b> page.

On this page:

1. Specify whether you use **Static** or **DHCP IP Addressing** by marking the appropriate radio button. Then, if you select **Static**, go to [Step 2](#).

**Note** Changing the **IP Addressing** selection causes the system to reboot when click Save Settings.

2. For Static IP Addressing, also enter values for the following parameters:
  - a. The VoIP Zone Controller's **IP Address**: The VoIP Zone Controller is delivered with a factory default IP address. Change the default address to the correct IP address for your system.


**Note** Changing the VoIP Zone Controller's **IP Address** causes the system to reboot when you click Save Settings.

- b. The **Subnet Mask**.
  - c. The **Default Gateway**.
3. Click **Save Settings** when you finish.

## 2.4.4 Change the Default Username and Password

On the Home page, click **Admin Settings** to open the **Administrate Settings** page. After changing the Username and Password on this page, new browser requests will require you to log in using these new parameters.

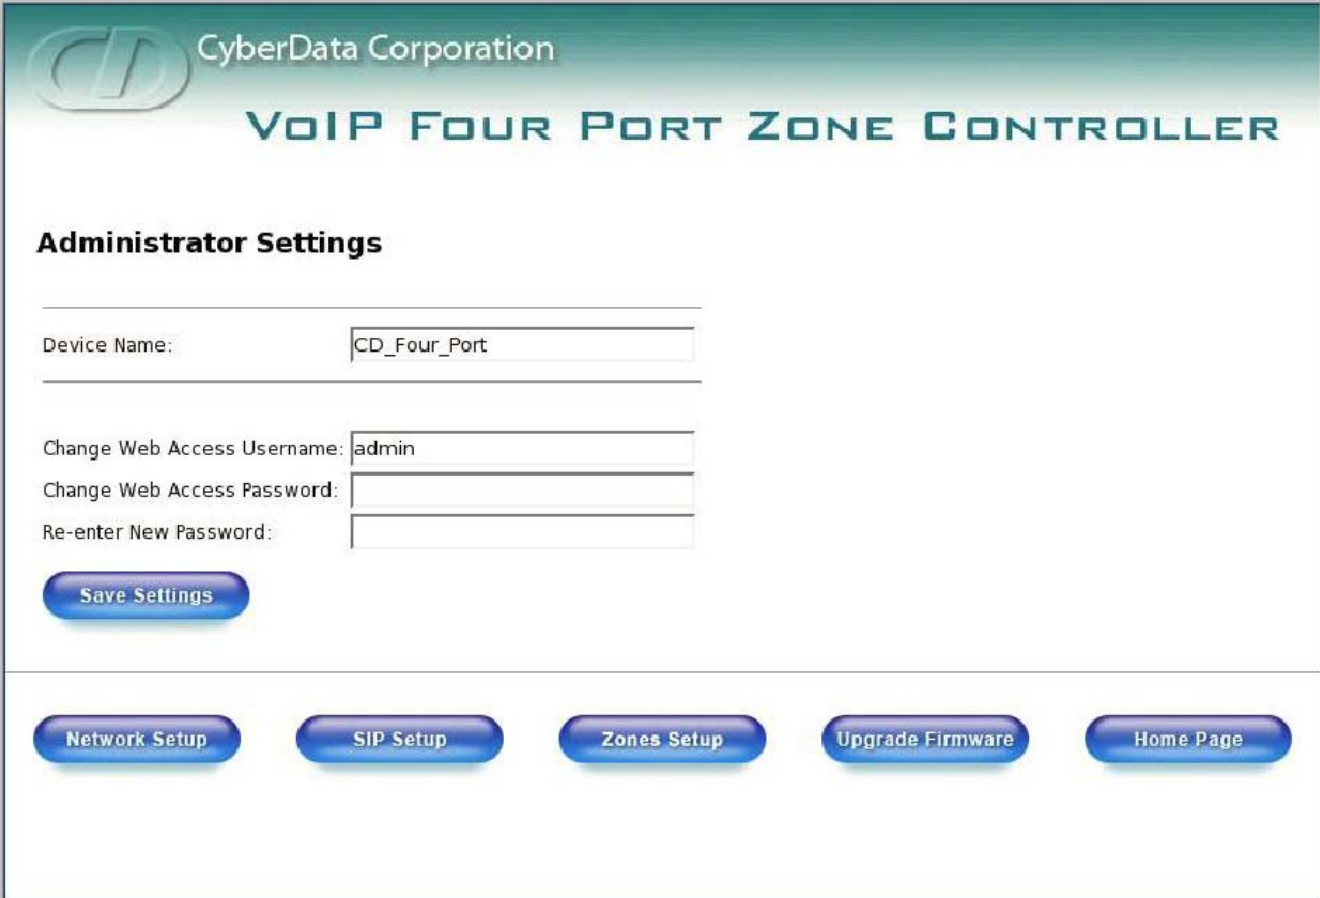





**Figure 2-9. Administrator Settings Page**



The screenshot displays the 'Administrator Settings' page for the 'CyberData Corporation VoIP FOUR PORT ZONE CONTROLLER'. The page has a teal header with the company logo and name. Below the header, the title 'Administrator Settings' is prominently displayed. The main content area contains four input fields: 'Device Name' (with the value 'CD\_Four\_Port'), 'Change Web Access Username' (with the value 'admin'), 'Change Web Access Password', and 'Re-enter New Password'. A blue 'Save Settings' button is positioned below these fields. At the bottom of the page, a horizontal navigation bar features five blue buttons: 'Network Setup', 'SIP Setup', 'Zones Setup', 'Upgrade Firmware', and 'Home Page'.

4. On the **Administrator Settings** page, enter values for the parameters indicated in [Table 2-3](#).

**Table 2-3. Administrator Settings Parameters**

Web Page Item	Description
Device Name	Enter the name of the device.
Change Web Access Username	Use this field to change the Web Access Username
Change Web Access Password	Use this field to change the Web Access Password
Re-enter New Password	Use this field to re-enter a new password
	Click on this button to save your configuration settings. Changing a parameter that has an asterisk next to it will cause a system reboot when saved.
	Link to the <b>Network Setup</b> web page.
	Link to the <b>SIP Setup</b> web page.
	Link to the <b>Zones Setup</b> web page.
	Link to the <b>Upgrade Firmware</b> web page.
	Link to the <b>Home</b> page.

To change the default Web access Username and Password:

1. Enter the new Username from four to 25 alphanumeric characters in the **Change Username** field. The Username is case-sensitive.
2. Enter the new Password from four to 20 alphanumeric characters in the **Change Password** field. The Password is case-sensitive.
3. Enter the new password again in the **Re-enter New Password** field.
4. Click **Save Settings**.

## 2.4.5 Configure the SIP Parameters

The SIP parameters enable the VoIP Zone Controller to contact and register with the SIP server. On the Home page, click **SIP Setup** to open the **SIP Configuration** page.

Figure 2-10. SIP Setup Page

CyberData Corporation

VoIP FOUR PORT ZONE CONTROLLER

### SIP Setup

SIP Server :	<input type="text" value="192.168.3.95"/>	*
Remote SIP Port:	<input type="text" value="5060"/>	*
Local SIP Port:	<input type="text" value="5060"/>	*
SIP User ID:	<input type="text" value="207"/>	*
Authenticate ID:	<input type="text" value="207"/>	*
Authenticate Password:	<input type="text" value="ext207"/>	*
SIP Registration:	<input checked="" type="radio"/> Yes <input type="radio"/> No	*
Unregister on Reboot:	<input type="radio"/> Yes <input checked="" type="radio"/> No	*
Register Expiration (minutes):	<input type="text" value="60"/>	*

*\* changing this parameter causes system reboot when saved*

Save Settings

Network Setup

Admin Settings







Zones Setup

Upgrade Firmware

Home Page

1. On the **SIP Setup** page, enter values for the parameters indicated in [Table 2-4](#).

**Table 2-4. SIP Setup Parameters**

Web Page Item	Description
SIP Server*	Enter the SIP server represented as either a numeric IP address in dotted decimal notation or the fully qualified host name (FQHN) up to 64 characters.
Remote SIP Port*	Enter the <b>Remote SIP Port</b> number (default is 5060).
Local SIP Port*	Enter the <b>Local SIP Port</b> number (default is 5060).
SIP User ID*	Enter the <b>SIP User ID</b> (up to 25 alphanumeric characters).
Authenticate ID*	Enter the <b>Authenticate ID</b> (up to 25 alphanumeric characters).
Authenticate Password*	Enter the <b>Authenticate Password</b> (up to 25 alphanumeric characters).
SIP Registration*	Enable/Disable SIP Registration.
Unregister on Reboot*	<ul style="list-style-type: none"> <li>• Select <b>Yes</b> to automatically unregister the speaker when it is rebooted.</li> <li>• Select <b>No</b> to keep the speaker registered when it is rebooted.</li> </ul>
Register Expiration*	Enter the SIP Registration lease time in minutes (default is 60 minutes).
	Click on this button to save your configuration settings. Changing a parameter that has an asterisk next to it will cause a system reboot when saved.
	Link to the <b>Network Setup</b> web page.
	Link to the <b>Admin Settings</b> web page.
	Link to the <b>Zones Setup</b> web page.
	Link to the <b>Upgrade Firmware</b> web page.
	Link to the <b>Home</b> page.


1. Enter the IP address of the **SIP Server**.
2. Enter the port numbers used for SIP signaling:
  - a. **Remote SIP Port**
  - b. **Local SIP Port**

3. Enter the SIP registration parameters:
  - a. **SIP User ID**
  - b. **Authenticate ID**
  - c. **Authenticate Password**
4. For **SIP Registration**, designate whether you want the VoIP Zone Controller to register with your SIP server.
5. At **Unregister on Reboot**:
  - a. Select **Yes** to automatically unregister the VoIP Zone Controller when you reboot it. [Section 2.8, "Rebooting the VoIP Zone Controller"](#) provides instructions on that process.
  - b. Select **No** to keep the VoIP Zone Controller registered when you reboot it.
6. In the **Register Expiration** field, enter the number of minutes the VoIP Zone Controller registration lease remains valid with the SIP Server. The VoIP Zone Controller automatically re-registers with the SIP server before the lease expiration timeout.

## 2.5 Set up the Zones

- Each audio output jack on the VoIP Zone Controller represents a **Zone**.
  - A **Group** is comprised of a combination of one or more Zones.
  - You will need to plug any Zones that are used on the VoIP Zone Controller into an analog amplifier. Any speakers attached to the amplifier will be present in the Zone.
1. Click on the **Zones Setup** button to open the **Zones Setup** page. See [Figure 2-11](#).

Figure 2-11. Zones Setup

 CyberData Corporation

VOIP FOUR PORT ZONE CONTROLLER

Zones Setup

Device Name: [devname]

Beep before page: ☐ Bypass DTMF: ☐

	Enable	Zone 1	Zone 2	Zone 3	Zone 4	Group Name
00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	[idn]

	Enable	Zone 1	Zone 2	Zone 3	Zone 4	Group Name
01	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone One
02	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone Two
03	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Zone Three
04	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Zone Four
05	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zones One and Two
06	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Zones One and Three
07	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Zones One and Four
08	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Zones One, Two and Three
09	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Zones One, Three and Four
10	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Zones One, Two and Four
11	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Zones Two, Three and Four
12	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Zones Two and Four
13	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Zones Two and Three
14	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Zones Three and Four
15	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone 15

RTFM  
Announce:

Zone 1

Zone 2

Zone 3

Zone 4

☒☒☒☒

Save Settings

Network Setup

Admin Settings







SIP Setup

Upgrade Firmware

Home Page

2. On the **Zones Setup** page, enter values for the parameters indicated in [Table 2-5](#).

**Table 2-5. Zones Setup Parameters**

Web Page Item	Description
Device Name	Shows the name of the device.
Beep Before Page	Check this box to play a beep before a page is sent.
Bypass DTMF	Check this box to send a page without having to enter a two-digit tone. When enabled, all four zones will be paged without waiting for DTMF entry.
Enable	Check this box to enable the Group.
Zones 1-4 Checkboxes	Check the box for the Zones that should comprise this Group.
Group Name	Assign an identifier to the Group.
RTFM Announce	Check the box for the Zone that you want to hear a RTFM announcement from.
	Click on this button to save your configuration settings. Changing a parameter that has an asterisk next to it will cause a system reboot when saved.
	Link to the <b>Network Setup</b> web page.
	Link to the <b>Admin Settings</b> web page.
	Link to the <b>SIP Setup</b> web page.
	Link to the <b>Upgrade Firmware</b> web page.
	Link to the <b>Home</b> page.

3. After changing the parameters, click **Save Settings**.



## 2.6 Operating the VoIP Zone Controller

- When you call to make a page, the VoIP Zone Controller generates a tone over the phone.
- When you hear this tone, enter the two-digit code for the group that you want to page.
- The VoIP Zone Controller establishes a connection to a group.
- The VoIP Zone Controller generates another tone to the phone.
- When you hear this tone, you can begin speaking.

**Note** Group 00 is configured to *Page All Zones*.

## 2.7 Upgrading the Firmware

The firmware on the board consists of two files: a Kernel and an Application, that can be loaded separately. Uploading the firmware files requires a host machine running a TFTP server. If you need to set up this server, "[Appendix A: Setting Up a TFTP Server](#)" provides instructions.

**Figure 2-12. Firmware Upgrade Page**

**CyberData Corporation**  
**VOIP FOUR PORT ZONE CONTROLLER**

**Firmware Upgrade**

System Configuration		Reboot System
Bootname:	u-boot-1.XX	<input type="button" value="Reboot"/>
Partition 1	Partition 2	
Kernel	xxx-image-at75.bin	
Application	xxx-romdisk-at75.img	








**Load New Firmware to Partition 1**

TFTP Server IP:

New Filename:

To upload a firmware file, log in as instructed in [Section 2.4.2, "Log in to the Configuration GUT"](#). [Table 2-6](#) shows the web page items on the **Firmware Upgrade** page.

**Table 2-6. Firmware Upgrade Parameters**

Web Page Item	Description
System Configuration	Shows the current configuration.
Bootname	Shows the current boot loader filename.
Kernel	Shows the current kernel filename for partition 1 and 2.
Application	Shows the current application filename for partition 1 and 2.
TFTP Server IP address	Enter the TFTP Server IP address.
New Filename	Use this field to enter the new file name for the kernel or application firmware file that you are uploading.
	Click on this button to automatically upload the selected firmware and reboot the system.
	Click on this button to reboot the system.
	Link to the <b>Network Setup</b> web page.
	Link to the <b>Admin Settings</b> web page.
	Link to the <b>SIP Setup</b> web page.
	Link to the <b>Zones Setup</b> web page.
	Link to the <b>Home</b> page.

1. On the Home page, click **Upgrade Firmware** to open the **Firmware Upgrade** page.
2. Enter the **TFTP Server IP** address.
3. Enter the Kernel or Application **New Filename** for the firmware file you are uploading.
4. Select the **Partition** to which the firmware is uploaded.
5. Click **Upload File** to automatically upload the selected firmware, and reboot your system.

## 2.8 Rebooting the VoIP Zone Controller

To reboot the system, log in as instructed in [Section 2.4.2, "Log in to the Configuration GUI"](#).

**Figure 2-13. Firmware Upgrade Page**

**CyberData Corporation**  
**VOIP FOUR PORT ZONE CONTROLLER**

**Firmware Upgrade**

**System Configuration**

Bootname: u-boot-1.XX

	Partition 1	Partition 2
Kernel	vaab-image-r.bin	xxx-image-at75.bin
Application	vbai-romdisk-r.img	xxx-romdisk-at75.img

**Reboot System**

**Reboot**

**Load New Firmware to Partition 1**

TFTP Server IP: 192.168.3.21

New Filename:

**Upload File**

**Network Setup** **Admin Settings** **SIP Setup** **Zones Setup** **Home Page**

1. On the Home page, click **Upgrade Firmware** to open the **Firmware Upgrade** page. Go to the **Reboot** section on the right side of the page.
2. Click **Reboot**.

# Appendix A: Setting Up a TFTP Server

---

## A.1 Set up a TFTP Server

Upgrading the VoIP Zone Controller firmware requires a TFTP server on which you access the Web interface where you can upload the firmware files.

---

### A.1.1 In a LINUX Environment

To set up a TFTP server on LINUX:

1. Create a directory dedicated to the TFTP server, and move the files to be uploaded to that directory.
2. Run the following command where `/tftpboot/` is the path to the directory you created in [Step 1](#): the directory that contains the files to be uploaded. For example:

```
in.tftpd -l -s /tftpboot/your_directory_name
```

---

### A.1.2 In a Windows Environment

You can find several options online for setting up a Windows TFTP server. This example explains how to use the Solarwinds freeware TFTP server, which you can download at:

<http://www.cyberdata.net/support/voip/solarwinds.html>

To set up a TFTP server on Windows:

1. Install and start the software.
2. Select **File/Configure/Security** tab/**Transmit Only**.
3. Make a note of the default directory name, and then move the firmware files to be uploaded to that directory.

# Appendix B: Troubleshooting/Technical Support

---

## B.1 Frequently Asked Questions (FAQ)

Go to the following URL to see CyberData's list of frequently asked questions:

<http://www.cyberdata.net/products/voip/legacyanalog/pagingzone4portaudio/faqs.html>

---

### B.1.1 Documentation

The documentation for this product is released in an English language version only. You can download PDF copies of CyberData product documentation at:

<http://www.cyberdata.net/products/voip/legacyanalog/pagingzone4portaudio/docs.html>

## B.2 Contact Information

Contact	<p>CyberData Corporation  3 Justin Court  Monterey, CA 93940 USA  <a href="http://www.CyberData.net">www.CyberData.net</a>  Phone: 800-CYBERDATA (800-292-3732)  Fax: 831-373-4193</p>
Sales	<p>Sales 831-373-2601 Extension 334</p>
Technical Support	<p>The fastest way to get technical support for your VoIP product is to submit a VoIP Technical Support form at the following website:</p> <p><a href="http://www.cyberdata.net/support/contactsupportvoip.html">http://www.cyberdata.net/support/contactsupportvoip.html</a></p> <p>We have several technical support staff monitoring this form and they will contact you within 12 hours after receiving a form submission.</p> <p>Phone: (831) 373-2601, Ext. 333  Email: support@cyberdata.net</p>
Returned Materials Authorization	<p>To return the product, contact the Returned Materials Authorization (RMA) department:</p> <p>Phone: 831-373-2601, Extension 136  Email: RMA@CyberData.net</p> <p>When returning a product to CyberData, an approved CyberData RMA number must be printed on the outside of the original shipping package. No product will be accepted for return without an approved RMA number. Send the product, in its original package, to the following address:</p> <p>CyberData Corporation  3 Justin Court  Monterey, CA 93940  Attention: RMA "your RMA number"</p>
RMA Status Form	<p>If you need to inquire about the repair status of your product(s), please use the CyberData RMA Status form at the following web address:</p> <p><a href="http://www.cyberdata.net/support/rmastatus.html">http://www.cyberdata.net/support/rmastatus.html</a></p>

---

## B.3 Warranty

CyberData warrants its product against defects in material or workmanship for a period of two years from the date of purchase. Should the product fail within the warranty period, CyberData will repair or replace the product free of charge. This warranty includes all parts and labor.

Should the product fail out-of-warranty, a flat rate repair charge of one half of the purchase price of the product will be assessed. Repairs that are in warranty but are damaged by improper modifications or abuse, will be charged at the out-of-warranty rate. Products shipped to CyberData, both in and out-of-warranty, are shipped at the expense of the customer. Shipping charges for repaired products shipped back to the customer by CyberData, will be paid by CyberData.

CyberData shall not under any circumstances be liable to any person for any special, incidental, indirect or consequential damages, including without limitation, damages resulting from use or malfunction of the products, loss of profits or revenues or costs of replacement goods, even if CyberData is informed in advance of the possibility of such damages.

---

### B.3.1 Warranty & RMA Returns within the United States

If service is required, you must contact CyberData Technical Support prior to returning any products to CyberData. Our Technical Support staff will determine if your product should be returned to us for further inspection. If Technical Support determines that your product needs to be returned to CyberData, an RMA number will be issued to you at this point.

Your issued RMA number must be printed on the outside of the shipping box. No product will be accepted for return without an approved RMA number. The product in its original package should be sent to the following address:

CyberData Corporation

3 Justin Court.

Monterey, CA 93940

Attn: RMA "xxxxxx"

---

### B.3.2 Warranty & RMA Returns Outside of the United States

If you purchased your equipment through an authorized international distributor or reseller, please contact them directly for product repairs.

---

### B.3.3 Spare in the Air Policy

CyberData now offers a *Spare in the Air* no wait policy for warranty returns within the United States and Canada. More information about the *Spare in the Air* policy is available at the following web address:

<http://www.cyberdata.net/support/warranty/spareintheair.html>

---

### B.3.4 Return and Restocking Policy

For our authorized distributors and resellers, please refer to your CyberData Service Agreement for information on our return guidelines and procedures.

For End Users, please contact the company that you purchased your equipment from for their return policy.

---

### B.3.5 Warranty and RMA Returns Page

The most recent warranty and RMA information is available at the CyberData Warranty and RMA Returns Page at the following web address:

<http://www.cyberdata.net/support/warranty/index.html>



# Index

---

## Symbols

+48V DC power supply 5

## Numerics

100 Mbps indicator LED 7

## A

act LED 7  
 address, login 10  
 addressing  
     DHCP 9, 13  
     static 9, 13  
 admin settings button 14  
 admin username and password 10  
 administrator settings page 14  
 amplifier connections  
     cables used 1, 5  
 asterisk 13, 15, 17, 20  
 authenticate ID and password for SIP server  
     registration 18

## B

beep before page 20  
 blue status LED 7  
 bypass DTMF 20

## C

cables used to connect the paging device to the legacy  
     analog amplifiers 1, 5  
 cat 5 ethernet cable 5  
 changing default username and password for  
     configuration GUI 14  
 configurable parameters 11, 13, 17, 22  
 configuration information 9  
 connection speed 2  
 connections  
     cables used 1, 5  
 contact information 26  
 contact information for CyberData 26

current settings, reviewing 11  
 CyberData contact information 26

## D

default  
     gateway 8  
     IP address 8  
     subnet mask 8  
     username and password 8  
 default gateway 8, 13  
 default gateway for static addressing 13  
 default password for configuration GUI 10  
 default settings, restoring 8  
 default username and password for configuration  
     GUI 10  
 DHCP addressing 9, 13  
 DHCP IP addressing 13  
 dimensions 2  
 DNS server 11, 13  
 dual speeds 7

## E

enable feature 20  
 ethernet port 5  
 expiration time for SIP server lease 17, 18

## F

features 2  
 firmware upgrade page 22, 23  
 firmware upgrades 24  
 firmware, upgrade 11, 21

## G

green link LED 7  
 green paging LED 7  
 Group 19  
 GUI username and password 14

## I

- identifying your product 1
- IP address 8, 13, 22
  - SIP server 17
- IP addressing 13
  - default
    - IP addressing setting 8

## L

- lease, SIP server expiration time 17, 18
- link LED 7
- Linux, setting up a TFTP server on 24
- local SIP port 17
- log in address 10
- logging in to configuration GUI 10

## N

- network activity, verifying 7
- network configuration page 12
- network parameters, configuring 12
- network setup button 11, 12
- network, connecting to 6

## O

- orange link LED 7
- output connections 1, 5

## P

- paging LED 7
- part number 2
- parts list 3
- password
  - configuration GUI 9, 14
  - for SIP server login 17
  - restoring the default 8
  - SIP server authentication 18
- pgroups configuration 11
- port
  - ethernet 5
  - local SIP 17
  - remote SIP 17
- power
  - connecting to 5

- requirement 2
- product overview 1

## R

- reboot 22
  - unregistering from SIP server during 18
  - zone controller 23
- registration and expiration, SIP server
  - lease expiration 18
- registration and expiration, SIP server lease 17
- regulatory compliance 2
- remote SIP port 17
- required configuration for web access username and password 9, 15
- requirements for upgrading firmware 21
- resetting the IP address to the default 25
- restoring factory default settings 8
- return and restocking policy 28
- RMA returned materials authorization 26
- RMA status 26
- RTFM switch 8

## S

- sales 26
- server
  - SIP 11
  - TFTP 21, 24
- server address, SIP 17
- service 26
- setting up a TFTP server 24
- SIP configuration
  - SIP Server 17
- SIP configuration page 16
- SIP registration 17
- SIP server 17
- SIP server configuration 11
- SIP server parameters, configuring 9
- SIP setup button 11, 16
- Spare in the Air Policy 27
- speaker configuration page
  - configurable parameters 11, 13, 17, 22
- specifications 2
- speed of connection 2
- static addressing 9, 13
- static IP addressing 13
- status LED 7
- subnet mask 8, 13
- subnet mask static addressing 13
- supported protocols 2

## T

tech support 26  
 technical support, contact information 26  
 TFTP server 21, 24  
 TFTP server IP 22

## U

unregister from SIP server 18  
 unregister, from SIP server 17  
 upgrade firmware 11, 21  
 upgrade firmware button 11, 22, 23  
 upload file button 22  
 user ID  
     for SIP server login 17  
 user ID for SIP server registration 18  
 user ID, SIP 17  
 username  
     restoring the default 8  
 username for configuration GUI 9, 14

zone controller  
     configuration 9  
 zone setup  
     beep before page 20  
     bypass DTMF 20  
     enable feature 20  
     zones checkboxes 20  
 zones checkboxes 20

## V

verifying  
     network activity 7

## W

warranty 27  
 warranty & RMA returns outside of the United States 27  
 warranty & RMA returns within the United States 27  
 warranty and RMA returns page 28  
 warranty policy at CyberData 27  
 web configuration log in address 10  
 weight 2  
 Windows, setting up a TFTP server on 24

## Y

yellow act LED 7  
 yellow link LED 7

## Z

Zone 19