


Mounting the Enclosure

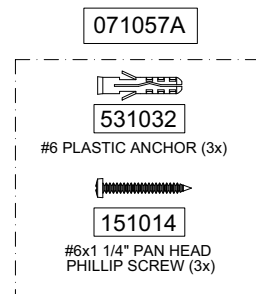

To mount the enclosure:

1. Prepare holes for the screws.
2. Plug in the power adapter and use the green **Power** light to verify that the power is on.
3. Plug the Ethernet cable into the V2 Loudspeaker Amplifier. The yellow **Link** light verifies the network connection.
4. For wall mounting, use the three #6 x 1-1/4-inch Pan Head Phillip screws to secure the speaker.



Contacting CyberData

**Corporate Headquarters**  
 CyberData Corporation  
 3 Justin Court  
 Monterey, CA 93940, USA  
 Phone: 831-373-2601  
 Fax: 831-373-4193  
 www.CyberData.net

Sales: (831) 373-2601 ext. 334  
 Support: 831-373-2601 ext. 333  
 Web: <http://www.cyberdata.net/support/contactsupportvoip.php>  
 RMA Dept: (831) 373-2601 ext. 136  
 Email: [RMA@CyberData.net](mailto:RMA@CyberData.net)  
 RMA Status: <http://www.cyberdata.net/support/rmastatus.html>  
 Warranty information is available at:  
 Web: <http://www.cyberdata.net/support/warranty/index.html>

**VoIP V2 Loudspeaker Amplifier (PoE)**  
 SIP Compliant  
**011097**





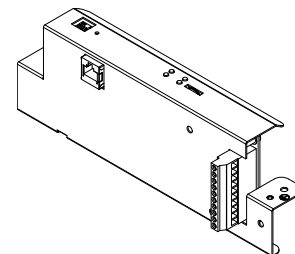
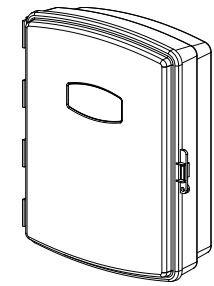
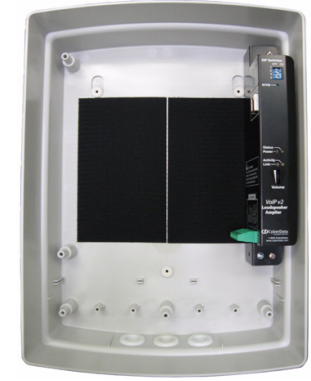
Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.


Getting Started

- Download the *VoIP V2 Loudspeaker Amplifier (PoE) Operations Guide* PDF file from the **Documents** page at: <http://www.cyberdata.net/products/voip/digitalanalog/loudspeakerampv2/docs.html>
- Create a plan for the locations of your paging amplifiers.
- **WARNING: This product should be installed by a licensed electrician according to all local electrical and building codes.**
- **WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.**
- **WARNING: The PoE connector is intended for intra-building connections only and does not route to the outside plant.**
- **WARNING: The V2 Loudspeaker Amplifier enclosure is not rated for any AC voltages!**

Parts

<p><b>(1) Wall Mounting Kit</b></p> <p>(3) #6 Plastic Anchors </p> <p>(3) #6 x 1-1/4-inch Pan Head Phillip Screws </p>		
<p>(1) Assembly </p>	<p>(1) Enclosure </p>	<p>View Inside of the Enclosure </p>

## Features

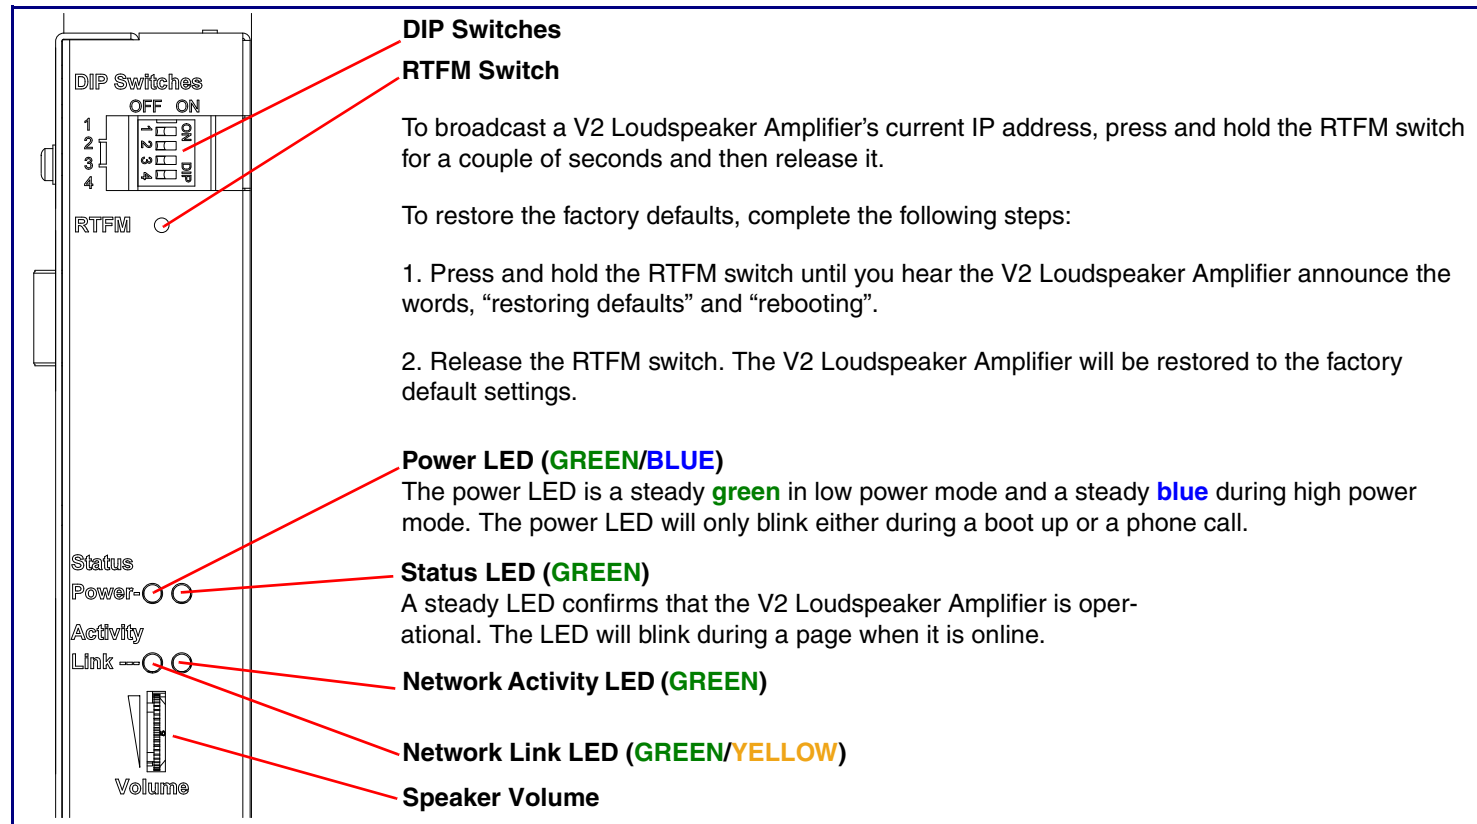

**DIP Switches**

**RTFM Switch**

To broadcast a V2 Loudspeaker Amplifier's current IP address, press and hold the RTFM switch for a couple of seconds and then release it.

To restore the factory defaults, complete the following steps:

1. Press and hold the RTFM switch until you hear the V2 Loudspeaker Amplifier announce the words, "restoring defaults" and "rebooting".
2. Release the RTFM switch. The V2 Loudspeaker Amplifier will be restored to the factory default settings.

**Power LED (GREEN/BLUE)**

The power LED is a steady **green** in low power mode and a steady **blue** during high power mode. The power LED will only blink either during a boot up or a phone call.

**Status LED (GREEN)**


A steady LED confirms that the V2 Loudspeaker Amplifier is operational. The LED will blink during a page when it is online.

**Network Activity LED (GREEN)**

**Network Link LED (GREEN/YELLOW)**

**Speaker Volume**

## DIP Switch Settings

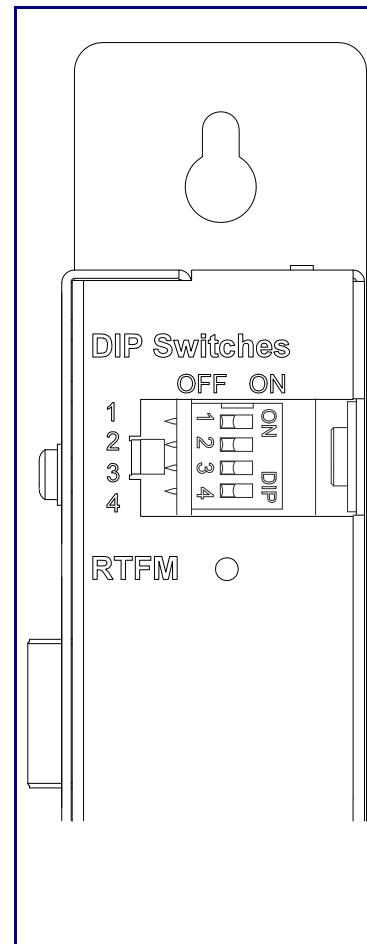

**DIP Switch Settings—Low Power—802.3af Compliant (Default)**

DIP Switch	Setting	Description
1	OFF	Sets PoE for 802.3af class.
2	N/A	Not applicable for power setting.
3	ON	Switch mode current set to <b>LOW</b> .
4	OFF	Low gain amplifier setting.

**DIP Switch Settings—High Power—802.3at<sup>a</sup>**

DIP Switch	Setting	Description
1	ON	Sets PoE for 802.3at class.
2	N/A	Not applicable for power setting.
3	OFF	Switch mode current set to <b>HIGH</b> .
4	ON	Force high gain amplifier.

a. If set to high power, the unit will not power ON with 802.3af compliant switch. You must use a power injector in this mode (CyberData part number 011124).

**DIP Switch 2 Settings**

DIP Switch	Setting	Description
2	OFF	<b>Manual Vol.</b> The speaker volume is set manually by the analog volume trimmer.
2	ON	<b>Bypass.</b> Bypasses the manual volume control of the analog volume trimmer and uses the web page volume settings.

## Dimensions and Mounting Template

