



CP-8865


Do Not Ship Enclosure with Phone Installed  
[PHONE MUST BE INSTALLED ON-SITE]

## CP-8865 Mounting the Enclosure


Take into consideration before you install:

- Due to the size and mass of this product, it is important that the Backbox is safely installed according to these installation instructions.
- Make sure that the type of wall is capable of supporting the system and use screws that are suitable for that type of wall.
- The system must be installed by qualified personnel, in accordance with state and local building regulations.
- See sheet five and ten for Conduit and Wall Mounting instructions.


# Accessory Kits

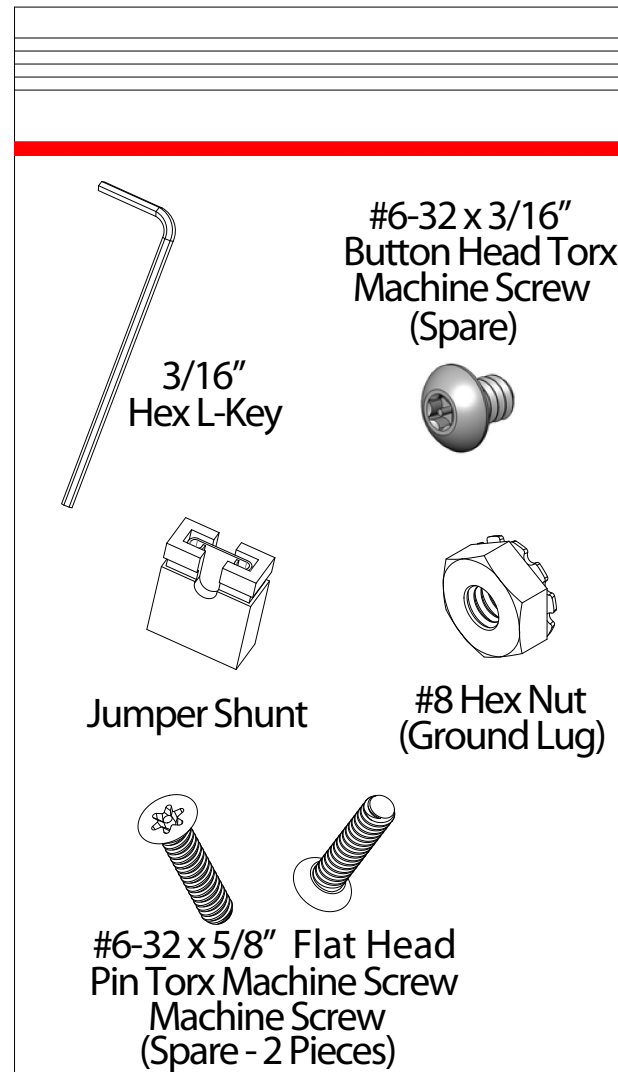



Torx Security Bit & Spare Screw Kit

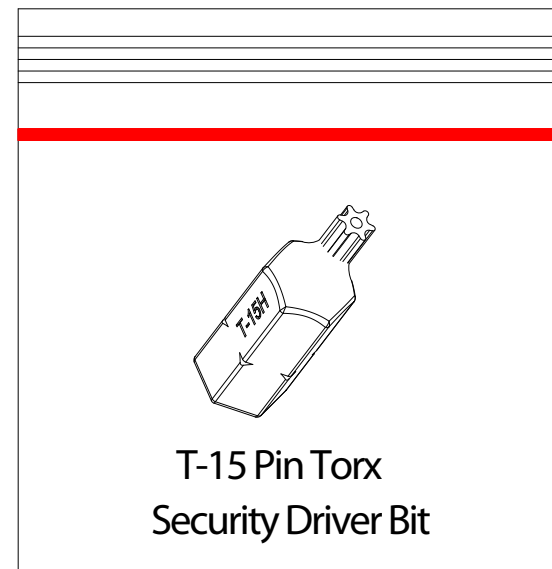


T-15 Driver Bit Kit (on the Outside by the Hookswitch)

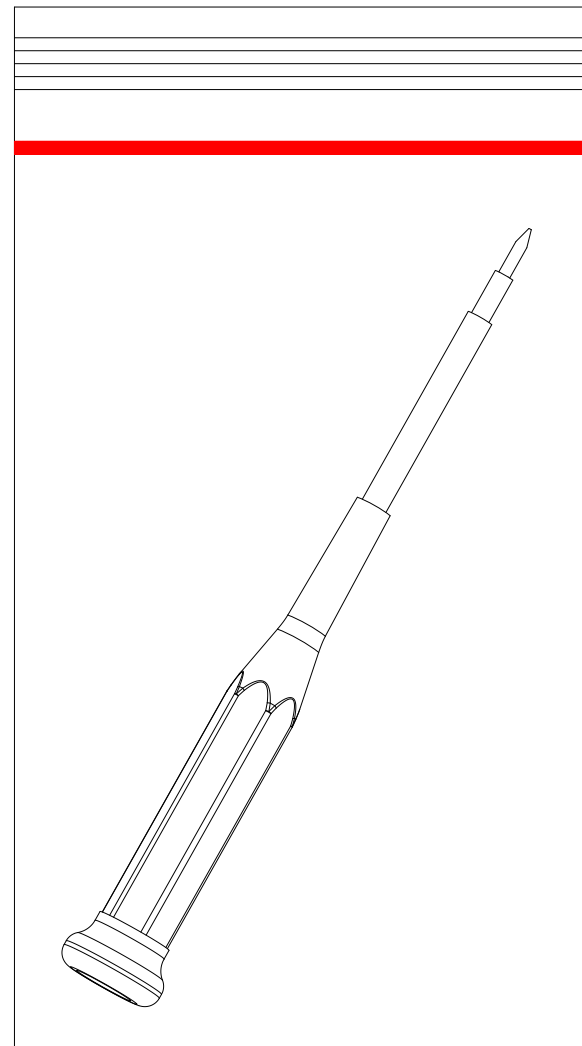

#00 Screw Driver Kit

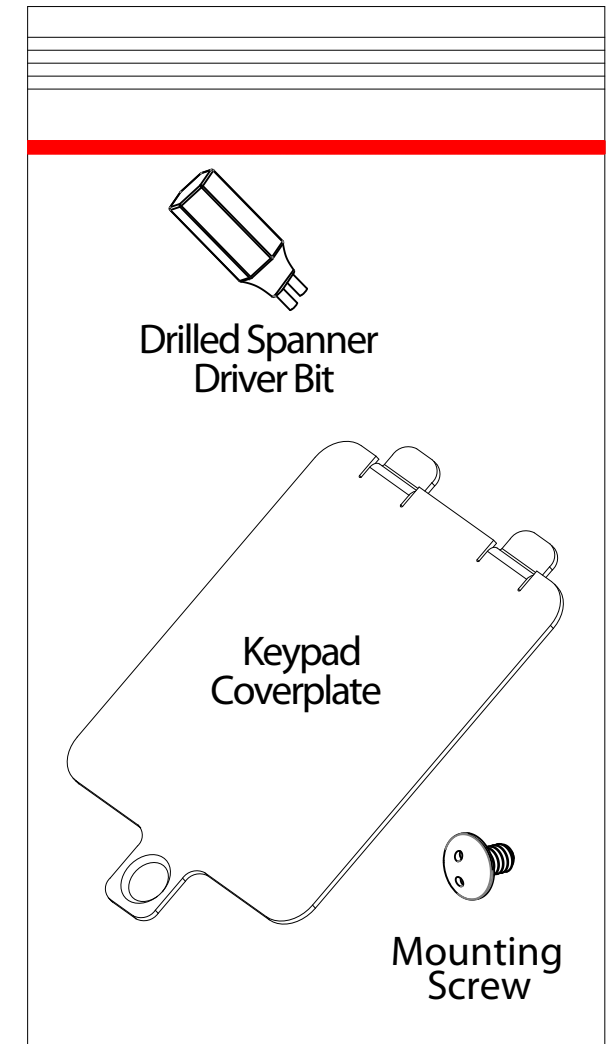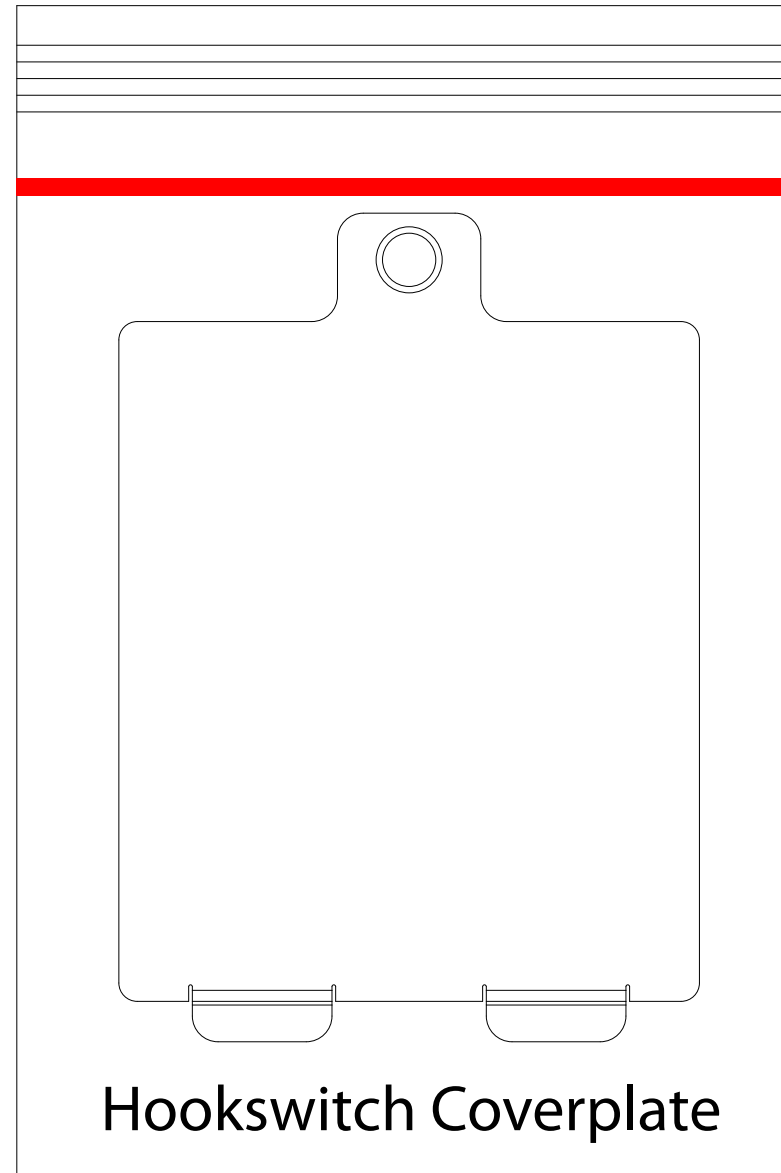

Keypad Cover Accessory Kit

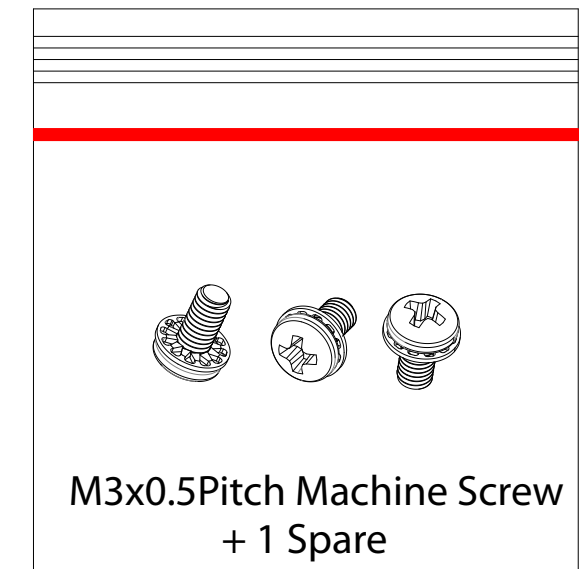

Phone Mounting Screw Kit



## Mount the Backbox Assembly to the Wall

Figure Shown Typical Installation:


### Tools Required:

- 1) Electric Powered Hand Drill
- 2) Drill Bit (Use Correct Drill Bit for Wood / Concrete)
- 3) Leveler
- 4) Torque Wrench, Wrench and Socket

## Steps

- A) Prepare Hole on Drywall (with Stud Behind) / Concrete
- B) Insert Stud Anchors in to Holes
- C) Align then Place Backbox Assembly Mounting Holes to Studs Anchors
- D) Tighten Washers and Nuts that included with Stud Anchors
- E) Torque to Stud Anchors Manufacturer's Recommended ft./lbs.


(3)  
Remove Both  
USB & KEM  
Covers


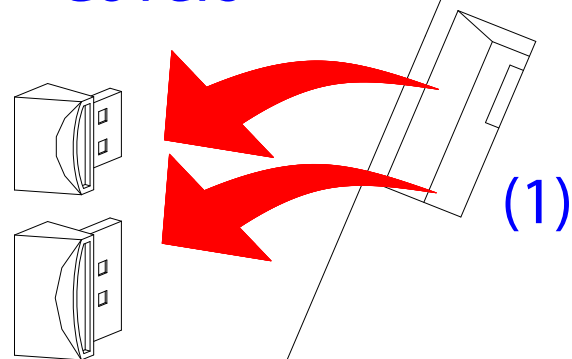


(2)

(1)


Remove Handset &  
Disconnect Cord from Phone.  
Then Connect Power Plug (1) &  
Network Cable (2), etc. Through  
Mounting Bracket

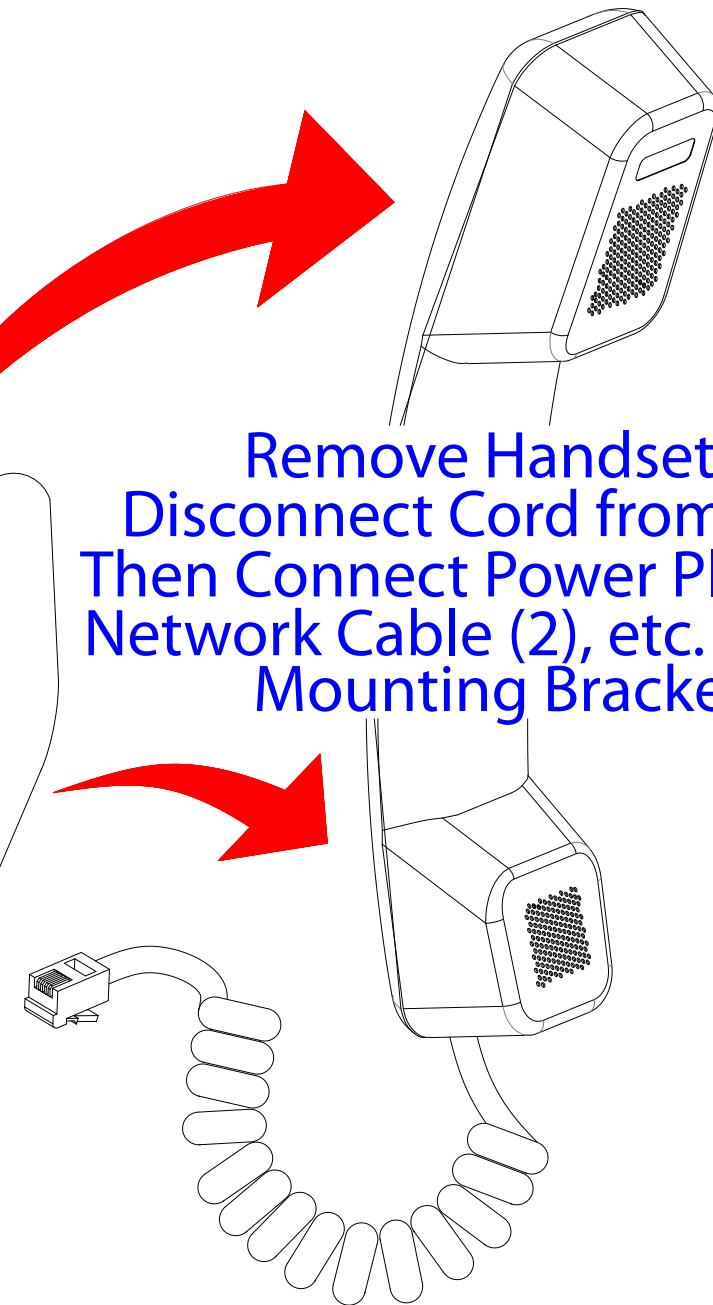

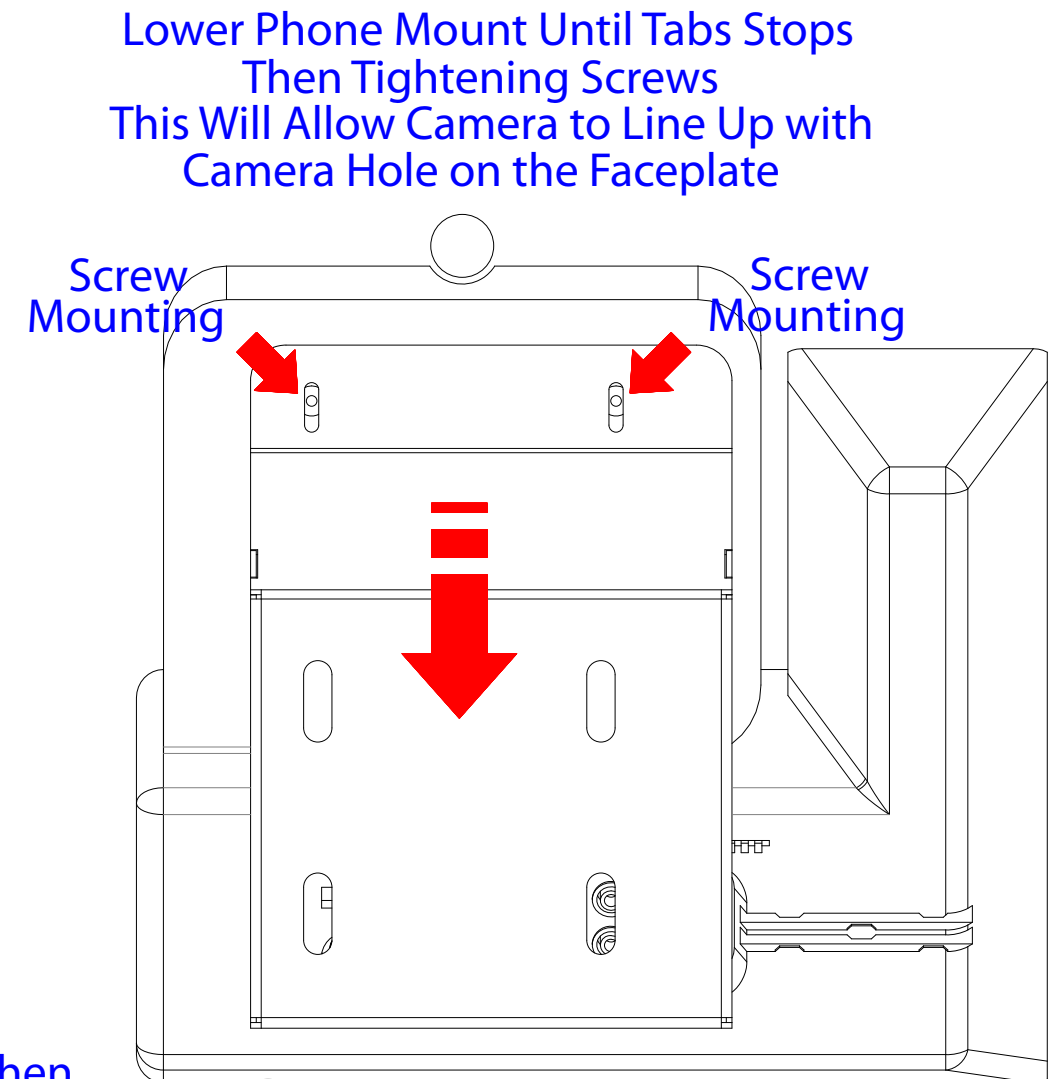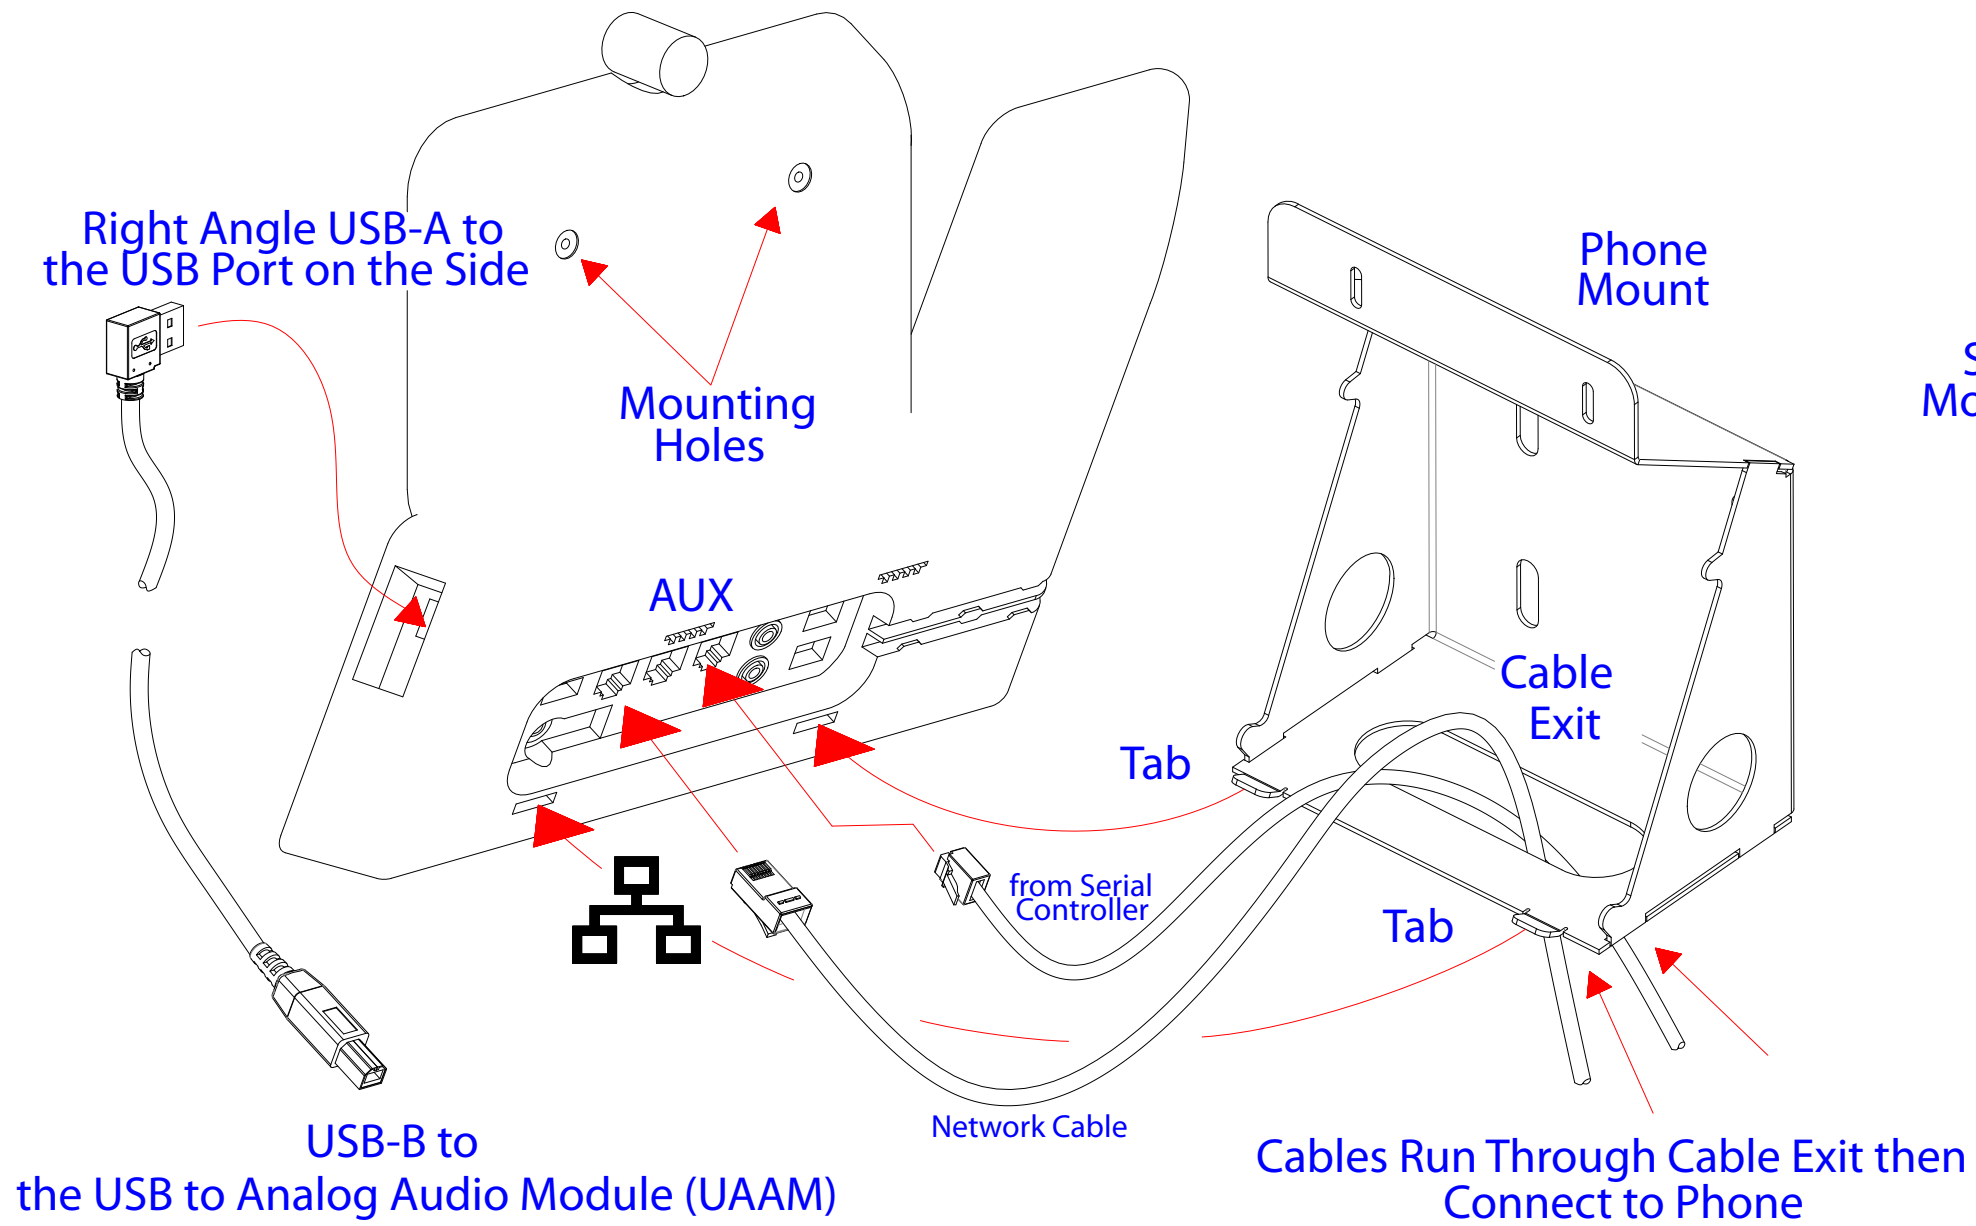


# Armored Cord Handset to USB to Analog Audio Module


Tool Provided for Terminal Block Screw:  
1) #00 size Phillips Screw Driver

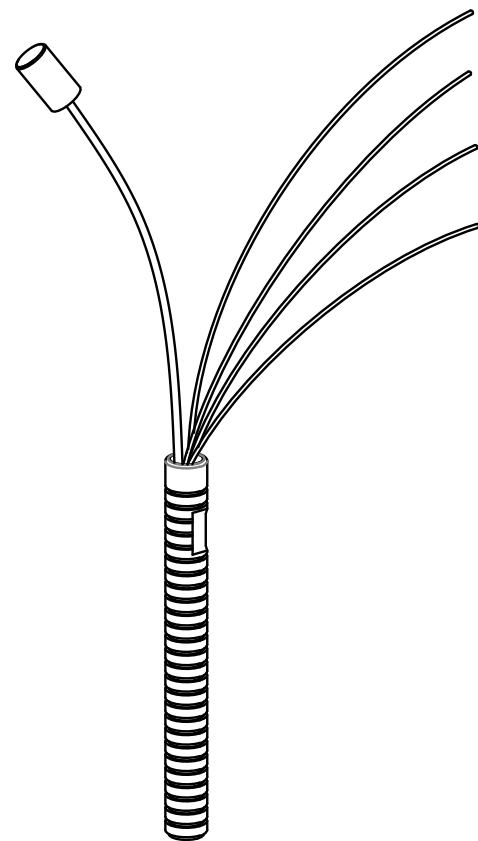

Red Wire to J4 (Position 1)  
Yellow Wire to J4 (Position 2)  
Green Wire to J4 (Position 3)  
Black Wire to J4 (Position 4)

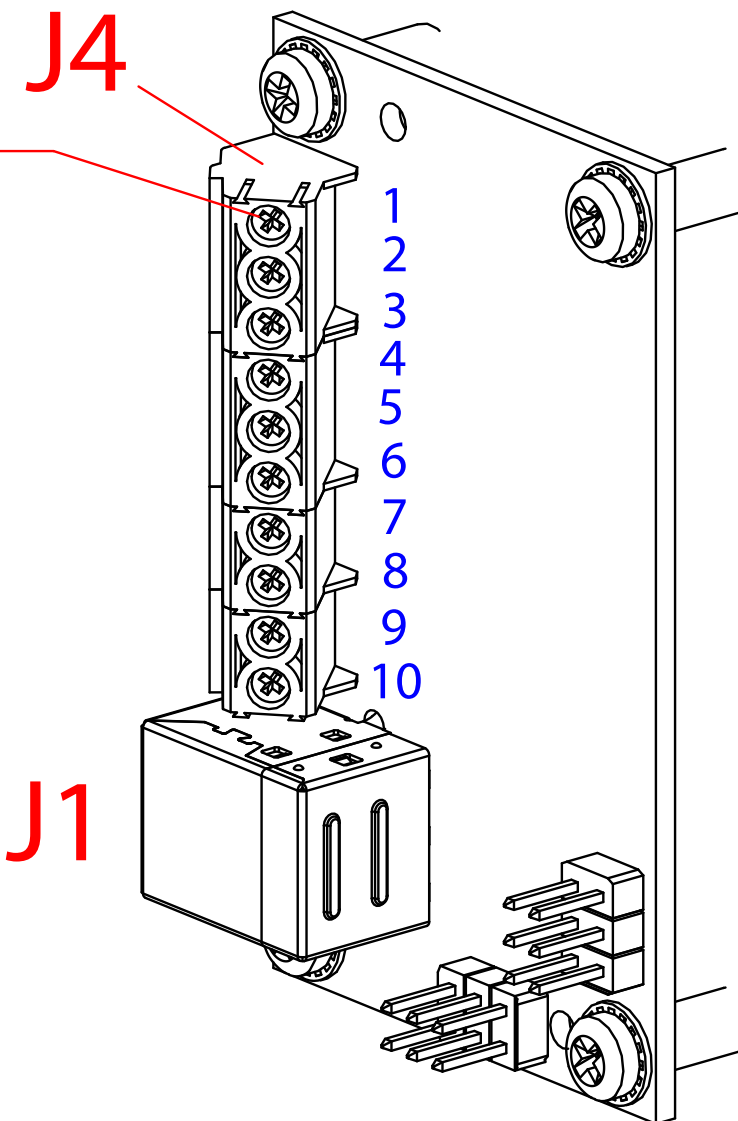

Hookswitch Connections 921285C  
\* Serial Controller Connections (6,7 & 8)

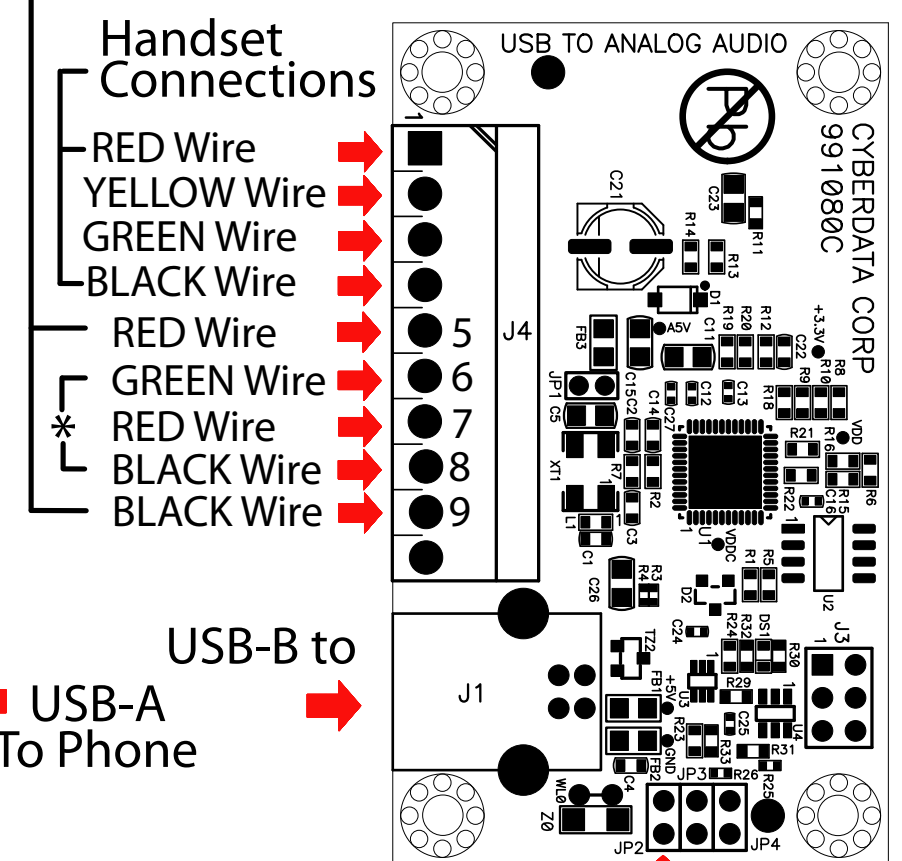


USB-B to  
USB-A  
To Phone

Install Shunt on JP2  
to Enable [Auto Answer Mode]

Armored Cord Handset Wires End



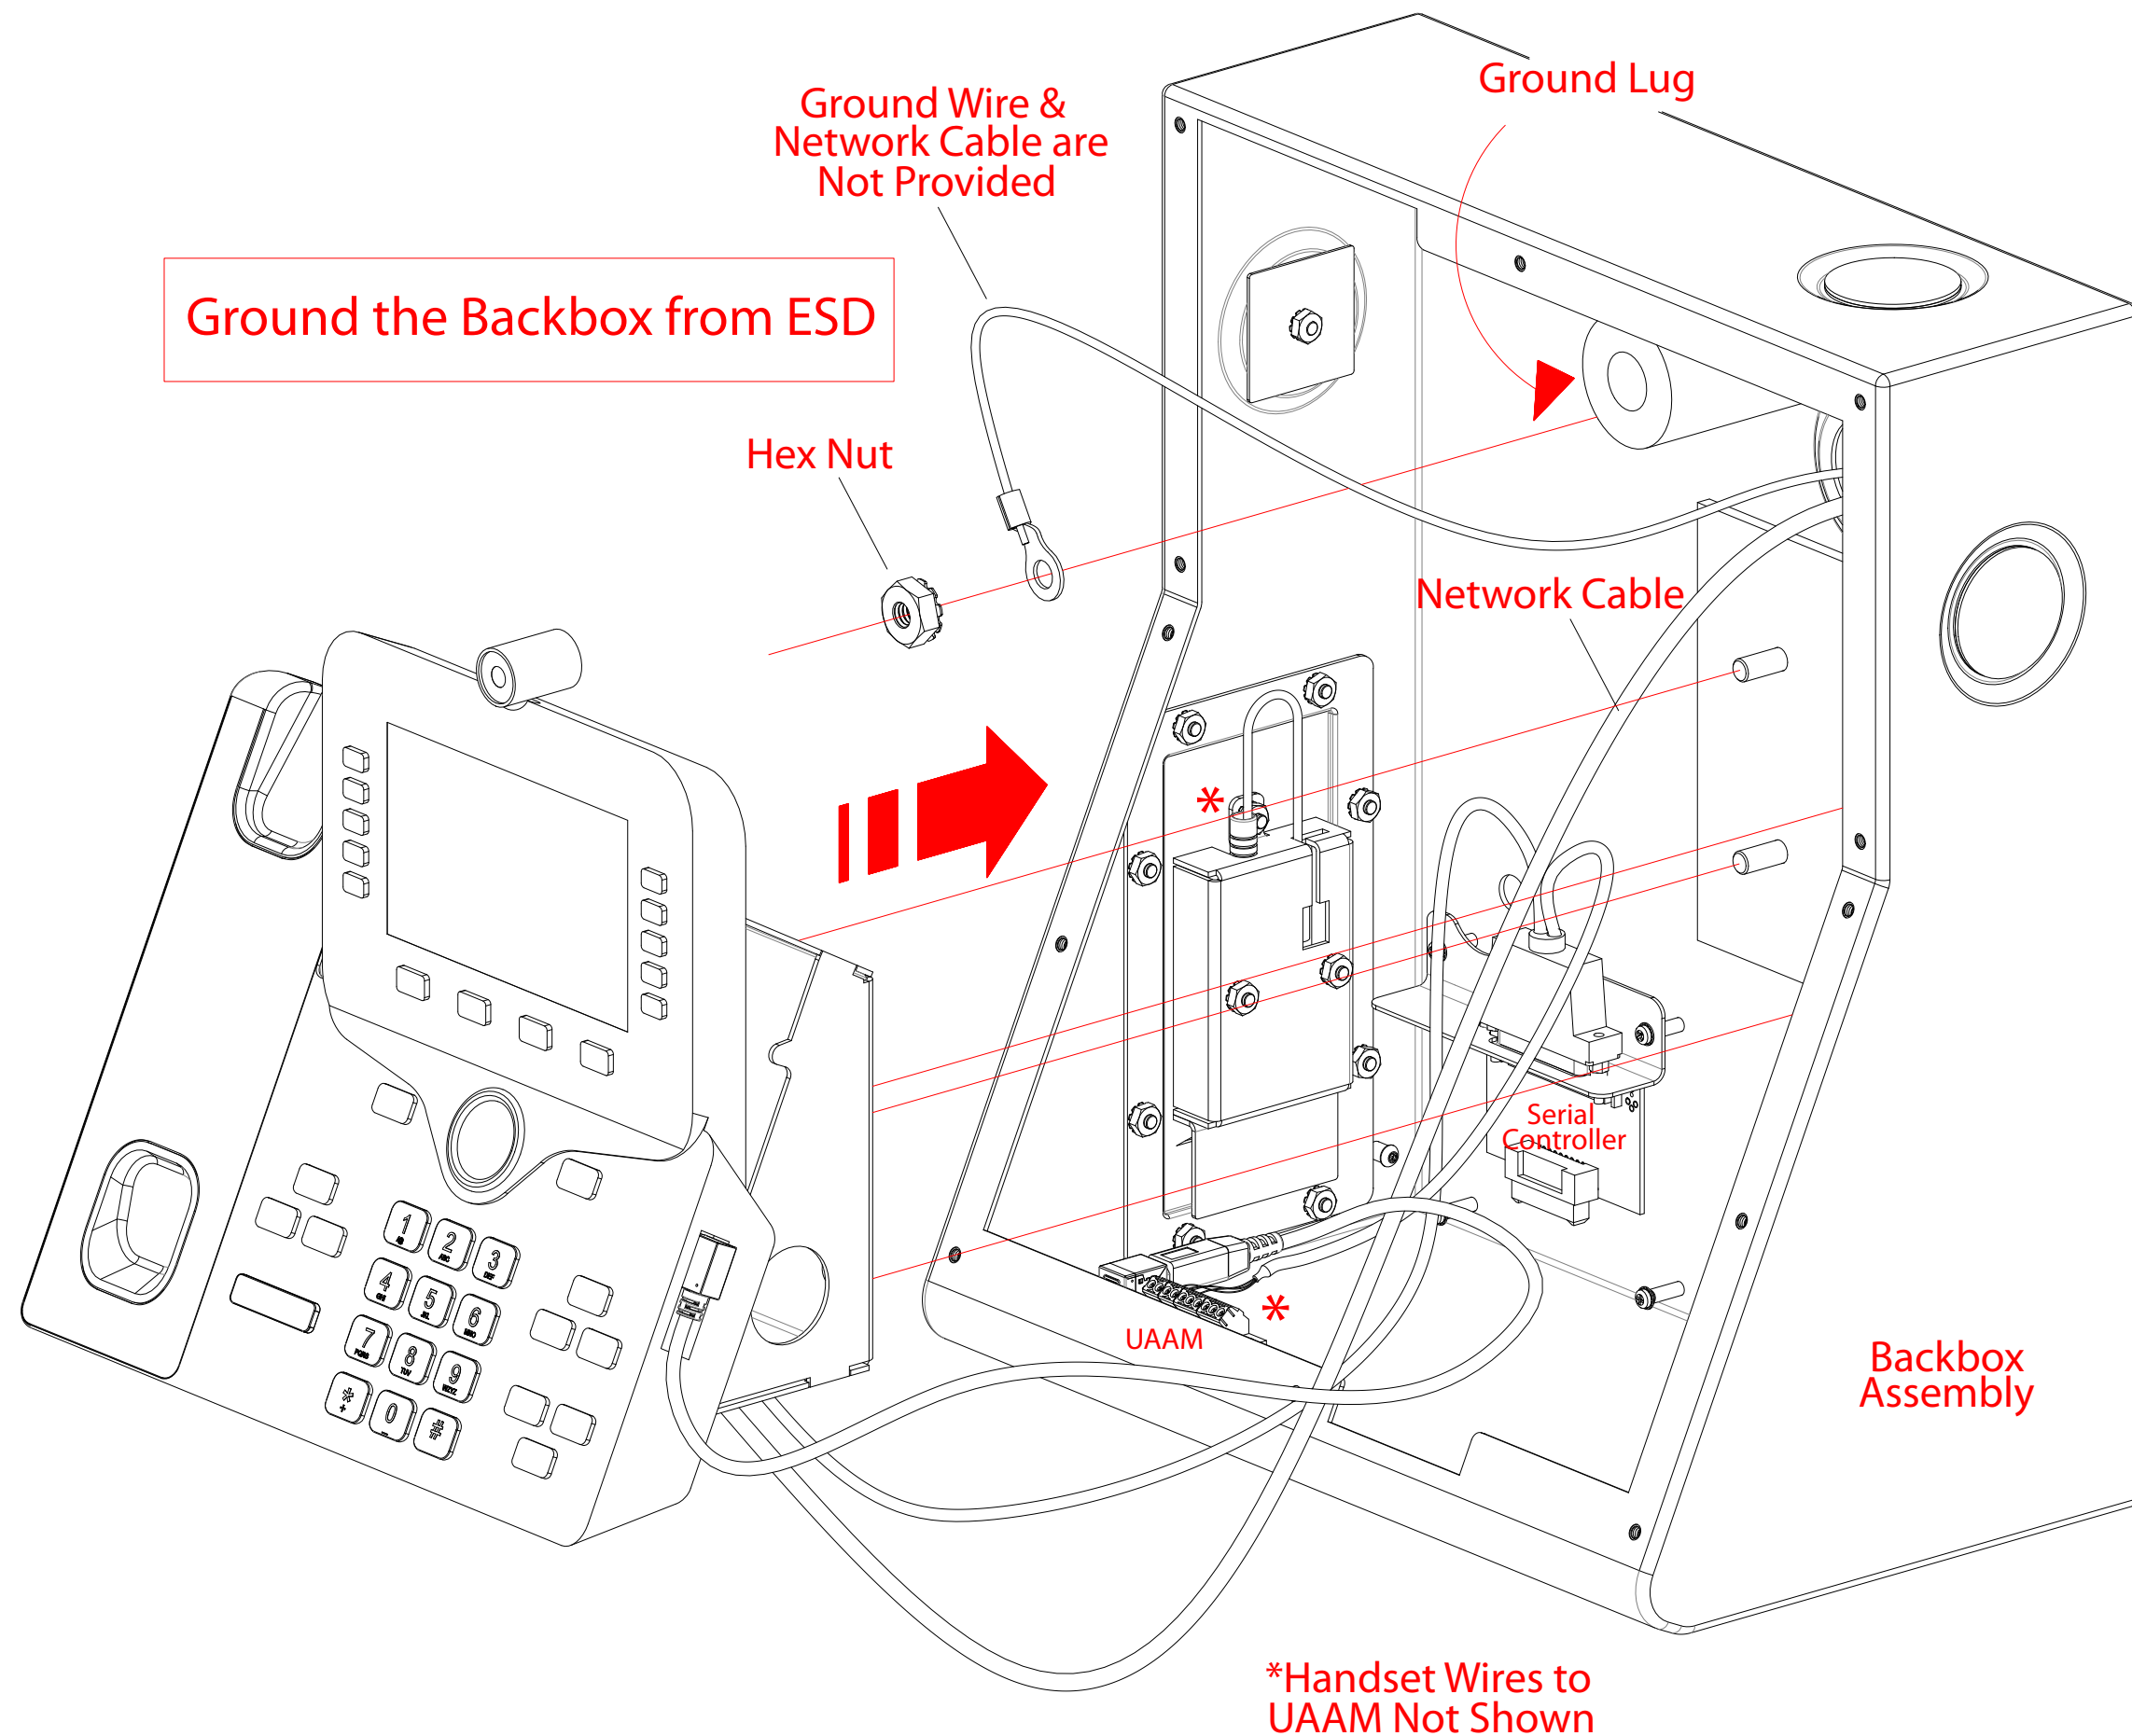

Ground the Backbox from ESD

Ground Wire &  
Network Cable are  
Not Provided

Ground Lug

Hex Nut

Network Cable

Serial  
Controller


UAAM

Backbox  
Assembly

\*Handset Wires to  
UAAM Not Shown





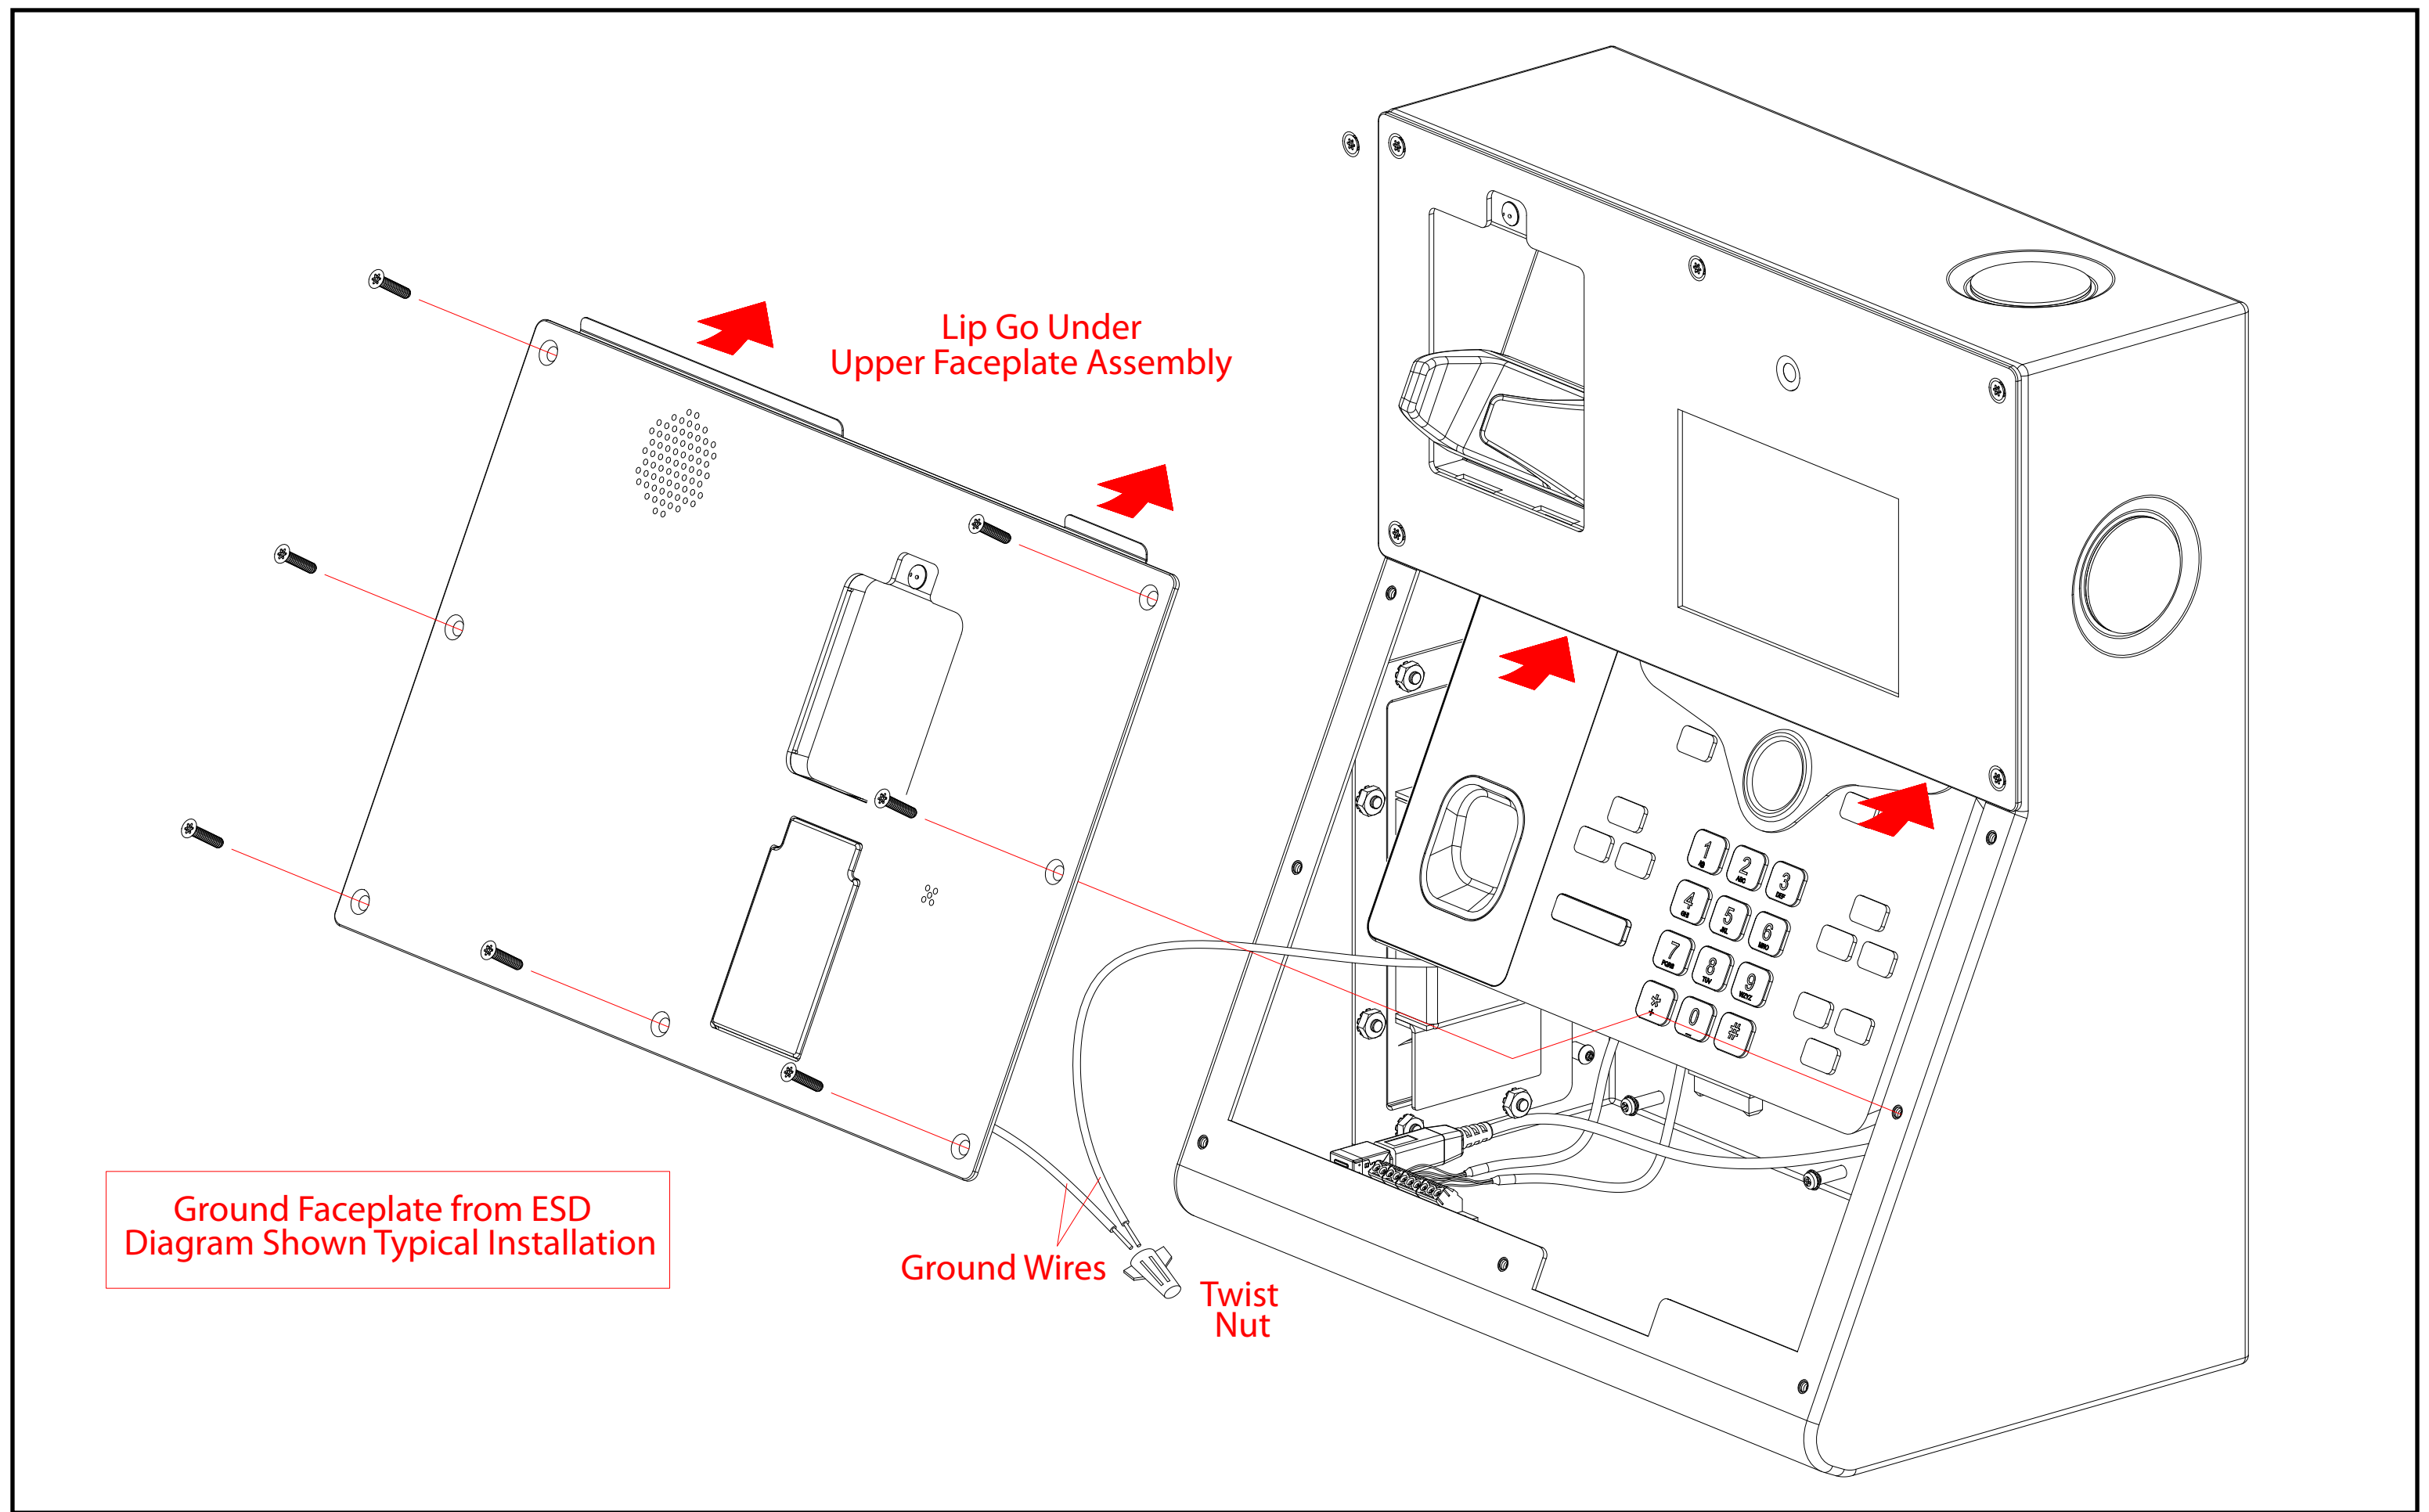


Lip Go Under  
Upper Faceplate Assembly

Ground Faceplate from ESD  
Diagram Shown Typical Installation

Ground Wires

Twist  
Nut

# Dimensions and Features

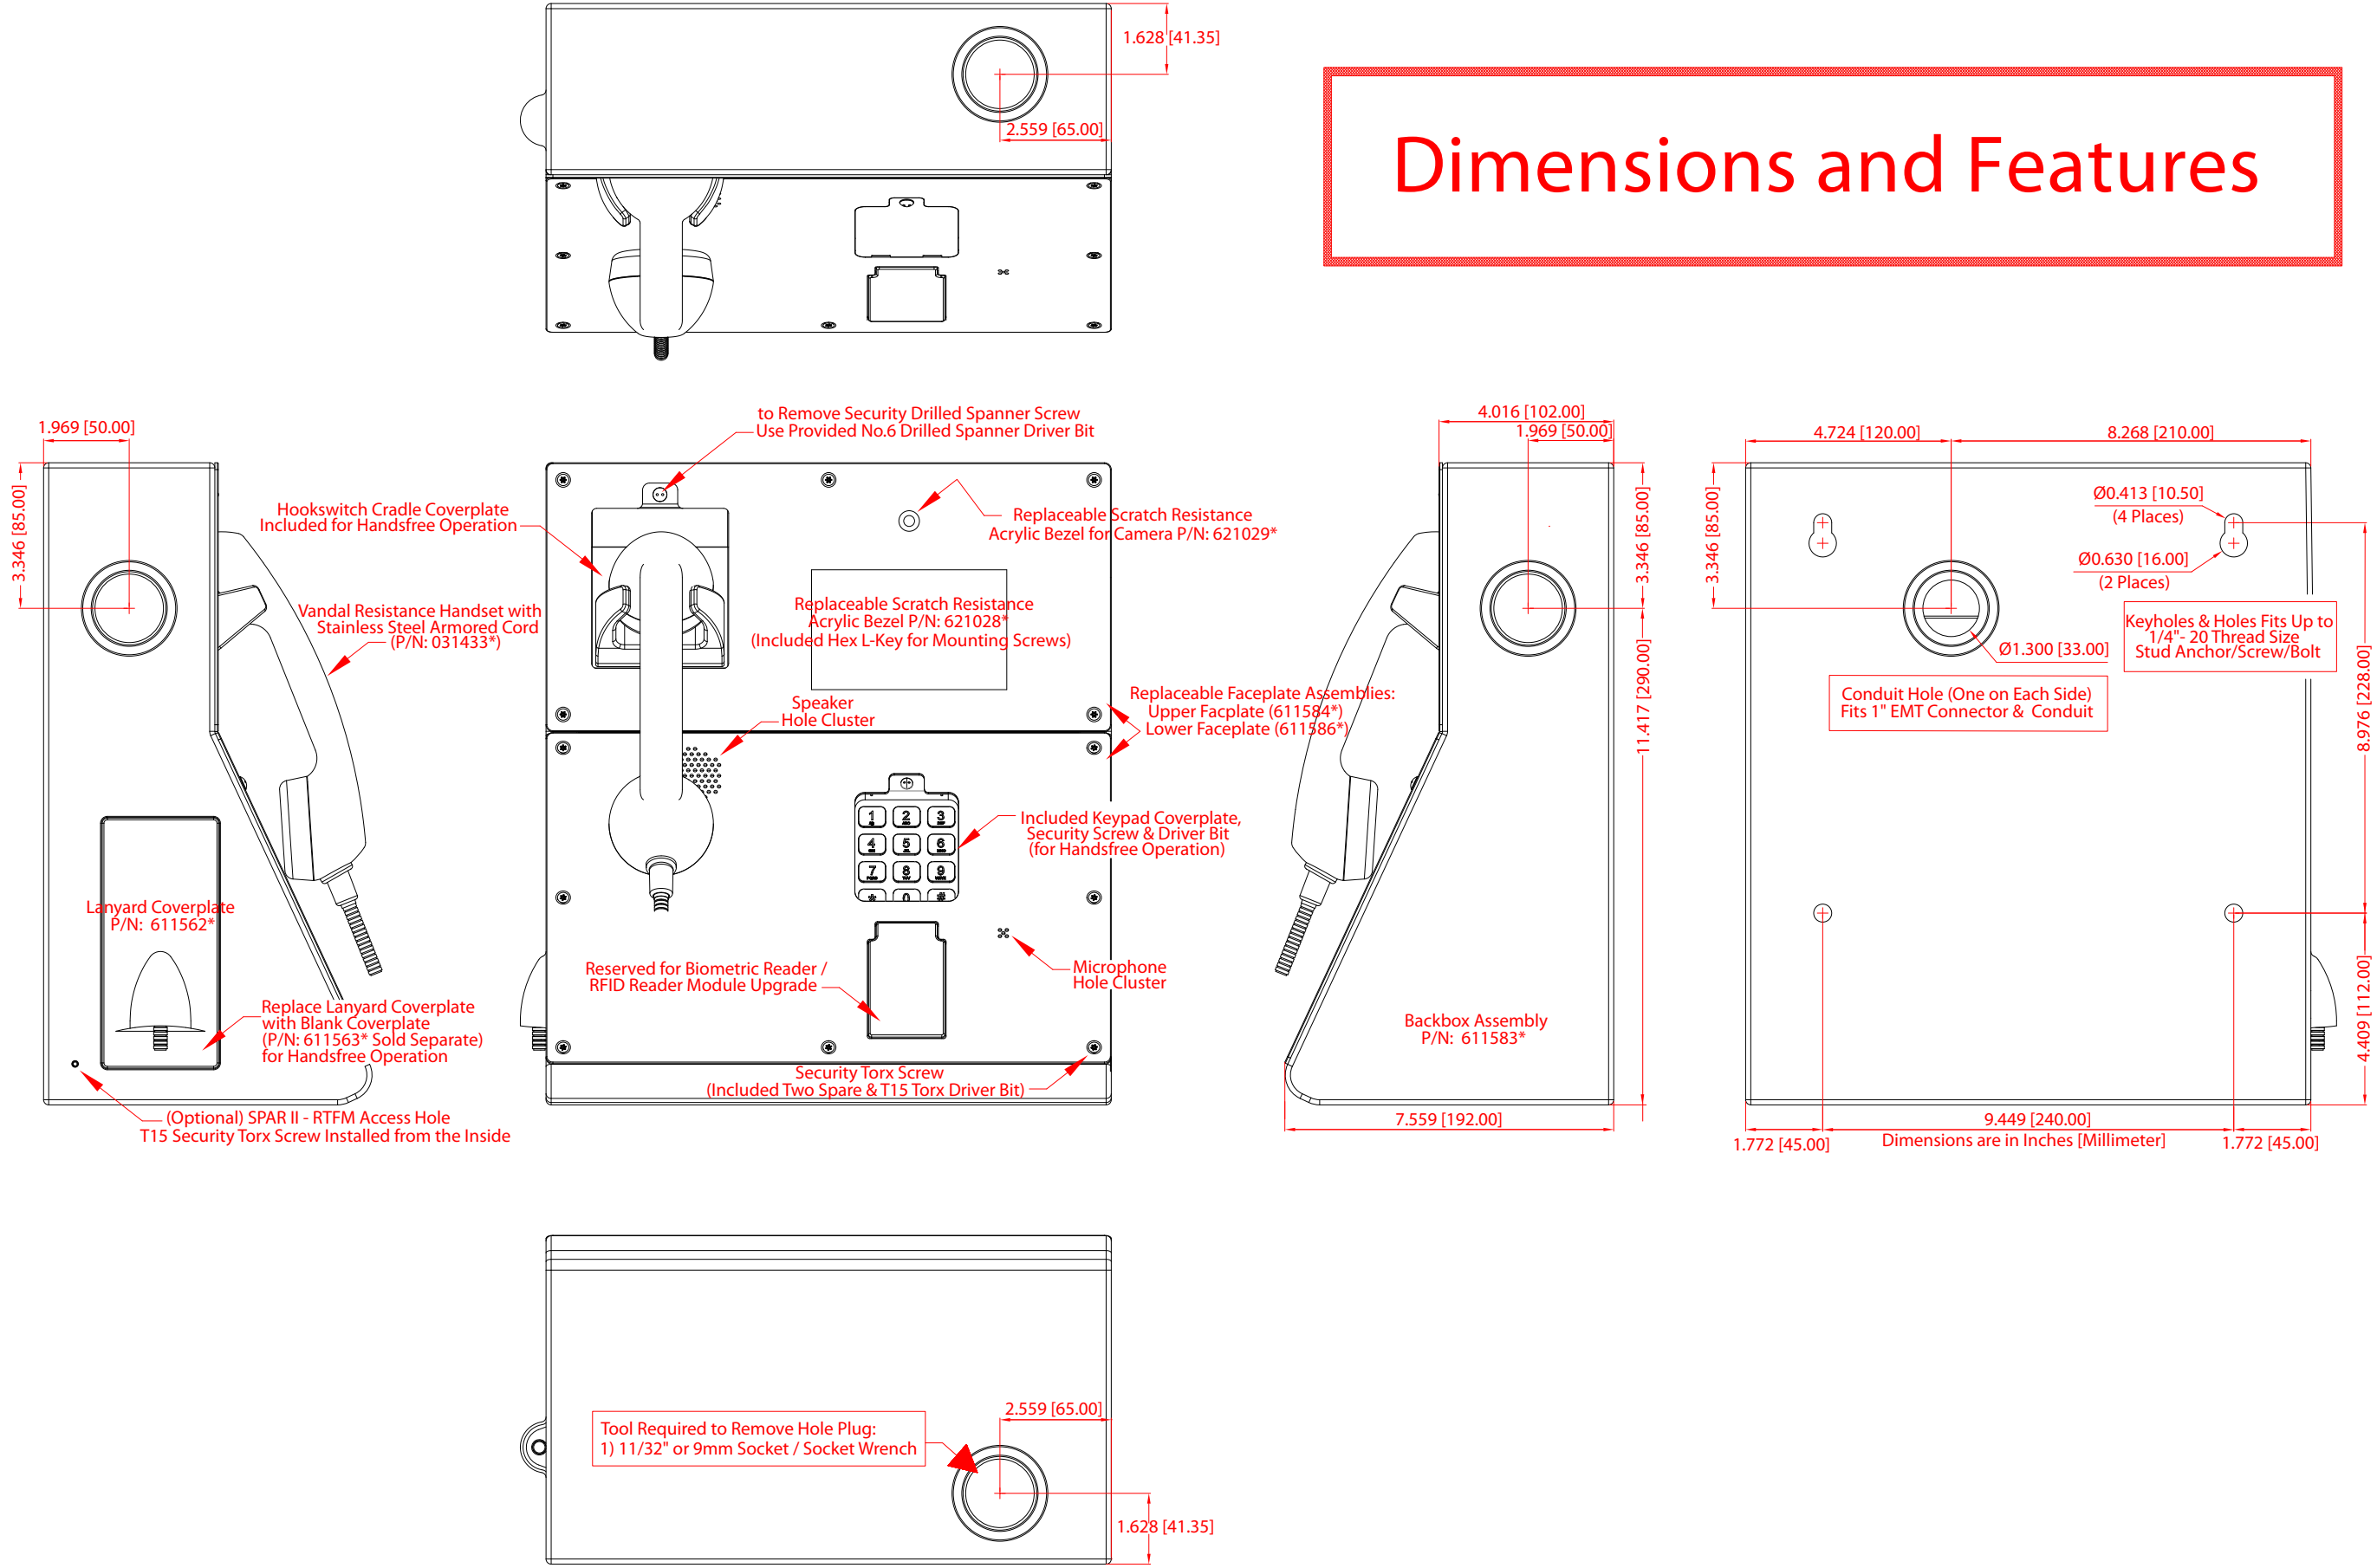

\*Peel Off Protective Film  
Before Install on to Backbox

Mounting  
Screw

Hex L-Key

Mounting  
Bracket

Secure Acrylic Bezel with Tape  
\* Do Not Block View

Acrylic Bezel  
P/N: 621029\*

Narrow Side

Acrylic Bezel  
P/N: 621028\*

Replace the Acrylic Bezels

