

Installation Quick Reference

Protective Dome Kit

011287

Parts List

- (1) Protective Dome Kit

Operation Guide


- You can download the documentation from the following web page:
<http://www.cyberdata.net/products/voip/accessories/domeenclosure/docs.html>

Wall Mounting Screw Kit (Part of the Dome Kit)


(4) #8x1.5" Pan Head Phillips Self-Tapping Screw



(4) Plastic Ribbed Anchor



Removing the Auxiliary Strobe Backplate to Install the Dome Kit

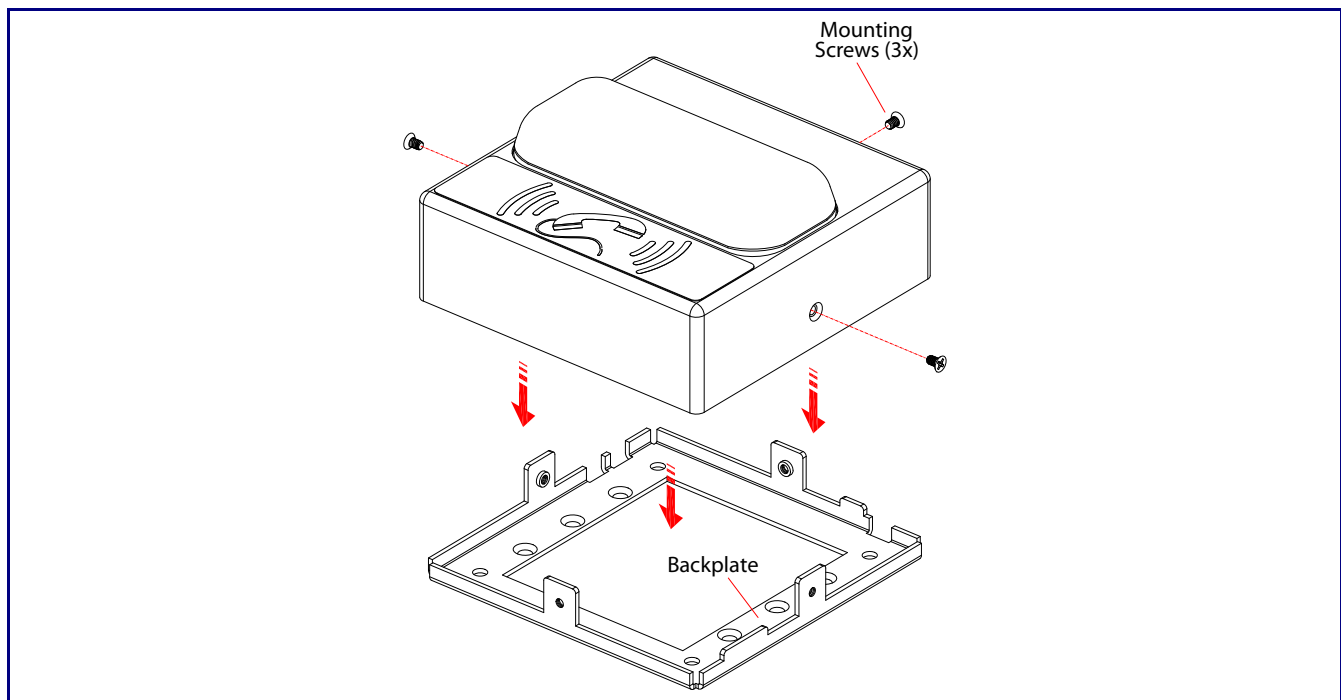

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
www.CyberData.net

Sales: (831) 373-2601 ext. 334
Support: 831-373-2601 ext. 333
Web: <http://www.cyberdata.net/support/contactsupportvoip.php>
RMA Dept: (831) 373-2601 ext. 136
Email: RMA@CyberData.net
RMA Status: <http://www.cyberdata.net/support/rmastatus.html>

Warranty information is available at:
Web: <http://www.cyberdata.net/support/warranty/index.html>

Installing the Dome Kit

1. Remove the backplate from the VoIP Strobe by removing the three Mounting Screws. See the section called, "[Removing the Auxiliary Strobe Backplate to Install the Dome Kit](#)" on the front page.

2. Install the Backplate to the Dome Kit Adapter Plate with the three #8 x 5/16-inch Pan-Head Phillips Machine Screws.

Note Only three screws are being used. Make sure that the mount is located correctly or interference will occur.

3. Install the Dome Kit Backbox onto the wall with the Wall Mounting Kit.

4. Run the network cable (not provided) through the conduit (not provided), NPT Hub, Adapter Plate, and then through the Backplate into the network connector (J1).

5. Secure the Backplate with the three Mounting Screws that were removed in [Step 1](#).

6. Secure the Adapter Plate with the Flat-Head Machine Screws.

7. Install the Clear Cover with the Socket Head Cap Screws and Washers.

