

RTFM Access

The RTFM switch access will be on the top side of the horn hidden under a screw that will be used to keep the unit IP66 sealed with the gasket washer. To access the RTFM, complete the following steps:

- 1. Remove the RTFM cover screw to gain access to the RTFM switch (see the figure below).
- 2. Use a paper clip to feed through the hole to press the RTFM switch (see the figure below).

Announce the IP Address


To broadcast the device’s current IP address, press and hold the RTFM switch for a couple of seconds and then release it.

Restore the Factory Default Settings


To restore the factory defaults, complete the following steps:

- 1. Press and hold the RTFM switch until you hear the device announce the words, “restoring defaults” and “rebooting”.
- 2. Release the RTFM switch. The device will be restored to the factory default settings.

RTFM Cover Screw

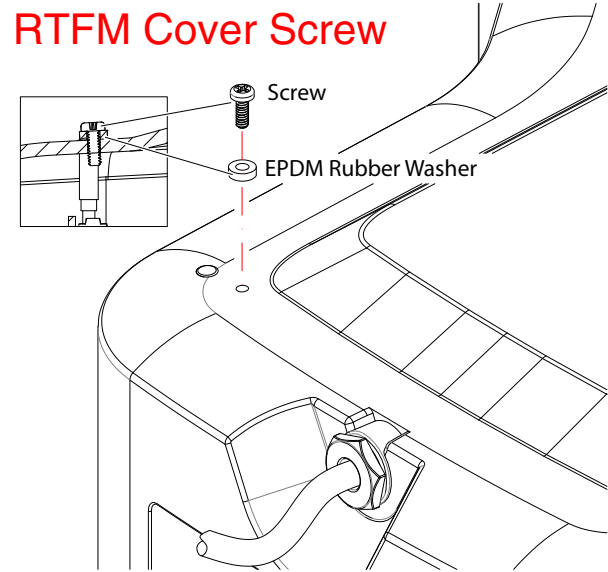

Paper Clip

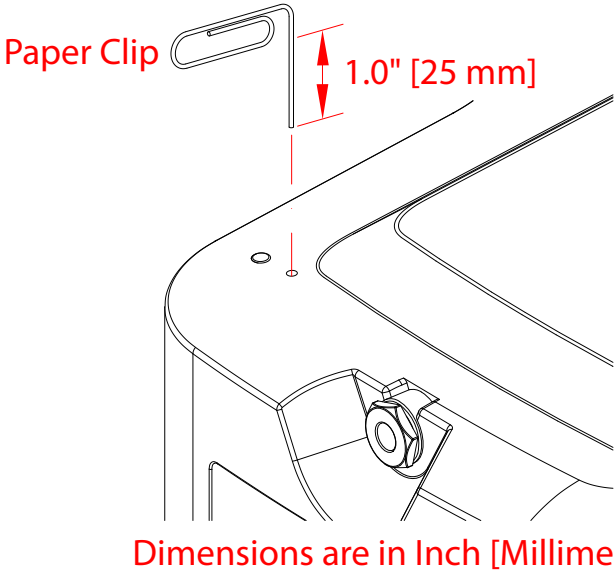

Dimensions are in Inch [Millimeters]

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<https://www.cyberdata.net/>

Sales: 831-373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <https://support.cyberdata.net/>
RMA Department Contact and Status: <https://support.cyberdata.net/>
Warranty Information: <https://support.cyberdata.net/>


Installation Quick Reference
InformaCast Enabled IP66 Indoor / Outdoor Horn
011472



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	192.168.1.23
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.255.255.0
Default Gateway ^a	192.168.1.1

a. Default if there is not a DHCP server present.

Typical System Installation

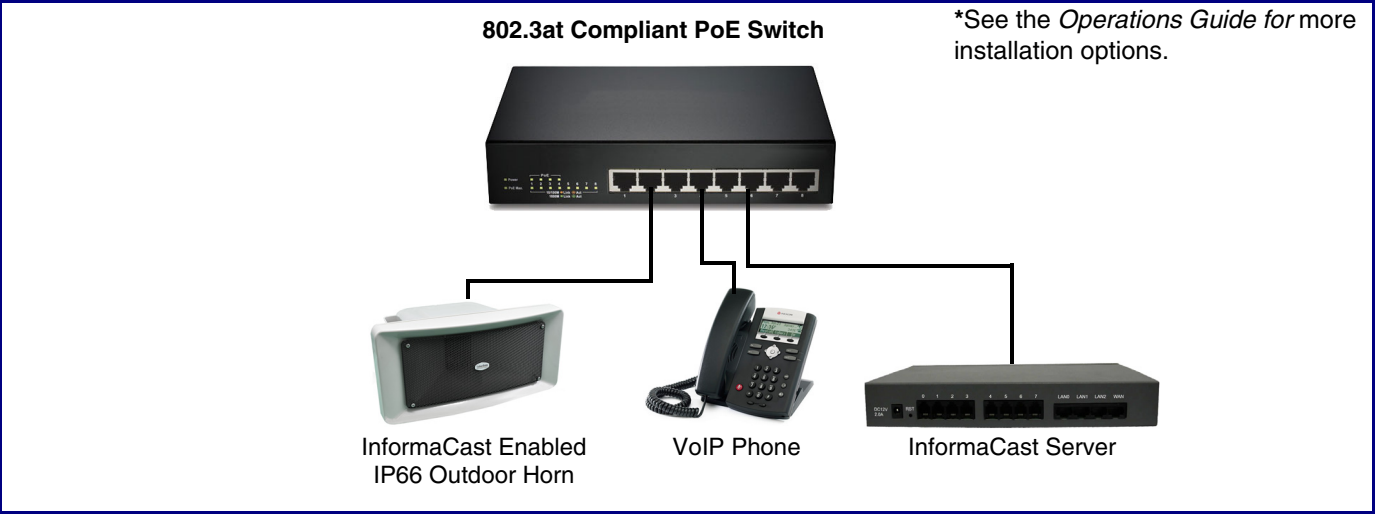


Getting Started

- Download the *Operations Guide* PDF file from the **Documents** tab at the following webpage: <https://www.cyberdata.net/products/011472>
- Create a plan for the locations of your paging amplifiers.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** The InformaCast Enabled IP66 Indoor / Outdoor Horn enclosure is not rated for any AC voltages!

Parts



Dimensions

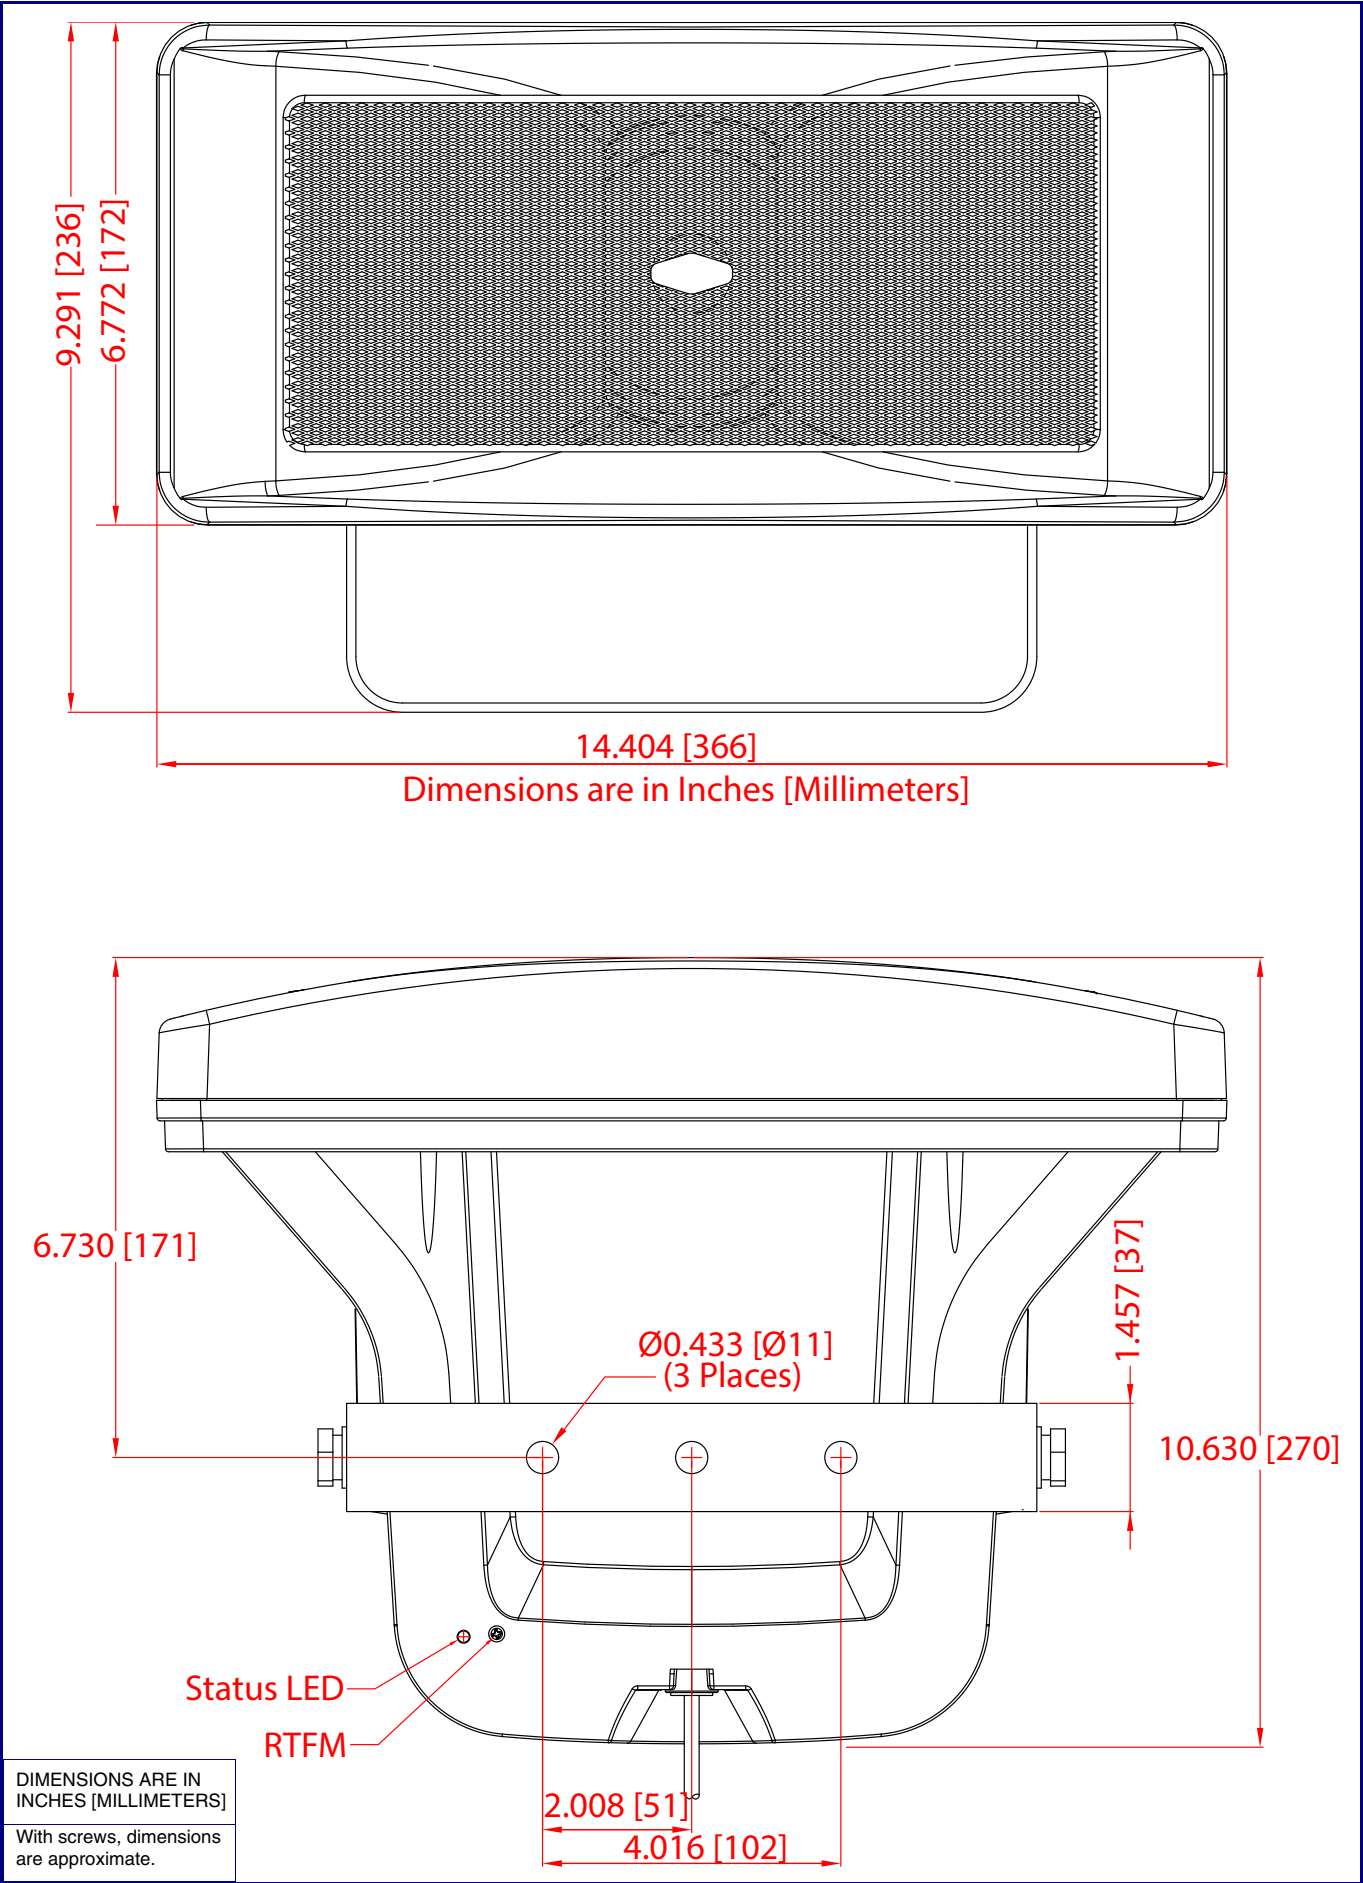

Install the Network Cable Through Weatherproof Cable Gland

