



VoIP V2 Speaker Operations Guide

Part #011098*, RAL 9002, Gray White, Standard
Part #011099, RAL 9003, Signal White, Optional

*Replaces #011021

Document Part #930274R
for Firmware Version 6.3.0

CyberData Corporation
3 Justin Court
Monterey, CA 93940
(831) 373-2601

VoIP V2 Speaker Operations Guide 930274R
Part # 011098*
Part # 011099
***Replaces 011021**

COPYRIGHT NOTICE:

© 2014, CyberData Corporation, ALL RIGHTS RESERVED.

This manual and related materials are the copyrighted property of CyberData Corporation. No part of this manual or related materials may be reproduced or transmitted, in any form or by any means (except for internal use by licensed customers), without prior express written permission of CyberData Corporation. This manual, and the products, software, firmware, and/or hardware described in this manual are the property of CyberData Corporation, provided under the terms of an agreement between CyberData Corporation and recipient of this manual, and their use is subject to that agreement and its terms.

DISCLAIMER: Except as expressly and specifically stated in a written agreement executed by CyberData Corporation, CyberData Corporation makes no representation or warranty, express or implied, including any warranty or merchantability or fitness for any purpose, with respect to this manual or the products, software, firmware, and/or hardware described herein, and CyberData Corporation assumes no liability for damages or claims resulting from any use of this manual or such products, software, firmware, and/or hardware. CyberData Corporation reserves the right to make changes, without notice, to this manual and to any such product, software, firmware, and/or hardware.

OPEN SOURCE STATEMENT: Certain software components included in CyberData products are subject to the GNU General Public License (GPL) and Lesser GNU General Public License (LGPL) "open source" or "free software" licenses. Some of this Open Source Software may be owned by third parties. Open Source Software is not subject to the terms and conditions of the CyberData COPYRIGHT NOTICE or software licenses. Your right to copy, modify, and distribute any Open Source Software is determined by the terms of the GPL, LGPL, or third party, according to who licenses that software.

Software or firmware developed by CyberData that is unrelated to Open Source Software is copyrighted by CyberData, subject to the terms of CyberData licenses, and may not be copied, modified, reverse-engineered, or otherwise altered without explicit written permission from CyberData Corporation.

TRADEMARK NOTICE: CyberData Corporation and the CyberData Corporation logos are trademarks of CyberData Corporation. Other product names, trademarks, and service marks may be the trademarks or registered trademarks of their respective owners.



Technical Support

The fastest way to get technical support for your VoIP product is to submit a VoIP Technical Support form at the following website:
<http://www.cyberdata.net/support/contactsupportvoip.php>

Phone: (831) 373-2601, Ext. 333

Email: support@cyberdata.net

Fax: (831) 373-4193



Company and product information is at www.cyberdata.net.

Revision Information

Revision 930274R, which corresponds to firmware version 6.3.0, was updated on April 4, 2014 and has the following changes:

- Adds the following warning to the following sections:
- [Important Safety Instructions](#)
- [Section 1.2, "Installation"](#)
- [Section Appendix A: "Mounting the Speaker"](#)
- **Warning Text:** [“The PoE connector is intended for intra-building connections only and does not route to the outside plant.”](#)

Pictorial Alert Icons

	<p>General Alert</p> <p><i>This pictorial alert indicates a potentially hazardous situation. This alert will be followed by a hazard level heading and more specific information about the hazard.</i></p>
	<p>Ground</p> <p><i>This pictorial alert indicates the Earth grounding connection point.</i></p>

Hazard Levels

Danger: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This is limited to the most extreme situations.

Warning: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Caution: Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It may also alert users against unsafe practices.




Notice: Indicates a statement of company policy (that is, a safety policy or protection of property).

The safety guidelines for the equipment in this manual do not purport to address all the safety issues of the equipment. It is the responsibility of the user to establish appropriate safety, ergonomic, and health practices and determine the applicability of regulatory limitations prior to use. Potential safety hazards are identified in this manual through the use of words Danger, Warning, and Caution, the specific hazard type, and pictorial alert icons.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Prior to installation, consult local building and electrical code requirements.

14. WARNING: The VoIP V2 Speaker enclosure is not rated for any AC voltages!

 GENERAL ALERT	<p>Warning</p> <p><i>Electrical Hazard:</i> This product should be installed by a licensed electrician according to all local electrical and building codes.</p>
 GENERAL ALERT	<p>Warning</p> <p><i>Electrical Hazard:</i> To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.</p>
 GENERAL ALERT	<p>Warning</p> <p>The PoE connector is intended for intra-building connections only and does not route to the outside plant.</p>

Abbreviations and Terms

Abbreviation or Term	Definition
A-law	A standard companding algorithm, used in European digital communications systems to optimize, i.e., modify, the dynamic range of an analog signal for digitizing.
AVP	Audio Video Profile
Cat 5	TIA/EIA-568-B Category 5
DHCP	Dynamic Host Configuration Protocol
LAN	Local Area Network
LED	Light Emitting Diode
Mbps	Megabits per Second.
NTP	Network Time Protocol
PBX	Private Branch Exchange
PoE	Power over Ethernet (as per IEEE 802.3af standard)
RTFM	Reset Test Function Management
SIP	Session Initiated Protocol
u-law	A companding algorithm, primarily used in the digital telecommunication
UC	Unified Communications
VoIP	Voice over Internet Protocol

Contents

Chapter 1 Product Overview	1
1.1 How to Identify This Product	1
1.2 Installation	2
1.3 Product Features	3
1.4 Supported Protocols	4
1.5 Supported SIP Servers	4
1.6 Product Specifications	5
1.7 Optional Connections (J9 and J10)	6
1.8 Dimensions	6
 Chapter 2 Installing the VoIP V2 Speaker	 7
2.1 Parts List	7
2.2 Device Configuration	8
2.2.1 Connect Power to the Speaker	9
2.2.2 Installation Options	12
2.2.3 Confirm that the Speaker is Operational and Linked to the Network	16
2.2.4 Confirm the IP Address and Test the Audio	17
2.2.5 Adjust the Volume	18
2.2.6 How to Set the Factory Default Settings	19
2.3 Configure the Speaker Parameters	20
2.3.1 Default IP Settings	20
2.3.2 V2 Speaker Web Page Navigation	21
2.3.3 Log in to the Configuration Home Page	22
2.3.4 Configure the Device Parameters	25
2.3.5 Configure the Network Parameters	27
2.3.6 Configure the SIP Parameters	29
2.3.7 Configure the Night Ringer Parameters	32
2.3.8 Configure the Multicast Parameters	34
2.3.9 Configure the Audio Parameters	37
2.3.10 Configure the NTP Server and Clock Parameters	43
2.3.11 Configure the Event Parameters	48
2.3.12 Configure the Autoprovisioning Parameters	53
2.3.13 Upgrade the Firmware and Reboot the V2 Speaker	58
2.4 Command Interface	63
2.4.1 Command Interface Post Commands	63
 Appendix A Mounting the Speaker	 66
A.1 Important Safety Instructions	66
A.2 Mount the Speaker	67
 Appendix B Setting up a TFTP Server	 70
B.1 Set up a TFTP Server	70
B.1.1 Autoprovisioning requires a TFTP server for hosting the configuration file.	70
B.1.2 In a LINUX Environment	70
B.1.3 In a Windows Environment	70
 Appendix C Troubleshooting/Technical Support	 71
C.1 Frequently Asked Questions (FAQ)	71
C.2 Documentation	71
C.3 Contact Information	72
C.4 Warranty	73
C.4.1 Warranty & RMA Returns within the United States	73
C.4.2 Warranty & RMA Returns outside of the United States	73
C.4.3 Spare in the Air Policy	74

C.4.4 Return and Restocking Policy	74
C.4.5 Warranty and RMA Returns Page	74

Index	75
--------------	-----------

1 Product Overview

The CyberData SIP-enabled V2 Speaker is a Power-over-Ethernet (PoE 802.3af) and Voice-over-IP (VoIP) public address loudspeaker that easily connects into existing local area networks with a single CAT5 cable connection. The speaker is compatible with most SIP-based IP PBX. In a non-SIP environment, the speaker is capable of receiving broadcast audio via multicast. Its small footprint and low height allows the speaker to be discretely mounted almost anywhere.


1.1 How to Identify This Product

To identify the VoIP V2 Speaker, look for a model number label similar to the one shown in [Figure 1-1](#). The model number on the label should be one of the following:

- **011098***, RAL 9002, Gray White, Standard Color
- **011099**, RAL 9003, Signal White, Optional Color

*Replaces **011021**.

Figure 1-1. Model Number Label

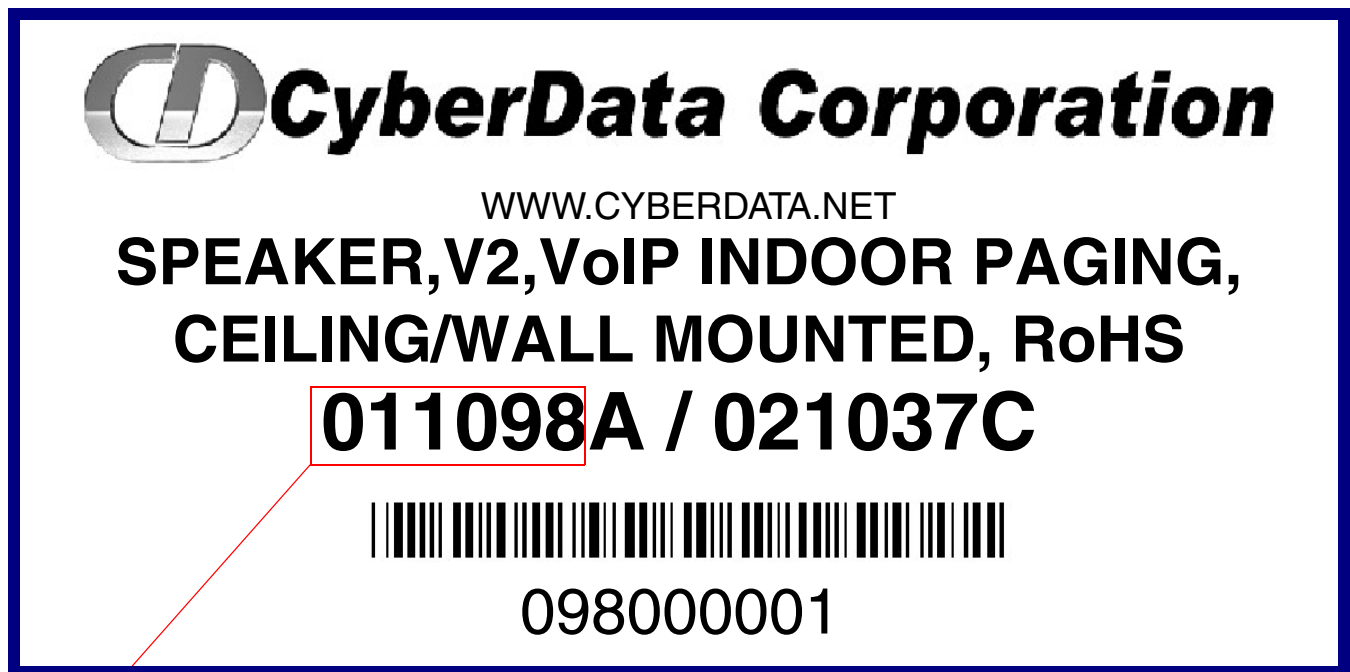

Model number

1.2 Installation

Note Prior to installation, create a plan for the locations of your speakers.






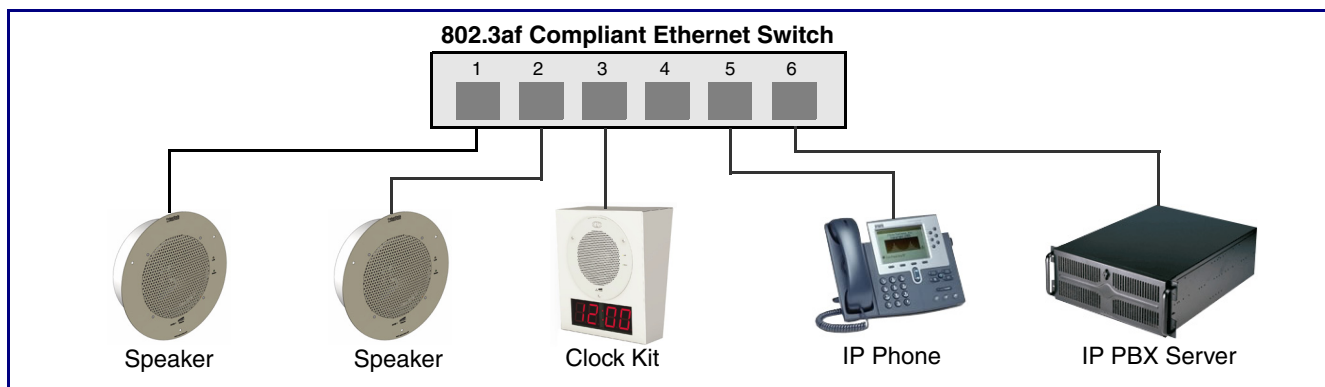
 GENERAL ALERT	<p>Warning</p> <p><i>Electrical Hazard:</i> The VoIP V2 Speaker enclosure is not rated for any AC voltages.</p>
 GENERAL ALERT	<p>Warning</p> <p><i>Electrical Hazard:</i> This product should be installed by a licensed electrician according to all local electrical and building codes.</p>
 GENERAL ALERT	<p>Warning</p> <p><i>Electrical Hazard:</i> To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.</p>
 GENERAL ALERT	<p>Warning</p> <p>The PoE connector is intended for intra-building connections only and does not route to the outside plant.</p>
 GENERAL ALERT	<p>General Alert</p> <p>Consult local building and electrical code requirements prior to installation.</p>

Figure 1-2 illustrates a typical configurations for the VoIP V2 Speaker.

Figure 1-2. Typical Installation



See the following sections for other installation options:

- [Section 2.2.1.3, "Running the V2 Speaker with Auxiliary Power"](#)
- [Section 2.2.2.1, "V2 Speaker with an External Device"](#)
- [Section 2.2.2.2, "V2 Speaker with Auxiliary Speaker Connection"](#)
- [Section 2.2.2.3, "V2 Speaker with Line Out"](#)

1.3 Product Features



- SIP (RFC 3261) compatible
- Web-based configuration
- Web-based firmware upgradeable
- Autoprovisioning support
- Small footprint
- High efficiency speaker driver
- PoE 802.3af Enabled (Powered-over-Ethernet)
- Network and external speaker volume control
- Peer-to-peer capability
- User-uploadable ring and alert tones
- Auto detect for CyberData Clock kit
- Nightringer
- Buffered page

1.4 Supported Protocols

The V2 Speaker supports:

- SIP
- Multicast
- HTTP Web-based configuration
Provides an intuitive user interface for easy system configuration and verification of speaker operations.
- DHCP Client
Dynamically assigns IP addresses in addition to the option to use static addressing.
- HTTP TCP Post auto-updating event notification in XML format
- TFTP Client
Facilitates hosting for the configuration file for Autoprovisioning.
- Audio Encodings
PCMU (G.711 mu-law)
PCMA (G.711 A-law)
Packet Time 20 ms

1.5 Supported SIP Servers

The following link contains information on how to configure the speaker for the supported SIP servers:

<http://www.cyberdata.net/support/server/index.html>

1.6 Product Specifications

Table 1-1. Product Specifications

Category	Specification
Audio sensitivity	96dB/1W/1M S.P. Level
Audio output	10 Watts Peak Power
Operating temperature	-30 to 55 C (-22 to 131 F)
Ethernet port baud rate	10/100 Mbps
Protocol	SIP RFC 3261 Compatible
Power Input (J1)	PoE 802.3af (as per IEEE 802.3af standard from a UL-listed, LPS-rated limited power source) 44-57 VDC (48 VDC nominal) at 350mA
or Auxiliary Power Input ^a (Terminal Block J10)	12 VDC at 1A (from a UL-listed, LPS-rated power supply)
Total Power	~ 15W
Network Line loss	~ 2W
Total Pwr @ VoIP Speaker	~ 13W
Total available audio power	~ 10W
Idle PWR (losses/CPU)	~ 3W
Payload types	G711, A-law and μ -law
Warranty	2 years limited
Dimensions	9" x 2.4"
Weight	2.8 lbs./shipping weight of 3.8 lbs. (1.3 kg/shipping weight of 1.7 kg)
Part number	011098* , RAL 9002, Gray White, Standard Color 011099 , RAL 9003, Signal White, Optional Color *Replaces 011021.

a.Auxiliary power input for use when PoE power is not available. 12 VDC @ 1A. Do not use auxiliary power input when speaker J1 is connected to a PoE power source.

1.7 Optional Connections (J9 and J10)

Figure 1-3. Optional Connections (J9 and J10)

Function	J10 Connections	J9 Connections	Function
*Auxiliary power input for use when PoE power is not available. 12 VDC @ 1A.	AUX POWER (+) (+12VDC @ 1A)	AUX SPEAKER (-)	Auxiliary 8-Ohm speaker connection (not to be used when the Clock is connected).
	AUX POWER (-)	AUX SPEAKER (+)	
Relay contacts rated at 30 VDC @ 1A.	RELAY COM	GND	
	RELAY NO	LINE OUT (-)	Audio line - level output to external audio amplifier.
5 VDC @ 100 mA.	+5V OUT	LINE OUT (+)	2v P-P into 10k Ohms.


J10 J9

*Do not use auxiliary power input when speaker J1 is connected to a PoE power source.

1.8 Dimensions

Figure 1-4 shows the dimensions for the V2 Speaker.

Figure 1-4. Dimensions

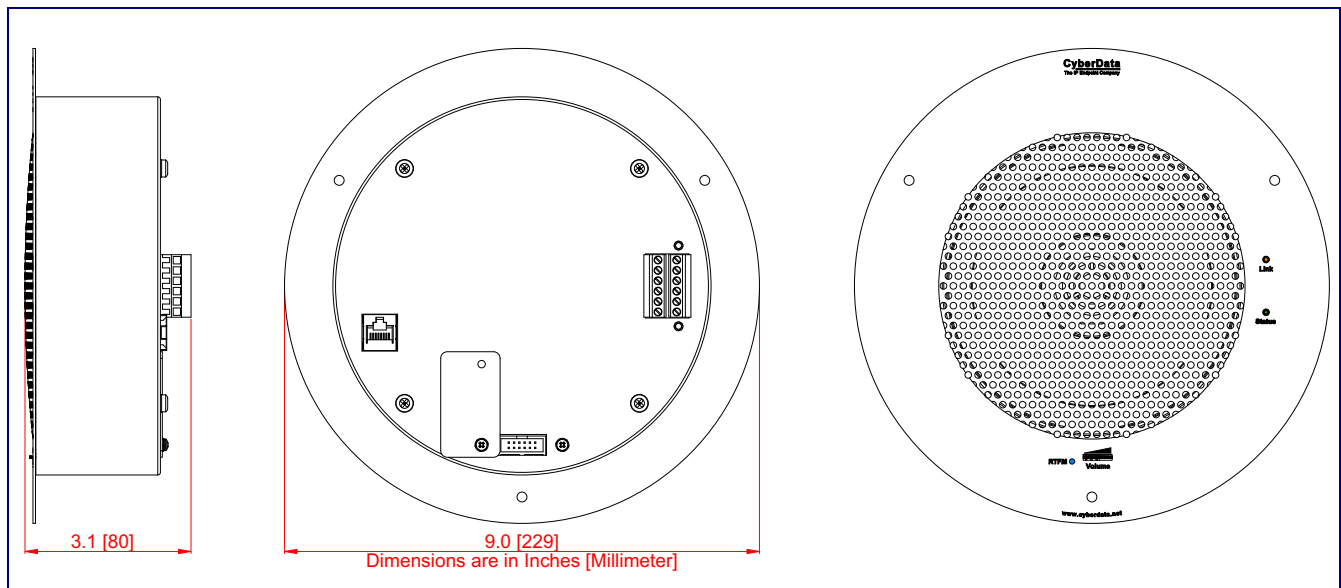




2 Installing the VoIP V2 Speaker

2.1 Parts List

Table 2-1 illustrates the parts for each speaker and includes kits for the drop ceiling and drywall mounting.

Note The installation template for the V2 Speaker is located on the *Installation Quick Reference Guide* that is included in the packaging with each speaker.

Table 2-1. Parts

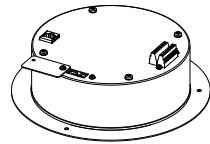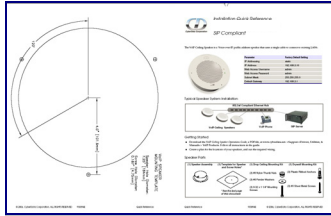Quantity	Part Name	Illustration
1	V2 Speaker Assembly	
1	Installation Quick Reference Guide	
1	Speaker Mounting Accessory Kit (Part #070054A)	

2.2 Device Configuration

Set up and configure each speaker *before* you mount it.

CyberData delivers each speaker with the following factory default values:

Table 2-2. Factory Network Default Settings—Default of Network

Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.


2.2.1 Connect Power to the Speaker

Figure 2-1 through Figure 2-3 illustrates how to connect power to the VoIP V2 Speaker.

2.2.1.1 VoIP V2 Speaker to a 802.3af Compliant PoE Switch

Figure 2-1 illustrates how to connect the VoIP V2 Speaker to a 802.3af compliant PoE switch via a Cat 5 Ethernet cable.


Figure 2-1. VoIP V2 Speaker to a 802.3af Compliant PoE Switch

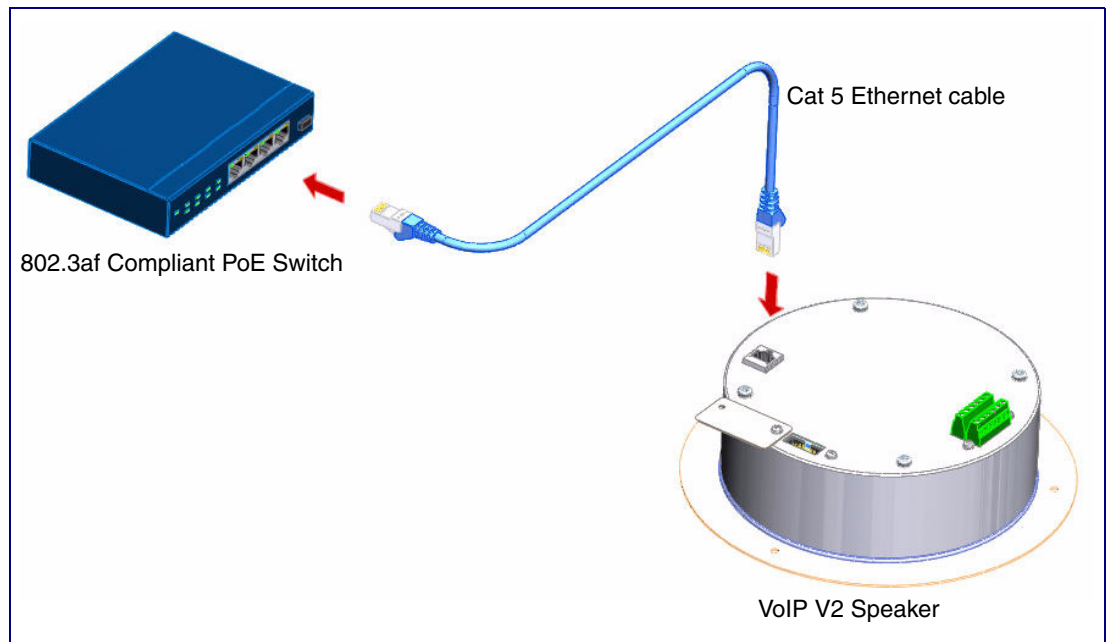

2.2.1.2 VoIP V2 Speaker (with PoE Injector) to a 802.3af Compliant PoE Switch

In [Figure 2-2](#), if a PoE switch is not available, you will need a PoE Injector, part #010867A (ordered separately). A PoE Injector is a power supply solution for those who have a standard Non PoE Switch.

Figure 2-2. VoIP V2 Speaker (with PoE Injector) to a Non PoE Switch

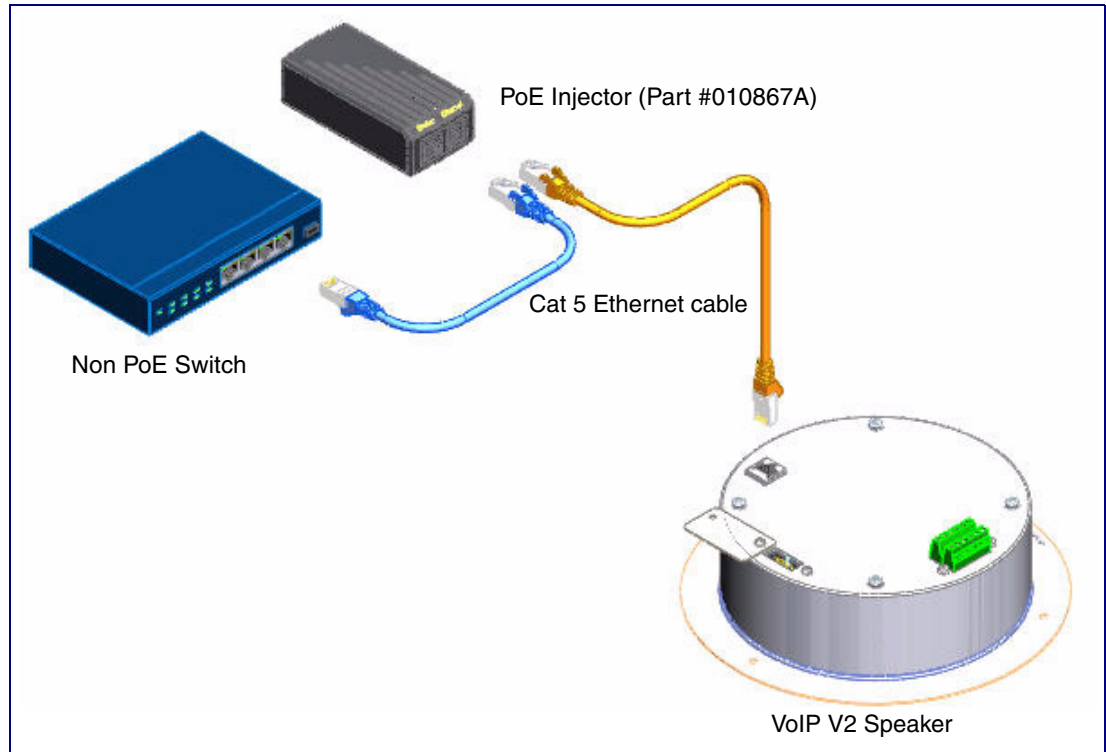

2.2.1.3 Running the V2 Speaker with Auxiliary Power

In [Figure 2-3](#), the power for the V2 Speaker can either come from an 802.3af Network connection or from an external source.


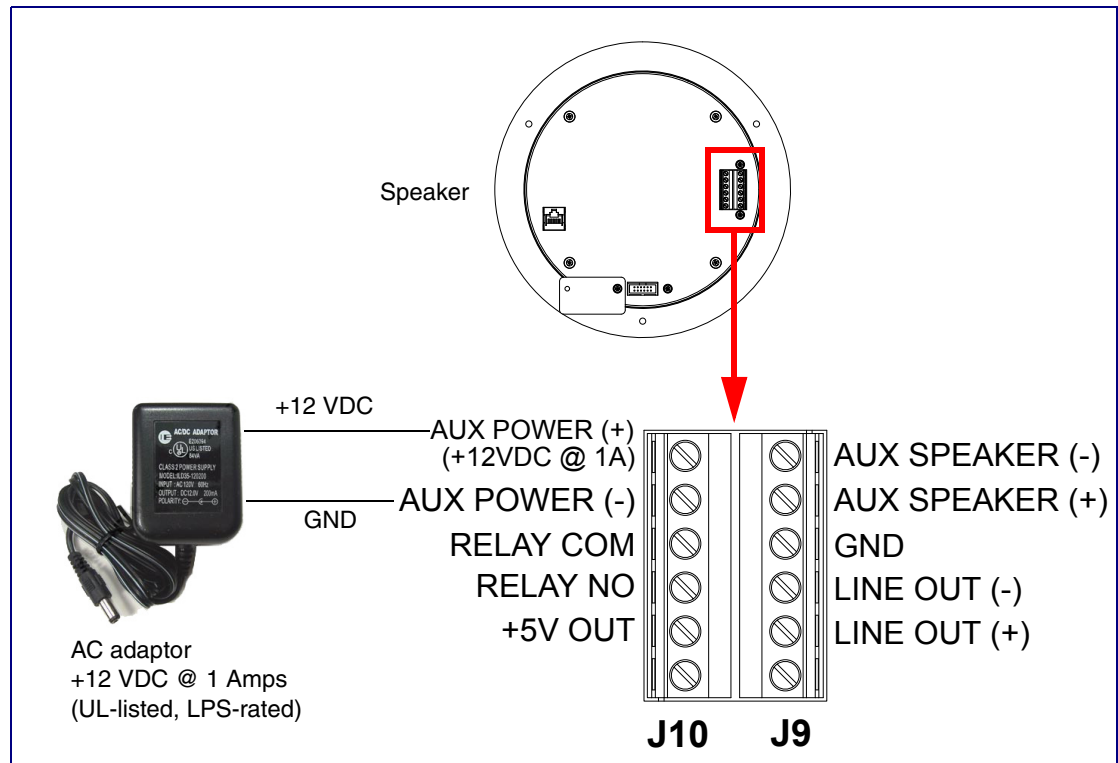
 GENERAL ALERT	Caution
<p>Operational Note: Do not connect an auxiliary power supply when the V2 Speaker is connected to a PoE power source through J1. Improper operation or equipment damage may occur.</p>	

Figure 2-3. Running the V2 Speaker with Auxiliary Power




2.2.2 Installation Options

This section shows various installation options for the V2 Speaker.

2.2.2.1 V2 Speaker with an External Device

In [Figure 2-4](#), when the V2 Speaker is called from a remote phone, the relay on the speaker can be programmed to drive an external device such as an alert strobe. This external device may also be addressed from a separate Unified Communication (UC) server.

Figure 2-4. V2 Speaker with Alert Strobe

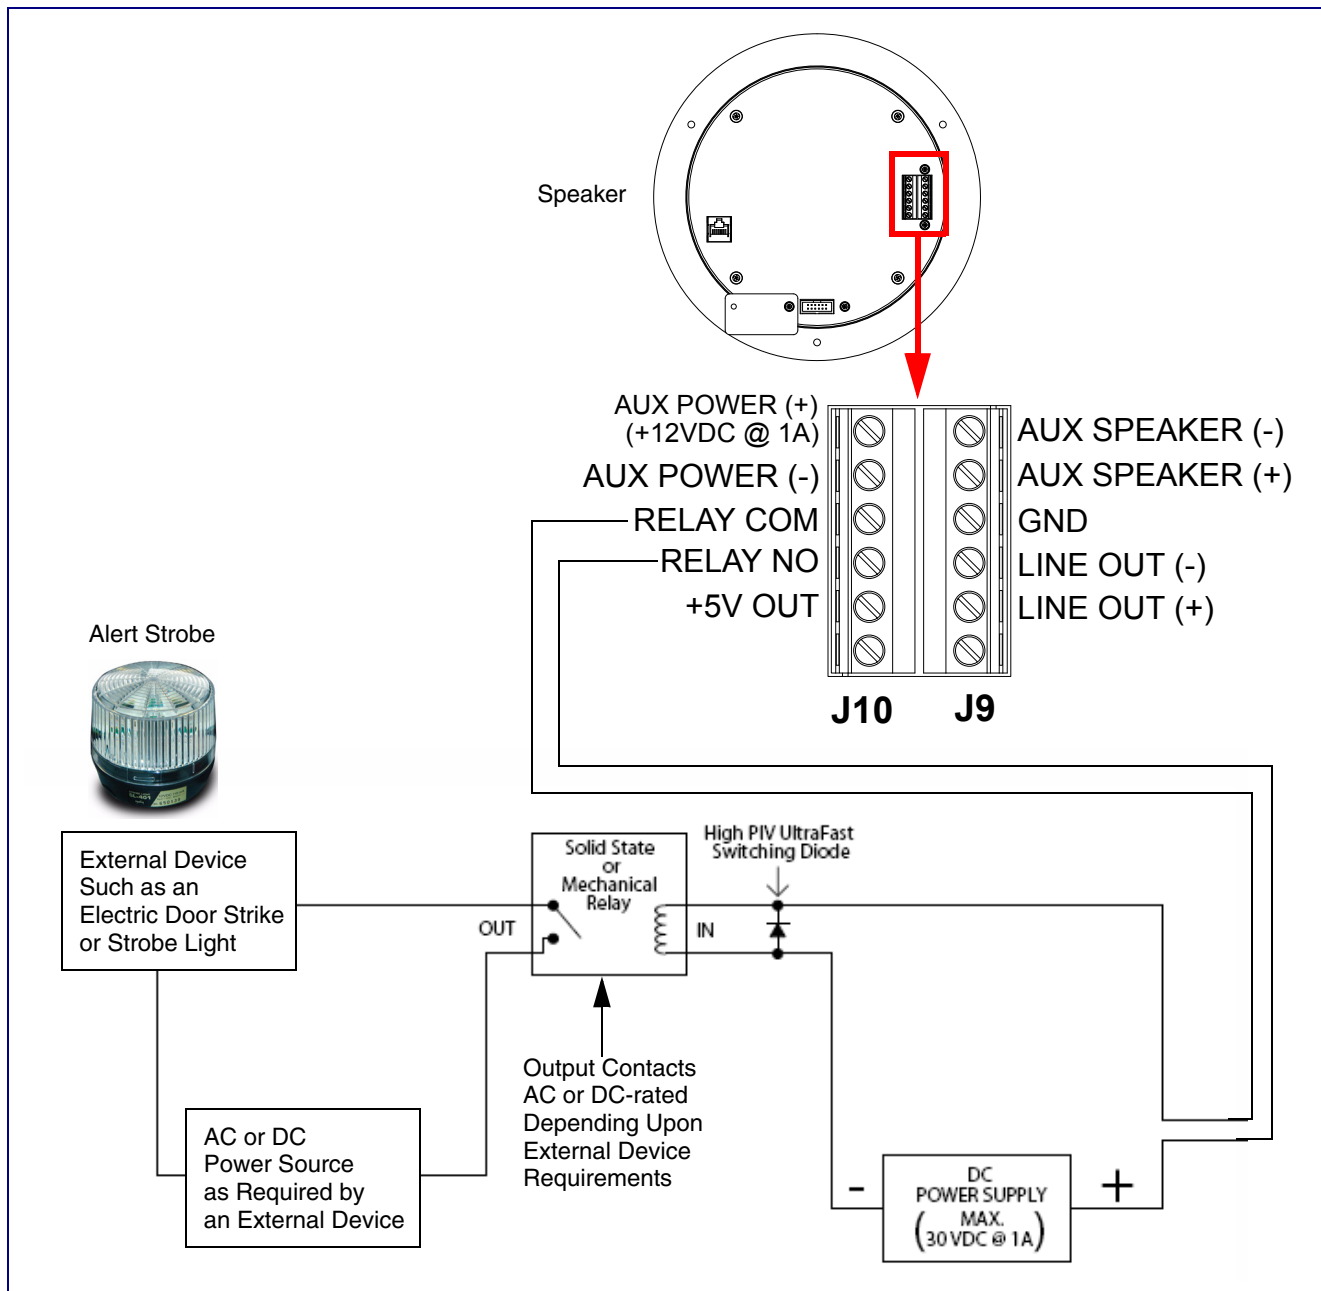

2.2.2.2 V2 Speaker with Auxiliary Speaker Connection

In [Figure 2-5](#), the V2 Speaker supports an amplified audio output for a second analog speaker. While the total speaker wattage is the same, by connecting a low cost analog speaker, additional coverage can be realized.


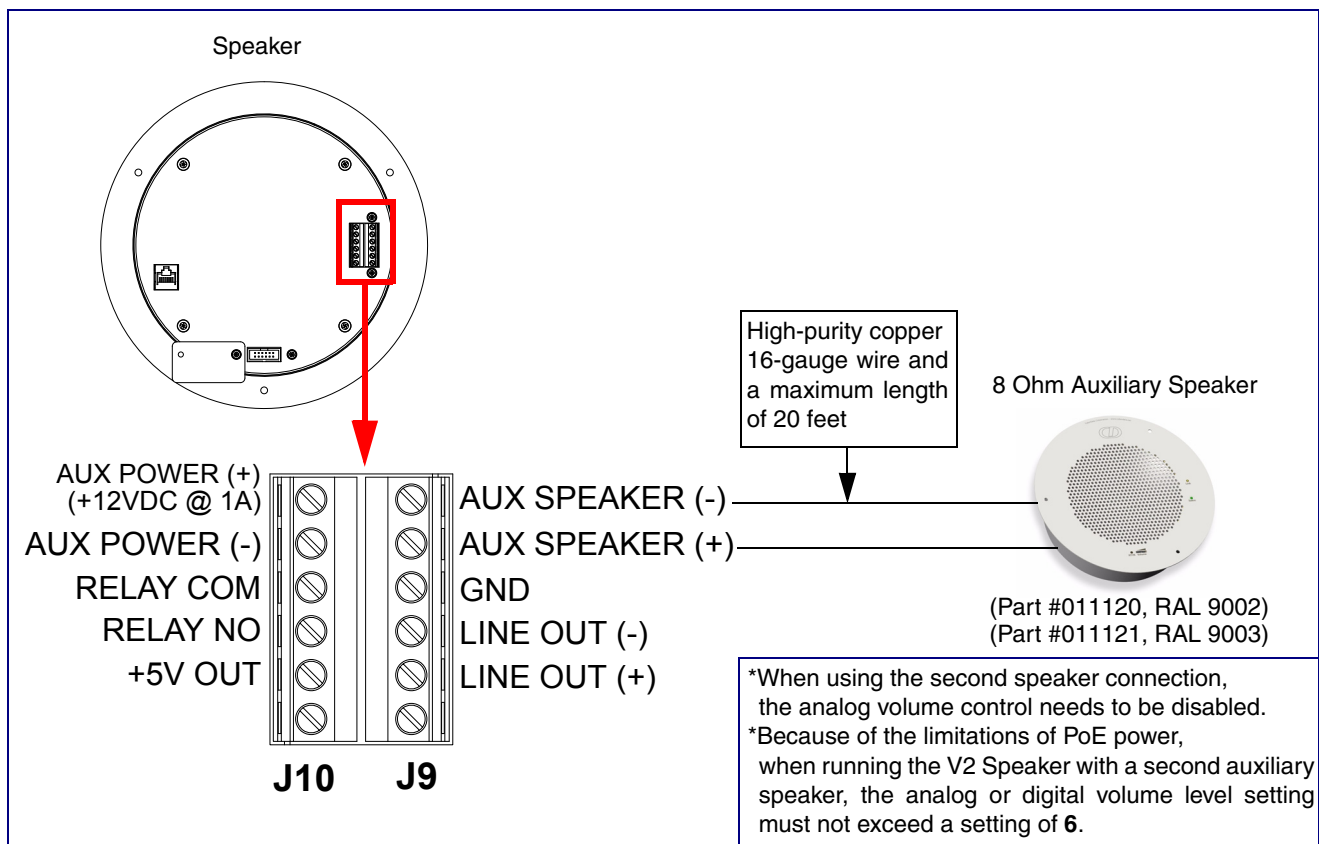
 <p>GENERAL ALERT</p>	<p>Caution</p> <p><i>Operational Note:</i> Because of the limitations of PoE power, when running the V2 Speaker with a second auxiliary speaker, the analog or digital volume level setting must not exceed a setting of 6.</p>
--	--

Figure 2-5. V2 Speaker with Auxiliary Speaker Connection




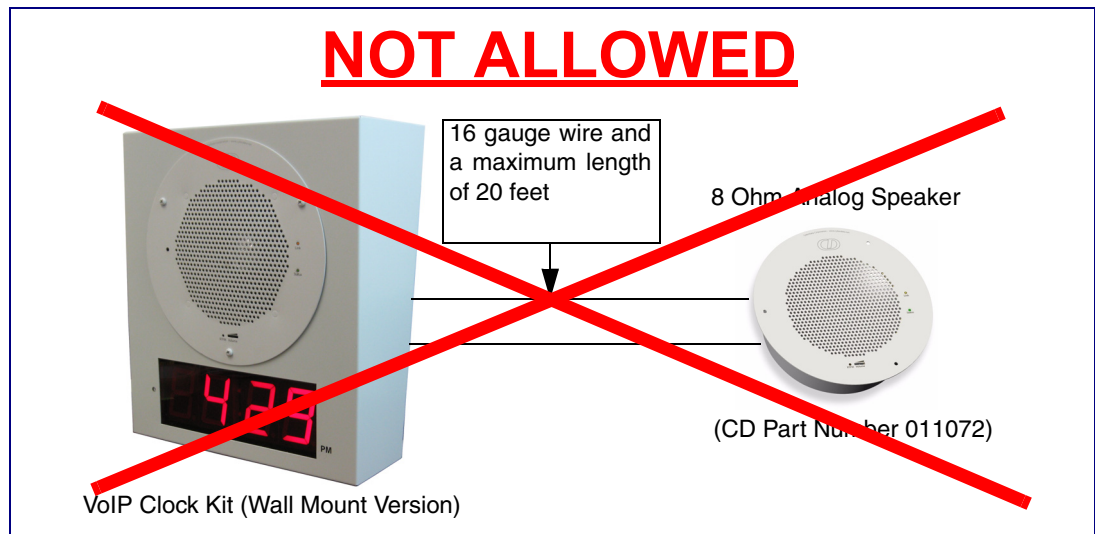
 <p>GENERAL ALERT</p>	<p>Caution</p> <p><i>Operational Note:</i> You must not use the V2 Speaker in combination with both a Clock Kit and an auxiliary speaker. The V2 Speaker may only be used separately with an auxiliary speaker or used separately with a Clock Kit. See Figure 2-6, "Clock Kit with Extra Speaker Connection is NOT ALLOWED."</p>
--	--


Figure 2-6. Clock Kit with Extra Speaker Connection is **NOT ALLOWED**.



2.2.2.3 V2 Speaker with Line Out

In [Figure 2-7](#), for areas that require more speaker volume, the V2 Speaker can be connected directly to an auxiliary amplifier to drive additional horns or speakers. This is done through the line-out connection.


Figure 2-7. V2 Speaker with Line Out

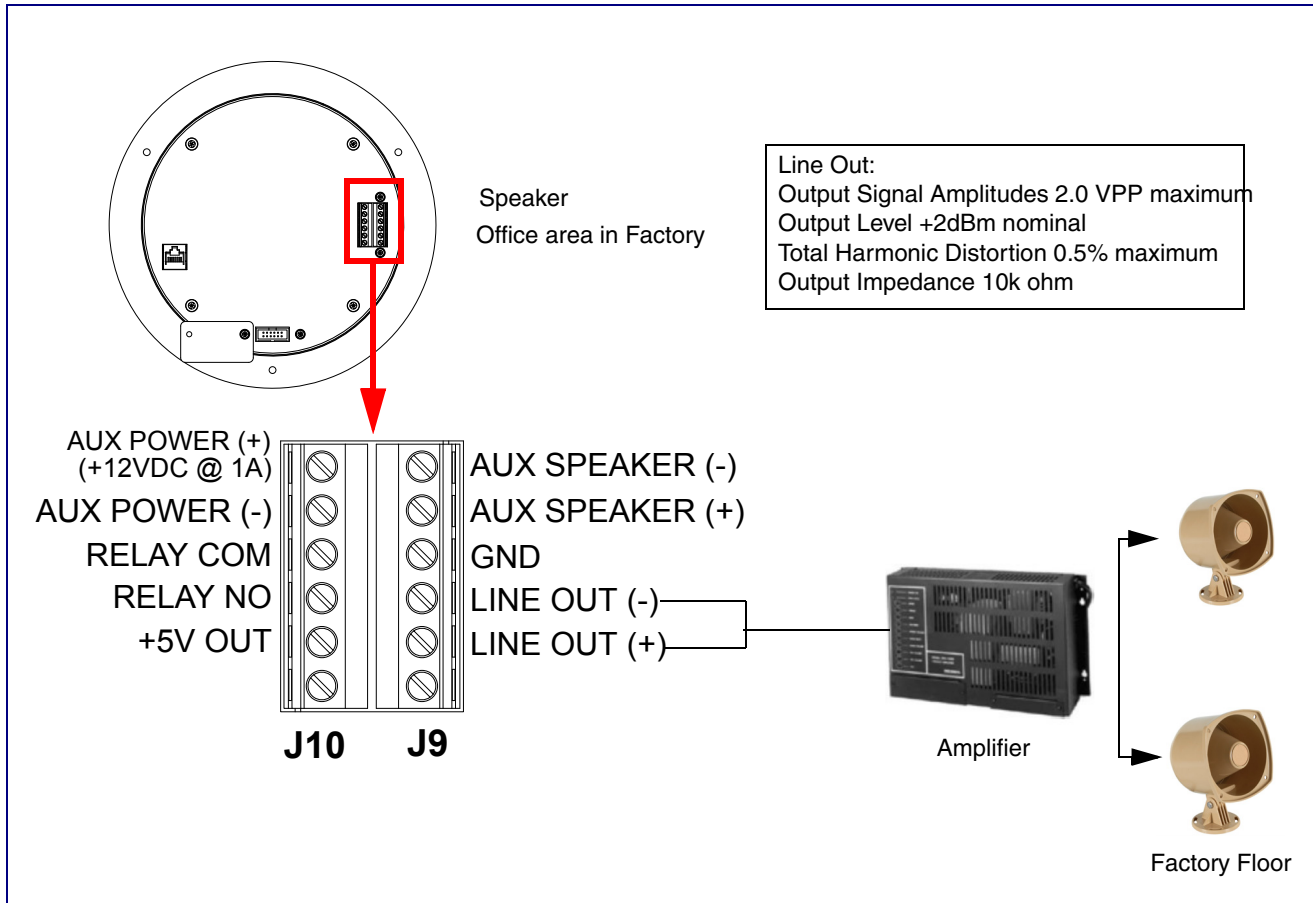

2.2.3 Confirm that the Speaker is Operational and Linked to the Network

After connecting the speaker to the 802.3af compliant Ethernet hub, the LEDs on the speaker face confirm that the speaker is operational and linked to the network.

Figure 2-8. Status and Activity LEDs

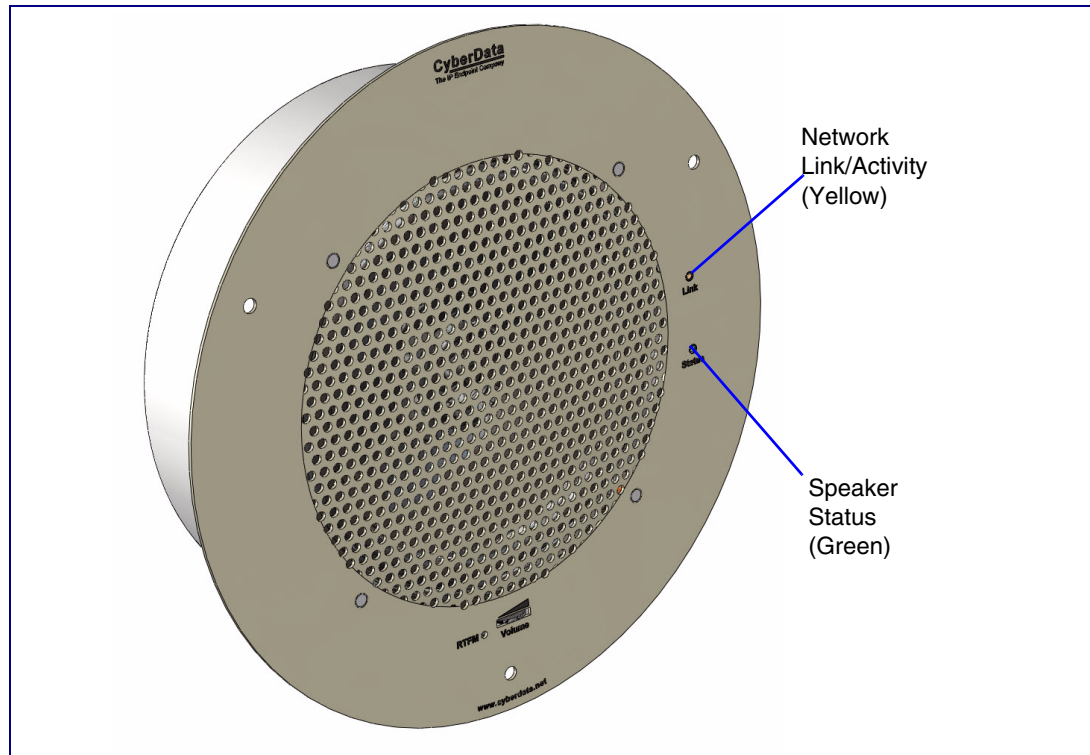

2.2.3.1 Status LED

After supplying power to the speaker:

1. The green power/status LED and the yellow network LED comes on immediately.
2. After about 23 seconds with a static IP address (or 27 seconds if the board is set to use DHCP), the green LED will blink twice to indicate that the board is fully booted. The speaker will beep at this time if the **Beep on Initialization** option is enabled on the **Device Configuration Page** (see [Section 2.3.4, "Configure the Device Parameters"](#)).

Note If the board is set to use DHCP and there is not a DHCP server available on the network, it will try 12 times with a three second delay between tries and eventually fall back to the programmed static IP address (by default 10.10.10.10). This process will take approximately 80 seconds.

Note The front power/status LED will remain solid on during operation.

2.2.3.2 Link LED

- The **Link** LED is illuminated when the network link to the speaker is established.
- The **Link** LED blinks to indicate network traffic.


2.2.4 Confirm the IP Address and Test the Audio

2.2.4.1 Reset Test Function Management (RTFM) Button

When the speaker is operational and linked to the network, use the Reset Test Function Management (RTFM) button (Figure 2-9) on the speaker face to announce and confirm the speaker's IP Address and test that the audio is working.

Note Using the RTFM button will lock the digital volume level to **4** and disable the analog volume control dial.

Figure 2-9. RTFM Button

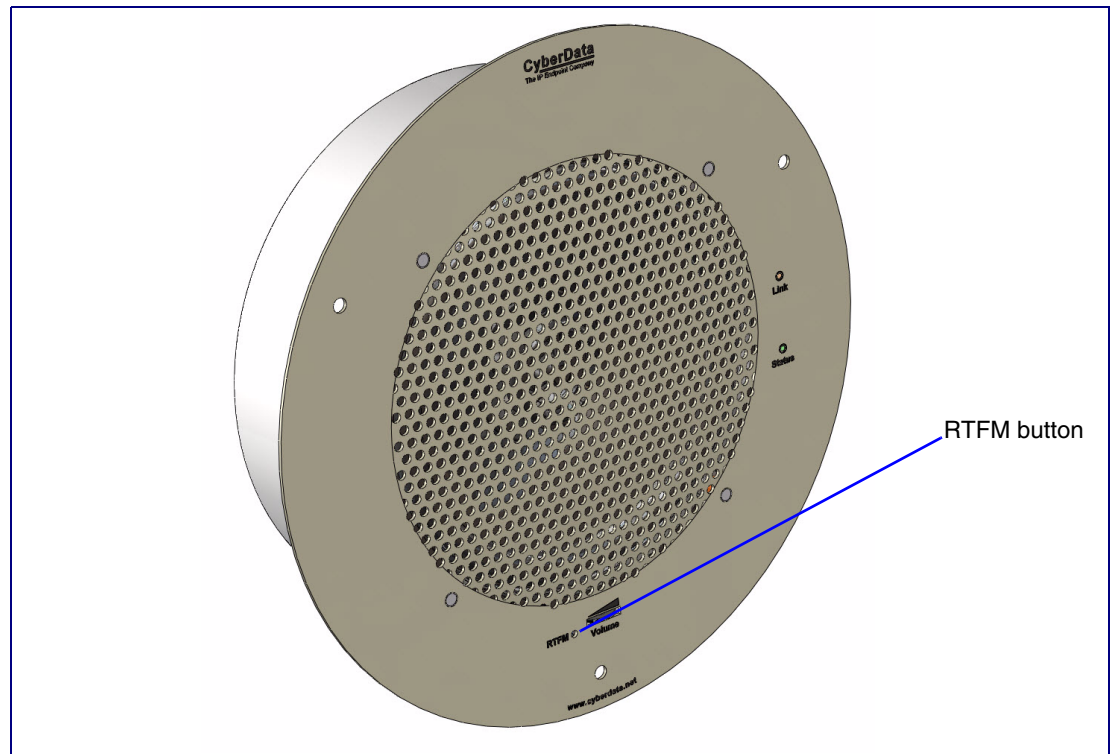

To announce a speaker's current IP address, press and release the RTFM button within a five second window.

Note The speaker will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).


Note Pressing and holding the RTFM button for longer than five seconds will restore the speaker to the factory default settings.

2.2.5 Adjust the Volume

To adjust the speaker volume, turn the **Volume** control dial (Figure 2-10) on the speaker face.

Note The V2 Speaker has two volume controls: **Internal** (web-based) and **External** (volume knob). The external volume control can be disabled from the web interface by selecting **Use Digital Volume Control** on the **Device Configuration Page** (see Section 2.3.4, "Configure the Device Parameters").

Figure 2-10. Volume Control

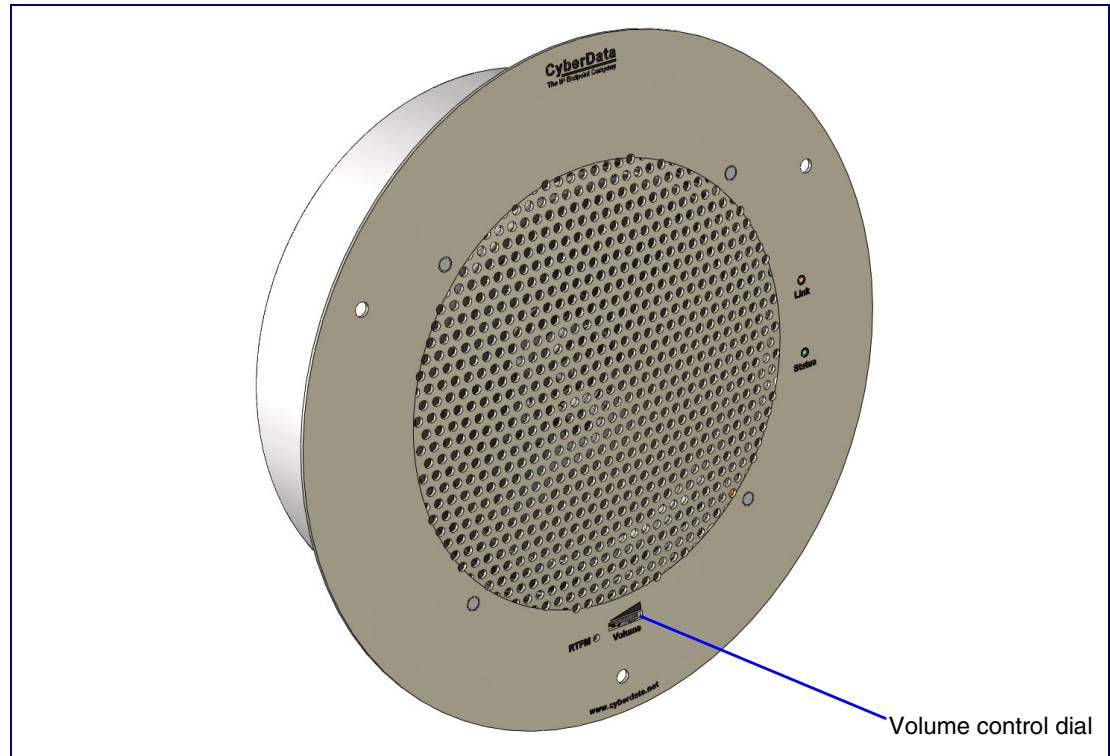


2.2.6 How to Set the Factory Default Settings

2.2.6.1 RTFM Button

When the speaker is operational and linked to the network, use the Reset Test Function Management (RTFM) button (Figure 2-11) on the speaker face to set the factory default settings.

Figure 2-11. RTFM Button

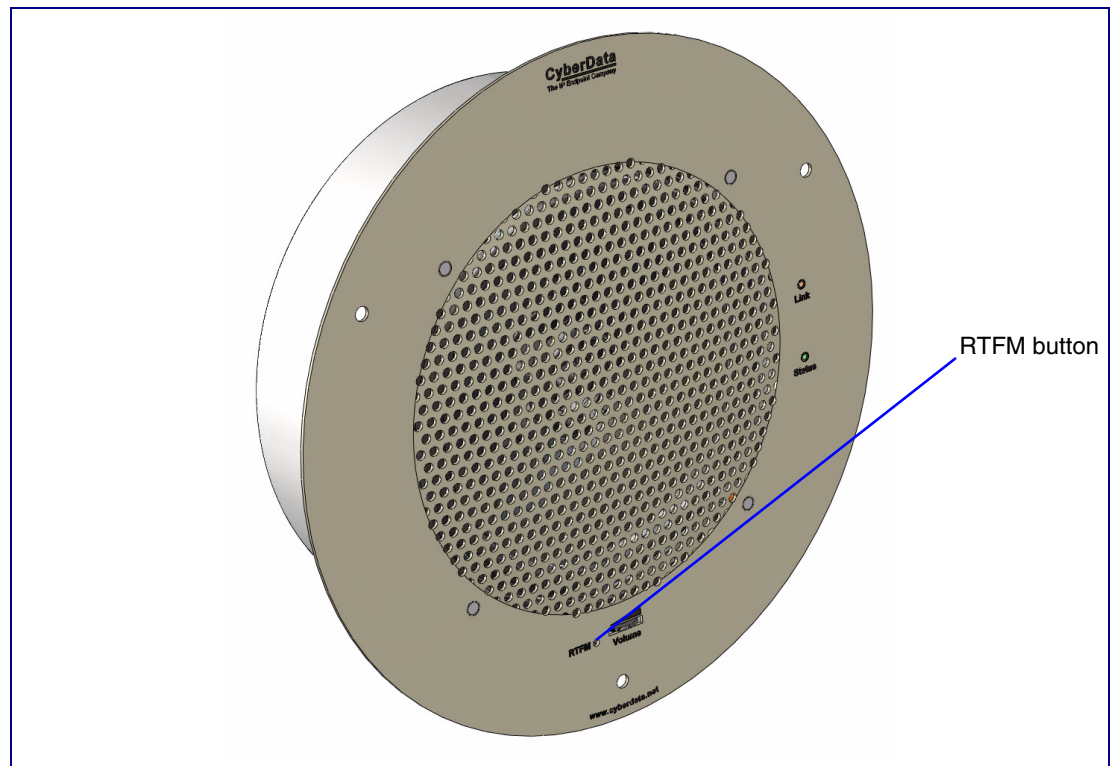

To set the factory default settings:

1. Press and hold the **RTFM** button for more than five seconds.
2. The speaker announces that it is restoring the factory default settings.

Note The speaker will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

2.3 Configure the Speaker Parameters

To configure the speaker online, use a standard web browser.

Configure each speaker and verify its operation *before* you mount it. When you are ready to mount a speaker, refer to [Appendix A, "Mounting the Speaker"](#) for instructions.

2.3.1 Default IP Settings

All speakers are initially configured with the default IP settings indicated in [Table 2-3](#):

Note When configuring more than one speaker, attach the speakers to the network and configure one at a time to avoid IP address conflicts

Table 2-3. Factory Network Default Settings—Default of Network












Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

2.3.2 V2 Speaker Web Page Navigation

Table 2-4 shows the navigation buttons that you will see on every V2 Speaker web page.

Table 2-4. V2 Paging Amplifier Web Page Navigation

Web Page Item	Description
	Link to the Home page.
	Link to the Device Configuration page.
	Link to the Networking page.
	Link to go to the SIP Configuration page.
	Link to go to the Nightringer page.
	Link to the Multicast Configuration page.
	Link to the Audio Configuration page.
	Link to the Clock Configuration page. ^a
	Link to the Event Configuration page.
	Link to the Autoprovisioning Configuration page.
	Link to the Update Firmware page.

a. This page is used only if the CyberData Clock Kit (part number 011023 [wall-mounted version] or 011024 [flush-mounted version]) is installed.

2.3.3 Log in to the Configuration Home Page

1. Open your browser to the V2 Speaker IP address.

Note If the network does not have access to a DHCP server, the device will default to an IP address of 10.10.10.10.

Note Make sure that the PC is on the same IP network as the V2 Speaker.

Note You may also download CyberData's VoIP Discovery Utility program which allows you to easily find and configure the default web address of the CyberData VoIP products.

CyberData's VoIP Discovery Utility program is available at the following website address:

http://www.cyberdata.net/support/voip/discovery_utility.html

Note The Speaker ships in DHCP mode. To get to the **Home** page, use the discovery utility to scan for the device on the network and open your browser from there.

2. When prompted, use the following default **Web Access Username** and **Web Access Password** to access the **Home Page** (Figure 2-12):

Web Access Username: **admin**

Web Access Password: **admin**

Figure 2-12. Home Page

The screenshot shows the 'CyberData Ceiling Speaker' web interface. The title bar is dark blue with the product name in white. Below the title bar is a light blue sidebar with a vertical list of configuration buttons: Home, Device Config, Networking, SIP Config, Nightringer, Multicast Config, Audio Config, Clock Config, Event Config, Autoprovisioning, and Update Firmware. The main content area is light blue and contains two sections: 'Device Settings' and 'Current Settings'. The 'Device Settings' section has input fields for 'Device Name' (pre-filled with 'CyberData Ceiling Speaker'), 'Change Username' (pre-filled with 'admin'), 'Change Password', and 'Re-enter Password'. The 'Current Settings' section displays various parameters: Serial Number (022000696), Mac Address (00:20:f7:00:44:87), Firmware Version (v6.3.0), IP Addressing (dhcp), IP Address (10.10.0.10), Subnet Mask (255.0.0.0), Default Gateway (10.0.0.1), DNS Server 1 (8.8.8.8), DNS Server 2, Speaker Volume (analog), SIP Mode is (enabled), Multicast Mode is (disabled), Clock is (installed), Event Reporting is (disabled), Nightringer is (disabled (NOT Registered with SIP Server)), Primary SIP Server (NOT Registered with SIP Server), Backup Server 1 (NOT Registered with SIP Server), and Backup Server 2 (NOT Registered with SIP Server). At the bottom of the main area, there is a note: '* You need to reboot for changes to take effect' and two buttons: 'Save' and 'Reboot'.

CyberData Ceiling Speaker

Device Settings

Device Name:

Change Username:

Change Password:

Re-enter Password:

Current Settings

Serial Number: 022000696
Mac Address: 00:20:f7:00:44:87
Firmware Version: v6.3.0

IP Addressing: dhcp
IP Address: 10.10.0.10
Subnet Mask: 255.0.0.0
Default Gateway: 10.0.0.1
DNS Server 1: 8.8.8.8
DNS Server 2:

Speaker Volume: analog



SIP Mode is: enabled
Multicast Mode is: disabled
Clock is: installed
Event Reporting is: disabled
Nightringer is: disabled (NOT Registered with SIP Server)

Primary SIP Server: (NOT Registered with SIP Server)
Backup Server 1: (NOT Registered with SIP Server)
Backup Server 2: (NOT Registered with SIP Server)

* You need to reboot for changes to take effect

- On the **Home Page**, review the setup details and navigation buttons described in [Table 2-5](#).

Table 2-5. Home Page Overview

Web Page Item	Description
Device Settings	
Device Name	Shows the device name (25 character limit).
Change Username	Type in this field to change the username (25 character limit).
Change Password	Type in this field to change the password (19 character limit).
Re-enter Password	Type the password again in this field to confirm the new password (19 character limit).
Current Settings	
Serial Number	Shows the device serial number.
Mac Address	Shows the device Mac address.
Firmware Version	Shows the current firmware version.
IP Addressing	Shows the current IP addressing setting (DHCP or Static).
IP Address	Shows the current IP address.
Subnet Mask	Shows the current subnet mask address.
Default Gateway	Shows the current default gateway address.
DNS Server 1	Shows the current DNS Server 1 address.
DNS Server 2	Shows the current DNS Server 2 address.
Speaker Volume	Shows the current speaker volume mode: Digital (web page) or Analog (volume knob).
SIP Mode is	Shows the current status of the SIP Mode.
Multicast Mode is	Shows the current status of the Multicast Mode.
Clock is	Shows the current status of the Clock.
Event Reporting is	Shows the current status of the Event Reporting.
Nightringer is	Shows the current status of the Nightringer.
Primary SIP Server	Shows the current status of the Primary SIP Server.
Backup Server 1	Shows the current status of Backup Server 1.
Backup Server 2	Shows the current status of Backup Server 2.
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Reboot button to reboot the system.

2.3.4 Configure the Device Parameters

1. Click the **Device Configuration** button to open the **Device Configuration** page.
See [Figure 2-13](#).

Figure 2-13. Device Configuration Page

CyberData Ceiling Speaker

Device Configuration

Volume Settings

Use Digital Volume Control: ☐

Speaker Volume:

Volume Boost: ☐

Relay Settings

Activate Relay with DTMF code: ☒

DTMF Activation Code:

DTMF Activation Duration (in seconds):

Activate Relay During Ring: ☐

Activate Relay During Night Ring: ☐

Activate Relay While Call Active: ☐

Miscellaneous Settings





Beep on Initialization: ☐

Auto-Answer Incoming Calls: ☒

* You need to reboot for changes to take effect

- On the **Device Configuration** page, you may enter values for the parameters indicated in [Table 2-6](#).

Table 2-6. Device Configuration Parameters

Web Page Item	Description
Volume Settings	
Use Digital Volume Control	When selected, you can bypass the analog volume knob on the front of the speaker. The volume level will only be determined by the digital Speaker Volume setting on the Device Configuration page.
Speaker Volume	Type the desired speaker volume level into this field (1 character limit).
Volume Boost	When Volume Boost is enabled, the device will play at a higher volume at the risk of having the audio clip at very high levels.
Relay Settings	
Activate Relay with DTMF Code	When selected, the relay can be activated with a DTMF code.
DTMF Activation Code	Type the desired DTMF activation code (25 character limit).
DTMF Activation Duration (in seconds)	Type the desired DTMF activation duration (in seconds) (2 character limit [activation times now go up to 99 seconds]). NOTE: A DTMF activation duration of 0 will toggle the relay indefinitely or until the activation code is sent again
Activate Relay During Ring	When selected, the relay will be activated for as long as the call is active. NOTE: When the phone is set to Auto Answer , it will not ring and this option does nothing.
Activate Relay During Night Ring	Check this box to activate the relay for as long as a Night Ring tone is ringing.
Activate Relay While Call Active	When selected, the relay will be activated for as long as the call is active.
Miscellaneous Settings	
Beep on Initialization	When selected, you will hear a beep when the speaker initializes.
Auto-Answer Incoming Calls	When selected, the device will automatically answer incoming calls. When Auto Answer is Off, the device will play a ringtone through the speaker.
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Test Audio button to do an audio test. When the Test Audio button is pressed, you will hear a voice message for testing the device audio quality and volume.
	Click on the Test Relay button to do a relay test.
	Click on the Reboot button to reboot the system.

- After changing the parameters, click the **Save** button.

2.3.5 Configure the Network Parameters

1. Click the **Networking** button to open the **Network Configuration** page (Figure 2-14).

Figure 2-14. Network Configuration Page

CyberData Ceiling Speaker

Network Configuration

Home
Device Config
Networking
SIP Config
Nightringer
Multicast Config
Audio Config
Clock Config
Event Config
Autoprovisioning
Update Firmware

Stored Network Settings

IP Addressing: ☐ Static ☒ DHCP

IP Address: 10.10.10.10

Subnet Mask: 255.0.0.0

Default Gateway: 10.0.0.1

DNS Server 1: 10.0.0.1

DNS Server 2: 10.0.0.1

Current Network Settings

IP Address: 10.10.0.10

Subnet Mask: 255.0.0.0

Default Gateway: 10.0.0.1

DNS Server 1: 8.8.8.8



DNS Server 2:

* You need to reboot for changes to take effect

Save Reboot

2. On the **Network Configuration** page, enter values for the parameters indicated in [Table 2-7](#).

Table 2-7. Network Configuration Parameters

Web Page Item	Description
Stored Network Settings	Shows the settings stored in non-volatile memory.
IP Addressing*	Select either DHCP IP Addressing or Static IP Addressing by marking the appropriate radio button. If you select Static , configure the remaining parameters indicated in Table 2-7 . If you select DHCP , go to Step 3 .
IP Address*	Enter the Static IP address.
Subnet Mask	Enter the Subnet Mask address.
Default Gateway	Enter the Default Gateway address.
DNS Server 1*	Enter the DNS Server 1 address.
DNS Server 2*	Enter the DNS Server 2 address.
Current Network Settings	Shows the current network settings.
IP Address	Shows the current Static IP address.
Subnet Mask	Shows the current Subnet Mask address.
Default Gateway	Shows the current Default Gateway address.
DNS Server 1	Shows the current DNS Server 1 address.
DNS Server 2	Shows the current DNS Server 2 address.
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Reboot button to reboot the system.

3. After changing the parameters, click **Save Settings**. This updates the changed parameters and reboots the V2 Speaker if appropriate.
4. Connect the V2 Speaker to the target network.
5. From a system on the same network as the V2 Speaker, open a browser with the new IP address of the V2 Speaker.

2.3.6 Configure the SIP Parameters

1. Click **SIP Config** to open the **SIP Configuration** page (Figure 2-15).

Note For specific server configurations, go to the following website address:

<http://www.cyberdata.net/support/server/index.html>

Figure 2-15. SIP Configuration Page

CyberData Ceiling Speaker

SIP Configuration

Enable SIP operation: ☒

SIP Settings

SIP Server: 10.0.0.253

Backup SIP Server 1:

Backup SIP Server 2:

Remote SIP Port: 5060

Local SIP Port: 5060

Outbound Proxy:

Outbound Proxy Port: 0

SIP User ID: 199

Authenticate ID: 199

Authenticate Password: ext199

Register with a SIP Server: ☒

Re-registration Interval (in seconds): 360

Unregister on Reboot: ☐

Buffer SIP Calls: ☐

Beep on page: ☐

Call disconnection

Terminate call after delay (in seconds): 0

Note: A value of 0 will disable this function

RTP Settings

RTP Port (even): 10500

* You need to reboot for changes to take effect



Save Reboot

2. On the **SIP Configuration** page, you may enter values for the parameters indicated in [Table 2-8](#).

Table 2-8. SIP Configuration Parameters

Web Page Item	Description
Enable SIP Operation	Enables or disables SIP operation.
SIP Settings	
SIP Server	Use this field to set the address (in dotted decimal notation or as a canonical name) of the SIP registrar. This field can accept canonical names of up to 255 characters in length.
Backup SIP Server 1	<p>When the primary SIP Server goes offline and the device fails to register after the normal re-registration interval, the controller will fall back to using Backup SIP Server 1.</p> <p>If Backup SIP Server 1 fails, the device will use Backup SIP Server 2.</p> <p>If a higher priority SIP Server comes back online, the device will switch back to this server.</p> <p>You can leave the Backup SIP Server 1 and Backup SIP Server 2 fields blank.</p>
Backup SIP Server 2	
SIP Server	
Remote SIP Port*	Type the Remote SIP Port number (default 5060) (8 character limit).
Local SIP Port*	Type the Local SIP Port number (default 5060) (8 character limit).
Outbound Proxy	Type the Outbound Proxy as either a numeric IP address in dotted decimal notation or the fully qualified host name (255 character limit [FQDN]).
Outbound Proxy Port	Type the Outbound Proxy Port number (8 character limit).
SIP User ID*	Type the SIP User ID (up to 64 alphanumeric characters).
Authenticate ID*	Type the Authenticate ID (up to 64 alphanumeric characters).
Authenticate Password*	Type the Authenticate Password (up to 64 alphanumeric characters).
Register with a SIP Server*	Enable or disable SIP Registration.
Re-registration Interval (in seconds)*	Type the SIP Registration lease time in minutes (default is 60 minutes) (8 character limit). Re-registration Interval (in seconds)*
Unregister on Reboot*	When selected, on boot, the speaker will first register with a SIP server with a expiration delay of 0 seconds. This has the effect of unregistering any current devices on this extension.
Buffer SIP Calls	When this is enabled, SIP calls to the speaker will be stored in memory and will play when either the call is terminated or the buffer is full. The receive buffer is 2MB in size and this is equal to about four minutes of ulaw encoded audio.

Table 2-8. SIP Configuration Parameters (continued)

Web Page Item	Description
Beep on Page	When selected, the device will play a beep before a page is sent on SIP pages (works for both buffered and live pages).
Call Disconnection	
Terminate call after delay (in seconds)	Type the desired number of seconds that you want to transpire before a call is terminated. Note: A value of 0 will disable this function.
RTP Settings	
RTP Port (even)	Specify the port number used for the RTP stream after establishing a SIP call. This port number has to be an even number and defaults to 10500.
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Reboot button to reboot the system.

3. After changing the parameters, click on the **Save** button.

2.3.7 Configure the Night Ringer Parameters

1. Click on the **Nightringer** button to open the **Nightringer Configuration** page. See [Figure 2-16](#).

Figure 2-16. Nightringer Configuration Setup

CyberData Ceiling Speaker

Nightringer Configuration

Enable Nightringer: ☐ (NOT Registered with SIP Server)

Nightringer Settings

SIP Server: 10.0.0.253

Remote SIP Port: 5060

Local SIP Port: 5061

User ID: 207

Authenticate ID: 207

Authenticate Password: ext207



Re-registration Interval (in seconds): 360

* You need to reboot for changes to take effect

Save Reboot

2. On the **Nightringer Configuration** page, enter values for the parameters indicated in [Table 2-9](#).

Table 2-9. Nightringer Configuration Parameters

Web Page Item	Description
Enable Nightringer	When the nightringer is enabled, the ceiling speaker will attempt to register a second extension with the SIP server. Any calls made to this extension will play a ringtone.
Nightringer Settings	
SIP Server	Type the SIP server represented as either a numeric IP address in dotted decimal notation.
Remote SIP Port	Type the Remote SIP Port number (default 5060) (8 character limit).
Local SIP Port	Type the Local SIP Port number (default 5060) (8 character limit). Note: This value cannot be the same as the Local SIP Port* found on the SIP Configuration Page .
User ID	Type the User ID (up to 64 alphanumeric characters).
Authenticate ID	Type the Authenticate ID (up to 64 alphanumeric characters).
Authenticate Password	Type the Authenticate Password (up to 64 alphanumeric characters).
Re-registration Interval (in seconds)*	Type the SIP Registration lease time in minutes (default is 60 minutes) (8 character limit). Re-registration Interval (in seconds)*
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Reboot button to reboot the system.

3. After changing the parameters, click on the **Save** button.

2.3.8 Configure the Multicast Parameters

1. Click on the **Multicast Configuration** button to open the **Multicast Configuration** page. See [Figure 2-17](#).

Figure 2-17. Multicast Configuration Setup

CyberData Ceiling Speaker

Multicast Configuration

Enable Multicast operation: ☐

Device Settings



priority	Address	port	Multicast Group Name	Buffered
9	239.168.3.10	11000	Emergency	<input type="checkbox"/>
8	239.168.3.9	10000	MG8	<input type="checkbox"/>
7	239.168.3.8	9000	MG7	<input type="checkbox"/>
6	239.168.3.7	8000	MG6	<input type="checkbox"/>
5	239.168.3.6	7000	MG5	<input type="checkbox"/>
SIP calls are considered priority 4.5				
4	239.168.3.5	6000	MG4	<input type="checkbox"/>
3	239.168.3.4	5000	MG3	<input type="checkbox"/>
2	239.168.3.3	4000	MG2	<input type="checkbox"/>
1	239.168.3.2	3000	MG1	<input type="checkbox"/>
0	239.168.3.1	2000	Background Music	<input type="checkbox"/>

Port range can be from 2000-65535
Ports must be odd numbers
Priority 9 is the highest and 0 is the lowest
A higher priority audio stream will always supercede a lower one
Priority 9 streams will play at maximum volume

* You need to reboot for changes to take effect

2. On the **Multicast Configuration** page, enter values for the parameters indicated in [Table 2-10](#).

Table 2-10. Multicast Configuration Parameters

Web Page Item	Description
Enable Multicast Operation	Enables or disables multicast operation.
Device Settings	
Priority	Indicates the priority for the multicast group. Priority 9 is the highest (emergency streams). 0 is the lowest (background music). See Section 2.3.8.1, "Assigning Priority" for more details.
Address	Enter the multicast IP Address for this multicast group (15 character limit).
Port (range can be from 2000 to 65535)	Enter the port number for this multicast group (5 character limit). Note: The multicast ports have to be even values. The webpage will enforce this restriction.
Multicast Group Name	Assign a descriptive name for this multicast group (25 character limit).
Buffered	When buffering is enabled for a multicast stream, it will store any audio received on this socket to memory and play it back when the stream is stopped or the buffer is full.
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Reboot button to reboot the system.

3. After changing the parameters, click on the **Save** button.

2.3.8.1 Assigning Priority

When playing multicast streams, audio on different streams will preempt each other according to their priority in the list. An audio stream with a higher priority will interrupt a stream with a lower priority.

If both SIP and Multicast is enabled, SIP audio streams are considered priority **4.5**. SIP audio will interrupt multicast streams with priority **0** through **4** and will be interrupted by multicast streams with priority **5** through **9**.

During priority **9** multicast streams, the analog volume control is bypassed and the volume level is set to maximum.

Note SIP calls, buffered SIP calls, multicast streams, buffered multicast streams, ring tones, ringback tones, and nightring tones are all prioritized.

Ringtones and
Nightringtones

Ringtones all play at the same priority level. This means that it is possible to have a nightring tone and a normal ringtone playing at the same time.

The maximum ringtone duration is 2 MB or about four minutes of ulaw audio.

Lengthy Pages	<p>Concerning how lengthy pages are handled (where someone puts the phone down for 15 minutes), after the 2MB limit is reached, further data will be thrown away while the audio file is played back. When the file is done playing, it will stop throwing away input and begin buffering data for another four minutes.</p> <p>Therefore, with the buffered mode enabled on a stream playing background music, you will hear the following sequence of events:</p> <ol style="list-style-type: none">1. Four minutes of silence.2. Music from 0:00 through 4:00.3. Four minutes of silence.4. Music from 8:00 through 12:00 and so on.
Buffered Audio	<p>When the speaker is playing back buffered audio and this buffered audio is interrupted by a higher priority stream, once the higher priority streams is finished, the speaker will restart the lower priority stream from the beginning.</p>

2.3.9 Configure the Audio Parameters

Click the **Audio Config** button to open the **Audio Configuration** page. See [Figure 2-18](#) and [Figure 2-19](#). The **Audio Configuration** page is used to add custom audio to the board. User uploaded audio will take precedence over the audio files shipped with the Intercom.

Figure 2-18. Audio Configuration Page

CyberData Ceiling Speaker

Audio Configuration

Available Space = 14.86MB

Audio Files

0: Currently set to default
New File: Browse...
Play Delete Save

1: Currently set to default
New File: Browse...
Play Delete Save

2: Currently set to default
New File: Browse...
Play Delete Save

3: Currently set to default
New File: Browse...
Play Delete Save

4: Currently set to default
New File: Browse...
Play Delete Save

5: Currently set to default
New File: Browse...
Play Delete Save

6: Currently set to default
New File: Browse...
Play Delete Save

7: Currently set to default
New File: Browse...
Play Delete Save

8: Currently set to default
New File: Browse...
Play Delete Save

Figure 2-19. Audio Configuration Page (continued)

The screenshot displays the 'Audio Configuration Page (continued)' with a light blue background. It contains ten sections, each for a different audio file. Each section has a label, a status indicator, a 'New File:' text input field, a 'Browse...' button, and three buttons: 'Play', 'Delete', and 'Save'.

- 9:** Currently set to default
New File: Browse...
Play Delete Save
- Dot:** Currently set to default
New File: Browse...
Play Delete Save
- Audio test:** Currently set to default
New File: Browse...
Play Delete Save
- Page tone:** Currently set to default
New File: Browse...
Play Delete Save
- Your IP Address is:** Currently set to default
New File: Browse...
Play Delete Save
- Rebooting:** Currently set to default
New File: Browse...
Play Delete Save
- Restoring Default:** Currently set to default
New File: Browse...
Play Delete Save
- Ringback tone:** Currently set to default
New File: Browse...
Play Delete Save
- Ring tone:** Currently set to default
New File: Browse...
Play Delete Save
- Night Ring:** Currently set to default
New File: Browse...
Play Delete Save

On the **Audio Configuration** page, enter values for the parameters indicated in [Table 2-11](#).

Note Each entry on the **Audio Configuration** page replaces one of the stock audio files on the board. When the input box displays the word **default**, the V2 Speaker is using the stock audio file. If that file is replaced with a user file, it will display the uploaded filename.

Table 2-11. Audio Configuration Parameters





Web Page Item	Description
Audio Files	
0-9	The name of the audio configuration option is the same as the spoken audio that plays on the board (24 character limit). '0' corresponds to the spoken word "zero." '1' corresponds to the spoken word "one." '2' corresponds to the spoken word "two." '3' corresponds to the spoken word "three." '4' corresponds to the spoken word "four." '5' corresponds to the spoken word "five." '6' corresponds to the spoken word "six." '7' corresponds to the spoken word "seven." '8' corresponds to the spoken word "eight." '9' corresponds to the spoken word "nine."
Dot	Corresponds to the spoken word "dot." (24 character limit)
Audiotest	Corresponds to the message "This is the CyberData IP speaker test message..." (24 character limit)
Pagetone	Corresponds to a simple tone used for beep on initialization and beep on page (24 character limit).
Your IP Address is	Corresponds to the message "Your IP address is..." (24 character limit).
Rebooting	Corresponds to the spoken word "Rebooting" (24 character limit).
Restoring default	Corresponds to the message "Restoring default" (24 character limit).
Ringback Tone	This is the ringback tone that plays when calling a remote extension (24 character limit).
Ring Tone	This is the tone that plays when set to ring when receiving a call (24 character limit).
Night Ring	Specifies the ringtone for nightring. By default this parameter uses the same audio file that is selected for the Ring Tone parameter.
	The Browse button will allow you to navigate to and select an audio file.
	The Play button will play that audio file.
	The Delete button will delete any user uploaded audio and restore the stock audio file.

Table 2-11. Audio Configuration Parameters (continued)

Web Page Item	Description
	The Save button will download a new user audio file to the board once you've selected the file by using the Browse button. The Save button will delete any pre-existing user-uploaded audio files.

2.3.9.1 User-created Audio Files

User created audio files should be saved in the following format:

RIFF (little-endian) data, WAVE audio, Microsoft PCM, 16 bit, mono 8000 Hz

You can use the free utility *Audacity* to convert audio files into this format. See [Figure 2-20](#) through [Figure 2-22](#).

Figure 2-20. Audacity 1


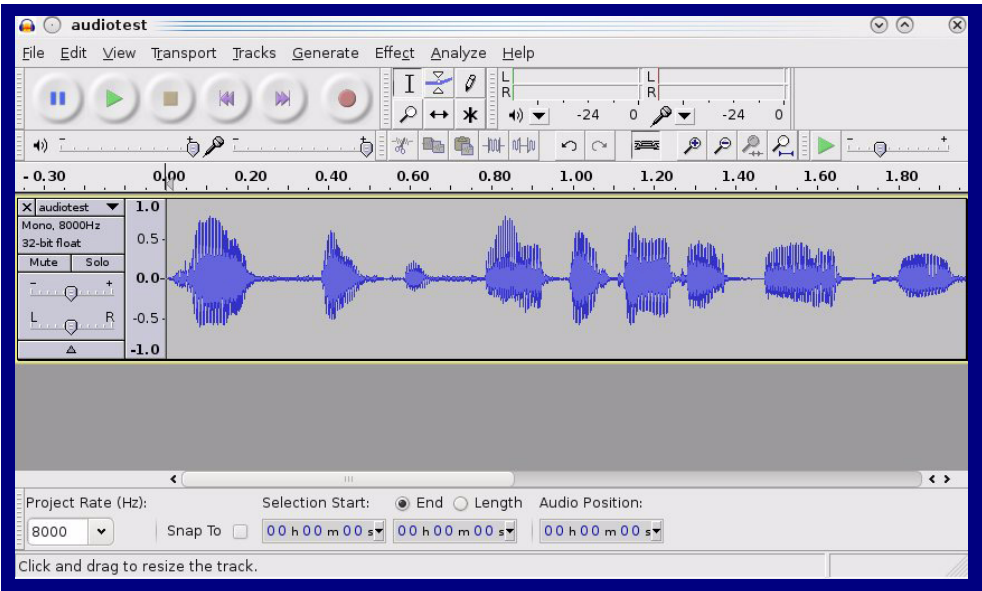



Figure 2-21. Audacity 2

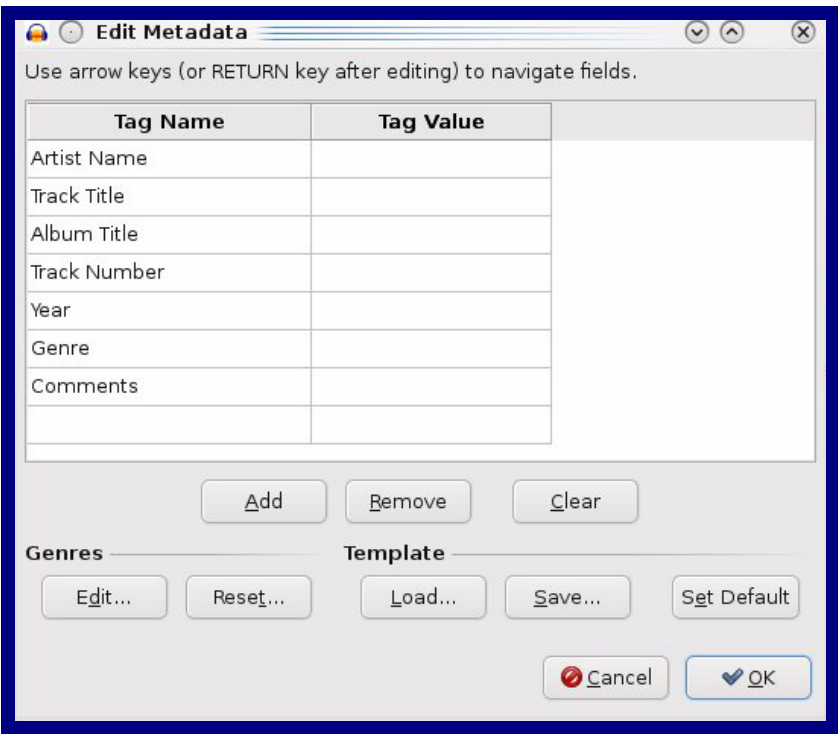

When you export an audio file with Audacity, save the output as:

- **WAV (Microsoft) signed 16 bit PCM.**

Figure 2-22. WAV (Microsoft) signed 16 bit PCM

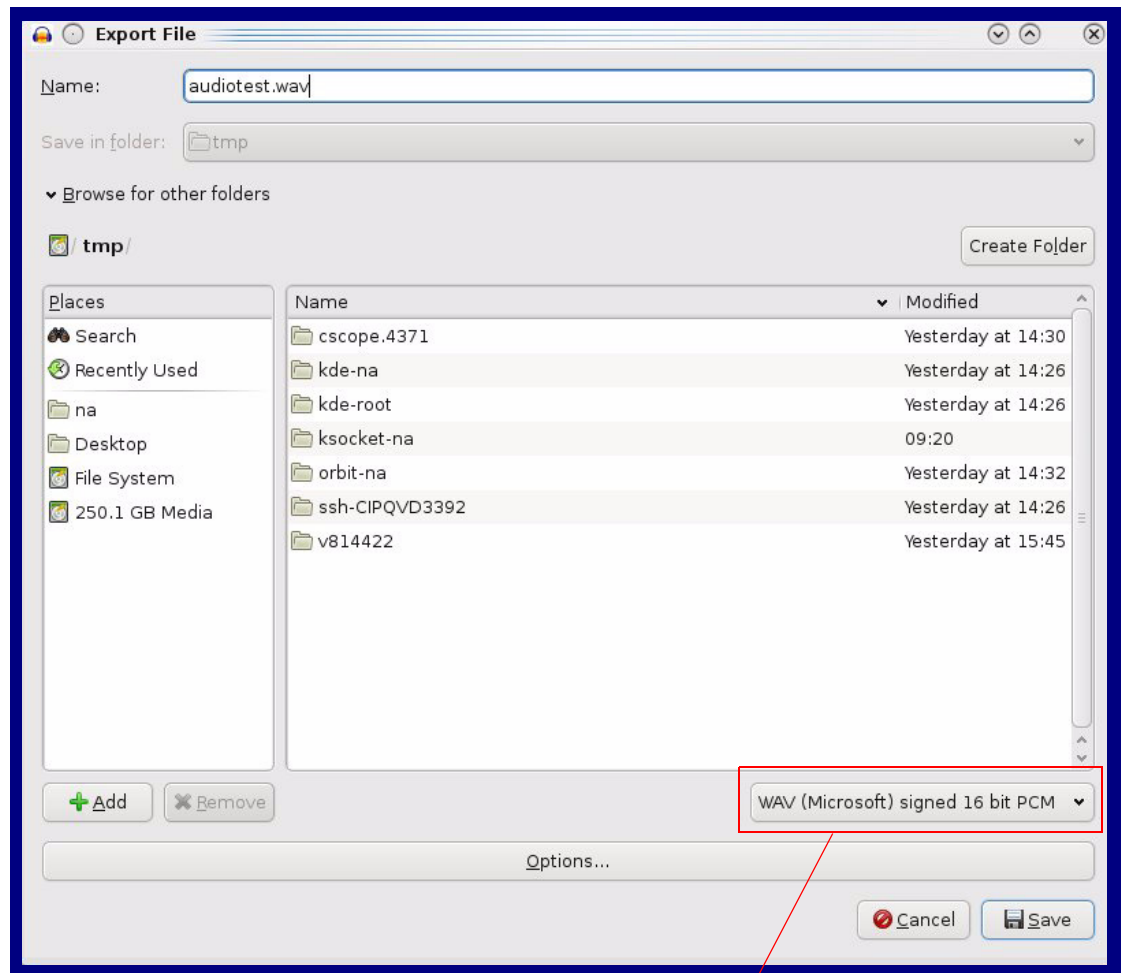

WAV (Microsoft) signed 16 bit PCM

2.3.10 Configure the NTP Server and Clock Parameters

Click the **Clock Config** button to open the **NTP Server and Clock Configuration** page.
See [Figure 2-23](#).



Note The **Clock Configuration** page is always visible. If a clock is not installed, the **Clock Status** will indicate **NOT INSTALLED**. Otherwise it shows **INSTALLED**.

Figure 2-23. NTP Server and Clock Configuration Page

The screenshot displays the 'CyberData Ceiling Speaker' configuration interface. On the left is a sidebar with navigation buttons: Home, Device Config, Networking, SIP Config, Nightringer, Multicast Config, Audio Config, Clock Config (highlighted), Event Config, Autoprovisioning, and Update Firmware. The main content area is titled 'NTP Server and Clock Configuration'. It shows 'Clock Status: INSTALLED' and 'Clock Firmware: Ver=1.33'. Under 'NTP Settings', there are text boxes for 'NTP Server' (north-america.pool.ntp.org) and 'Posix Timezone String (see manual):' (PST8PDT,M3.2.0/2:00:00,M11.1.0/2:00:01). Below these are checkboxes for 'Set Time with external NTP server on boot:' and 'Periodically update with time server:', and a text box for 'Time update period (in hours):' set to 24. A 'Set time from NTP Server' button is present. The 'Clock Settings' section includes 'Clock Brightness (0-14):', 'Use Ambient Light Sensor:' (checked), 'Clock Colon Type:' (radio buttons for Off, On, Blink, with On selected), and 'Clock Time Format:' (radio buttons for 12 Hour, 24 Hour, with 12 Hour selected). The 'Current Time' section shows 'Current Time in 24 hour format (HHMMSS):' as 084837, with a 'Set Clock' button. At the bottom, a note states '* You need to reboot for changes to take effect', followed by 'Save' and 'Reboot' buttons.

Table 2-12 shows the web page items on the **NTP Server and Clock Configuration** page.

Table 2-12. NTP Server and Clock Configuration

Web Page Item	Description
Clock Status	Displays the current clock status.
Clock Firmware	Displays the current clock firmware version.
NTP Settings	
NTP Server	Allows you to select the NTP server (64 character limit).
Posix Time Zone String	See Section 2.3.10.1, "Time Zone Strings" (43 character limit).
Set Time with External NTP Server on boot	When selected, the time is set with an external NTP server when the speaker restarts.
Periodically update with time server	When selected, the time is periodically updated with a time server.
Time update period (in hours)	Allows you to select the time updated period (in hours) (4 character limit).
Set time from NTP Server	Allows you to set the time from the NTP server.
Clock Settings	
Clock Brightness (0-14)	Allows you to select the clock brightness level (0-14) (2 character limit)
Use Ambient Light Sensor	Enables or disables the ambient light sensor.
Clock Colon Type	Allows you to select the clock colon type (Off , On , or Blink)
Clock Time Format	Allows you to select the clock format (12 or 24 hour)
Current Time	
Current Time in 24 hour format (HHMMSS)	Allows you to input the current time in the 24 hour format. (6 character limit)
Set Clock	Click on this button to set the clock after entering the current time.
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Reboot button to reboot the system.

2.3.10.1 Time Zone Strings

The posix time zone string tells the internal date and time utilities how to handle daylight savings time for different time zones. [Table 2-13](#) shows some common strings.

Table 2-13. Common Time Zone Strings

Time Zone	Time Zone String
US Pacific time	PST8PDT,M3.2.0/2:00:00,M11.1.0/2:00:00
US Mountain time	MST7MDT,M3.2.0/2:00:00,M11.1.0/2:00:00
US Eastern Time	EST5EDT,M3.2.0/2:00:00,M11.1.0/2:00:00
Phoenix Arizona ^a	MST7
US Central Time	CST6DST,M3.2.0/2:00:00,M11.1.0/2:00:00

a. Phoenix, Arizona does not use daylight savings time.

[Table 2-14](#) shows a breakdown of the parts that constitute the following time zone string:

- ***CST6DST,M3.2.0/2:00:00,M11.1.0/2:00:00***

Table 2-14. Time Zone String Parts

Time Zone String Part	Meaning
CST6CDT	The time zone offset from GMT and three character identifiers for the time zone.
CST	Central Standard Time
6	The (hour) offset from GMT/UTC
CDT	Central Daylight Time
M3.2.0/2:00:00	The date and time when daylight savings begins.
M3	The third month (March)
.2	The 2nd occurrence of the day (next item) in the month
.0	Sunday
/2:00:00	Time of day to change
M11.1.0/2:00:00	The date and time when daylight savings ends.
M11	The eleventh month (November)
.1	The 1st occurrence of the day (next item) in the month
.0	Sunday
/2:00:00	Time of day to change

Time Zone String
Examples

Table 2-15 has some more examples of time zone strings.

Table 2-15. Time Zone String Examples


Time Zone	Time Zone String
Tokyo ^a	IST-9
Berlin ^b	CET-1MET,M3.5.0/1:00,M10.5.0/1:00

a. Tokyo does not use daylight savings time.

b. For Berlin, daylight savings time starts on the last Sunday in March at 01:00 UTC, and ends on the last Sunday in October at 01:00 UTC, and is one hour ahead of UTC.

Time Zone Identifier A user-definable three or four character time zone identifier (such as PST, EDT, IST, MUT, etc) is needed at the beginning of the posix time zone string to properly set the time. However, the specific letters or numbers used for the time zone identifier are not important and can be any three or four letter or number combination that is chosen by the user. However, the time zone identifier cannot be blank.

Figure 2-24. Three or Four Character Time Zone Identifier

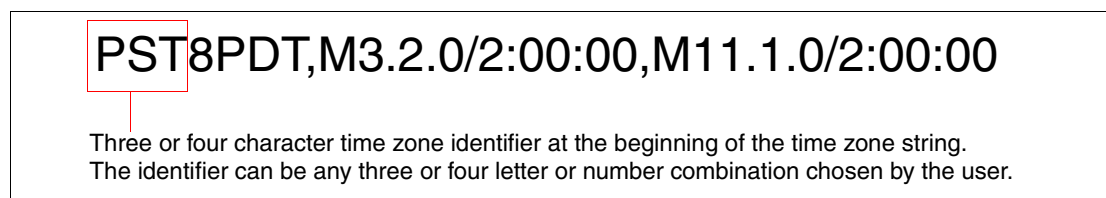

You can also use the following URL when a certain time zone applies daylight savings time:

<http://www.timeanddate.com/time/dst/2011.html>

World GMT Table

Table 2-16 has information about the GMT time in various time zones.

Table 2-16. World GMT Table

Time Zone	City or Area Zone Crosses
GMT-12	Eniwetok
GMT-11	Samoa
GMT-10	Hawaii
GMT-9	Alaska
GMT-8	PST, Pacific US
GMT-7	MST, Mountain US
GMT-6	CST, Central US
GMT-5	EST, Eastern US
GMT-4	Atlantic, Canada
GMT-3	Brazilia, Buenos Aries
GMT-2	Mid-Atlantic
GMT-1	Cape Verdes

Table 2-16. World GMT Table (continued)

Time Zone	City or Area Zone Crosses
GMT	Greenwich Mean Time, Dublin
GMT+1	Berlin, Rome
GMT+2	Israel, Cairo
GMT+3	Moscow, Kuwait
GMT+4	Abu Dhabi, Muscat
GMT+5	Islamabad, Karachi
GMT+6	Almaty, Dhaka
GMT+7	Bangkok, Jakarta
GMT+8	Hong Kong, Beijing
GMT+9	Tokyo, Osaka
GMT+10	Sydney, Melbourne, Guam
GMT+11	Magadan, Solomon Is.
GMT+12	Fiji, Wellington, Auckland

2.3.11 Configure the Event Parameters

Click the **Event Config** button to open the **Event Configuration** page (Figure 2-25). The **Event Configuration** page specifies a remote server that can be used to receive HTTP POST events when actions take place on the board.

Figure 2-25. Event Configuration Page

CyberData Ceiling Speaker

Event Configuration

Home Device Config Networking SIP Config Nightringer Multicast Config Audio Config Clock Config **Event Config** Autoprovisioning Update Firmware

Enable Event Generation: ☐

Remote Event Server

Remote Event Server IP: 10.0.0.250

Remote Event Server Port: 8080

Remote Event Server URL: xmlparse_engine

Events

Enable Call Active Events: ☐

Enable Call Terminated Events: ☐

Enable Relay Activated Events: ☐

Enable Relay Deactivated Events: ☐

Enable Ring Events: ☐

Enable Night Ring Events: ☐

Enable Multicast Start Events: ☐

Enable Multicast Stop Events: ☐

Enable Power on Events: ☐




Enable 60 second Heartbeat Events: ☐

* You need to reboot for changes to take effect

Save Test Event Reboot

Table 2-17 shows the web page items on the **Event Configuration** page.

Table 2-17. Event Configuration

Web Page Item	Description
Enable Event Generation	When selected, Event Generation is enabled.
Remote Event Server	
Remote Event Server IP	Type the Remote Event Server IP address. (64 character limit)
Remote Event Server Port	Type the Remote Event Server port number. (8 character limit)
Remote Event Server URL	Type the Remote Event Server URL. (127 character limit)
Events	
Enable Call Active Events	When selected, Call Active Events are enabled.
Enable Call Terminated Events	When selected, Call Terminated Events are enabled.
Enable Relay Activated Events	When selected, Relay Activated Events are enabled.
Enable Relay Deactivated Events	When selected, Relay Deactivated Events are enabled.
Enable Ring Events	When selected, Ring Events are enabled.
Enable Night Ring Events	When selected, there is a notification when the speaker receives a night ring.
Enable Multicast Start Events	When selected, Multicast Start Events are enabled.
Enable Multicast Stop Events	When selected, Multicast Stop Events are enabled.
Enable Power On Events	When selected, Power On Events are enabled.
Enable 60 Second Heartbeat Events	When selected, 60 Second Heartbeat Events are enabled.
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Test Event button to test an event.
	Click on the Reboot button to reboot the system.

2.3.11.1 Example Packets for Events

The server and port are used to point to the listening server and the 'Remote Event Server URL' is the destination URL (typically the script running on the remote server that's used to parse and process the POST events).

Note The XML is URL-encoded before transmission so the following examples are not completely accurate.

Here are example packets for every event:

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 197
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>POWERON</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 199
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>HEARTBEAT</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 201
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>CALL_ACTIVE</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 205
Content-Type: application/x-www-form-urlencoded
```

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>CALL_TERMINATED</event>
</cyberdata>
```

```
POST xmlparse_engine HTTP/1.1
```

```
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 197
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>RINGING</event>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 234
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>MULTICAST_START</event>
<index>8</index>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 233
Content-Type: application/x-www-form-urlencoded

<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>MULTICAST_STOP</event>
<index>8</index>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 234
Content-Type: application/x-www-form-urlencoded
<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>RELAY_ACTIVATED</event>
</cyberdata>
POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
Content-Length: 234
Content-Type: application/x-www-form-urlencoded
<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>RELAY_DEACTIVATED</event>
</cyberdata>

POST xmlparse_engine HTTP/1.1
Host: 10.0.3.79
User-Agent: CyberData/1.0.0
```

```
Content-Length: 234
Content-Type: application/x-www-form-urlencoded
<?xml version="1.0" encoding="ISO-8859-1"?>
<cyberdata NAME='CyberData VoIP Device' MAC='0020f70015b6'>
<event>NIGHTRINGING</event>
</cyberdata>
```

2.3.12 Configure the Autoprovisioning Parameters

1. Click the **Autoprovisioning** button to open the **Autoprovisioning Configuration** page.
See [Figure 2-26](#).

Figure 2-26. Autoprovisioning Configuration Page

The screenshot shows the 'Autoprovisioning' configuration page for a CyberData Ceiling Speaker. The page has a blue header with the title 'CyberData Ceiling Speaker'. On the left is a vertical menu with buttons for 'Home', 'Device Config', 'Networking', 'SIP Config', 'Nightringer', 'Multicast Config', 'Audio Config', 'Clock Config', 'Event Config', 'Autoprovisioning' (which is highlighted), and 'Update Firmware'. The main content area is titled 'Autoprovisioning' and contains the following settings:

- Enable Autoprovisioning: ☐
- Get Autoprovisioning from DHCP: ☒
- Autoprovisioning Server (IP Address):
- Autoprovisioning autoupdate (in minutes):



Below the settings, there are two asterisked notes:

- * Autoprovisioning file name: 0020f7004487.config
- * You need to reboot for changes to take effect

At the bottom of the configuration area are two buttons: 'Save' and 'Reboot'.

2. On the **Autoprovisioning Configuration** page, you may enter values for the parameters indicated in [Table 2-18](#).

Table 2-18. Autoprovisioning Configuration Parameters

Web Page Item	Description
Autoprovisioning	
Enable Autoprovisioning	See Section 2.3.12.1, "Autoprovisioning" .
Get Autoprovisioning from DHCP	See Section 2.3.12.1, "Autoprovisioning" .
Autoprovisioning Server (IP Address)	See Section 2.3.12.1, "Autoprovisioning" (15 character limit).
Autoprovisioning Autoupdate (in minutes)	Type the desired time (in minutes) that you want the Autoprovisioning feature to update (6 character limit).
	Click the Save button to save your configuration settings. Note: You need to reboot for changes to take effect.
	Click on the Reboot button to reboot the system.

3. After changing the parameters, click the **Save** button.

2.3.12.1 Autoprovisioning

Enable Autoprovisioning Option

With autoprovisioning enabled, the board will get its configuration from a remote TFTP server on startup or periodically on a scheduled delay. Autoprovisioned values will override values stored in on-board memory and will be visible on the web page. The board gets its autoprovisioning information from an XML-formatted file hosted from a TFTP server. CyberData will provide a template for this XML file and the user can modify it for their own use.

To use autoprovisioning, create a copy of the autoprovisioning template with the desired settings and name this file with the mac address of the device to configure (for example: **0020f7350058.config**). Put this file into your TFTP server directory and manually set the TFTP server address on the board.

It is not necessary to set every option found in the autoprovisioning template. As long as the XML is valid, the file can contain any subset. Options not autoprovisioned will default to the values stored in the on board memory. For example if you only wanted to modify the device name, the following would be a valid autoprovisioning file:

```
<?xml version="1.0" encoding="utf-8" ?>
<specific>
  <MiscSettings>
    <DeviceName>auto Ceiling Speaker</DeviceName>
  </MiscSettings>
</specific>
```

Networking

The board will only apply networking settings or firmware upgrades after a reboot.

Get Autoprovisioning from DHCP

When this option is checked, the device will automatically fetch its autoprovisioning server address from the DHCP server. The device will use the address specified in **OPTION 150** (TFTP-server-name) or **OPTION 66**. If both options are set, the device will use **OPTION 150**.

Refer to the documentation of your DHCP server for setting up **OPTION 150**.

To set up a Linux DHCPD server to serve autoprovisioning information (in this case using both option 66 and 150), here's an example dhcpd.conf:

```
# dhcpd.conf
#
# Configuration file for ISC dhcpd (see 'man dhcpd.conf')
#
ddns-update-style ad-hoc;

option option-150 code 150 = ip-address;

subnet 10.0.0.0 netmask 255.0.0.0 {
    max-lease-time 120;
    default-lease-time 120;

    option routers                10.0.0.1;
    option subnet-mask            255.0.0.0;

    option domain-name            "voiplab";
    option domain-name-servers    10.0.0.1;

    option time-offset             -8;      # Pacific Standard Time

    option tftp-server-name        "10.0.0.254";

    option option-150              10.0.0.254;

    range 10.10.0.1 10.10.2.1;}
```

Autoprovisioning Server (IP Address) Instead of using DHCP to provide the autoprovisioning tftp server address, you can specify an address manually.

Autoprovisioning Autoupdate If **Autoprovisioning** is enabled and the **Autoprovisioning Autoupdate** value is something other than **0** minutes, a service is started on startup that will wait the configured number of minutes and then try to re-download its autoprovisioning file. It will compare its previously autoprovisioned file with this new file and if there are differences, it will reboot the board.

Autoprovisioned Firmware Upgrades An Autoprovisioned firmware upgrade only happens after a reboot, will take roughly three minutes, and the web page will be unresponsive during this time.

The '**FirmwareVersion**' value in the xml file *must* match the version stored in the '**FirmwareFile**'.

```
<FirmwareVersion>v5.0.5b01</FirmwareVersion>
<FirmwareFile>505b01-uImage-ceilingSpeak</FirmwareFile>
```

If these values are mismatched, the board can get stuck in a loop where it goes through the following sequence of actions:

1. The board downloads and writes a new firmware file.
2. After the next reboot, the board recognizes that the firmware version does not match.
3. The board downloads and writes the firmware file again.

CyberData has timed a firmware upgrade at 140 seconds. Therefore, if you suspect the board is stuck in a loop, either remove or comment out the **FirmwareVersion** line in the XML file and let the board boot as it normally does.

Autoprovisioned Audio Files

Audio files are stored in non-volatile memory and an autoprovisioned audio file will only have to be downloaded once for each device. Loading many audio files to the device from the web page could cause it to appear unresponsive. If this happens, wait until the transfer is complete and then refresh the page.

The device uses the file name to determine when to download a new audio file. This means that if you used autoprovisioning to upload a file and then changed the contents of this file at the TFTP server, the device will not recognize that the file has changed (because the file name is the same).

Since audio files are stored in non-volatile memory, if autoprovisioning is disabled after they have been loaded to the board, the audio file settings will not change. You can force a change to the audio files on the board by clicking **Restore Default** on the **Audio Configuration** page or by changing the autoprovisioning file with **"default"** set as the file name.

2.3.13 Upgrade the Firmware and Reboot the V2 Speaker

2.3.13.1 Upgrade the Firmware



Caution

When upgrading to firmware version 6.x.x from version 5.x.x or earlier, your device configuration settings will be lost because the way that the device stores the configuration settings is different in version 6.x.x.

To upload the firmware from your computer:

1. Retrieve the latest V2 Speaker firmware from the VoIP V2 Speaker **Downloads** page at:
<http://www.cyberdata.net/products/voip/digitalanalog/ceilingspkr2/downloads.html>
2. Unzip the V2 Speaker version file. This file may contain the following:
 - Firmware file
 - Release notes
3. Log in to the V2 Speaker home page as instructed in [Section 2.3.3, "Log in to the Configuration Home Page"](#).

- Click the **Update Firmware** button to open the **Upgrade Firmware** page. See [Figure 2-27](#).

Figure 2-27. Upgrade Firmware Page

The screenshot shows the 'Upgrade Firmware' page of the CyberData Ceiling Speaker web interface. The page has a blue header with the title 'CyberData Ceiling Speaker'. On the left is a vertical menu with buttons: Home, Device Config, Networking, SIP Config, Nightringer, Multicast Config, Audio Config, Clock Config, Event Config, Autoprovisioning, and Update Firmware. The main area is titled 'Upgrade Firmware' and contains a 'File Upload' section with a text box showing 'Firmware Version: v6.3.0', a label 'Please specify a file:', a file input field, and a 'Browse...' button. Below this is a note 'System will automatically reboot after upgrading firmware' and a 'Submit' button.



- Click **Browse**, and then navigate to the location of the V2 Speaker firmware file.
- Click **Submit**.

Note This starts the upload process. Once the V2 Speaker has uploaded the file, the **Uploading Firmware** countdown page appears, indicating that the firmware is being written to flash. The V2 Speaker will automatically reboot when the upload is complete. When the countdown finishes, the **Upgrade Firmware** page will refresh. The uploaded firmware filename should be displayed in the system configuration (indicating successful upload and reboot).

Note The way that the integrity of the configuration file is validated has changed. There is no problem with updating the firmware but if you downgrade (or downgrade, make some changes, and then upgrade again) the device may think that the configuration is corrupt and restore defaults.

Table 2-19 shows the web page items on the **Upgrade Firmware** page.

Table 2-19. Upgrade Firmware Parameters

Web Page Item	Description
File Upload	
Firmware Version	Firmware Version
Please specify a file	Refer to the Browse button description.
	Use the Browse button to navigate to the location of the Intercom firmware file that you want to upload.
	Click on the Submit button to automatically upload the selected firmware and reboot the system.

2.3.13.2 Reboot the V2 Speaker

To reboot a V2 Speaker,

1. Log in to the **Home Page** as instructed in [Section 2.3.3, "Log in to the Configuration Home Page"](#). See [Figure 2-28](#).

Figure 2-28. Home Page

CyberData Ceiling Speaker

Home
Device Config
Networking
SIP Config
Nightringer
Multicast Config
Audio Config
Clock Config
Event Config
Autoprovisioning
Update Firmware

Device Settings

Device Name: CyberData Ceiling Speaker

Change Username: admin

Change Password:

Re-enter Password:

Current Settings

Serial Number: 022000696
Mac Address: 00:20:f7:00:44:87
Firmware Version: v6.3.0

IP Addressing: dhcp
IP Address: 10.10.0.10
Subnet Mask: 255.0.0.0
Default Gateway: 10.0.0.1
DNS Server 1: 8.8.8.8
DNS Server 2:

Speaker Volume: analog

SIP Mode is: enabled
Multicast Mode is: disabled
Clock is: installed
Event Reporting is: disabled
Nightringer is: disabled (NOT Registered with SIP Server)

Primary SIP Server: (NOT Registered with SIP Server)
Backup Server 1: (NOT Registered with SIP Server)
Backup Server 2: (NOT Registered with SIP Server)

* You need to reboot for changes to take effect

Save Reboot

Reboot

2. Click the **Reboot** button. See [Figure 2-28](#).

3. A normal restart will occur and you will see the following **Reboot** page.

Figure 2-29. Reboot Page



2.4 Command Interface

Some functions on the device can be activated using simple POST commands to the web interface. The examples in [Table 2-20](#) use the free unix utility, **wget** commands. However, any program that can send HTTP POST commands to the device should work.

2.4.1 Command Interface Post Commands

Note These commands require an authenticated session (a valid username and password to work).

Table 2-20. Command Interface Post Commands

Device Action	HTTP Post Command ^a
Trigger relay (for configured delay)	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/command.cgi" --post-data "test_relay=yes"
Place call to extension (example: extension 130)	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/command.cgi" --post-data "call=130"
Terminate active call	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/command.cgi" --post-data "terminate=yes"
Force reboot	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/command.cgi" --post-data "reboot=yes"
Test Audio button	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/command.cgi" --post-data "test_audio=yes"
Announce IP address	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/command.cgi" --post-data "speak_ip_address=yes"
Play the "0" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_0=yes"
Play the "1" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_1=yes"
Play the "2" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_2=yes"
Play the "3" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_3=yes"
Play the "4" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_4=yes"
Play the "5" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_5=yes"

Table 2-20. Command Interface Post Commands (continued)

Device Action	HTTP Post Command^a
Play the "6" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_6=yes"
Play the "7" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_7=yes"
Play the "8" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_8=yes"
Play the "9" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_9=yes"
Play the "Dot" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_d=yes"
Play the "Audio Test" audio file (from Audio Config)	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_audiotest=yes"
Play the "Page Tone" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_pagetone=yes"
Play the "Your IP Address Is" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_youripaddressis=yes"
Play the "Rebooting" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_rebooting=yes"
Play the "Restoring Default" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_restoringdefault=yes"
Play the "Ringback tone" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_ringback=yes"
Play the "Ring tone" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_ringtones=yes"
Play the "Night Ring" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "play_nightring=yes"
Delete the "0" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_0=yes"
Delete the "1" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_1=yes"
Delete the "2" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_2=yes"





Table 2-20. Command Interface Post Commands (continued)

Device Action	HTTP Post Command^a
Delete the "3" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_3=yes"
Delete the "4" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_4=yes"
Delete the "5" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_5=yes"
Delete the "6" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_6=yes"
Delete the "7" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_7=yes"
Delete the "8" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_8=yes"
Delete the "9" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_9=yes"
Delete the "Audio Test" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_audiotest=yes"
Delete the "Page Tone" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_pagetone=yes"
Delete the "Your IP Address Is" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_youripaddressis=yes"
Delete the "Rebooting" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_rebooting=yes"
Delete the "Restoring Default" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_restoringdefault=yes"
Delete the "Ringback tone" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_ringback=yes"
Delete the "Ring tone" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_ringtone=yes"
Delete the "Night Ring" audio file	wget --user admin --password admin --auth-no-challenge --quiet -O /dev/null "http://10.0.3.71/cgi-bin/audioconfig.cgi" --post-data "delete_nightring=yes"

a. Type and enter all of each http POST command on one line.

Appendix A: Mounting the Speaker

A.1 Important Safety Instructions

 GENERAL ALERT	Warning <i>Electrical Hazard:</i> The VoIP V2 Speaker enclosure is not rated for any AC voltages.
 GENERAL ALERT	Warning <i>Electrical Hazard:</i> This product should be installed by a licensed electrician according to all local electrical and building codes.
 GENERAL ALERT	Warning <i>Electrical Hazard:</i> To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
 GENERAL ALERT	Warning The PoE connector is intended for intra-building connections only and does not route to the outside plant.

A.2 Mount the Speaker

Before you mount the speaker, make sure that you have received all the parts for each speaker. Refer to [Table A-1](#) and [Table A-2](#).

Table A-1. Drop Ceiling Mounting Components (Part of the Accessory Kit)






Quantity	Part Name	Illustration
3	#8 Nylon Thumb Nuts	
3	#8 Fender Washers	
3	8-32 x 1 1/4" Mounting Screws	


Table A-2. Drywall Mounting Components (Part of the Accessory Kit)

Quantity	Part Name	Illustration
3	Plastic Ribbed Anchors	
3	#8 Sheet Metal Screws	

To mount the speaker:

1. Use the **TEMPLATE** to cut the speaker hole and prepare holes for the screws (**Figure A-1**). This template is located on the back page of the *Installation Quick Reference Guide* that is delivered with each speaker.

Figure A-1. VoIP Speaker Assembly

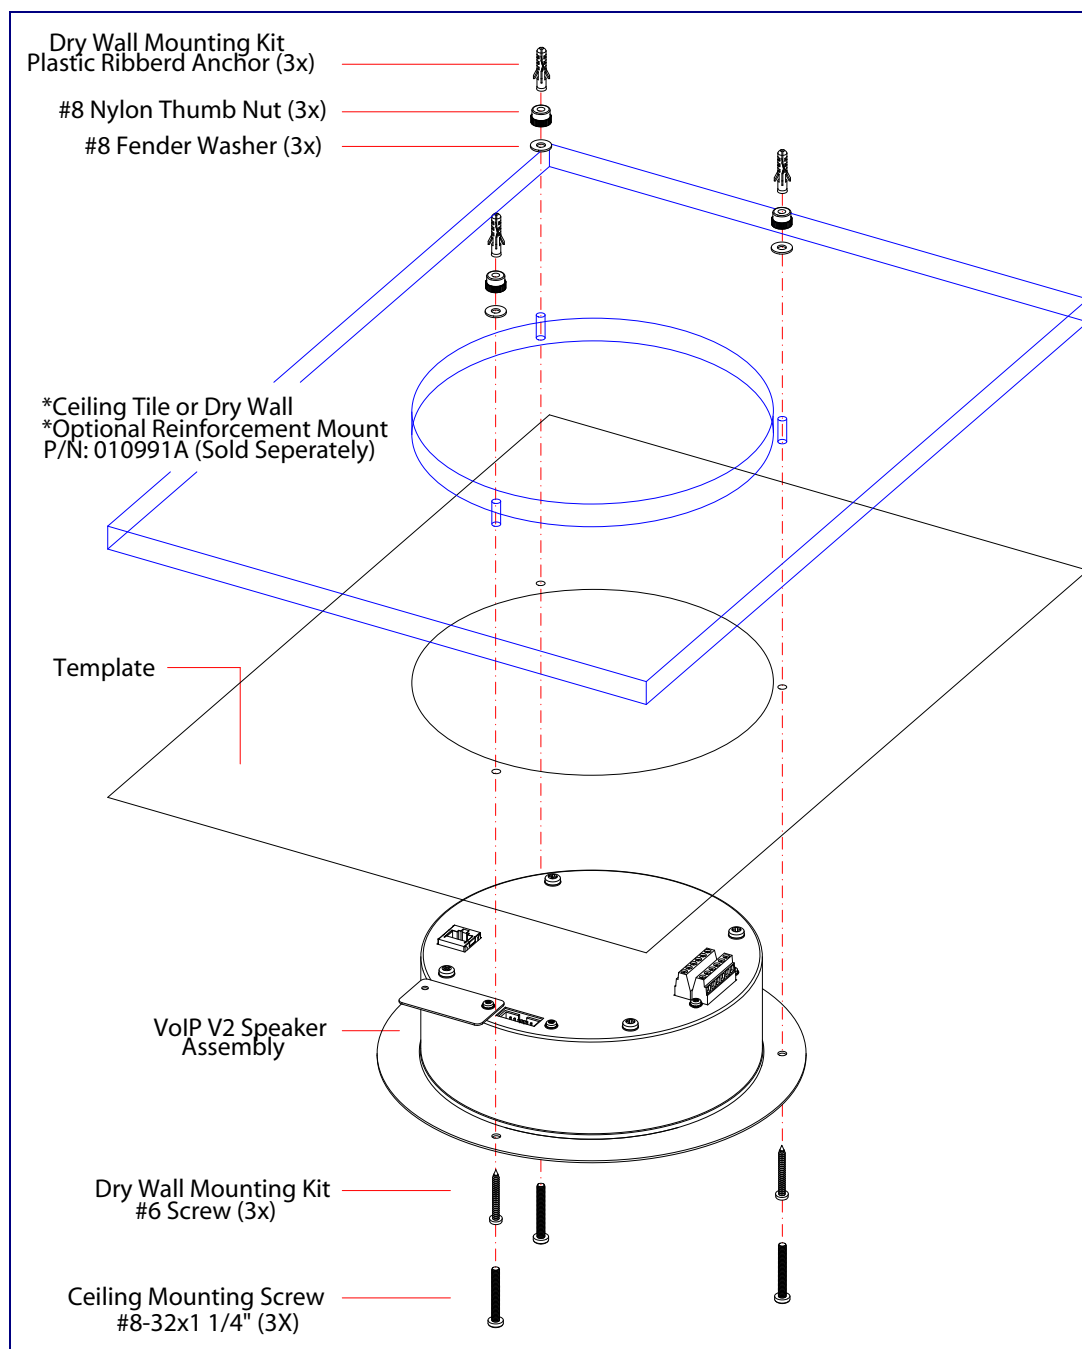

2. Plug the Ethernet cable into the Speaker Assembly. [Section 2.2.3, "Confirm that the Speaker is Operational and Linked to the Network"](#) explains how the **Link** and **Status** LEDs work.
3. At this point:
 - For *drop ceiling mounting*, position the **VoIP SPEAKER ASSEMBLY** in the ceiling so that its screw holes align with those you prepared.
 - For *drywall mounting*, place the three **PLASTIC RIBBED ANCHORS** in the holes you prepared, and position the **VoIP SPEAKER ASSEMBLY** over them, aligning the screw holes in the assembly with the anchors.
4. To fasten the speaker:
 - For *drop ceiling mounting*, use the three **8-32 x 1 1/4" MOUNTING SCREWS, #8 NYLON THUMB NUTS**, and **#8 FENDER WASHERS** to secure the speaker.

Note For weak ceiling tile, CyberData offers a reinforcing mount (CyberData part number 010991A).

- For *drywall mounting*, use the three **#8 SHEET METAL SCREWS** to secure the speaker.

Appendix B: Setting up a TFTP Server

B.1 Set up a TFTP Server

B.1.1 Autoprovisioning requires a TFTP server for hosting the configuration file.

B.1.2 In a LINUX Environment

To set up a TFTP server on LINUX:

1. Create a directory dedicated to the TFTP server, and move the files to be uploaded to that directory.
2. Run the following command where `/tftpboot/` is the path to the directory you created in [Step 1](#): the directory that contains the files to be uploaded. For example:

```
in.tftpd -l -s /tftpboot/your_directory_name
```

B.1.3 In a Windows Environment

You can find several options online for setting up a Windows TFTP server. This example explains how to use the Solarwinds freeware TFTP server, which you can download at:

<http://www.cyberdata.net/support/voip/solarwinds.html>

To set up a TFTP server on Windows:

1. Install and start the software.
2. Select **File/Configure/Security** tab/**Transmit Only**.
3. Make a note of the default directory name, and then move the firmware files to be uploaded to that directory.

Appendix C: Troubleshooting/Technical Support

C.1 Frequently Asked Questions (FAQ)

To see a list of frequently asked questions for your product, go to the following URL:

<http://www.cyberdata.net/products/voip/digitalanalog/ceilingsprk2/faqs.html>

C.2 Documentation

The documentation for this product is released in an English language version only. You can download PDF copies of CyberData product documentation by going to the following URL:

<http://www.cyberdata.net/products/voip/digitalanalog/ceilingsprk2/docs.html>

C.3 Contact Information

Contact	<p>CyberData Corporation 3 Justin Court Monterey, CA 93940 USA www.CyberData.net Phone: 800-CYBERDATA (800-292-3732) Fax: 831-373-4193</p>
Sales	<p>Sales 831-373-2601 Extension 334</p>
Technical Support	<p>The fastest way to get technical support for your VoIP product is to submit a VoIP Technical Support form at the following website:</p> <p>http://www.cyberdata.net/support/contactsupportvoip.php</p> <p>The Support Form initiates a ticket which CyberData uses for tracking customer requests. Most importantly, the Support Form tells us which PBX system and software version that you are using, the make and model of the switch, and other important information. This information is essential for troubleshooting. Please also include as much detail as possible in the Comments section of the Support Form.</p> <p>Phone: (831) 373-2601, Ext. 333 Email: support@cyberdata.net</p>
Returned Materials Authorization	<p>To return the product, contact the Returned Materials Authorization (RMA) department:</p> <p>Phone: 831-373-2601, Extension 136 Email: RMA@CyberData.net</p> <p>When returning a product to CyberData, an approved CyberData RMA number must be printed on the outside of the original shipping package. Also, RMA numbers require an active VoIP Technical Support ticket number. A product will not be accepted for return without an approved RMA number. Send the product, in its original package, to the following address:</p> <p>CyberData Corporation 3 Justin Court Monterey, CA 93940 Attention: RMA "your RMA number"</p>
RMA Status Form	<p>If you need to inquire about the repair status of your product(s), please use the CyberData RMA Status form at the following web address:</p> <p>http://www.cyberdata.net/support/rmastatus.html</p>

C.4 Warranty

CyberData warrants its product against defects in material or workmanship for a period of two years from the date of purchase. Should the product fail Within Warranty, CyberData will repair or replace the product free of charge. This warranty includes all parts and labor.

Should the product fail Out of the Warranty period, a flat rate repair charge of one half of the purchase price of the product will be assessed. Repairs that are Within Warranty period but are damaged by improper installation, modification, or abuse are deemed Out of Warranty and will be charged at the Out of Warranty rate. A device is deemed Out of Warranty when its purchase date is longer than two years or when the device has been damaged due to human error during installation, modification, or abuse. A replacement unit will be offered at full cost if the device cannot be repaired.

End of Life Devices are included under this policy. End of Life devices are devices that are no longer produced or sold. Technical support is still available for these devices. However, no firmware revisions or updates will be provided. If an End of Life device cannot be repaired, the replacement offered may be the current version of the device.

Products shipped to CyberData, both within and out of warranty, are shipped at the expense of the customer. CyberData will pay return shipping charges for repaired products.

CyberData shall not under any circumstances be liable to any person for any special, incidental, indirect or consequential damages, including without limitation, damages resulting from use or malfunction of the products, loss of profits or revenues or costs of replacement goods, even if CyberData is informed in advance of the possibility of such damages.

C.4.1 Warranty & RMA Returns within the United States

If service is required, you must contact CyberData Technical Support prior to returning any products to CyberData. Our Technical Support staff will determine if your product should be returned to us for further inspection. If Technical Support determines that your product needs to be returned to CyberData, an RMA number will be issued to you at this point.

Your issued RMA number must be printed on the outside of the shipping box. No product will be accepted for return without an approved RMA number. The product in its original package should be sent to the following address:

CyberData Corporation

3 Justin Court.

Monterey, CA 93940

Attn: RMA "xxxxxx"

C.4.2 Warranty & RMA Returns outside of the United States

If you purchased your equipment through an authorized international distributor or reseller, please contact them directly for product repairs.

C.4.3 Spare in the Air Policy

CyberData now offers a *Spare in the Air* no wait policy for warranty returns within the United States and Canada. More information about the *Spare in the Air* policy is available at the following web address:

<http://www.cyberdata.net/support/warranty/spareintheair.html>

C.4.4 Return and Restocking Policy

For our authorized distributors and resellers, please refer to your CyberData Service Agreement for information on our return guidelines and procedures.

For End Users, please contact the company that you purchased your equipment from for their return policy.

C.4.5 Warranty and RMA Returns Page

The most recent warranty and RMA information is available at the CyberData Warranty and RMA Returns Page at the following web address:

<http://www.cyberdata.net/support/warranty/index.html>

Index

Symbols

#8 fender washers 67, 69
 #8 nylon thumb nuts 67, 69
 #8 sheet metal screws 67, 69

Numerics

8-32 x 1 1/4" mounting screws 67, 69

A

AC voltages 2
 AC voltages, intercom enclosure is not rated 66
 address, configuration login 22
 adjusting volume 19
 ambient operating temperature 5
 analog speaker
 analog volume control needs to be disabled 13
 announcing a speaker's IP address 17, 19
 audio (buffered) 36
 audio configuration 37
 night ring tone parameter 39
 audio configuration page 37
 audio output 5
 audio sensitivity 5
 audio test 17, 19
 autoprovisioning 55
 autoprovisioned audio files 57
 autoprovisioned firmware upgrades 56
 autoprovisioning autoupdate 56
 autoprovisioning enabled option 55
 autoprovisioning from DHCP 55
 autoprovisioning server (IP address) 56
 networking 55
 autoprovisioning configuration 53, 54

B

backup SIP server 1 30
 backup SIP server 2 30
 backup SIP servers, SIP server
 backups 30
 buffered audio 36

C

changing
 the web access password 25
 clock configuration 43, 44
 clock configuration page 43
 clock status 43
 command interface 63
 commands 63
 configurable parameters 24, 26, 28
 configuration
 clock 43
 default IP settings 20
 device 8
 NTP Server 43
 SIP 29
 using Web interface 20
 configuration home page 23
 configuration page
 configurable parameters 26
 confirming IP address 17, 19
 contact information 72
 contact information for CyberData 72
 Current Network Settings 28
 current network settings 28
 CyberData contact information 72

D

default
 gateway 8, 20
 IP address 8, 20
 subnet mask 8, 20
 username and password 8, 20
 web login username and password 23
 default gateway 8, 20, 28
 default IP settings 20
 default login address 22
 device configuration 8, 25
 device configuration parameters 54
 the device configuration page 53
 device configuration page 25
 device configuration parameters 26
 device configuration password
 changing for web configuration access 25
 DHCP IP addressing 28
 dimensions 5, 6
 discovery utility program 22
 DNS server 28
 door sensor 39

downgrading (may restore factory defaults) 59
drop ceiling mounting of speaker 69
drywall mounting of speaker 69

E

enable night ring events 43, 49
Ethernet cable 69
ethernet port baud rate 5
event configuration
 enable night ring events 49
expiration time for SIP server lease 30, 33

F

factory default settings
 how to set 19
features 3
firmware
 downgrading (may restore factory defaults) 59
 where to get the latest firmware 58
firmware upgrade parameters 60

G

GMT table 46
GMT time 46

H

home page 23
http POST command 63

I

identifier names (PST, EDT, IST, MUT) 46
identifying your product 1
illustration of speaker mounting process 67
installation, typical speaker system 2
IP address 8, 20, 28
IP addressing 28
 default
 IP addressing setting 8, 20

L

lease, SIP server expiration time 30, 33
lengthy pages 35
link LED 69
Linux, setting up a TFTP server on 70
local SIP port 30
log in address 22

M

MGROUP
 MGROUP Name 35
mounting a speaker 67
multicast configuration 34
Multicast IP Address 35

N

navigation (web page) 21
navigation table 21
network link activity, verifying 16
nightring tones 35
nightringer settings 33
NTP server 44
NTP Server configuration 43

O

overview 1

P

pages (lengthy) 35
parts
 #8 fender washers 67
 #8 nylon thumb nuts 67
 #8 sheet metal screws 67
 8-32 x 1 1/4" mounting screws 67
 plastic ribbed anchors 67
password
 for SIP server login 30
 login 23
 restoring the default 8, 20
plastic ribbed anchors 67, 69
port
 local SIP 30
 remote SIP 30

POST command 63
 power input (J1) 5
 power requirement 5
 power, connecting to speaker 9
 priority
 assigning 35
 product
 configuring 20
 mounting 67
 parts list 7
 product features 3
 product overview 1
 product features 3
 product specifications 5
 product specifications 5

R

reboot 60, 61
 remote SIP port 30
 Reset Test Function Management (RTFM) button 17, 19
 restoring the factory default settings 19
 return and restocking policy 74
 ringtones 35
 lengthy pages 35
 RMA returned materials authorization 72
 RMA status 72
 RTFM button 17, 19

S

sales 72
 server address, SIP 30
 service 72
 SIP
 enable SIP operation 30
 local SIP port 30
 user ID 30
 SIP configuration 29
 SIP Server 30
 SIP configuration parameters 30
 outbound proxy 30
 registration and expiration, SIP server lease 30, 33
 unregister on reboot 30
 user ID, SIP 30
 SIP registration 30
 SIP remote SIP port 30
 SIP server 30
 password for login 30
 unregister from 30
 user ID for login 30
 SIP settings 30, 31

Spare in the Air Policy 74
 speaker configuration
 default IP settings 20
 speaker configuration page
 configurable parameters 24, 28
 speaker operations, verifying 25
 static IP addressing 28
 status LED 69
 Stored Network Settings 28
 subnet mask 8, 20, 28

T

tech support 72
 technical support, contact information 72
 template for speaker and screw holes 68
 testing audio 17, 19
 TFTP server 70
 time zone string examples 46
 time zone strings 45
 typical system installation 2

U

user ID
 for SIP server login 30
 username
 changing for web configuration access 25
 default for web configuration access 23
 restoring the default 8, 20

V

verifying
 network link and activity 16
 power on to speaker 16
 speaker operations 25
 VoIP speaker assembly 69
 volume boost 26
 volume, adjusting 19

W

warranty 73
 warranty & RMA returns outside of the United States 73
 warranty and RMA returns page 74
 warranty policy at CyberData 73
 web access password 8, 20
 web access username 8, 20

web configuration log in address 22
web page
 navigation 21
web page navigation 21
web-based speaker configuration 20
weight 5
wget, free unix utility 63
Windows, setting up a TFTP server on 70