



Connecting the Intercom (Service Loop Routing)

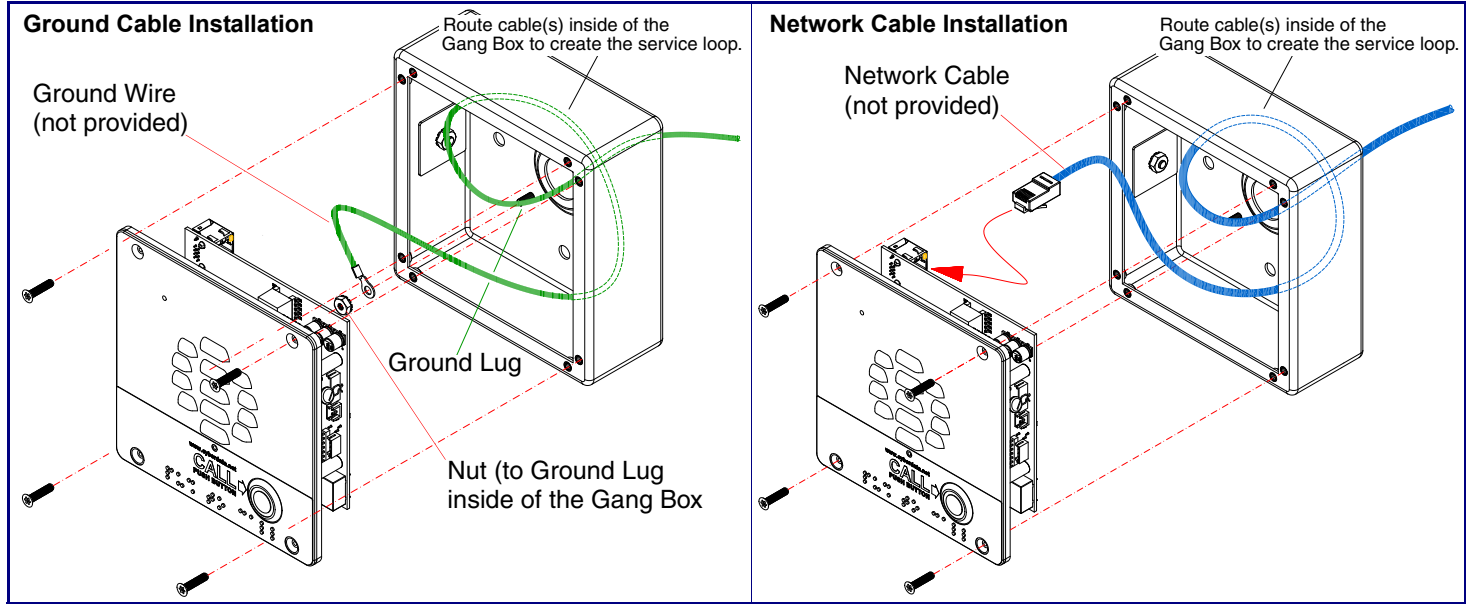

Securing the Intercom

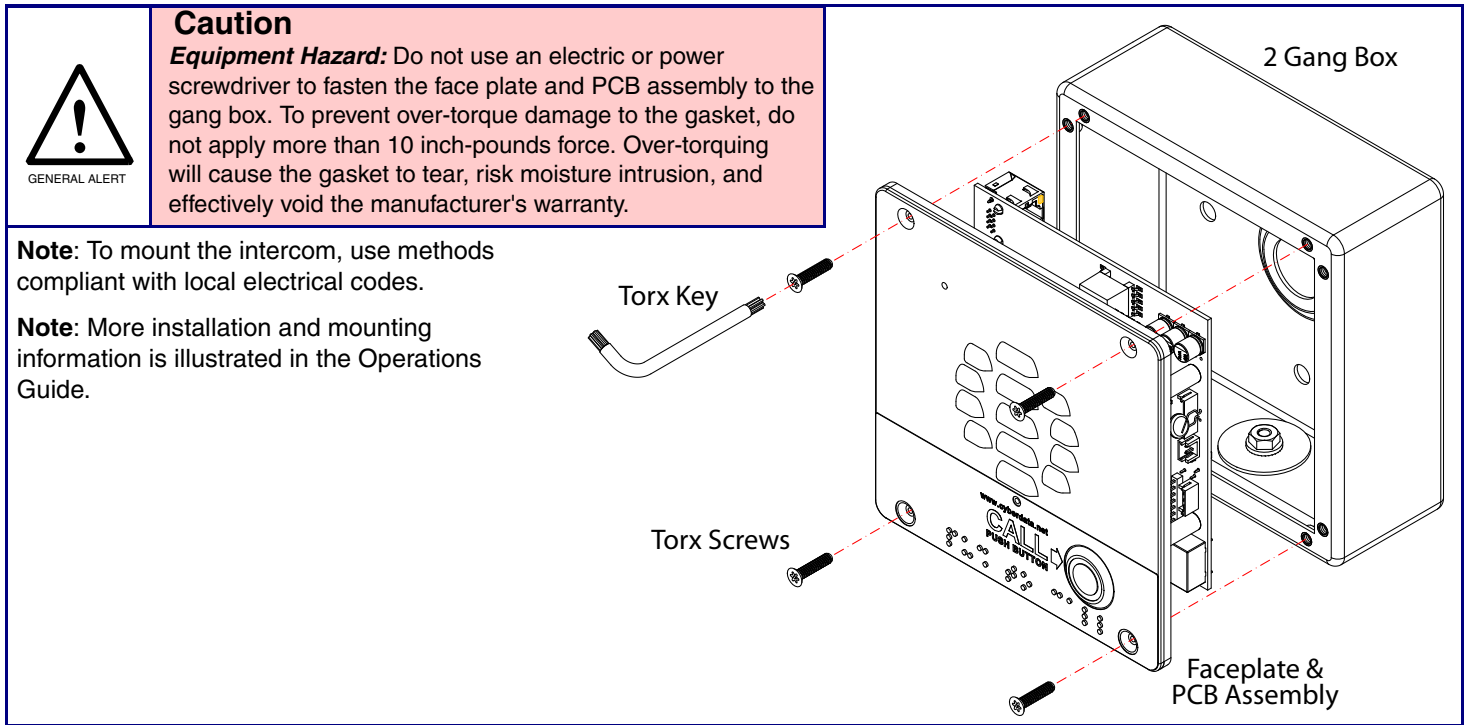

Contacting CyberData

**Corporate Headquarters**

CyberData Corporation  
3 Justin Court  
Monterey, CA 93940, USA

Phone: 831-373-2601  
Fax: 831-373-4193  
<http://www.cyberdata.net/>


Sales: (831) 373-2601 ext. 334  
Support: 831-373-2601 ext. 333  
Support Website: <http://support.cyberdata.net/>  
RMA Department: (831) 373-2601 ext. 136  
RMA Email: [RMA@CyberData.net](mailto:RMA@CyberData.net)  
RMA Status: <http://support.cyberdata.net/>  
Warranty Information: <http://support.cyberdata.net/>

Installation Quick Reference  
SIP Outdoor Intercom  
SIP Compliant  
011186

Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

<sup>a</sup>. Default if there is not a DHCP server present.

Typical System Installation

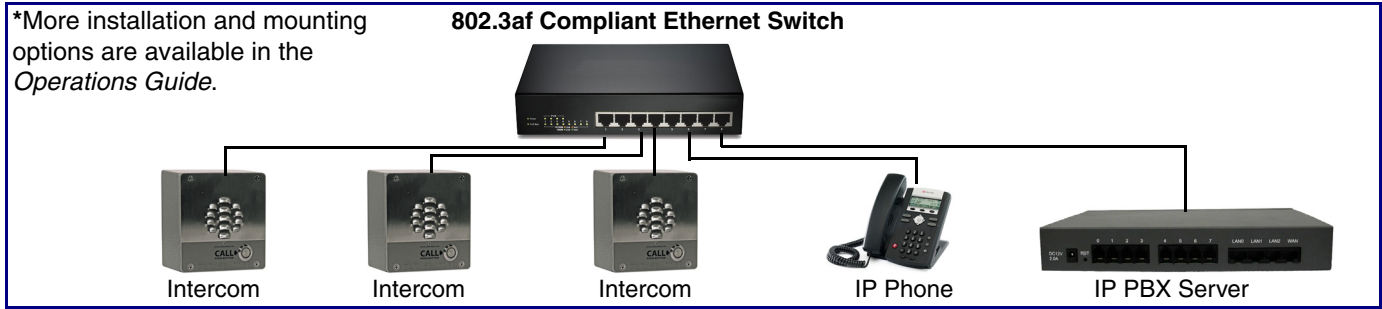


Getting Started

- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:  
<http://www.cyberdata.net/voip/011186/>
- Create a plan for the locations of your Intercoms.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!


Parts

<p><b>(1) Intercom Assembly</b></p>	<p><b>(1) T-15H Torx Key</b></p> <p><b>(4) Security Torx Screw</b></p>	<p><b>Optional Accessories (for gooseneck mounting)</b></p> <p>(4) Carriage bolt nuts</p> <p>(4) Carriage bolts</p> <p>(4) Carriage bolt washers</p>	<p><b>Optional Accessories</b></p> <p>(1) Spacer for half-inch set conduit connector</p> <p>(1) 531085B hole plug assembly</p>
-------------------------------------	--	--	--


Features

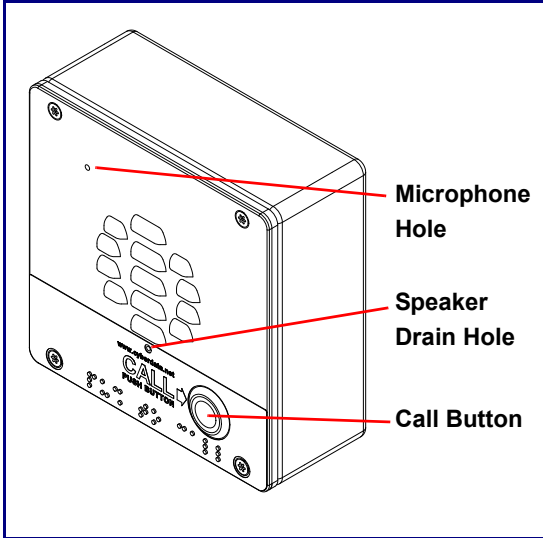

Dimensions (Front and Side View)

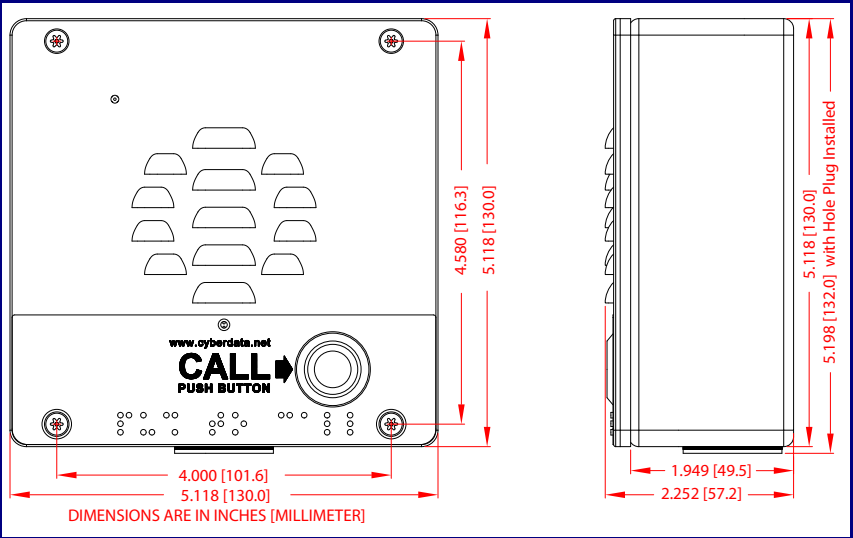

RTFM Button

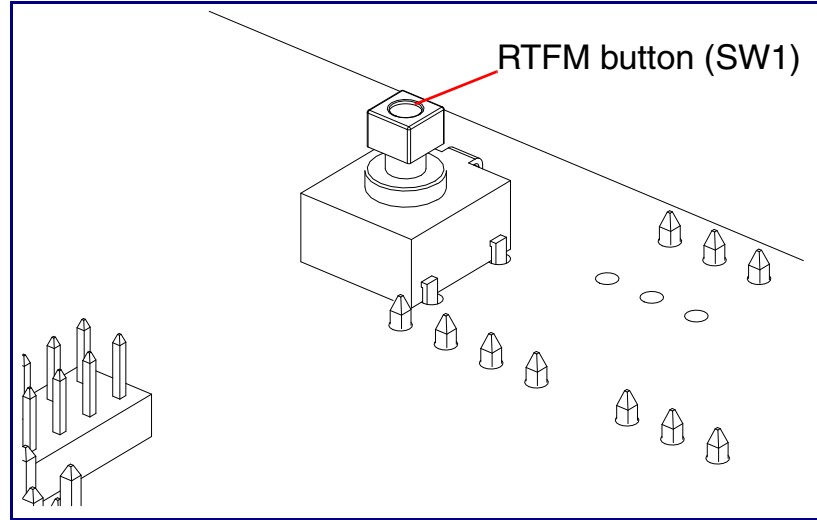

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory default settings.

To announce the device's current IP address:


- Press and release the RTFM button within a five second window.

**Note** The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).


To restore the device to factory default settings:

- Press and hold the RTFM button for longer than five seconds until you hear the device announce that it is restoring the factory default settings.


Dimensions (Rear View and Mounting Holes)

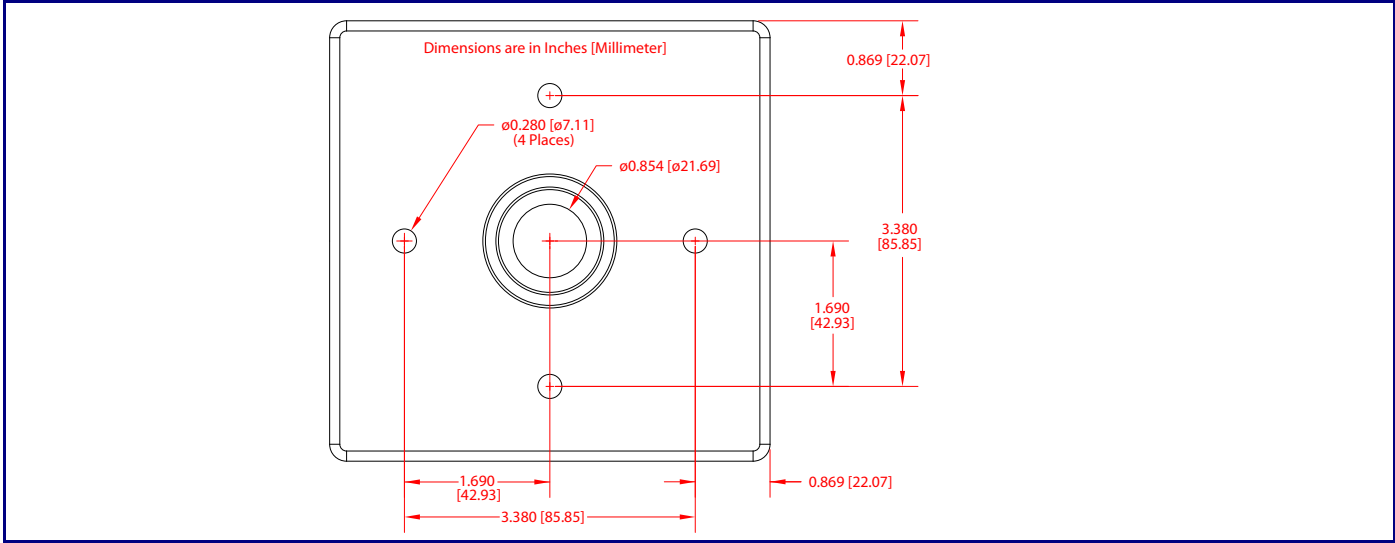

Conduit Mounting Restrictions (Side Entry)

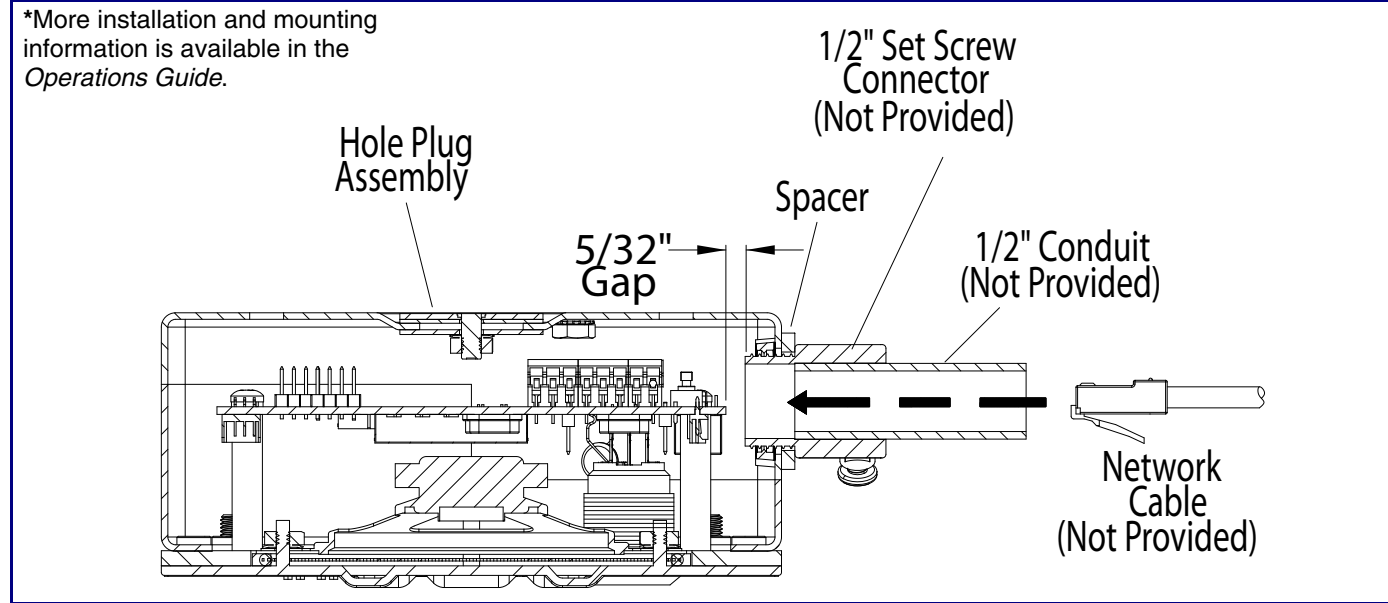

Terminal Block Connections

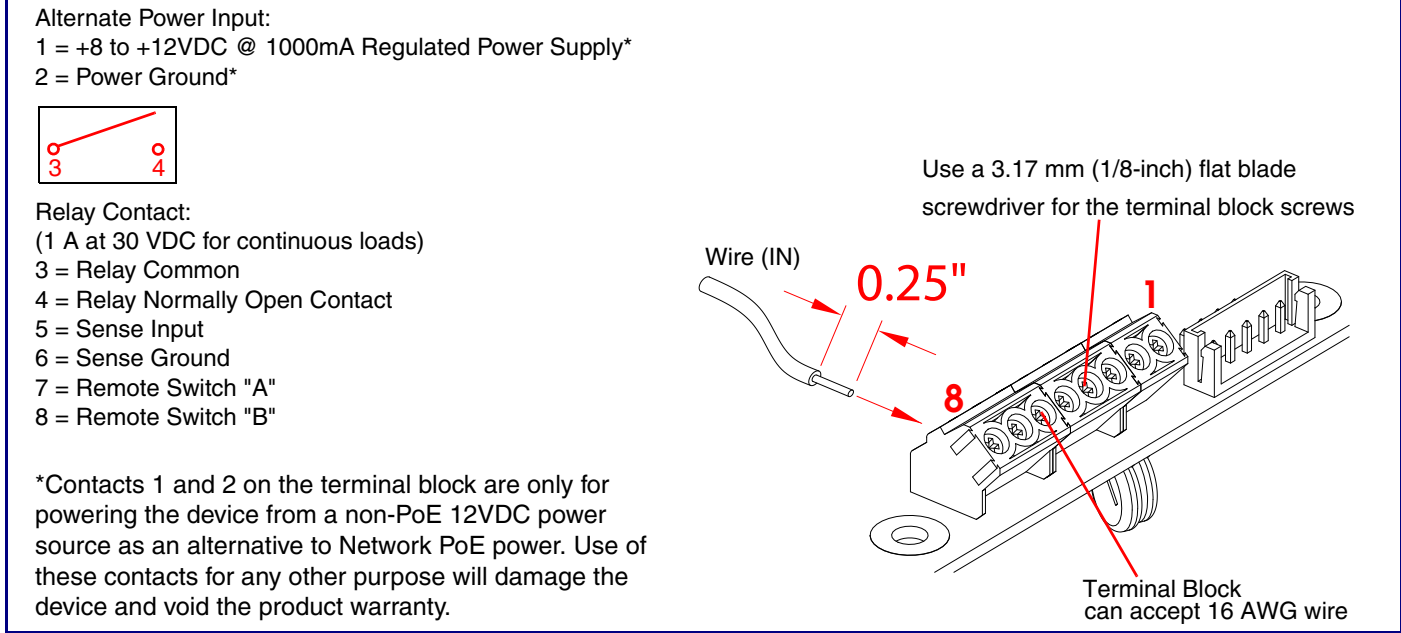

Conduit Mounting Restrictions (Rear Entry)

