


Maximum Recommended Wall Cutout Dimensions

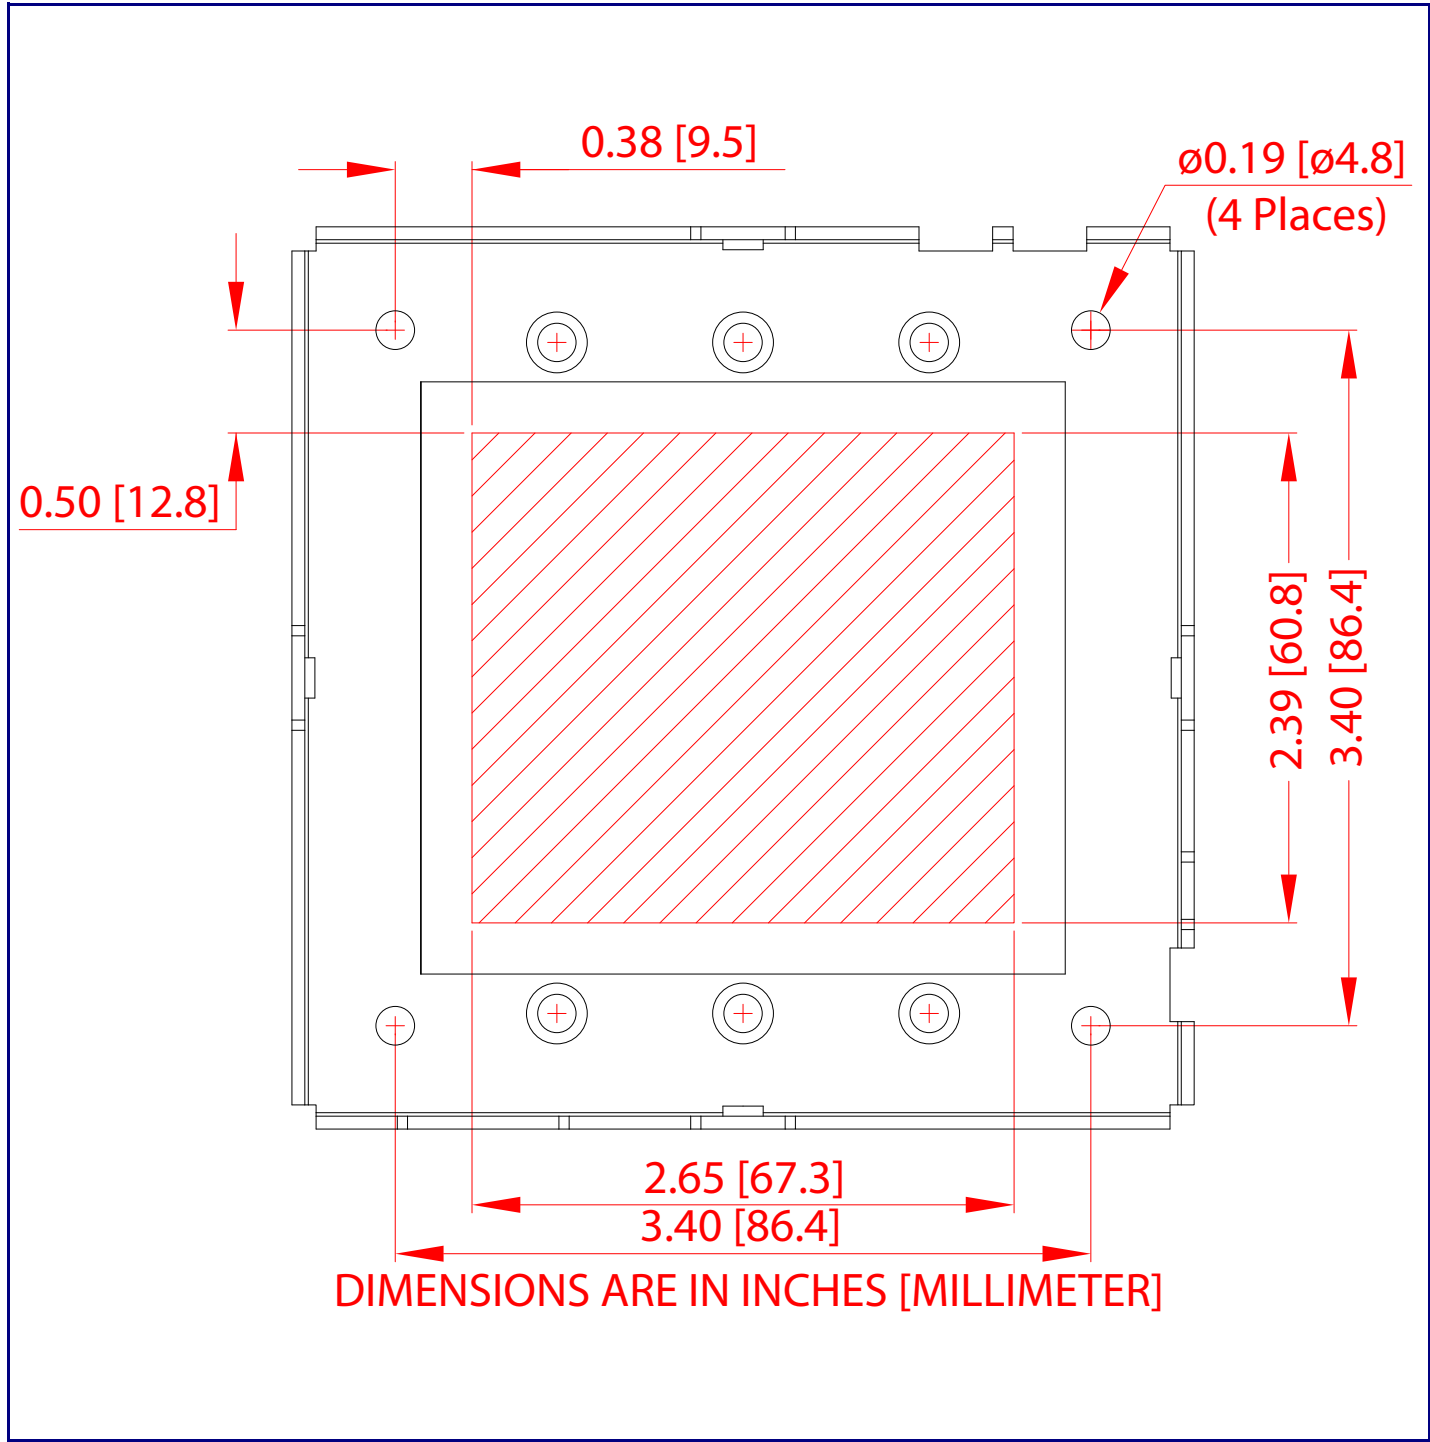

Contacting CyberData

**Corporate Headquarters**

CyberData Corporation  
3 Justin Court  
Monterey, CA 93940, USA

Phone: 831-373-2601  
Fax: 831-373-4193  
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334  
Support: 831-373-2601 ext. 333  
Support Website: <http://support.cyberdata.net/>  
RMA Department: (831) 373-2601 ext. 136  
RMA Email: [RMA@CyberData.net](mailto:RMA@CyberData.net)  
RMA Status: <http://support.cyberdata.net/>  
Warranty Information: <http://support.cyberdata.net/>


Installation Quick Reference  
**SIP Call Button**  
SIP Compliant  
**011049**



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address <sup>a</sup>	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask <sup>a</sup>	255.0.0.0
Default Gateway <sup>a</sup>	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

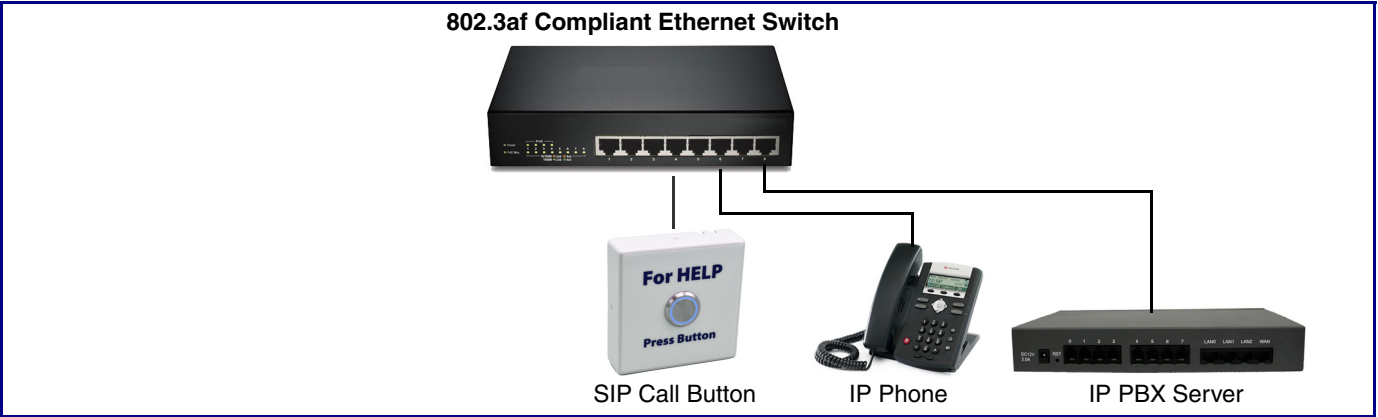

Getting Started

- Download the *SIP Call Button Operations Guide* PDF file, from the SIP Call Button product page at: <https://www.cyberdata.net/products/011049>
- Create a plan for the locations of your SIP Call Buttons.
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!

Parts

**(1) SIP Call Button Assembly**

**(1) Wall Mounting Kit**


(4) #6 x 1.25 inches Sheet Metal Screw

(4) #6 Ribbed Plastic Anchor

**(1) Gang Box Mounting Kit**

(4) #6-32 x 0.625-inch Flat-Head Machine Screw

Dimensions

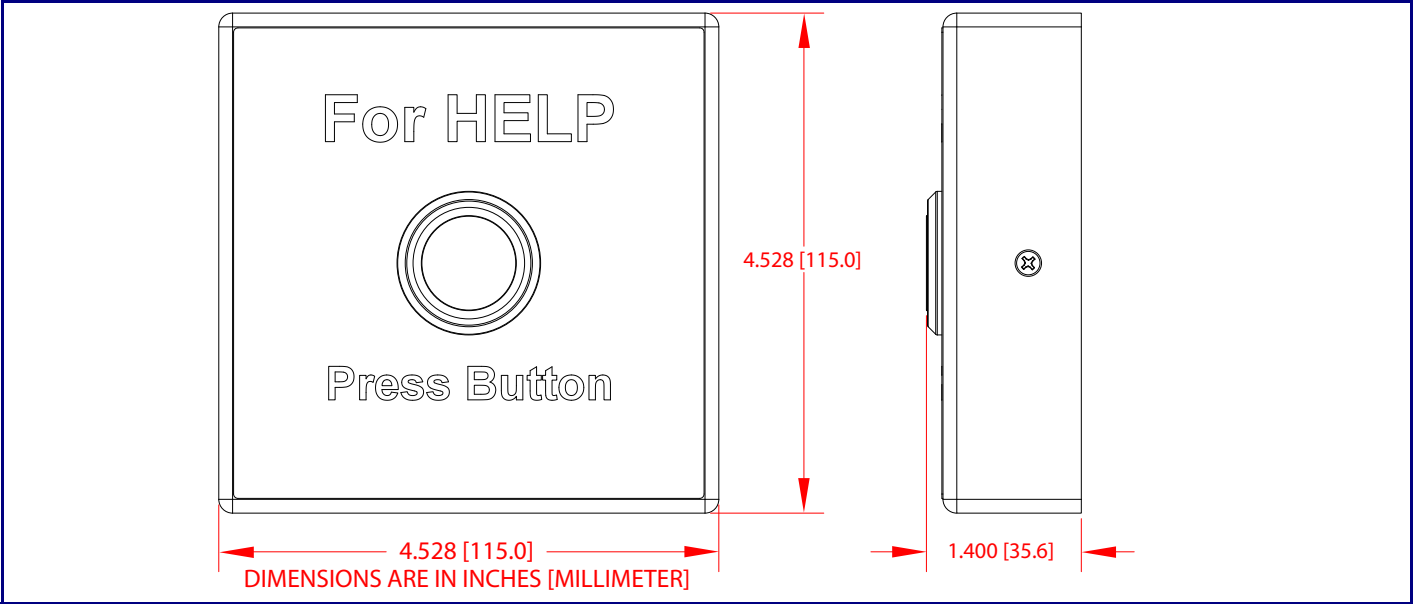

Terminal Block Connections

Alternate Power Input:  
1 = +8 to +12VDC @ 1000mA Regulated Power Supply\*  
2 = Power Ground\*

Relay Contact:  
(1 A at 30 VDC for continuous loads)  
3 = Relay Common  
4 = Relay Normally Open Contact  
5 = Sense Input  
6 = Sense Ground  
7 = Remote Switch "A"  
8 = Remote Switch "B"

\*Contacts 1 and 2 on the terminal block are only for powering the device from a non-PoE 12VDC power source as an alternative to Network PoE power. Use of these contacts for any other purpose will damage the device and void the product warranty.

Use a 3.17 mm (1/8-inch) flat blade screwdriver for the terminal block screws

**Wire (IN)**

Tin Leads Approx. 1/4" or 6mm

1

8

Terminal Block can accept 16 AWG wire

RTFM Button


RTFM button (SW1)

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button to restore the device to the factory default settings.

To restore the device to factory default settings:

- Press and hold the RTFM button for seven seconds, and then release the RTFM button.

Wall Mounting Options

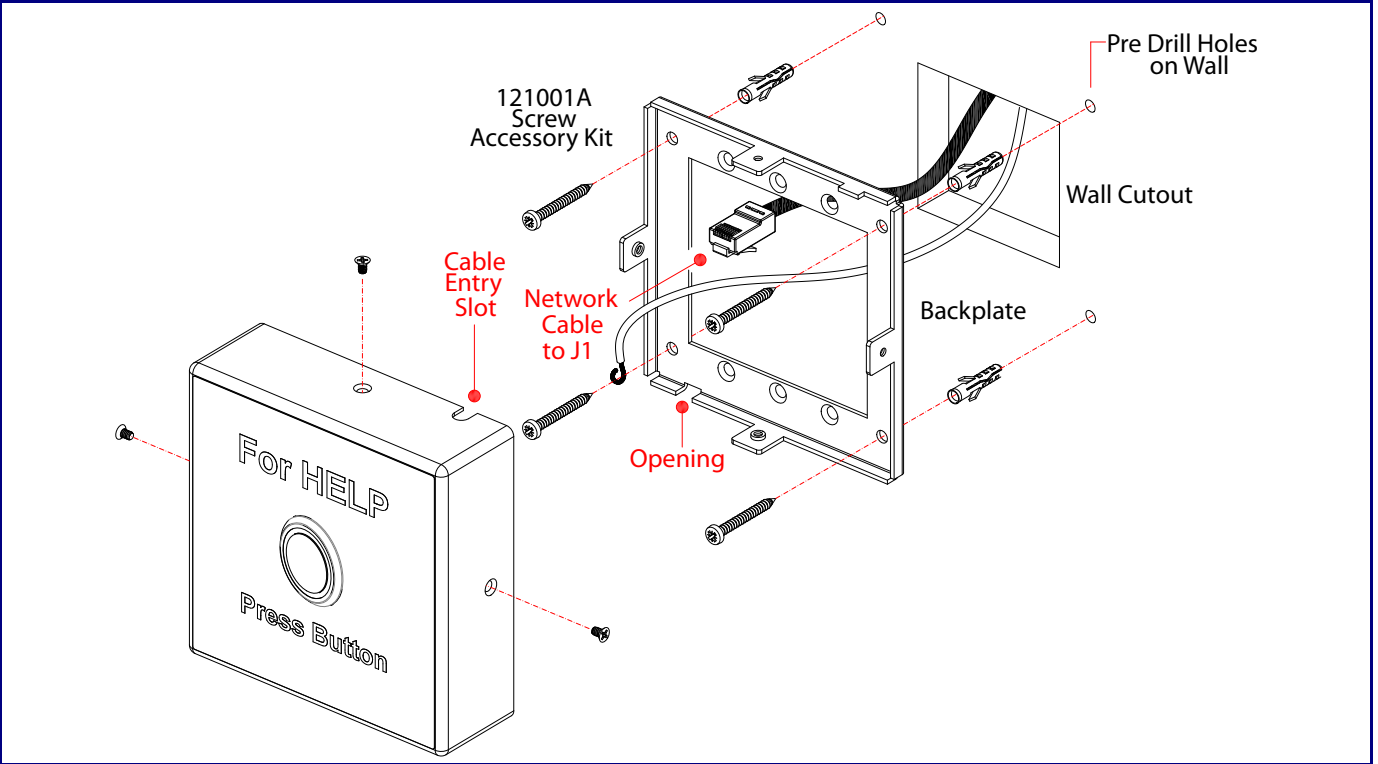

Gang Box Mounting Options

