


Mounting


You have the option to use the following mounting template to mark, and then drill two 3/16-inch (0.1875-inch) holes for the mounting anchors.

To install and mount the Singlewire/SIP Paging Adapter:

- 1. Install the mounting anchors in the holes, and position the Singlewire/SIP Paging Adapter mounting holes over the anchors.
- 2. Use the two #6 sheet metal screws to secure the Singlewire/SIP Paging Adapter onto the mounting surface.

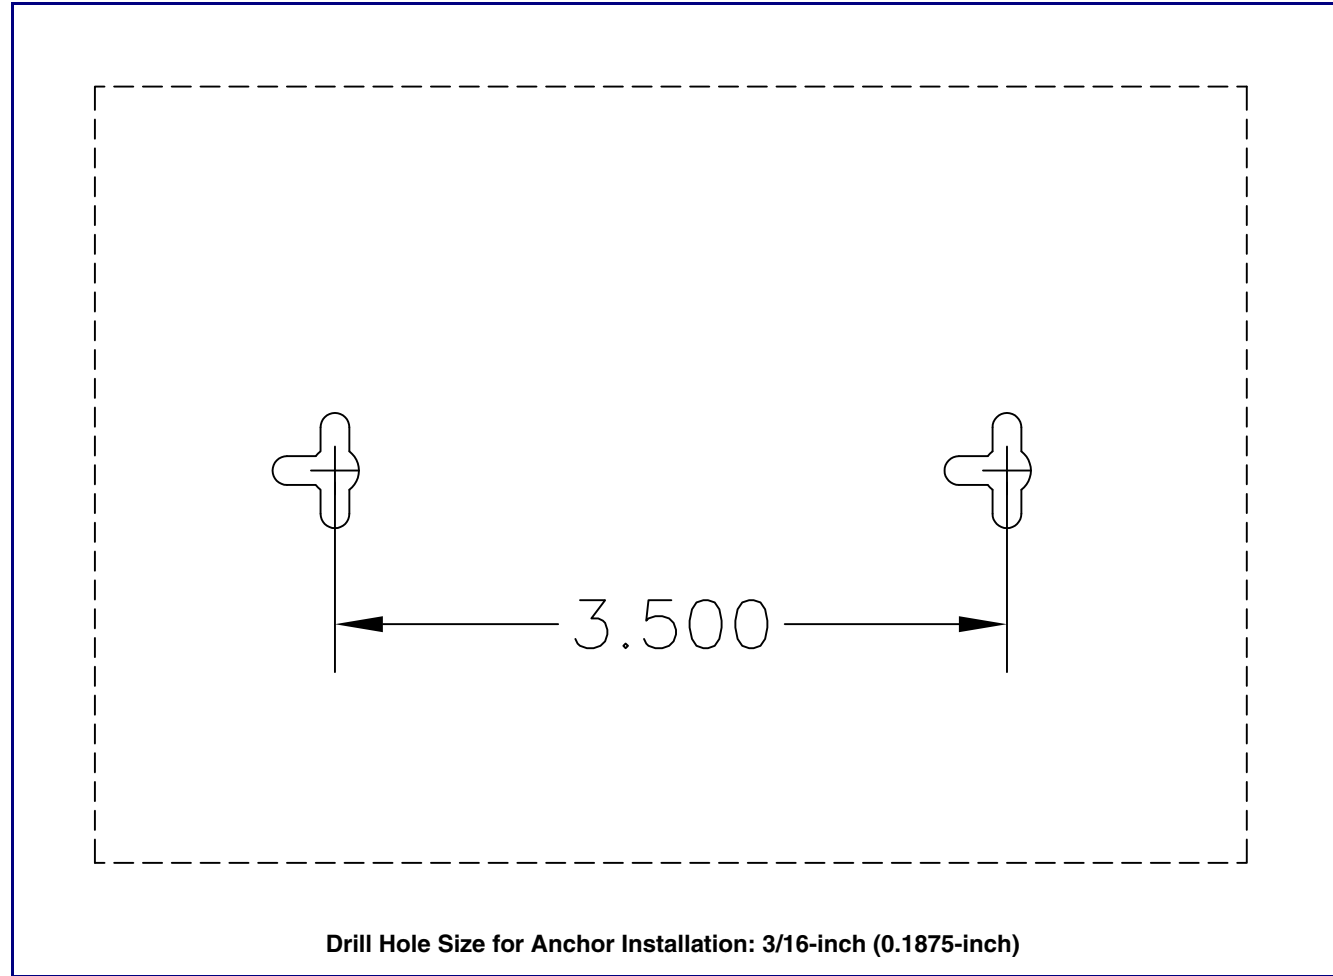

Dimensions

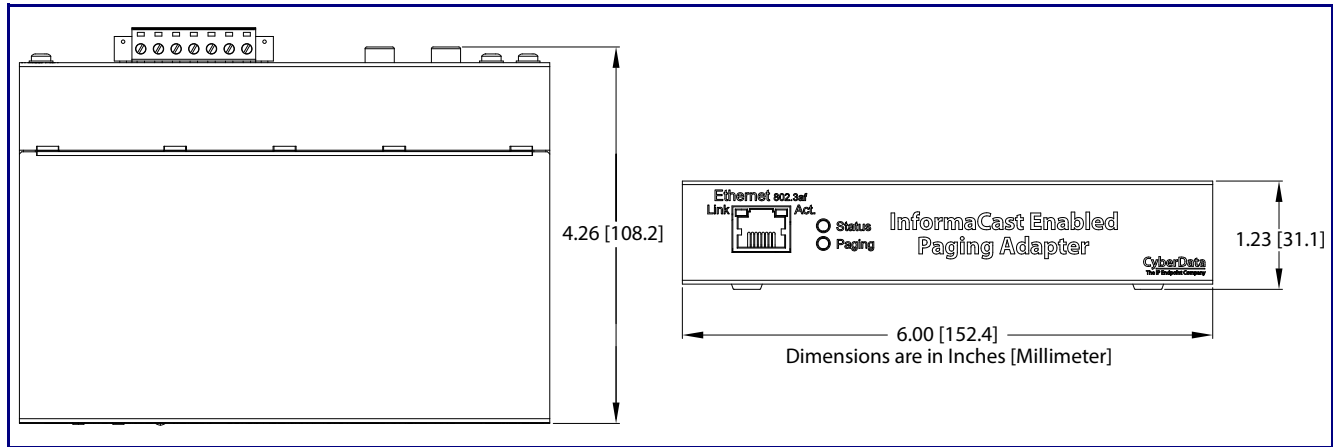

CyberData

The IP Endpoint Company

Installation Quick Reference

InformaCast Enabled Paging Adapter

011280



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Getting Started

- Be sure that you have received all the parts described in the [Parts List](#) section.
- Download the *Operations Guide* at the **Downloads** page at following website:
<https://www.cyberdata.net/products/011280>
- **WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- **WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- **WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- **WARNING:** This enclosure is not rated for any AC voltages!

Parts List

(1) InformaCast Enabled
Paging Adapter

(1) Mounting Template
(see the last page)

(1) Mounting Kit

(2) #6 x1.25-inch, PanHead,
Phillips Sheet Metal Screw

(2) Plastic Anchors

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <http://support.cyberdata.net/>
RMA Department: (831) 373-2601 ext. 136
RMA Email: RMA@CyberData.net
RMA Status: <http://support.cyberdata.net/>
Warranty Information: <http://support.cyberdata.net/>

Verifying Operations and Settings

When you plug in the Ethernet cable or power supply:

- The **GREEN/BLUE Status** LED and the **GREEN Paging** LED both blink at a rate of 10 times per second during the initial network setup.
- The round, **GREEN/BLUE Status** LED on the front of the Singlewire/SIP Paging Adapter comes on indicating that the power is on. Once the device has been initialized, this LED blinks at one second intervals.
- The square, **YELLOW Link** LED above the Ethernet port indicates that the network connection has been established at 100Mbit speed.
- The **GREEN Paging** LED comes on after the device is booted and initialized. This LED blinks when a page is in progress. You can disable **Beep on Initialization** on the **Device Configuration** page.

Link (YELLOW LED)
Activity (GREEN LED)
Status (GREEN/BLUE LED)
Paging (GREEN LED)

Setting Up the InformaCast Enabled Paging Adapter

PoE

To set up the device, connect the device to your network:

Poe

- For PoE, plug one end of an 802.3af Ethernet cable into the Singlewire/SIP Paging Adapter Ethernet port. Plug the other end of the Ethernet cable into your network. See the figure on the left.

Non PoE with 48 VDC Power Supply

Non-Poe

- For Non-PoE, connect the Singlewire/SIP Paging Adapter to a 48VDC power supply. See the figure on the left.
- Note:** Do not use both PoE and external power.

Chassis Ground

Chassis Ground

- If required, connect the earth grounding wire to the Chassis Ground. See the figure on the left.

Connections

Page Port Output Connections

Pin	Description
1	Fault Sense Input (Common)
2	Fault Sense Input (Sense)
3	Positive 600-Ohm Audio Output ^a
4	Negative 600-Ohm Audio Output ^a
5	Audio Ground Reference
6	Relay Contact - Common ^b
7	Relay Contact - Normally Open ^b

a. The 600-Ohm audio output of the page port is also suited for interfaces with lower input impedances.
b. 1 Amp at 30 VDC for continuous loads

RCA Line In RCA Line Out Page Port Output Power 48VDC

Line In Line Out Interface Ext. Power +48VDC GND

Pin 1 Pin2 Pin 3 Pin 4 Pin 5 Pin 6 Pin 7

RTFM Switch

To announce the IP address:

- Briefly press and then quickly release the RTFM switch.

Note: The IP address announcement can be heard if a speaker or amplified speaker is connected to the unit.

To restore the factory default settings:

- Press and hold the **RTFM** switch while all the indicator lights turn off.
- Continue to press the switch until after the indicator lights turn back on, and then release the switch.

Note: The “Restoring Defaults” announcement can be heard if a speaker or amplified speaker is connected to the unit.

- All Singlewire/SIP Paging Adapter settings are restored to the factory defaults, and the unit reboots.

RTFM Switch

Typical Configuration

