



Connecting and Sealing the InformaCast Enabled Outdoor Intercom

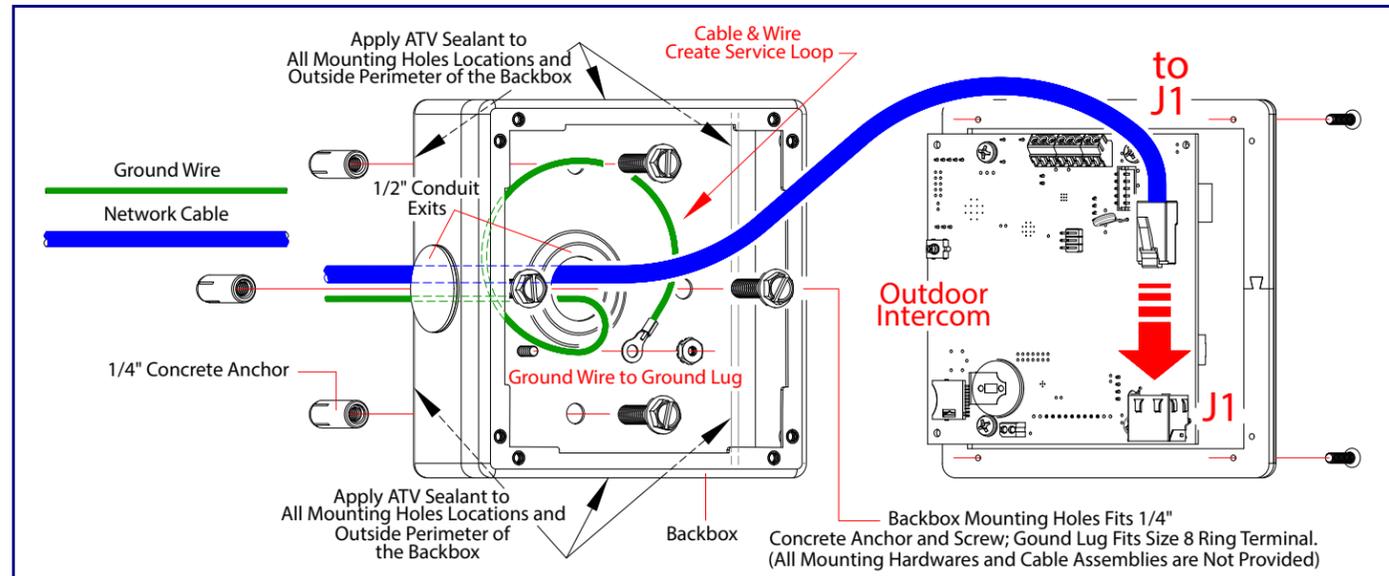

Securing the Intercom

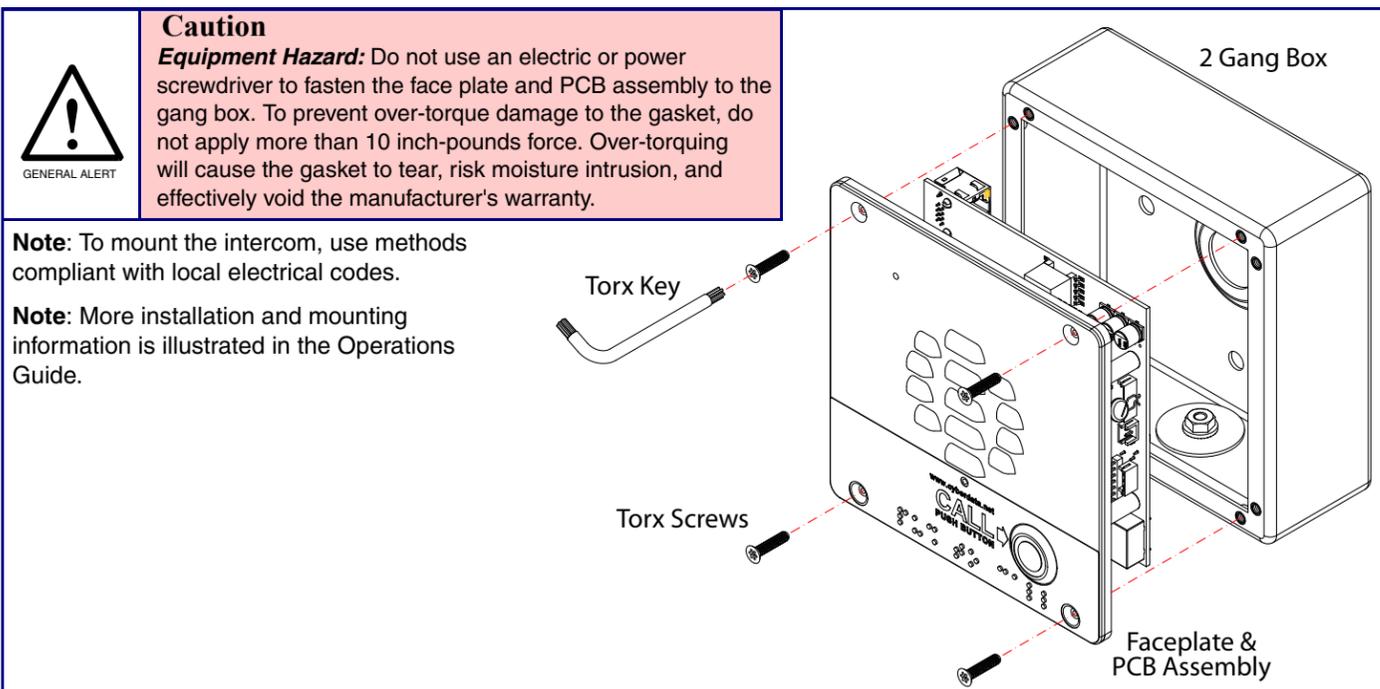

Contacting CyberData

Corporate Headquarters

CyberData Corporation
3 Justin Court
Monterey, CA 93940, USA

Phone: 831-373-2601
Fax: 831-373-4193
<http://www.cyberdata.net/>

Sales: (831) 373-2601 ext. 334
Support: 831-373-2601 ext. 333
Support Website: <http://support.cyberdata.net/>
RMA Department: (831) 373-2601 ext. 136
RMA Email: RMA@CyberData.net
RMA Status: <http://support.cyberdata.net/>
Warranty Information: <http://support.cyberdata.net/>


011309



Parameter	Factory Default Setting
IP Addressing	DHCP
IP Address ^a	10.10.10.10
Web Access Username	admin
Web Access Password	admin
Subnet Mask ^a	255.0.0.0
Default Gateway ^a	10.0.0.1

a. Default if there is not a DHCP server present.

Typical System Installation

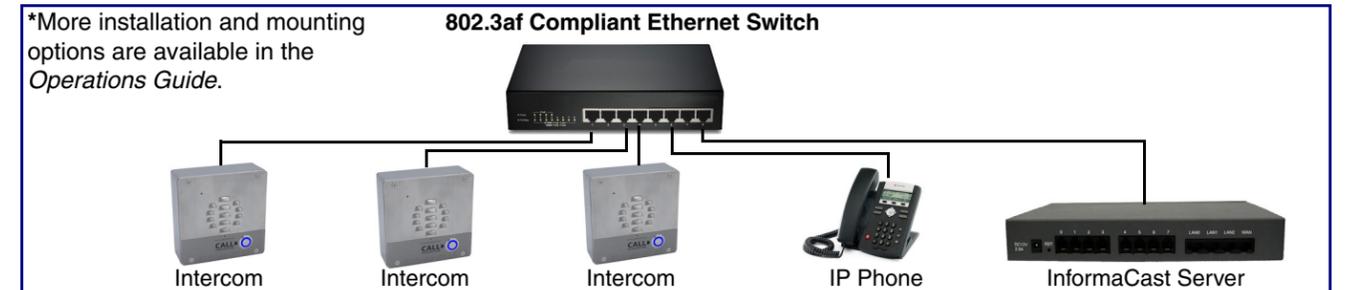

Getting Started


- Download the *Operations Guide* PDF file, from the **Downloads** tab at the following webpage:
<https://www.cyberdata.net/products/011309>
- Create a plan for the locations of your Intercoms.
- WARNING:** This product should be installed by a licensed electrician according to all local electrical and building codes.
- WARNING:** To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- WARNING:** The PoE connector is intended for intra-building connections only and does not route to the outside plant.
- WARNING:** This enclosure is not rated for any AC voltages!
- WARNING:** Failure to properly seal intercom can compromise the IP rating. Should the product be exposed to water damage, it will be treated as an out of warranty scenario due to improper installation.

Parts


(1) T-15H Torx Key 	(1) Hole plug assembly 	Optional Accessories (for gooseneck mounting) (4) Carriage bolt nuts (4) Carriage bolts (4) Carriage bolt washers 	Sold Separately (1) 1/2-inch EMT compression connector with extra sealing locknut
(4) Security Torx Screw 			

Features

Dimensions (Front and Side View)

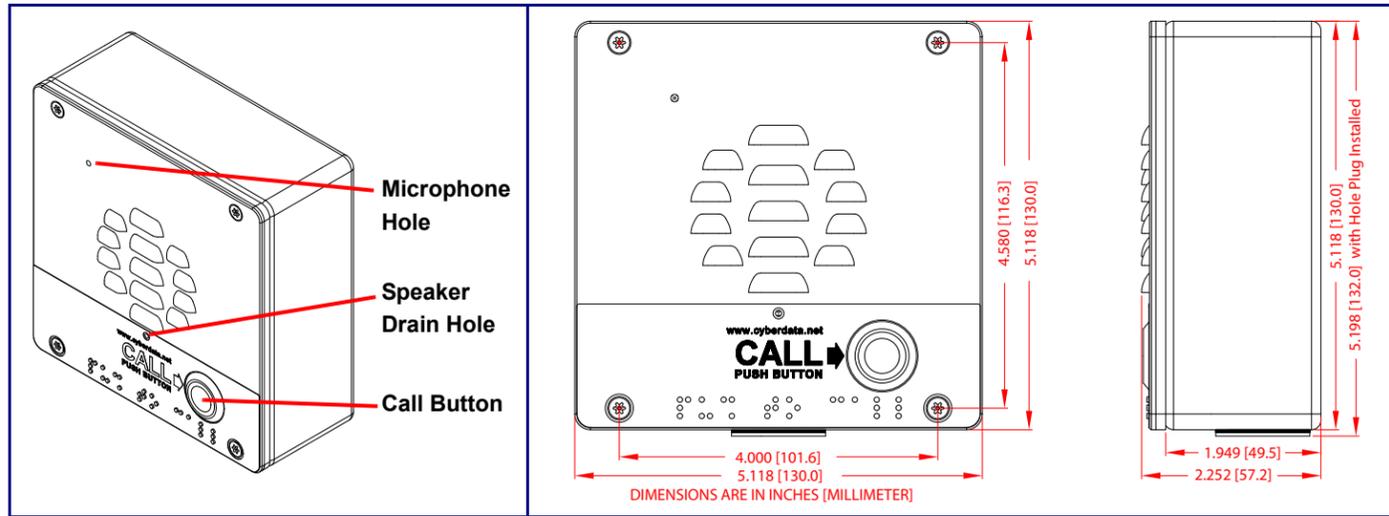

Dimensions (Rear View and Mounting Holes)

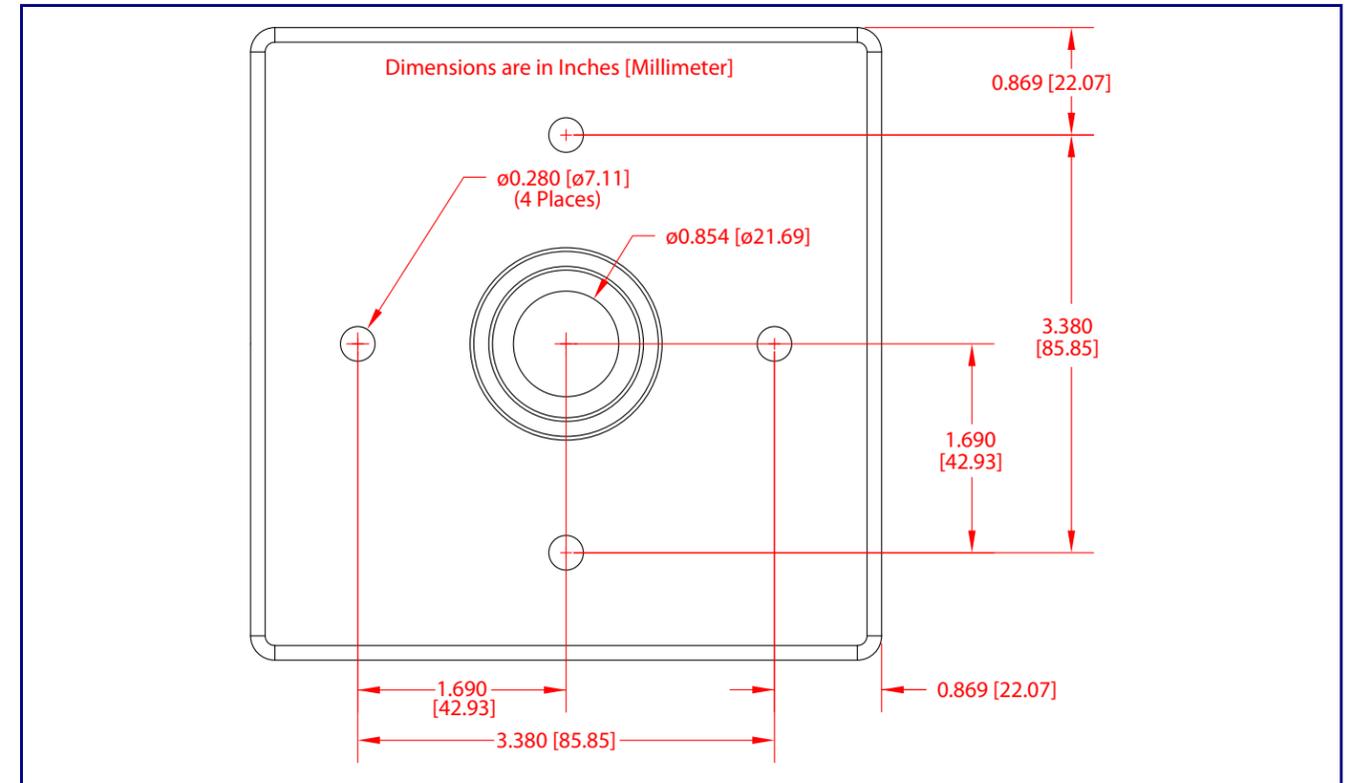

Terminal Block Connections

Alternate Power Input:
1 = +8 to +12VDC @ 1000mA Regulated Power Supply*
2 = Power Ground*

Relay Contact:
(1 A at 30 VDC for continuous loads)
3 = Relay Common
4 = Relay Normally Open Contact
5 = Sense Input
6 = Sense Ground
7 = Remote Switch "A"
8 = Remote Switch "B"

*Contacts 1 and 2 on the terminal block are only for powering the device from a non-PoE 12VDC power source as an alternative to Network PoE power. Use of these contacts for any other purpose will damage the device and void the product warranty.

Use a 3.17 mm (1/8-inch) flat blade screwdriver for the terminal block screws

Wire (IN)
Tin Leads Approx. 1/4" or 6mm

Terminal Block can accept 16 AWG wire

Side Conduit Mounting Restrictions

Thread Depth Not to Exceed 0.4 Inch [10mm]

1

2

3

Backbox

Hole Plug Assembly

2

Locknut

1

2*

1/2" EMT Compression Connector with Sealing Locknut Pre-installed (Sold Separately)

1/2" EMT Conduit

Installation Steps:
1) Remove the hole plug assembly from the side of the Backbox, then use it to cover the rear conduit hole.
2) Install the EMT compression connector with presetted depth sealing locknut through the conduit hole, then fasten another locknut from the inside of the Backbox. When using third party 1/2" EMT compression connector, * Make sure the threads do not protrude out more than 0.4 inch or 10 millimeters. (See above diagram)
3) Insert the EMT conduit into the EMT compression connector and then tighten.

*More installation and mounting information is available in the *Operations Guide*.

RTFM Button

RTFM button (SW1)

When the device is operational and linked to a network, you can use the Reset Test Function Management (RTFM) button (SW1 [see picture]) to announce the device's IP address or restore the device to the factory default settings.

To announce the device's current IP address:

- Press and release the RTFM button within a five second window.

Note The device will use DHCP to obtain the new IP address (DHCP-assigned address or default to 10.10.10.10 if a DHCP server is not present).

To restore the device to factory default settings:

- Press and hold the RTFM button for longer than five seconds until you hear the device announce that it is restoring the factory default settings.